

NINJA

CRISPI PRO

COUNTERTOP GLASS COOKING SYSTEM

AS101EU

BRUGERVEJLEDNING
GEBRAUCHSANWEISUNG

INSTRUCTIONS

INSTRUCCIONES

NOTICE D'UTILISATION
ET GARANTIE NINJA

ISTRUZIONI

INSTRUCTIES

INSTRUKSJONER

INSTRUKCJA

INSTRUÇÕES

OHJEET

INSTRUKTIONER



THANK YOU

for purchasing the Ninja CRISPi PRO Air Fryer



REGISTER YOUR PURCHASE



<http://www.ninjakitchen.eu/registerguarantee>



Scan QR code using mobile device

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage: 220-240V - 50-60Hz

Watts: 2100W

The Standby power consumption is 0.2W

The appliance reaches standby mode automatically after 10 minutes of inactivity.

TIP: You can find the model and serial numbers on the QR code label on the back of the unit by the power cord.



This marking indicates this product should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material sources. To return your used device, please use the return and collection systems or contact the retailer where this product was purchased. They can take this product for environmentally safe recycling.

SharkNinja Europe Ltd,
1st/2nd Floor Building 3150,
Thorpe Park, Century Way,
Leeds, England, LS15 8ZB
0800 862 0453

SharkNinja Germany GmbH,
Rotfeder-Ring 9,
60327 Frankfurt am Main,
Germany

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

© 2025 SharkNinja Operating LLC

AS101EUSeries_IB_MP_Mv2_251119



@ninjakitchen

NINJA

CRISPI PRO

AS101EU Series | Owner's Guide



IMPORTANT SAFETY INSTRUCTIONS

INDOOR HOUSEHOLD USE ONLY. READ ALL INSTRUCTIONS BEFORE USE



Read and review instructions to understand operation and use of product.



Indicates the presence of a hazard that can cause personal injury, death, or substantial property damage if the warning included with this symbol is ignored.



Avoid contact with hot surface. Always use hand protection to avoid burns.



For indoor and household use only.



Do not cover or obstruct vent in any way.

⚠ WARNING

Failure to follow these instructions could result in electric shock, fire, or burn hazard that could cause property damage, personal injury, or death. When using electrical appliances, basic safety precautions should always be followed, including the following:

DO NOT touch hot surfaces or exhaust vent

1 The Ninja CRISPI PRO, adjustable platform, Ninja CleanCrisp glass containers, and crisper plates become extremely hot during use. To prevent burns or serious injuries:

- Always grasp glass containers by handles using oven mitts. DO NOT touch the hot glassware containers.
- Allow platform to cool or use insulated oven mitts before handling.
- DO NOT touch any other components without protective hot pads or insulated oven mitts.

2 During use, hot air and steam is released. Keep hands and face at a safe distance from the air outlet socket vent.

USER QUALIFICATIONS

3 DO NOT allow children to use, clean, maintain, or play with the appliance. Close supervision is necessary when used near children.

4 Close supervision is needed when used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

INTENDED USE

5 Use this appliance for air frying ONLY. DO NOT use for deep-frying. DO NOT use this appliance for anything other than its intended use.

SELECT A SAFE LOCATION

6 Be sure the appliance is in an appropriate location before you start using it. DO NOT move or relocate when in use. Extreme caution must be used when the glassware containers contain hot food, oil, or liquids. Improper use may result in spilled food that can cause serious burns or personal injury.

INDOOR COUNTERTOP USE ONLY

7 This appliance is for indoor household use only. DO NOT use outdoors or in moving vehicles or boats.

8 For countertop use only. Ensure the surface is level, clean, and dry. DO NOT place near the edge of the worktop.

KEEP AWAY FROM HEAT

9 To prevent the risk of fire or property damage, DO NOT place appliance or power cord on a stovetop. Never place on hot surfaces, near a hot gas or electric burner, or in an oven.

ALLOW SPACE FOR VENTILATION

10 DO NOT cover the air intake vent or air socket vent while unit is operating. Doing so will prevent even cooking and may damage the unit or cause it to overheat. Keep all objects 15cm away from vent while unit is in use.

AVOID NINJA CLEANCRISP GLASS CONTAINERS BREAKING:

11 Sudden temperature changes can break glassware.

- DO NOT add cool or cold liquid or food to hot glassware. Do not add hot liquids or food to cold glassware.
- DO NOT allow hot glassware to directly contact cool or wet surfaces or items. Allow glassware to cool before putting in a sink, washing, refrigerating, or freezing.

IMPORTANT SAFETY INSTRUCTIONS

INDOOR HOUSEHOLD USE ONLY. READ ALL INSTRUCTIONS BEFORE USE.

⚠ WARNING

Failure to follow these instructions could result in electric shock, fire, or burn hazard that could cause property damage, personal injury, or death. When using electrical appliances, basic safety precautions should always be followed, including the following:

- 12 The containers are not oven, broiler, or stovetop safe. DO NOT use with any heating appliances or heat sources except the CRISPi PRO Main Unit or a microwave. Do not place empty containers in the microwave.
 - 13 Physical damage or impacts can break glassware or make it more likely to break from temperature changes.
 - Use care to not scratch glass when using metal utensils and knives.
 - DO NOT use abrasive cleaning tools.
 - DO NOT drop or hit glassware against a hard object or strike utensils against it.
 - DO NOT use or repair any glassware that has been dropped, chipped, cracked or severely scratched.
 - If a glass container chips or breaks, use thick gloves and caution while cleaning up the glass. Pieces may be sharp and difficult to locate.
 - Throw away the broken glass; DO NOT recycle.
 - 14 Ninja® CleanCrisp™ glass containers are dishwasher safe. They may also be washed by hand using hot, soapy water and non-abrasive cleaners and plastic or nylon cleaning pads if scouring is necessary.
 - Plastic lids are for microwave and storage use only.
- PLUG DIRECTLY INTO AN APPROPRIATE SOCKET**
- 15 Keep the appliance and its cord out of reach of children.
 - 16 Select a socket above the countertop that allows the cord to be routed out of reach of children and away from hot surfaces and appliance vents.
 - 17 To reduce the risk of the appliance being pulled down, potentially resulting in serious burns or impact injury:
 - DO NOT let cord hang over edge of table or counters.
 - DO NOT use an extension cord.
 - A short power-supply cord is used to reduce the risk of cord being grabbed or becoming entangled and to reduce the risk of people tripping over a longer cord.

DO NOT USE IF DAMAGED

- 18 Regularly inspect the appliance and power cord. If the appliance is damaged in any way (including the power cord or plug), DO NOT use. During operation, if the appliance malfunctions, immediately stop use and call Customer Service.
- 19 If a Ninja glass container is dropped OR becomes chipped, cracked or deeply scratched, DO NOT use as container strength may be compromised and the container could break or shatter; discard immediately.

PREPARING FOR OPERATION

- 20 ALWAYS ensure the Ninja CleanCrisp glass container is properly installed in the Ninja CRISPi PRO Main Unit before operating.

FILL TO APPROPRIATE LEVELS

- 21 To prevent food contact with heating element that may cause injury or affect the safe use of the appliance, DO NOT overfill the Ninja glass container with food past the lip of the container.

CHECK FOOD TEMPERATURE

- 22 Socket voltages can vary, affecting the performance of your product. To prevent possible illness, use a thermometer to check that your food is cooked to the temperatures recommended.

 
 
 
CLEANING

- 23 ALWAYS turn unit off and unplug from socket when not in use and before cleaning.
- 24 To protect against electric shock, DO NOT immerse cord, plugs, or main unit housing in water or other liquid.
- 25 DO NOT clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- 26 See Cleaning section.


NO MODIFICATIONS OR UNAPPROVED ACCESSORIES

- 27 Modifications or the use of accessories or parts not recommended by SharkNinja may result in fire, electric shock, or injuries. Use only cooking containers, accessories, attachments, or replacement parts that are recommended or sold by SharkNinja.


PARTS & ACCESSORIES

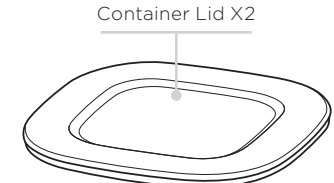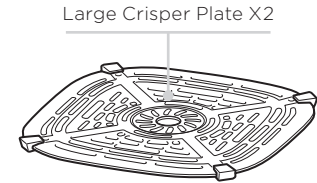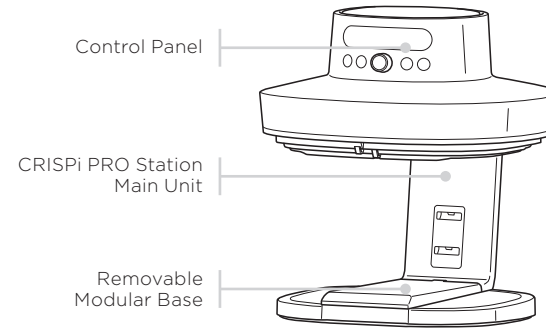

 Extra-Large Ninja CleanCrisp Glass Container

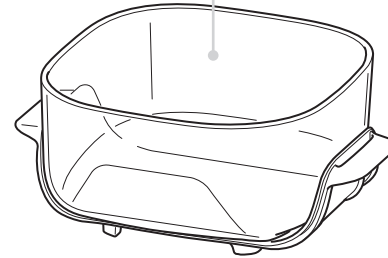


Medium Ninja CleanCrisp Glass Container

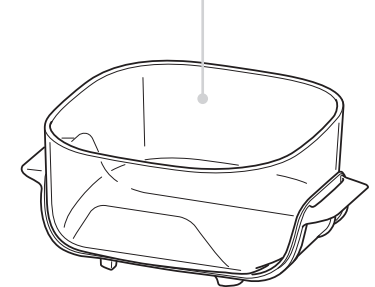 

SAVE THESE INSTRUCTIONS.

 GETTING TO KNOW YOUR NINJA CRISPI PRO

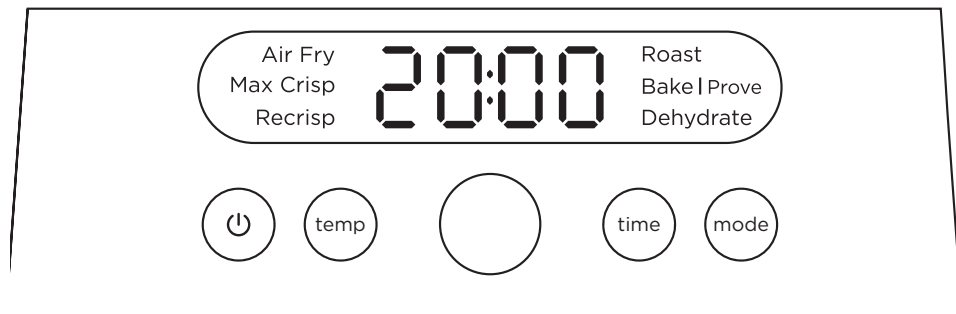

FUNCTIONS

Air Fry: Use this function to give your food crispiness and crunch with little to no oil.

Max Crisp: Add the crispy finishing touch to meals or melt toppings to create the perfect finish.

Recrisp: Revive leftovers by gently warming them, leaving you with crispy results.

Roast: Roasts meats to tenderize and more.

Bake/Prove: Create decadent baked treats and desserts.

Dehydrate: Dehydrate meats, fruits, and vegetables for healthy snacks.

NOTE: Functions may vary by model.

OPERATING BUTTONS

Power: Press to turn the unit on and off.

Temp: Press temp button and use dial to set temperature.

Time: Press time button and use dial to set time.

Mode: Press mode button and use dial to select cooking mode.

DIAL

Function/Temperature/Time Select: Turn the dial to select a cooking function or adjust time or temperature.

Dial/Start: Press dial to start or pause cooking.

NOTE: Cooking will automatically pause when Ninja® glass container is removed from the CRISPI PRO Main Unit.

BEFORE FIRST USE

- 1 Remove and discard any packaging material, stickers, and tape from the unit.
- 2 Remove all accessories from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
- 3 Wash the containers, crisper plates, and lids in hot, soapy water, then rinse and dry thoroughly. **NEVER** clean the main unit in the dishwasher.
- 4 Ensure air intake vent is not covered while operating unit. Keep all objects 15cm away from vent while unit is in use.

USE & CARE GUIDE

NINJA® CleanCrisp GLASS CONTAINERS

- 1 Heat-protectant base and easy-grip handles are fixed permanently to the Ninja glass containers and should **NEVER** be removed.
- 2 Cease using Ninja glass container if easy-grip handles or heat-protectant base are broken or damaged.
- 3 Ninja glass containers are freezer safe, microwave safe, and dishwasher safe.
- 4 Ninja glass containers are **NOT** oven/stovetop/broiler safe.
- 5 Handle glass containers with care. They can break if dropped, hit hard against a surface, or struck with hard utensils. Discard immediately if any damage occurs.
- 6 If a Ninja glass container becomes chipped, cracked, or deeply scratched, **DO NOT** use, as container strength may be compromised and the container could break or shatter.
- 7 Avoid storing items in the Ninja glass containers that could scratch or cause damage to the interior.

NOTE: If a piece of a Ninja glass container chips or breaks off, use thick gloves and caution while cleaning up the glass, as pieces may be sharp. Dispose of glass in a standard waste bin; **DO NOT** recycle.

CONTAINER LIDS

- 1 Lids are freezer safe, microwave safe (ensure lid is **NOT** sealed on Ninja glass container when in the microwave), and dishwasher safe (top rack only).
- 2 **DO NOT** seal lid on Ninja glass container directly after cooking.
- 3 **NEVER** place Ninja glass container or crisper plate directly on lid after cooking.

CRISPER PLATES

- 1 Crisper plates are dishwasher safe, but they are **NOT** microwave or oven safe.

USING YOUR NINJA CRISPI® PRO

USING THE COOKING FUNCTIONS

To turn on the CRISPI PRO Main Unit, first plug the power cord into a wall outlet, then press the power button.

 


NOTE: For best results, **DO NOT** combine raw, frozen, and/or pre-cooked ingredients. Cook **ONLY** one type of food at a time.

- 1 Install a crisper plate in a Ninja® glass container. Handle with care to avoid bending the crisper plate. Add ingredients to the Ninja glass container.



- 2 Move the modular base to the correct position for the container you are using.

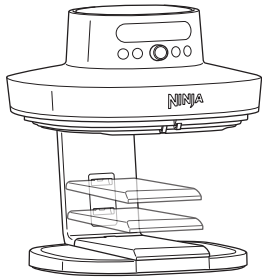


2.4L High position

3.8L Middle position

5.7L Low position

 - 3 Align container with modular base, and push container all the way back toward the spine until it clicks into place.

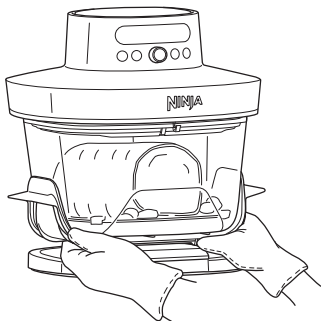

- 4 Use the dial to select your desired cooking mode.



NOTE: Press mode button to return to mode select after pushing temp or time button.

- 5 Press the temp button and use the dial to set temperature.



- 6 Press the time button and use the dial to set time.



- 7 Press the dial to start cooking.

NOTE: "ADD POT" will display on the control panel if the container is not installed properly.

Add Pot

- 8 To toss or flip ingredients during cooking, pull the glass container out of the main unit or press the dial to pause cooking. Shake container using easy-grip handles or flip foods with a silicone-tipped utensil. Reinsert the glass container into the unit and press the dial to resume cooking.
- 9 When cooking is complete, the unit will beep and "DONE" will appear on the display. The container can be placed directly on any countertop surface.
- 10 Eat right out of the container or remove ingredients using silicone-tipped tongs/utensil or dump out using easy-grip handles.

CLEANING & MAINTENANCE

CLEANING YOUR NINJA CRISPI PRO

ALWAYS let the appliance cool completely before cleaning.

Part/Accessory	Cleaning Method	Dishwasher Safe?
Main Unit	To clean the main unit and the control panel, wipe them clean with a damp cloth. NOTE: NEVER immerse the main unit in water or any other liquid. NEVER clean the main unit in a dishwasher.	No
Ninja Glass Containers	The containers can be washed in the dishwasher or by hand with hot soapy water. If hand-washing, do not use abrasive cleaning tools and thoroughly air dry or towel-dry all parts after use. Be sure to allow glass to cool gradually to room temperature before placing it in water, sink, or dishwasher.	Yes
Crisper Plates	The crisper plates can be washed in the dishwasher or by hand. If hand-washing, thoroughly air-dry or towel-dry all parts after use.	Yes
Lids	The lids can be washed in the dishwasher (top rack only) or by hand. If hand-washing, thoroughly air-dry or towel-dry all parts after use.	Yes
Modular Base	The modular base should be washed by hand or wiped with a clean damp cloth. Thoroughly air-dry or towel-dry part after use.	No

REPLACEMENT PARTS

To order additional parts and accessories, visit ninjakitchen.eu or contact Customer Service at +45-80705710.

ACCESSORIES FOR PURCHASE

We offer a suite of custom-made accessories for your Ninja CRISPI. Visit ninjakitchen.eu to expand your capabilities and take your cooking to the next level.

HELPFUL TIPS

- Heat-protectant base on Ninja® glass containers allows you to safely place them on any countertop surface with no heat damage.
- Easy-grip handles on Ninja glass containers allow you to safely handle containers after cooking.
- For consistent browning, make sure ingredients are arranged in an even layer on the bottom of the glass container with no overlapping. If ingredients are overlapping, make sure to shake them halfway through the set cook time.
- Temperature and time can be adjusted at any time during cooking. Press the Temp or Time button and use the dial to adjust.
- Check food frequently to avoid overcooking.
- Unit will pause automatically if the Ninja glass container is removed. To resume cooking, insert the Ninja glass container; unit will automatically resume cooking.
- The crisper plate elevates ingredients in the basket so air can circulate under and around them for consistent, crisp results.
- For best results with fresh vegetables and potatoes, use at least 1 tablespoon of oil. Add more oil as desired to achieve the preferred level of crispiness.
- For best results, check progress throughout cooking, and remove food when desired level of brownness has been achieved. We recommend using an instant-read thermometer to monitor internal temperature of proteins. After the cook time is complete, remove food immediately to avoid overcooking.

TROUBLESHOOTING GUIDE

- **Does the unit need to preheat?**
No, the unit does not need to be preheated.
- **Why is ADD POT appearing on the display screen?**
The Ninja® glass container is not installed properly. Ensure the modular base is in the correct position, and ensure the glass container clicks fully into place.
- **How do I pause the countdown?**
Pressing the dial button or removing the container from the base during cooking will pause the cooking function.
- **Are the glass containers safe to put on my countertop?**
Yes, the heat-protectant base on the Ninja glass containers allows them to be placed on any countertop during or after cooking.
- **How do I know when to use the crisper plate?**
Use the crisper plate when you want food to come out crispy. The plate elevates the food in the basket so that air can flow under it to cook ingredients evenly.
- **My food didn't cook.**
Make sure the Ninja glass container is properly installed during cooking. For consistent browning, make sure ingredients are arranged in an even layer on the bottom of the basket with no overlapping. Use easy-grip handles on glass containers to shake to toss loose ingredients for consistent crispiness. Cook time and temperature can be adjusted at any time during cooking. Simply press the Time or Temp button and use the dial to adjust.
- **My food is burned.**
For best results, check progress throughout cooking, and remove food when desired level of brownness has been achieved. Remove food immediately after the cook time is complete to avoid overcooking.
- **Why do some ingredients blow around when air frying?**
Occasionally, the fan from the air fryer will blow lightweight foods around. Use toothpicks to secure loose lightweight food, like the top slice on a sandwich.
- **Can I air fry fresh battered ingredients?**
Yes, but use the proper breading technique. It is important to coat foods first with flour, then with egg, and then with breadcrumbs. Be sure to press the breadcrumbs onto the food so they stick in place. Loose breading may be blown off by the units powerful fan.
- **Why is the unit beeping?**
The unit beeps when the cooking function starts and again when the cooking function is complete.
- **The screen went black.**
The unit is in standby mode. Press the START/POWER button to turn it back on.
- **An "E" message appears on display screen.**
The unit is not functioning properly. Please contact Customer Service at **+45-80705710**.

MANUFACTURER'S GUARANTEE

The Ninja Guarantee

When a consumer buys a product in the EU, they get the benefit of legal rights relating to the quality of the product (your "legal rights"). You can enforce your legal rights against your retailer, including Ninja if you bought your Ninja kitchen appliance from ninjakitchen.co.uk. However, at Ninja we are so confident about the quality of our products that we give the owner an additional, free parts and labour manufacturer's guarantee of up to 2 years.

The guarantee it comes with is an important consideration - and reflects how much confidence the manufacturer has in its product and manufacturing quality.

The manufacturer's guarantee does not affect your legal rights.

How long are new Ninja machines guaranteed for?

Our manufacturer's guarantee lasts for one year from the date of purchase as standard, or for two years if you register your purchase with us within 28 days.

How do I register my Ninja guarantee?

If you have purchased your Ninja kitchen appliance directly from ninjakitchen.co.uk your guarantee is registered automatically. If you bought it from anywhere else in the EU, you can register your guarantee online within 28 days of purchase.

- To register online, please visit ninjakitchen.eu/reigsterguarantee or scan the QR code in your instruction booklet.
- Keep a note of the date you purchased the machine.

IMPORTANT:

- Keep your receipt if you bought your Ninja kitchen appliance from anywhere except ninjakitchen.eu. You will need it to claim under your guarantee.

What are the benefits of registering my free Ninja guarantee?

When you register your guarantee, you will get an extra year of cover. We'll also have your details to hand if we ever need to get in touch. If you further agree to receive communications from us, you can also receive tips and advice on how to get the best out of your Ninja kitchen appliance and hear the latest news about new Ninja technology and launches.

What is covered by the free Ninja guarantee?

Repair or replacement (at Ninja's discretion) of your Ninja machine, including all parts and labour.

What is not covered by the free Ninja guarantee?

- Normal wear and tear.
- Accidental damage or faults caused by negligent use or care, misuse, neglect, careless operation or handling of the Ninja kitchen appliance which is not in accordance with the Ninja Operating Manual supplied with your machine.
- Damage caused by use of the Ninja kitchen appliance for anything other than normal domestic household purposes.
- Damage caused by use of parts not assembled or installed in accordance with the operating instructions.
- Damage caused by use of parts and accessories which are not Ninja Genuine Components.
- Faulty installation (except where installed by Ninja).
- Repairs or alterations carried out by parties other than Ninja or its agents.

MANUFACTURER'S GUARANTEE

How can I claim under the free Ninja guarantee?

Contact our customer service helpline on +45-80705710. For service hours please visit our website under 'Contact Us'. It's free to call, and you'll be put straight through to a Ninja representative. You'll also find online support at <https://support.ninjakitchen.eu/>. The Ninja representative will go through some troubleshooting with you, and if we conclude that the item has failed, we will send you a replacement part or a returns label to send the defective item back to us free of charge. When you have delivered the defective product to us, we will send you a replacement.

Please remember that the item will need to be boxed when you return it to us. It can be any suitable box, it does not have to be the original packaging.

Where can I buy genuine Ninja spares and accessories?

Ninja spares and accessories are developed by the same engineers who developed your Ninja kitchen appliance. You'll find a full range of Ninja spares, replacement parts and accessories for all Ninja machines at www.ninjakitchen.eu. Please remember that damage caused by the use of non-Ninja spares may not be covered under your guarantee.