

KEEP THESE IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions before using this appliance.

This appliance is intended for household use only.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

WARNING: When the hairdryer is used in a bathroom, unplug it after use since the proximity to water presents a hazard even when the hairdryer is switched OFF.

For additional protection the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

This appliance can be used by children aged from 8 years and above, and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING: Do not leave the appliance unattended. Do not allow bare skin or the eyes to come into contact with any heated surface on the appliance when in use. Do not place the appliance on any heat-sensitive surfaces when hot or plugged into the mains. Always unplug the appliance when not in use.

WARNING: Do not block the air inlet or outlet during use. When using the appliance, care must be taken to prevent hair entering the air inlet opening. The air outlet opening of this appliance will become hot during use, avoid touching the outlet or any accessories attached to the outlet.

NOTE: Use on towel dried hair only.

WARNING: This appliance has no user-serviceable parts or components.

Guarantee and Service section:

Your REVLON appliance is guaranteed against defects under normal use for 2 years from the original date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, within the guarantee period, it will be replaced.

Please retain your till receipt or other proof of purchase for all claims within the guarantee period. The guarantee becomes void if the proof of purchase is not presented. Simply take the appliance back to the retailer from where purchased, along with a valid till receipt, for exchange free of charge. This guarantee does not cover defects which have occurred due to misuse, abuse or are caused by failure to follow the instructions contained within this manual.

UK only: This does not affect your consumer statutory rights.

The manufacturing date is given by the 4 digit Batch Number marked on the rear of the product. The first 2 digits represent the week of manufacture, and the last 2 digits represent the year of manufacture. Example: 3423 - product manufactured week 34 of the year 2023.

The appearance of this appliance may differ from the illustration.

For product support, please visit us at: www.HelenofTroy.com/emea-en/ or write to Revlon_Support@helenofTroy.eu or contact us by phone: +44 (0) 207 949 0115

For product information, visit us at: www.revlonhairtools.shop

These instructions are also available on our website. Please visit www.HelenofTroy.com/emea-en/Support



This appliance complies with EU legislation 2012/19/EU on end of life recycling. Products showing the 'Crossed Through' wheeled bin symbol on either the rating label, gift box or instructions must be recycled separately from household waste at the end of their useful life.

Please DO NOT dispose of appliance in normal household waste. Your local appliance retailer may operate a 'take-back' scheme when you are ready to purchase a replacement product, alternatively contact your local government authority for further help and advice on where to take your appliance for recycling.

This product carries the CE mark and is manufactured in conformity with the Electromagnetic Directive 2014/30/EU, the Low Voltage Directive 2014/35/EU, the ERP Directive 2009/125/EC, and the ROHS Directive 2011/65/EU.

REVLON®



REVLON®

220-240V - 50-60Hz 2000W

Type#: ED5320DC

The REVLON® trademark is used under licence from Revlon by Helen of Troy Limited.



Kaz Europe Sàrl
Q-Center, Chaux 4
CH-1030 Bussigny - Switzerland



Made and printed in China

© 2024, Helen of Troy. All rights reserved. (AW016827)

AW ISSUE No#:1 Date: 02OCT23

AIRFLOW CONTROL

Dryer with Rotating Built-In Concentrator

RVDR5320UK

OPERATING INSTRUCTIONS

This appliance is intended for household use only.

The appearance of this appliance may differ from the illustration.

Only use this appliance for its intended purpose as described in this manual.

Do not use attachments not recommended by the manufacturer.

CERAMIC TOURMALINE TECHNOLOGY

Helps to reduce static and frizz and enhances shine for silky-smooth results.

TRIPLE CERAMIC TOURMALINE COATING

Triple ceramic coating helps reduce damage from over-styling with even heat distribution, making styling fast and easy.

HEAT AND SPEED CONTROL

High temperatures and speed settings are ideal for fast drying or rough drying before styling; low temperatures and speed settings are ideal for styling and use on extensions.

OVERHEATING CUT-OFF

This appliance is equipped with a thermostat that will cycle OFF (O) should the heat of the dryer exceed the optimum drying level, due to partially blocked air inlet or outlet openings. In the event that the appliance stops, turn the appliance OFF (O) and allow it to cool down. Once the appliance cools, the thermostat will automatically reset and usage may resume.

COLD SHOT BUTTON

Once the desired style is achieved, push the cold shot button (❄️) to set the style with a flow of cold air.

HOW TO USE YOUR STYLE TWIST DRYER

1. Comb out hair gently, separate into manageable sections and clip.
2. Take a small portion of hair at the roots with a brush and aim the nozzle at it.
3. Pull the brush and dryer slowly downward, keeping the hair taut.
4. Repeat until section is dry, then repeat steps 2 and 3 with another section.
5. When hair is dry, use the Cool Shot button to seal the cuticle for more shine and smoothness.

ROTATING THE DUAL POSITION HEAD

The dryer head can be rotated between two positions, in a vertical (up/down position) and in a horizontal (side-to-side position).

Rotating it between the two positions:

1. Before rotating, slide the lock button to unlock it.
 - When in the vertical position, twist the dryer head counterclockwise to make it horizontal.
 - When in the horizontal position, twist the dryer head clockwise to make it vertical.
2. After rotating, slide the lock button to keep it in place.

CURL-ENHANCING DIFFUSER

The diffuser will soften the air flow to give you voluminous, defined curls. To attach it, hold the diffuser at the top of the dryer nozzle, line up the vertical threads on the diffuser with the ones on the nozzle and slide it down into place.

Take a small section of hair and place it on the fingers of the diffuser. Move it gently at the roots while drying, then repeat with additional sections until hair is dry.

STYLING

Always towel-dry hair before using a hairdryer. Set the dryer on a high heat/speed setting and circulate airflow through the hair. Do not concentrate airflow on any one area for a long period of time. As soon as hair is almost completely dry, lower the heat/speed setting and use a styling brush to shape the hair.

REMOVABLE END CAP

- Clean the end cap at least once every three months.
- To remove the end cap, make sure unit is unplugged, then turn the end cap counterclockwise and pull it away from the dryer.
- Dust off the end cap.
- The end cap may be washed and must be dried completely before returning to the dryer.
- To replace the end cap, align the tabs of the end cap with the indentations inside the back grill of the hair dryer, then turn clockwise until it locks.

HANGING RING

This dryer features a ring allowing it to be conveniently hung on a hook for easy access.

CLEANING

Always unplug the appliance from the mains after use and allow it to cool before cleaning. Wipe the outer surface of the dryer with a slightly moist cloth, then wipe dry.

To clean the diffuser, remove it from the dryer and wash it in warm, soapy water and rinse. Allow diffuser to dry completely before reattaching it to the dryer.

STORAGE

Always unplug when not in use.

Allow the appliance to cool before storing.

Always store in a dry location. Do not pull or twist the cord.

Do not wrap the cord around the appliance, as this may cause the cord to wear prematurely and break. Regularly check the power cord for wear and damage (particularly where it enters the appliance and the plug).

FEATURES

- A. 3 Heat switch
- B. 2 Speed switch
- C. Cold shot button
- D. Air outlet
- E. Removable end cap & lint filter
- F. Nozzle lock button
- G. Curl-enhancing diffuser
- H. Hanging ring




Helen of Troy

Start Date 21SEP23
Model# **RVDR5320UK**
UK/E UK
Agile AW# AW016827
AW Issue# No#: 1 Date 02OCT23
Languages English
File Name rvdrib.RVDR5320UK.AW016827.INDD
Designer Simon Finch
Factory DECHANG
Bar Code# n/a

Packaging Specifications

Dimensions H185 x W89 mm Finished size
Material 70gsm wood free paper
Finishes Roll fold
Colours Black

This proof is not intended for colour matching but for colour indication

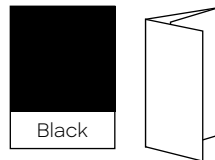

Proof Stages

21SEP23 Created 1st artwork for comments
21SEP23 Title update to align with packaging change
02OCT23 Amends
03OCT23 Uploaded for production

Approvals

BM/MKT	02OCT23	Camille Bosson
BM/MKT	02OCT23	Simona Tomassini
MKT MNG	---	---
Design	03OCT23	Loc Pham
Eng. UK/E	21SEP23	James Briscoe
Comp. UK/E	21SEP23	Seray Sahin
Eng. APO	21SEP23	N.Han/J.Zang/J.Wu/N.Zhong
Compl. APO	21SEP23	John Guo
Legal	---	---
Licensor	---	---

Helen of Troy - Kaz Europe Sàrl

Creative Department
Route de la Chaux 4
CH-1030 Bussigny - Switzerland