## LAURASTAR



www.laurastar.com

LAURASTAR SMART

Mise en marche rapide - Quick start guide - Kurzanleitung - Snelle ingebruikname - Messa in funzione rapida - Puesta en marcha rápida - Iniciação rápida - Szybki start - Краткая инструкция для начала работы - 快速啟用指南 - 快速启用指南 - 빠른 시작 설명서 тацияция - Snabbstart - Hurtig start





## **IMPORTANT SAFETY INSTRUCTIONS**

When using an iron, basic precautions should always be followed, including the following: **READ ALL INSTRUCTIONS BEFORE USING** 

- 1. Only use an iron for its intended use.
- 2. To avoid the risk of electric shock, do not immerse the iron in water or other liquids.
- 3. Always turn the iron OFF before plugging 7. Close supervision is required for any applior unplugging the iron from the electrical outlet. Never pull on the cord to disconnect the iron from the electrical outlet: instead. grasp the plug and pull on the plug to dis- **8**. Burns can occur from touching hot metal connect the iron.
- **4.** Do not let the cord touch hot surfaces. Let the iron cool completely before putting the iron away. Coil the cord loosely around the **9**. To avoid a circuit overload, do not operate iron when storing.
- 5. Always disconnect the iron from the electrical outlet before filling the iron with water, **10**. If an extension cord is absolutely necessary, emptying the water from the iron, and when the iron is not in use.
- 6. Do not operate the iron with a damaged cord or in the event the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Take it to a gualified serviceman for examination and



- repair. Incorrect assembly might result in a risk of electric shock when the iron is used after reassembly.
- ance used by or near children. Do not leave the iron unattended while the iron is connected or on an ironing board.
- parts, hot water, or steam. Use caution when you turn a STEAM IRON upside down - there might be hot water in the reservoir.
- an iron on the same circuit with another high wattage appliance.
- a cord with an ampere rating equal to or greater than the maximum rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care shall be taken to arrange the cord so that it cannot be pulled or be tripped over.
- This appliance is intended for private houshold use only.
- Only use this appliance indoors and for ironing textile items in accordance with this Operator Manual.
- In an emergency, immediately unplug the plug from the wall socket.
- The appliance must ONLY be connected to a grounded wall socket outlet. We recommend FI circuit breakers. The power plug must be • DO NOT open the steam generator cap or the easily accessible in case of emergency.
- The iron soleplate and steam jet are very hot. DO NOT iron or apply steam to clothing while it is being worn.

- Do not point steam in the direction of people or pets during vertical steaming.
- This appliance produces heat. Keep your hands and body away from the iron soleplate and steam jet while in use - they will be HOT. Take care when returning the steam iron to the iron rest.
- CONTACT WITH STEAM UNDER PRESSURE CAN RESULT IN SEVERE BURNS.
- drain cap while operating the appliance.
- Never leave the appliance unattended while switched on.