



美商海盗船



VOID RGB ELITE USB



VOID RGB ELITE USB

具有 7.1 声道环绕立体声的优质游戏耳机
Premium Gaming Headset with 7.1 Surround Sound



美商海盗船

官方网站: corsair.com

技术服务热线: 400 841 7130

支持: support.corsair.com

博客: corsair.com/blog

论坛: forum.corsair.com

微信: CorsairRMA

© 2019-2021 CORSAIR MEMORY, Inc. 版权所有。
实物可能与所示图片不同。进口商: 可赛尔 (深圳) 贸易有限公司
产地: 越南 | 产品: 耳机 | 49-001924 AC
© 2019-2021 CORSAIR MEMORY, Inc. All rights reserved.






中文 1

ENGLISH 3

控件和功能

- A** 头带调节
- B** 悬臂 + 铰链
- C** 静音按钮
- D** 飞梭旋钮 (音量 + EQ)
- E** 覆盖有超细纤维的耳垫
- F** 麦克风防风泡沫棉 (可拆卸)

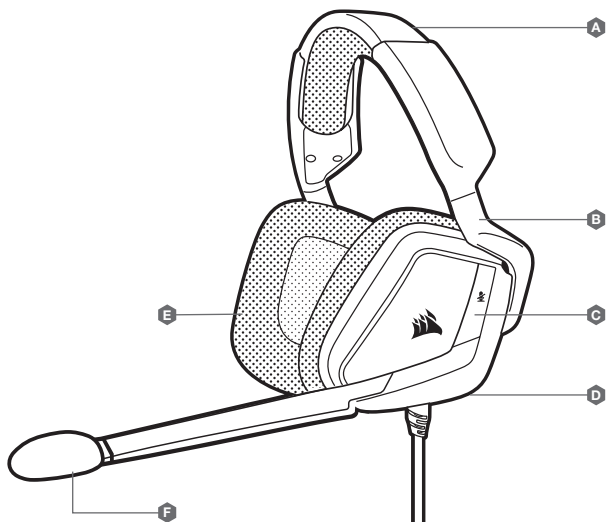

开始使用 VOID RGB ELITE USB 耳机

- > 将耳机连接到 PC 上的 USB 端口。
- > 前往 corsair.com/support/downloads 下载 CORSAIR Utility Engine (“iCUE”) 软件。使用 iCUE 软件可启用耳机的全套功能。
- > 注意: 如果不使用软件的情况下使用耳机, 某些功能将禁用。
- > 在运行 Windows® 7、Windows® 8.1、Windows® 10 或更高版本的 PC 上安装 iCUE 软件。
- > 安装完成后, 重新启动 PC, 然后启动 iCUE。

iCUE 软件可用于

- > 选择 RGB 颜色偏好和灯光亮度。
- > 选择和自定义音频均衡器 (EQ) 设置。
- > 调节麦克风输入音量和麦克风侧音。
- > 打开或关闭 7.1 声道环绕声。



注意: 长时间以高音量听东西可能会损害听力。
应每隔一段时间休息一下, 而且刚开始时应尽可能将音量调至较低水平, 然后再调高。

耳机音频设置

- 短按 (0.1 秒 - 0.5 秒) 飞梭旋钮 **D** 开关均衡器。
- 按住 (0.6 秒 - 2 秒) 飞梭旋钮 **D** 开关 7.1 声道环绕声。


耳机麦克风控制

- 短按 (0.1 秒 - 0.5 秒) 麦克风静音按钮 **C** 开启/关闭静音。
- 长按 (2-4 秒) 麦克风静音按钮 **C** 开启/关闭侧音。

注意: iCUE 软件也可用于控制这些功能。

CONTROLS AND FEATURES

- A** Headband adjustment
- B** Cantilevered arm + hinge
- C** Mute button
- D** Jog dial (volume + EQ)
- E** Microfiber covered ear pads
- F** Microphone foam windscreen (removable)

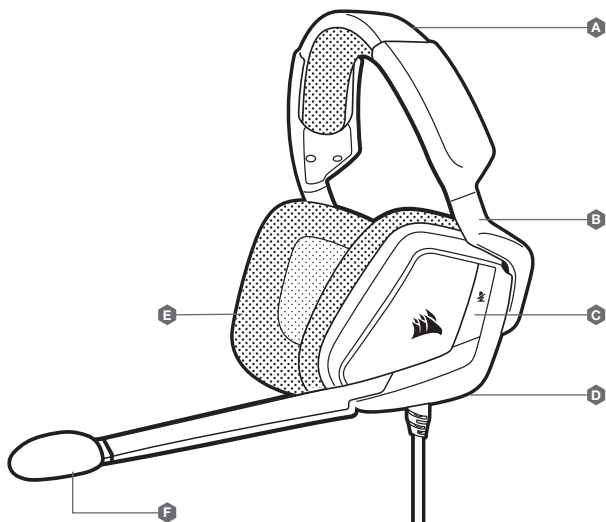

GETTING STARTED WITH YOUR VOID RGB ELITE USB HEADSET

- > Connect your headset to a USB port on your PC.
- > Go to corsair.com/support/downloads to download the CORSAIR Utility Engine ("iCUE") Software. Using the iCUE software will enable the full feature set of your headset.
- > **Note:** If the headset is used without software, some features will be disabled.
- > Install the iCUE software on a PC running Windows® 7, Windows® 8.1, Windows® 10 or later.
- > After installation is complete, reboot your PC, and launch iCUE.

iCUE SOFTWARE CAN BE USED TO

- > Choose your RGB color preference and light intensity.
- > Select and customize audio equalizer (EQ) settings.
- > Adjust microphone input volume, and microphone side tone.
- > Set 7.1 surround sound on or off.



Note: Prolonged listening at high volumes may adversely affect your hearing. Take breaks between sessions and always begin with the volume at the lowest possible level before increasing.

HEADSET AUDIO SETTINGS

Short key press (0.1-0.5 seconds) on JOG DIAL **D** toggles EQ.

Medium key press (0.6-2 seconds) on JOG DIAL **D** toggles 7.1 surround sound.

HEADSET MIC CONTROL

Short key press (0.1-0.5 seconds) on mic mute button **C** toggles mute on and off.

Long key press (2-4 seconds) on mic mute button **C** toggles side tone on and off.

Note: iCUE software can also be used to control these features.