

QUICK START GUIDE

IMPORTANT **READ BEFORE USING**

CERTIFICATION MODEL: CAAB0012

PACKAGE CONTENTS

- Rematch[™] Core Controller
- 8ft/2.4m USB-C Cable
- Quick-Start Guide

SETUP

1. Initial Setup

Plug the USB-C end of the cable into the top of the controller, and the USB-A side into your console or PC, then press the Xbox button on the controller. The light above the Xbox logo will illuminate to indicate it is connected.



2. Mute Microphone

Press the function button, located above the audio jack, twice to mute your microphone.



3. Control Volume

While holding down the function button, press D-Pad +Up/-Down to adjust game volume.



4. Game/Chat Balance

While holding down the function button, press D-Pad Left/Right to adjust game/chat balance.



FUNCTIONS

- Dual rumble motors & impulse triggers for immersive gameplay
- Search and download the Control Hub App on the Xbox or PC Microsoft Store for controller configuration and diagnosis.



Any questions? www.turtlebeach.com/support

Please register your product to receive important updates. www.turtlebeach.com/productregistration

> For warranty, visit: www.turtlebeach.com/warranty