



PRO BFG™ RELOADED

 
QUICK START GUIDE

IMPORTANT READ BEFORE USING

CERTIFICATION MODEL:
052-002 & 052-002T
Rating: 5 VDC, 500mA

PACKAGE CONTENTS


- Victrix Pro BFG Reloaded
- USB Wireless Transmitter
- Detachable 3m Braided USB-C Cable
- 6-Button Fightpad Module
- Reversible D-Pad and Hall Effect Thumbstick Module
- Interchangeable D-Pad, Hall Effect Thumbsticks, Caps, and Gates
- Module Customization Tool
- Carrying Case

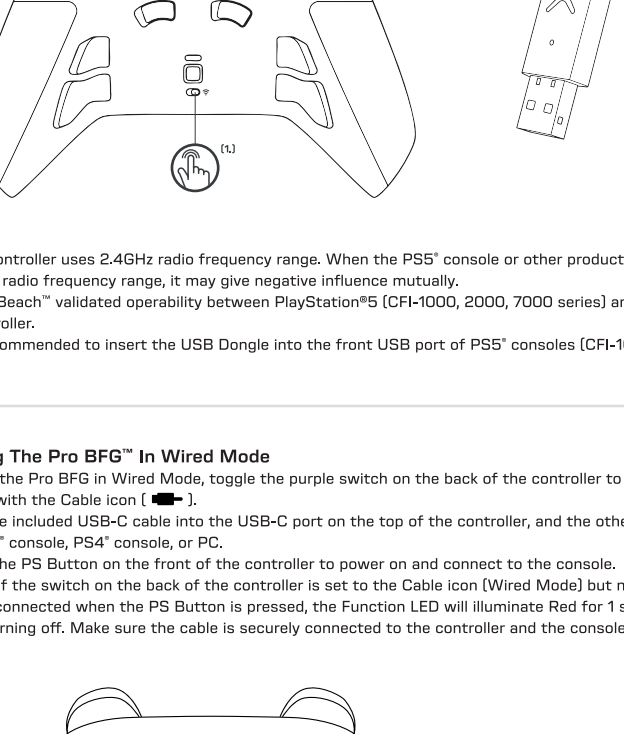

SETUP

1. Using The Pro BFG™ In Wireless Mode

 
- To use the Pro BFG™ in Wireless Mode, toggle the purple switch on the back of the controller to the position with the Wireless icon (📶).
- Plug the included Wireless USB Dongle into your PS5™ console, PS4™ console, or PC. The LED on the dongle will begin flashing purple.
- Press and release the PS Button on the front of the Pro BFG Controller.
- Once connected, the X-Logo on the controller and the LED on the dongle will be illuminated solid purple.
- To turn off the controller, press and hold the PS Button for 5 seconds until the X-Logo LED turns off.

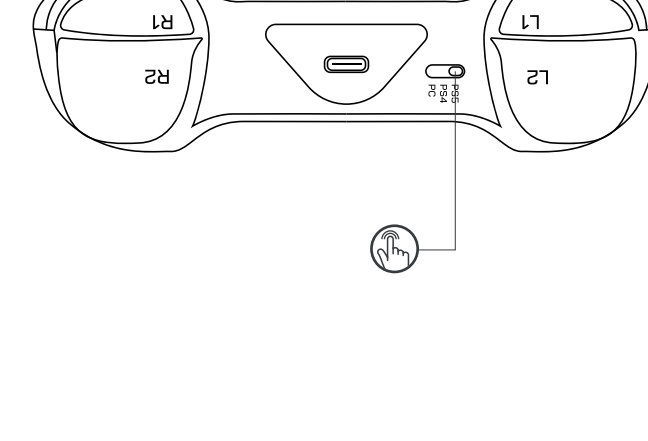

- This controller uses 2.4GHz radio frequency range. When the PS5™ console or other products use the same radio frequency range, it may give negative influence mutually.
- Turtle Beach™ validated operability between PlayStation®5 (CFI-1000, 2000, 7000 series) and this controller.
- It is recommended to insert the USB Dongle into the front USB port of PS5™ consoles (CFI-1000 series).


2. Using The Pro BFG™ In Wired Mode

 - To use the Pro BFG in Wired Mode, toggle the purple switch on the back of the controller to the position with the Cable icon (🔌).
- Plug the included USB-C cable into the USB-C port on the top of the controller, and the other end into your PS5™ console, PS4™ console, or PC.
- Press the PS Button on the front of the controller to power on and connect to the console.
- NOTE: If the switch on the back of the controller is set to the Cable icon (Wired Mode) but no USB Cable is connected when the PS Button is pressed, the Function LED will illuminate Red for 1 second before turning off. Make sure the cable is securely connected to the controller and the console.

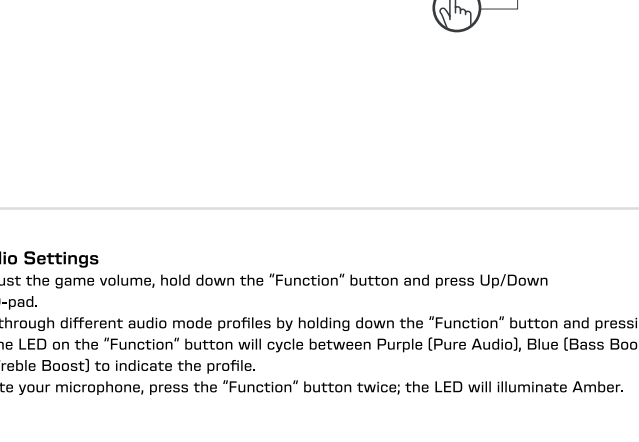


3. Platform Selection Switch

 - The Pro BFG can be used on PS5™ consoles, PS4™ consoles, and PC (Xinput).
- Use the 3-position purple slide switch on top of the controller (next to the USB-C port) to select between "PS5", "PS4", and "PC" modes to match the platform you are currently using.
- NOTE: When using PC (Xinput) Mode, the Pro BFG does not support audio through the headset jack and does not support the touchpad feature.

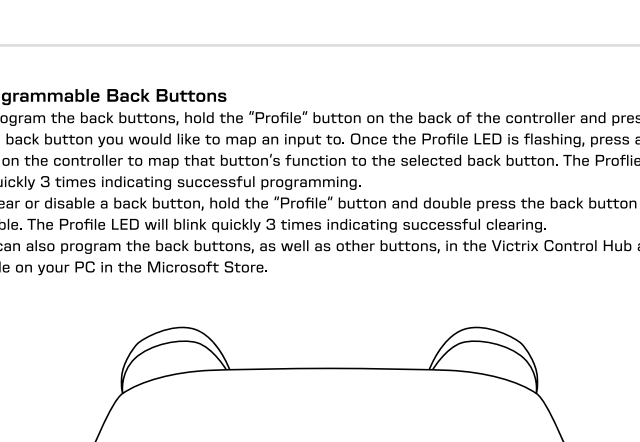


4. Tournament Lock Mode

 - The Pro BFG has a Tournament Lock Mode to prevent accidental presses of system buttons that can disqualify you during tournaments. When Tournament Lock Mode is enabled, the PS, CREATE, OPTIONS, and Touchpad Button inputs will all be disabled.
- To enable Tournament Lock Mode, simultaneously press and quickly release the "Function" Button (on the front of the controller) and the "Profile" Button (on the back of the controller). The Function LED and Profile LED will illuminate dimly in Red and blink every few seconds to indicate it is in Tournament Lock Mode.
- To leave Tournament Lock Mode, simultaneously press and quickly release the "Function" Button and the "Profile" Button again to resume normal mode.

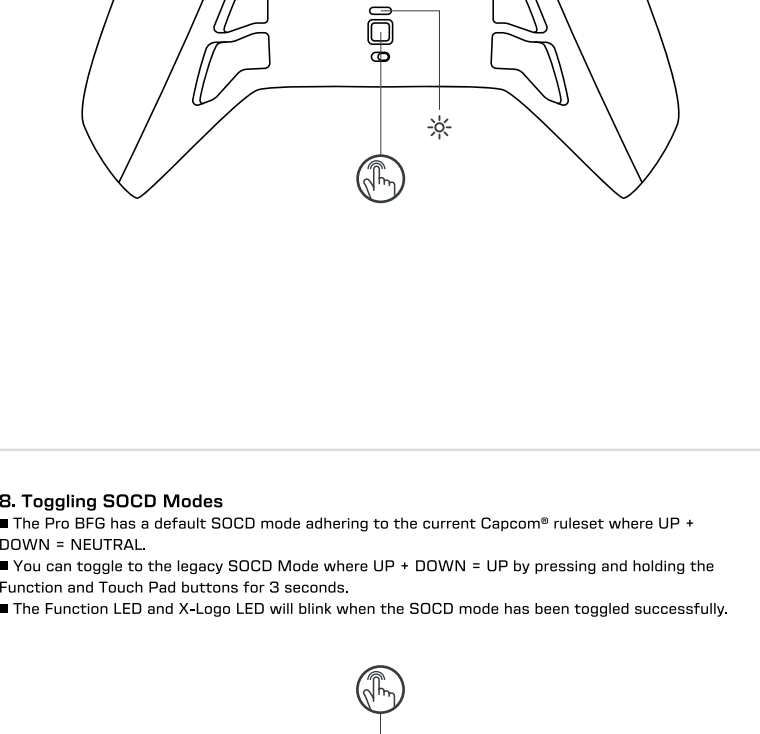


5. Audio Settings

 - To adjust the game volume, hold down the "Function" button and press Up/Down on the D-pad.
- Cycle through different audio mode profiles by holding down the "Function" button and pressing L1/R1. The LED on the "Function" button will cycle between Purple (Pure Audio), Blue (Bass Boost), or Green (Treble Boost) to indicate the profile.
- To mute your microphone, press the "Function" button twice; the LED will illuminate Amber.

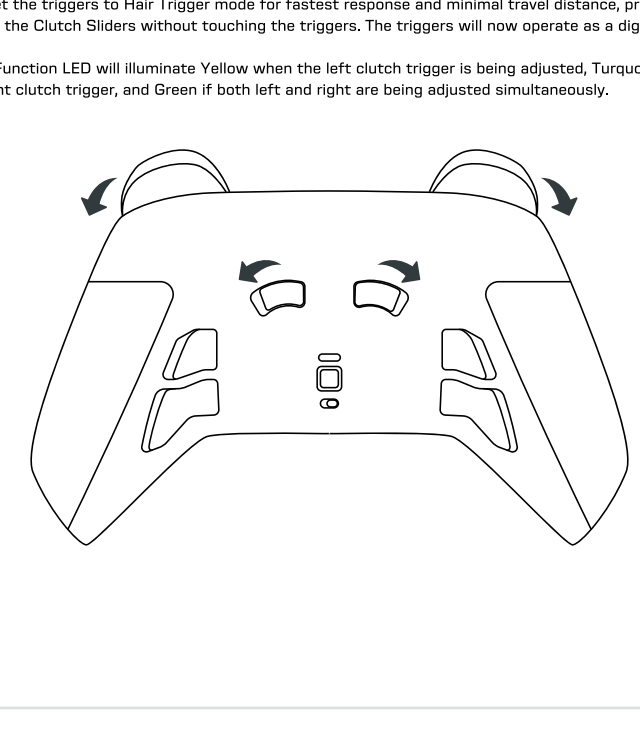


6. Programmable Back Buttons

 - To program the back buttons, hold the "Profile" button on the back of the controller and press the desired back button you would like to map an input to. Once the Profile LED is flashing, press any button on the controller to map that button's function to the selected back button. The Profile LED will blink quickly 3 times indicating successful programming.
- To clear or disable a back button, hold the "Profile" button and double press the back button you wish to disable. The Profile LED will blink quickly 3 times indicating successful clearing.
- You can also program the back buttons, as well as other buttons, in the Victrix Control Hub app available on your PC in the Microsoft Store.

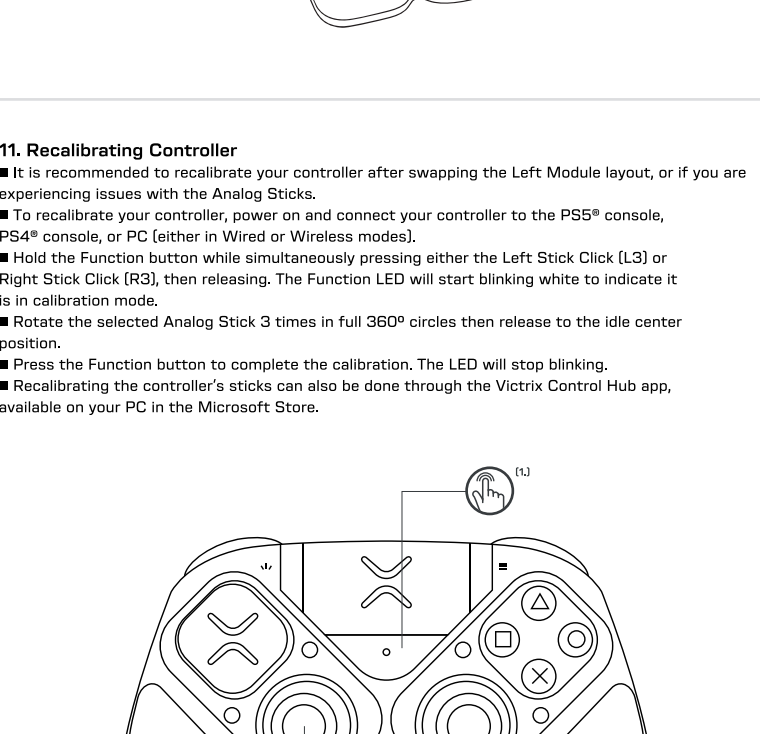


7. Creating Custom Profiles

 - Three custom profiles of back button mappings can be stored on the controller.
- Press and release the "Profile" button on the back of the controller to toggle between the 3 profiles. The "Profile" LED will illuminate in Purple, Blue, or Green to indicate which Profile is active.
- When mapping inputs to the back buttons, the "Profile" LED will blink in the color of the currently active Profile.

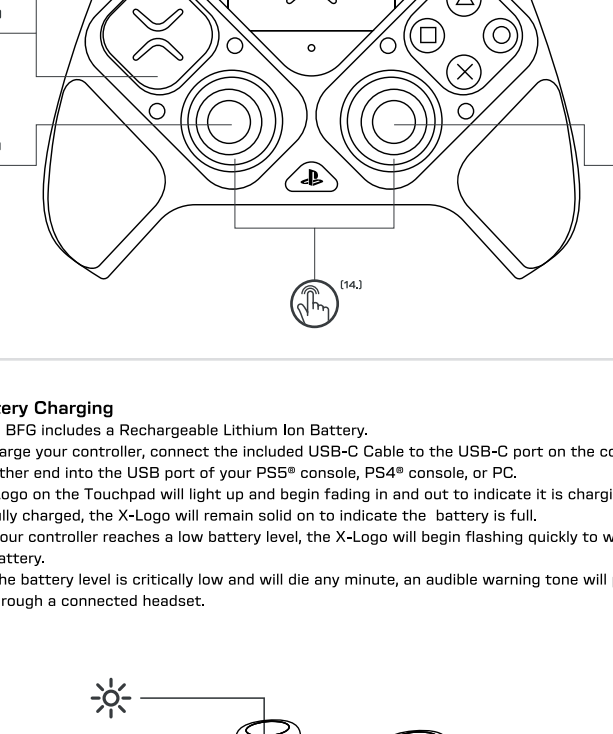

8. Toggling SOCD Modes

 - The Pro BFG has a default SOCD mode adhering to the current Capcom® ruleset where UP + DOWN = NEUTRAL.
- You can toggle to the legacy SOCD Mode where UP + DOWN = UP by pressing and holding the Function and Touch Pad buttons for 3 seconds.
- The Function LED and X-Logo LED will blink when the SOCD mode has been toggled successfully.

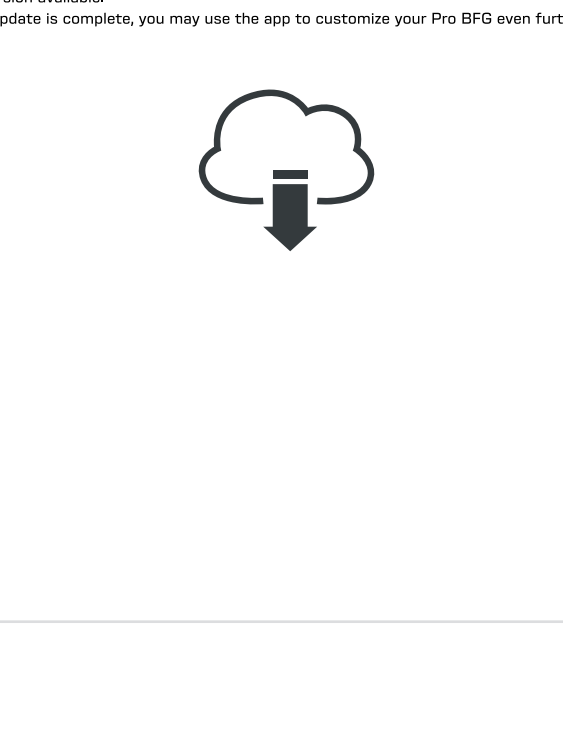

9. Trigger Stops

- The Pro BFG Controller features our patented Clutch Trigger mechanism with 5 trigger stop settings.
- To adjust the trigger stop, press and hold the Clutch Sliders on the back of the controller, then depress the trigger to the desired stopping position. Release the Clutch Slider to set the trigger stop to your selected position.
- To set the triggers to Hair Trigger mode for fastest response and minimal travel distance, and release the Clutch Sliders without touching the triggers. The triggers will now operate as a digital button.
- The Function LED will illuminate Yellow when the left clutch trigger is being adjusted, Turquoise for the right clutch trigger, and Green if both left and right are being adjusted simultaneously.



10. Removing / Swapping Modules

- The Left module can be rotated 180° to choose between the standard analog stick layout of PlayStation® wireless controllers, or an offset sticks layout. The Right module can be removed and replaced with the 6-button Fightpad module for fighting games.
- To remove the module, locate the included purple Module Swap Tool in the carrying case and unscrew the 2 hex-screws on the module. The screws will be retained in the module and will not remove entirely or fall out from the module plate.
- Swap in the module of your choosing and screw in the 2 hex-screws to lock the module in place.
- NOTE: It is recommended to recalibrate your Pro BFG after swapping the Left Module layout. Follow the steps in the Recalibration section.

11. Recalibrating Controller

- It is recommended to recalibrate your controller after swapping the Left Module layout, or if you are experiencing issues with the Analog Sticks.
- To recharge your controller, connect the included USB-C Cable to the USB-C port on the controller, PS4™ console, or PC (either in Wired or Wireless modes).
- Hold the Function button while simultaneously pressing either the Left Stick Click (L3) or Right Stick Click (R3), then releasing. The Function LED will start blinking white to indicate it is in calibration mode.
- Rotate the selected Analog Stick 3 times in full 360° circles then release to the idle center position.
- Press the Function button to complete the calibration. The LED will stop blinking.
- Recalibrating the controller's sticks can also be done through the Victrix Control Hub app, available on your PC in the Microsoft Store.

12. Changing Analog Stick Caps

- The Pro BFG includes 4 analog stick caps (2 standard concave, 1 short convex, 1 tall Sniper Stick).
- To remove the analog stick cap, firmly pull up on the analog stick to remove it from the controller.
- To install the analog stick cap, align the mounting neck and press down until it clicks securely into place.

13. Changing The D-Pad

- To remove a D-pad, hold it between two fingers and gently pull the D-Pad cover off.
- To add a D-pad, line it up with the controller and gently push down until you hear a click.

14. Changing The Gates

- Remove the Module you wish to change the analog stick gate on (follow directions for Removing / Swapping Modules).
- To remove a gate, flip the module plate over (so the back is facing you) and press firmly on the back side of the gate with your thumb. The gate should pop out.
- When adding a gate, first make sure the front of the module plate is facing you. Then, line up the small alignment dot on the gate to the alignment dot on the module plate (octagonal gate only), and press down firmly until it clicks in around the whole gate.

15. Battery Charging

- The Pro BFG includes a Rechargeable Lithium Ion Battery.
- To recharge your controller, connect the included USB-C Cable to the USB-C port on the controller, and the other end into the USB port of your PS5™ console, PS4™ console, or PC.
- The X-Logo on the Touchpad will light up and begin fading in and out to indicate it is charging.
- Once fully charged, the X-Logo will remain solid on to indicate the battery is full.
- When your controller reaches a low battery level, the X-Logo will begin flashing quickly to warn you of the low battery.
- When the battery level is critically low and will die any minute, an audible warning tone will play every minute through a connected headset.

16. Victrix Control Hub App

- The Pro BFG controller is compatible with the Victrix Control Hub app. With the free app, you can map buttons, recalibrate sticks and triggers, adjust deadzones and EQ settings, run diagnostics, update firmware, and more.
- To use the Victrix Control Hub app, go to the Microsoft Store on your PC and search for "Victrix Control Hub."
- Once downloaded and open, you will be prompted to plug in a compatible Victrix controller.
- When you plug in a controller for the first time, you will be required to update your firmware to the latest version available.
- Once the update is complete, you may use the app to customize your Pro BFG even further.

TURTLE BEACH™

Any questions?
www.turtlebeach.com/support

Please register your product to receive important updates.
www.turtlebeach.com/productregistration

For warranty, visit:
www.turtlebeach.com/warranty