



REMATCH™ WIRELESS

QUICK START GUIDE

IMPORTANT READ BEFORE USING

PLATFORM COMPATIBILITY
NINTENDO SWITCH™ 2
NINTENDO SWITCH™
NINTENDO SWITCH™ LITE
NINTENDO SWITCH™ OLED


CERTIFICATION MODEL:
CWBB0027

SETUP

1. Pairing the Controller

- A. Turn on your Nintendo Switch™ 2 device and press any button on the controller.
- B. If your controller does not automatically connect, it will need to be paired with the device.
- C. Using the Joy-Con™ controllers, navigate to Controllers > Change Grip/Order.
- D. Now, using your controller, press and hold the sync button (at the top of the controller by the charging port) for 3 seconds until it pairs and the player indicator light at the bottom is solid.

Tip: To unpair the controller from the Nintendo Switch™ 2, hold down the sync button (located at the top of the controller) for at least 1 second.

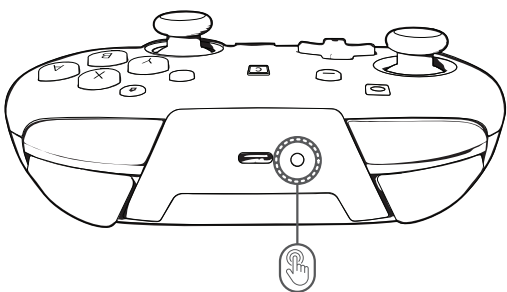


2. Re-connecting the Controller

- A. If the controller is not connecting with the device, but has already been paired, simply go into Controllers > Change Grip/Order.
- B. When prompted, press L and R on your controller to connect.

Tip: You can also press and hold the "Home" button to wake up the controller and Nintendo Switch™ 2 device.

3. Charging the Controller

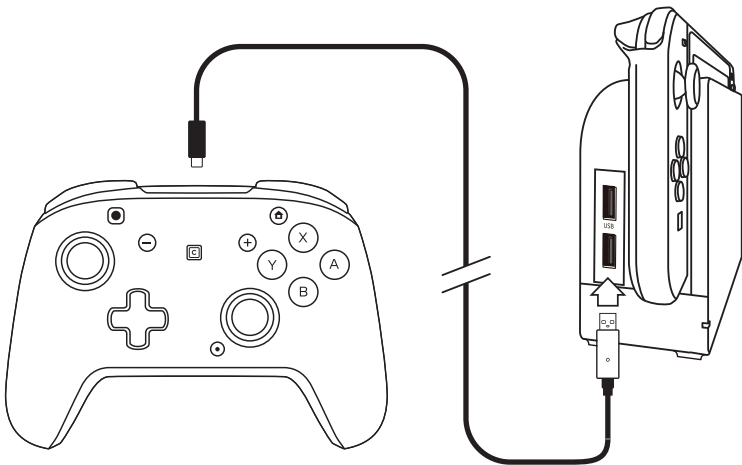


- A. When the controller is low on battery, the "function" button's LED (located at the bottom center of the controller) will blink RED every 30 seconds.
- B. Using the included USB-C cable, connect the controller to one of the USB ports on the Nintendo Switch™ 2 dock.
- C. While charging, the "function" button's LED will pulse RED. When the controller is fully charged, the LED will turn WHITE.

Note: To prevent the controller battery from completely draining out, please charge the controller every 3 months even if it's not in use.

4. Program Back Buttons

- A. To program the back buttons, hold the "function" button and press the button you'd like to map a control to. Once the LED is lashing, press any button on the controller to map that button's function to the back. The LED will blink quickly 3 times, indicating successful programming.
- B. To clear a mapped function or disable the back buttons completely, hold down the "function" button and double press any back button.

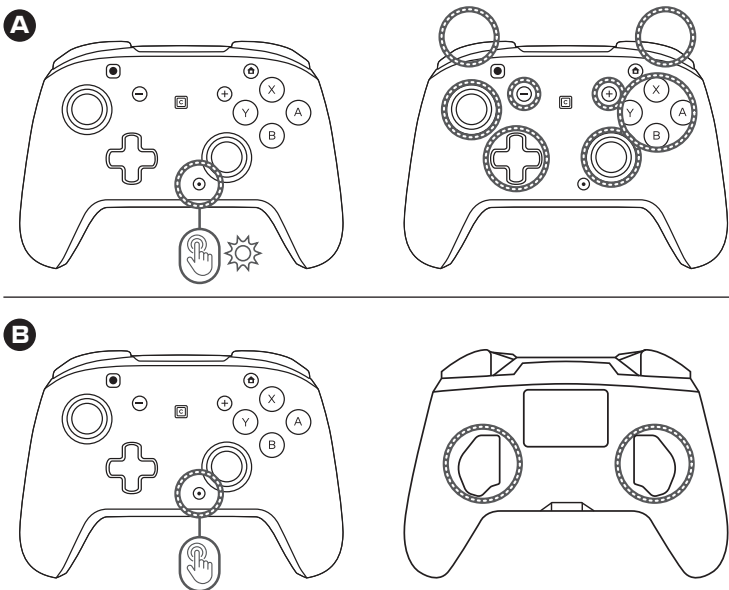

TURTLE BEACH™

Any questions?
www.turtlebeach.com/support

Please register your product to receive important updates.
www.turtlebeach.com/productregistration

For warranty, visit:
www.turtlebeach.com/warranty

PKG DESIGN DEPT

Designer:	MICHAEL OXLEY
Product:	REMATCH WIRELESS
Arena #:	
Project:	QSG
Date:	09 / 25 / 2025
Scale:	100%



COMMENTS

Please do not print this layer!!!

- 100% actual size
- Refer to video on how to fold

SPECIFICATIONS



Printing information

BLK + WHT

QSG Paper Weight (80g)
Foldout

Folding Line

CHANGES

Orig. Arena#:	
New Arena #:	
Date / Initiator:	