 
 
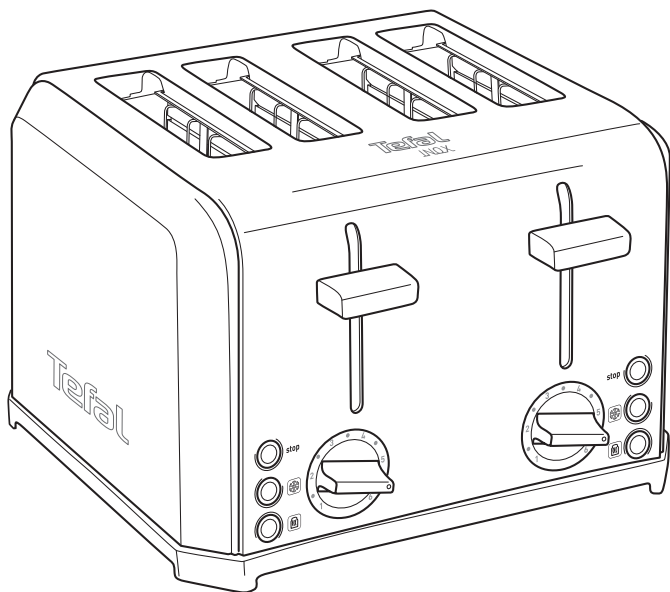 
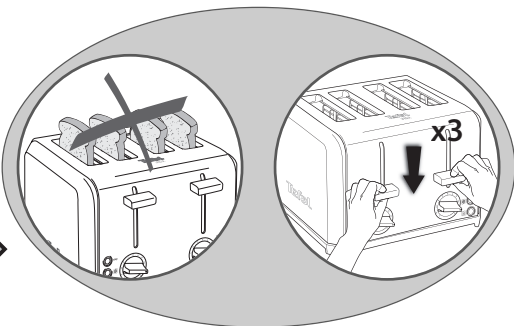 
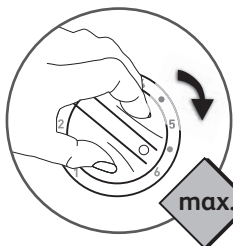 
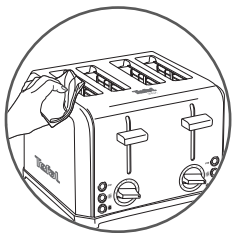 


Tefal

 
 
 
 
 
 
INOX

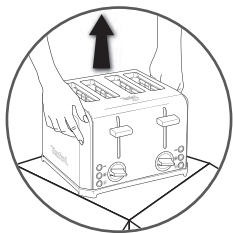




1. FIRST USE



2. TOASTING

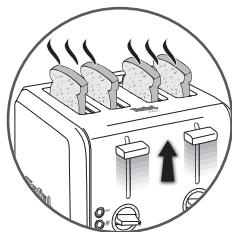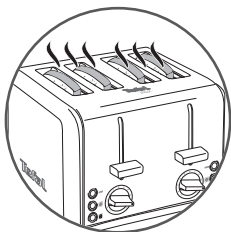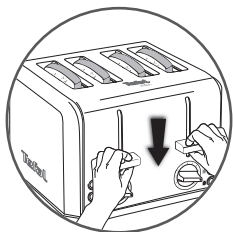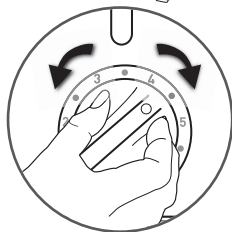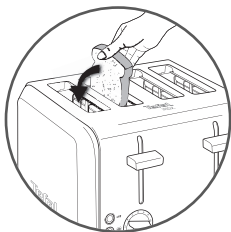



   3. HIGH-LIFT



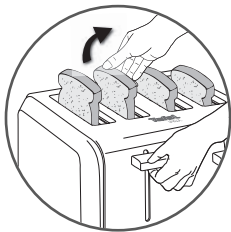
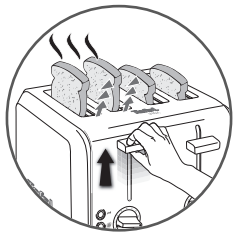



4. STOP/EJECT




 
 
stop/eject

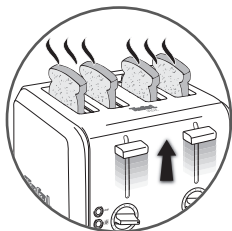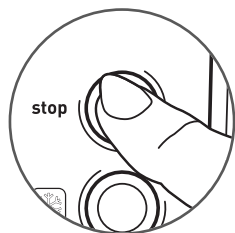

  
 
 
 
5. REHEAT

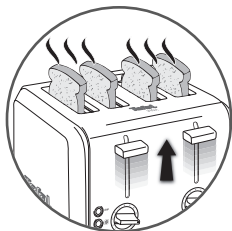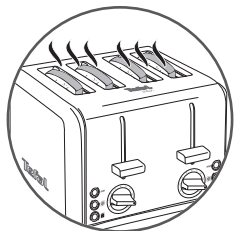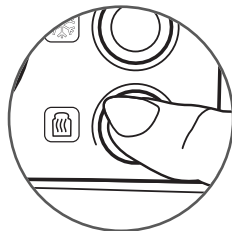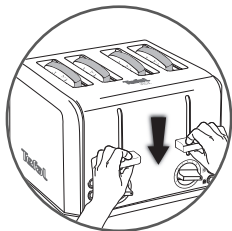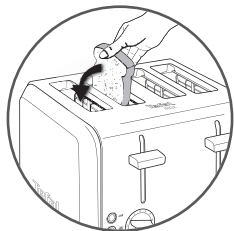

     6. DEFROST

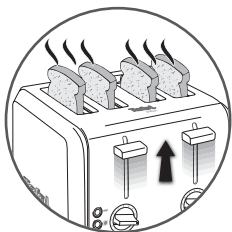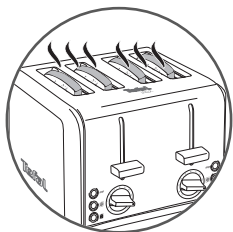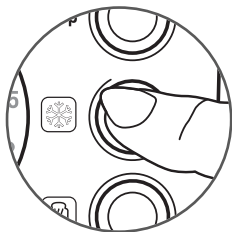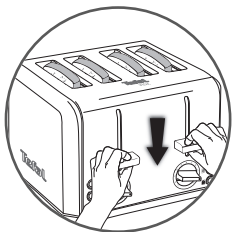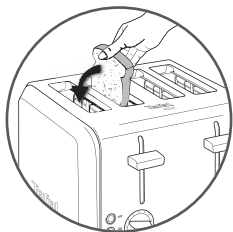

    7. CLEANING

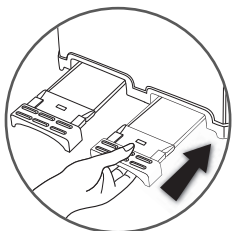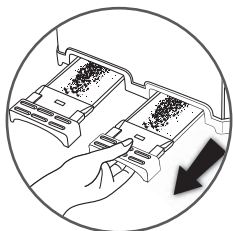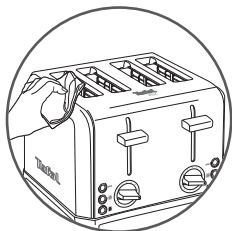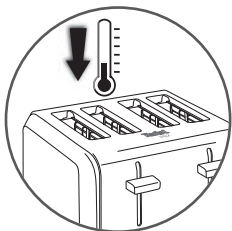

8. DO NOT

