

Quick Start Manual

Caution	Statement
The manufacturer is not responsible for any consequences caused by improper usage of the phone and not following the recommendations.	The software version can be upgraded without earlier notice. The representative retains the right to determine the correct interpretation of the instructions.

—CHILDREN AND PHYSICALLY OR MENTALLY DISABLED PEOPLE—

This device should not be operated by people with limited physical or mental abilities, as well as by people with no earlier experience in operation of electronic equipment.

—BATTERY AND ACCESSORIES—

Avoid high and extremely low temperatures, contact with liquids and metals, and misuse of the battery to avoid damage. Do not throw it into fire, use it as intended, and do not charge the battery for more than 1 day at a time. Assemble the correct type of battery, do not open, and dispose of according to the instructions. Unplug the unused charger, and replace it if damaged. Use original accessories.

Power supply technical specifications

The power delivered by the charger must be between min 1,5 Watts required by the radio equipment, and max 5 Watts in order to achieve the maximum charging speed.

Inserting SIM card(s), memory card and battery

Turn off the phone, remove the back cover of the case by levering it with your fingernail through the slot in the housing and remove the battery. Insert the SIM card, make sure that the gold contacts face down and fit into the embossed recess. Insert the microSD memory card in the same way.

Insert the battery so that the gold contacts touch the triple connector in the phone's recess. Close the flip cover by pressing gently until you hear the latches click. Make sure it is firmly closed.

Charging the battery

Connect the USB-C charger to the charger connector on your phone, then connect the charger into the power grid. Remember that improper connection of the charger can cause serious damage to the phone, which is not covered by the warranty. During charging, the battery icon in the upper right corner of the screen will be animated. After charging, the battery will no longer be animated, in which case disconnect the charger from the electrical outlet and the cable from the socket on the phone.

Correct disposal of electrical and electronic equipment



According to EU Directive 2012/19/EU, equipment marked with a crossed-out rubbish container must not be disposed of with household waste. It should be taken to a recycling centre. Information on disposal can be obtained from local authorities or the point of sale.



Correct disposal of used batteries



Products with batteries marked with a crossed-out bin must not be disposed of with household waste. They must be recycled in accordance with the EU directive and local regulations. Information can be obtained from municipal offices or waste authorities.

Warranty period

The warranty for the accessories in the product kit lasts for a period of 6 (six) months from the date of purchase.