



Réfrigérateur Combiné – ERCV 323b

➤ Montage et démontage, inversion de la porte

Preparations

Switch off the appliance at the socket outlet and pull out the mains plug!

IMPORTANT: We suggest you ask somebody to help you when moving the appliance around and

to hold doors when removing / re-fitting hinges and doors to avoid any injury and damage to the product.

Display Connections

Display modification is not needed while reversing the doors.

Front Top Panel Connections

Supplied Parts

The following parts, which are exclusively for left hand side fitted hinge operation are supplied in a plastic bag with the appliance:

- Upper door top trim hinge cover.
- Upper door middle- Hinge pin bushings, 2 different parts supplied as spares for future use. hinge bushing/door stopper assembly.
- Hinge pin hole blanking plug, 1 piece supplied as spare for future use.

We suggest you keep all the parts supplied in the plastic bag and also parts, which have been removed when reversing doors, in a safe place for possible future, re-use.



Front Top Panel Connections

Tools Required

Small and medium size flat and cross-headed screwdrivers, a pair of pliers.

Front Top Panel Connections

Initial view of the Top panel.



Front Top Panel Connections

Step - 1

Unscrew the top plastic hinge cover with using a small cross-headed screwdriver.



Front Top Panel Connections

Step - 2

Gently prise off hinge covers on both sides of front top panel using a small flat-headed screwdriver.



Front Top Panel Connections

Step - 3

Remove the display connection by pressing on the connector lock pin.



Front Top Panel Connections

Step - 4

Unscrew the plastic hinge cover of upper door top trim



Front Top Panel Connections

Step - 5

Unscrew and remove the hinge using a cross-headed screwdriver while holding the door firmly.



Front Top Panel Connections

Step - 6

Fit the provided upper hinge on the other side using flat-headed screwdriver.



Front Top Panel Connections

Step - 7

Change the display cable direction to the recently fitted hinge side.
Pass the cable through the plastic hinge cover of the door top trim.



Front Top Panel Connections

Step - 8

Locate and re-fit the plastic hinge cover of the door top trim.

IMPORTANT: To avoid the cable damages, draw the cable taut before the tighten the top trim screw inward.



Front Top Panel Connections

Step - 9

Locate and re-fit door to the hinge

IMPORTANT: To avoid the cable damages, pass the cable through the hinge cable hole carefully before re-fitting the door to the hinge.



Front Top Panel Connections

Step - 10

Re-connect the display connectors.



Front Top Panel Connections

Step - 11

Carefully pass the cable through the top plastic hinge cover.

Tighten the screw of the top plastic hinge cover with using a small cross-headed screwdriver.



Front Top Panel Connections

Step - 12

Re-fit the hinge covers on both sides of front top panel using a small flat-headed screwdriver.



Front Top Panel Connections

Troubleshooting

If you have a problem with display, please follow the steps below;

- Check the top hinge plastic cover assembly, display cable should not be damaged.
- Check the display cable connector, terminals should be in the terminal holes of the connector.

