

BLUETOOTH TURNTABLE

TT-B500



Instruction Manual

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY
BEFORE USE AND KEEP IT FOR FUTURE REFERENCE.

SAFETY INFORMATION

Please read the following safety instructions and respect the warnings before the appliance is operated:

1. Always follow basic safety precautions when using this appliance, especially when children are present.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Do not damage the power cord, place heavy objects on it, stretch or bend it.
4. Do not attach extension cables. Damage to the power cord may cause fire or electric shock.
5. If the supply cord is damaged, it must be replaced by the manufacturer, a service agent or similarly qualified persons in order to avoid a hazard.
6. Ensure that the unit is plugged into an AC 100-240V 50/60Hz power outlet. Using higher voltage may cause the unit to malfunction or catch fire.
7. If the power plug does not fit into the socket, do not force it.
8. Turn off the unit before unplugging it from power source to completely switch it off.
9. Do not disconnect or connect the power cord with wet hands. This may cause an electric shock.
10. If the unit is not going to be used for a long period time, disconnect the power supply.
11. Ensure that the mains plug is always easily accessible.
12. This product does not contain any parts that are serviceable by the user. In case of a fault, contact the manufacturer or authorised service department. Exposing the internal parts inside the device may endanger your life.
13. The manufacturers guarantee does not extend to faults caused by repairs carried out by unauthorized third parties.
14. Do not use this product immediately after unpacking. Wait until it warms up to room temperature before using it.
15. Ensure this product is used in moderate climates only (not in tropical/ subtropical climates).
16. Place product on a flat, stable surface that is not subject to vibrations.
17. Ensure the product and its parts are not overhanging the edge of the supporting furniture.
18. To reduce the risk of fire, electric shock or damage to this product, do not expose it to direct sunlight, dust, rain and moisture.
19. Never expose it to dripping or splashing and do not place objects filled with liquids on or near the product.
20. Do not place objects filled with liquids, such as vases, on the apparatus.





The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

21. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
22. Do not place the product where the humidity is high and ventilation is poor.
23. Ensure a minimum distance of 5 cm around the apparatus for sufficient ventilation. Do not block any ventilation openings of this product.
24. Always ensure that the ventilation openings are not covered with items such as newspapers, table-cloths, curtains, etc.
25. NEVER let anyone, especially children, push anything into holes, slots or any other openings in the unit's casing as this could result in a fatal electric shock.
26. Storms are dangerous for all electric appliances. If the mains or aerial wiring is struck by lightning, the appliance might get damaged, even if it is turned off. You should disconnect all the cables and connectors of the appliance before a storm.

DISPOSAL OF THE EQUIPMENT

Do not dispose of this product as unsorted municipal waste. Return it to a designated collection point for the recycling of WEEE in accordance with local law. By doing so, you will help to conserve resources and protect the environment. This symbol means that the product should be disposed of in an environmentally friendly manner and not with general household waste.

 


Trademarks:


The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

PRODUCT OVERVIEW

Part of the Turntable

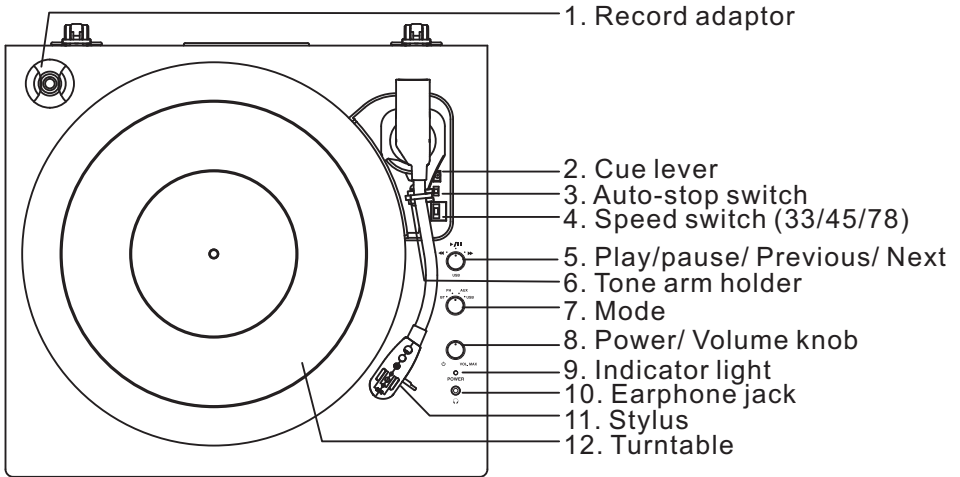

Rear view

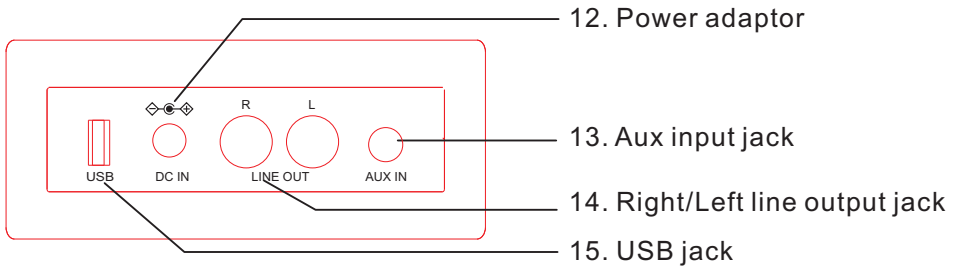 


SETUP

1. Remove the packaging materials from the unit.
2. Connect the power adaptor to the DC input jack on the rear panel.
3. Unlock the **Tone arm** and test the **Cue lever** before you place the Phono record.
4. Remove the **Needle protector** by gently pulling towards the front of the unit.

NOTE:

 It is strongly recommended that this product should be operated only from the type of power source indicated on the marking label.

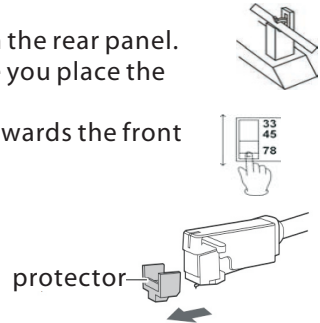

BUTTON OPERATION

POWER ON

1. Connect the power adaptor into the **DC INPUT JACK** on the rear panel.
2. Rotate the **POWER/VOLUME KNOB** on the front panel to power on the unit. The indicator turns on.

SELECT MODE

Rotate the **MODE KNOB** to select the play mode:

Bluetooth mode (indicator: **flash blue**- pairing status; **solid blue**- BT paired),

Phono mode (indicator: **solid red**),

Aux in mode (indicator: **solid red**)

USB mode (indicator: **solid blue**).

VOLUME CONTROL

1. Rotate the **POWER/VOLUME KNOB** to adjust the volume.
2. For private listening, first reduce the volume level to the minimum.
3. Insert the earphones' plug into the **EARPHONE JACK**, then adjust the volume up by the volume knob.

NOTE:

Avoid listening by earphones for long time, otherwise it can damage the hearing.

 


LISTENING TO THE PHONO RECORD

1. Rotate the **MODE KNOB** to enter the **PHONO MODE**.

The indicator lights **solid red**.

2. Gently put the Phono record on the turntable.
3. Select the record **speed** and use the record adaptor to fit the record size if necessary.
4. Raise the **Cue Lever** to lift the Tone arm off the holder.
5. Move the Tone arm gently to the edge of the record (or the starting point).
The turntable will begin to play the music.
6. When the playback has finished, slight lift the tone arm by using the Cue Lever and return it to the Tone arm holder.

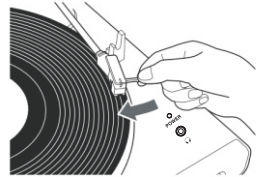

PHONO RECORD- USB RECORDING FUNCTION

 
1. Insert the USB storage device into the USB jack on the rear panel of the unit.
2. While playing the Phono record, press the **PLAY/PAUSE KNOB**, the indicator **flashes red** (it's recording the tracks).
3. Press the **PLAY/PAUSE KNOB** again to stop recording.

PHONO OUTPUT (BLUETOOTH OUTPUT MODE)

1. This play mode enables the Phono unit to play the record via other wireless speakers by Bluetooth transfer mode.
2. Turn on your external Bluetooth speaker to the Bluetooth mode.
3. While the unit is playing Phono record, **press and hold** the **PLAY/PAUSE KNOB** to enter the Bluetooth output mode.
4. The indicator light **flashes blue**, it is in Bluetooth pairing mode. It is searching for devices with Bluetooth signals in the surrounding environment.
5. The indicator lights **solid blue** once the Phono unit found a Bluetooth speaker device, they immediately pair with each other.
6. The sound of the Phono record will come over from the paired Bluetooth speaker.
7. Press and hold the **PLAY/PAUSE KNOB** again will disconnect the Bluetooth output pairing.



Bluetooth wireless earphone



Bluetooth wireless speaker

REPLACE THE STYLUS (#AT-3600L)

The stylus should last about 300 hours under normal use. It is recommended that the stylus be replaced as soon as you notice a change in sound quality.

REMOVE THE STYLUS FROM THE CARTRIDGE

1. Place your fingers at the tip of the stylus and push down to "A".
2. Pull the stylus out toward the direction "B".

NOTE:

 
When applying force to the stylus, too much may damage or break the cartridge.

INSTALL THE STYLUS

1. Hold the tip of the stylus and insert the other edge by pressing toward the direction "C".
2. Push the stylus up toward the direction "D" until it locks at the tip.


CAUTION:

1. Do not remove or bend the stylus needle.
2. Do not touch the needle to avoid injury to your hand.
3. Turn off the power before you replace the stylus.
4. Keep out of reach of children.

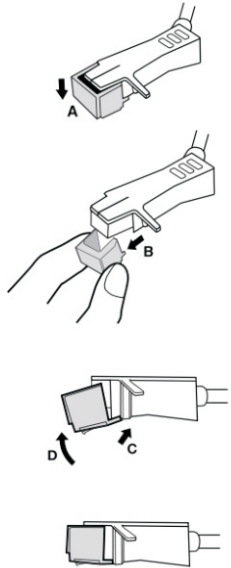

LINE OUTPUT MODE

 1. While playing the Phono unit, use the **RIGHT/LEFT AUDIO CABLE** to connect the LINE output jack on the rear panel with other amplifier device.
2. The connection through the amplifier leads the playback a better audio effect.

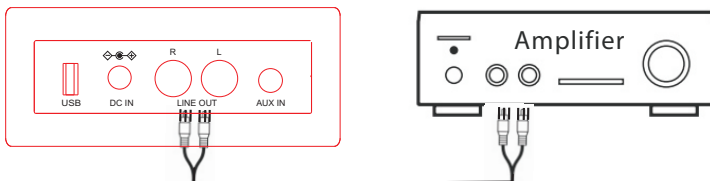


BLUETOOTH MODE

1. Rotate the **MODE button** to enter the Bluetooth mode.
2. When the indicator light flashes **blue**, it is in Bluetooth pairing status.
3. Turn on the Bluetooth function on the external Bluetooth device, then enter the Bluetooth search page, and search for the pairing name "**TT-B500**".
4. Select the Bluetooth pairing name to pair the unit.
5. When they pair successfully, the indicator light stop flashing.
6. The playback operation is controlled by your external Bluetooth device.

NOTES:

 1. Input the password "0000" if required.
2. Place the Bluetooth devices within 10 meters.




PLAY/PAUSE KNOB / PREVIOUS/NEXT

1. Press and hold the **KNOB** to disconnect the Bluetooth. Press and hold this knob again to reconnect.
2. Slightly press the **KNOB** to pause or continue playing the music.
3. Rotate the **KNOB** to skip to next track or previous track.

AUX IN MODE

 1. Use the 3.5mm-3.5mm aux in cable to connect players with aux in jack.
2. Or, use the 3.5mm-RCA cable to connect the players with RCA jack.
3. Rotate the **MODE KNOB** to enter the **AUX IN** mode, the indicator lights **solid red**.
4. Play the music by your external device. The operation is controlled by your external device.

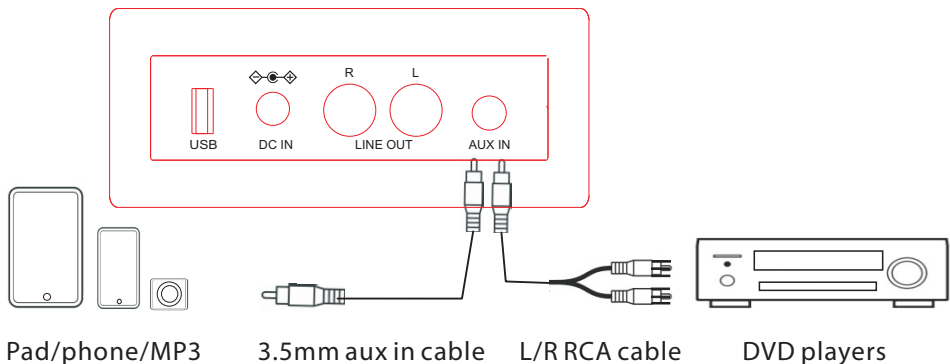

USB PLAYBACK MODE

 
1. Insert the USB flash device on the rear panel of the unit.
2. Rotate the **MODE KNOB** to enter the **USB playback mode**. The indicator lights solid blue.
3. Once the Phono unit finished reading the USB flash device, it starts playing automatically.

NOTES:

1. The Phono unit supports the USB with memory capacity less than 64GB.
2. It may take a bit long for the unit to read the USB memory stick if it contains a plenty of tracks/ files.
3. The Phono unit supports the music files with formats like mp3, wav, wma.
4. Do not create too many folders in the USB or files in multiple folders, otherwise the machine may not read the tracks or will skip this part of the files.

PLAY/PAUSE KNOB / PREVIOUS/NEXT

1. Slightly press the **KNOB** to pause or continue playing the music.
2. Rotate the **KNOB** to skip to next track or previous track.



SPECIFICATION

Power consumption	9W
Power output	2 x 3W
Power adaptor input	100-240V ~50/60Hz, 0.5A max.
Power adaptor output	9V, 1A
Bluetooth version	Bluetooth V5.1
Operating distance	10 meters (33 feet)
Operating temperature	5°C ~ 35°C

AUTOMATIC STANDBY MODE:

After 15 minutes without any audio input, the appliance automatically switches to standby mode.