


Kimex

ÉQUIPEMENTS AUDIOVISUELS

NOTICE

Support mural articulé pour écran TV 13"-23"

Gamme PREMIUM : Design - Aluminium

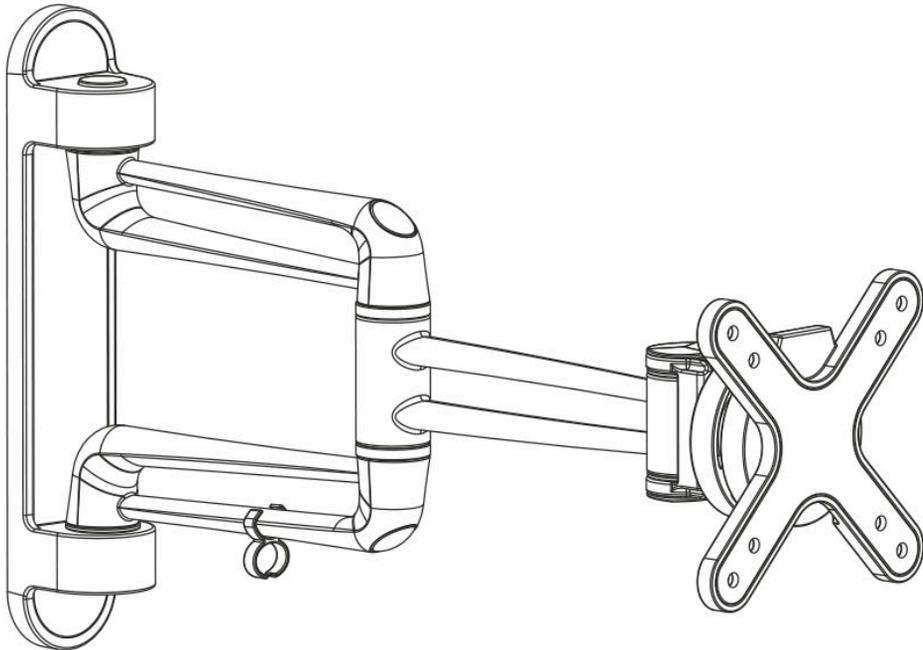

013-1531



75x75
100x100



NOTICE

*Kimex vous remercie de votre achat et vous souhaite une bonne installation.
Pour toute question nous sommes à votre disposition par téléphone ou par courriel.*









À LIRE AVANT DE COMMENCER TOUTE INSTALLATION, VOTRE **GARANTIE** PRODUIT EST ENGAGÉE




- Ouvrir avec précaution le carton d'emballage et poser sur un support de protection de type carton les éléments pour éviter d'abimer les pièces .
- Assurez-vous d'avoir bien vérifié que toutes les pièces soient bien dans le colis .
- Le produit a été conçu pour être installé en suivant ces instructions . Ne pas les respecter peut entraîner des dégâts ou blessures .


GARANTIE : Tous les produits KIMEX sont garantis 3 ans à partir de la date de réception de la commande. KIMEX INTERNATIONAL décline toute responsabilité pour les dommages survenant à la suite de montage ou d'utilisation non-conformes .

- Tous les articles de marque KIMEX bénéficient d'une garantie légale contre tout défaut de modèle, de matière, de fonctionnement et de fabrication pendant une période de 3 ans à compter de la date de réception de la commande. Dans le cadre de cette garantie, le produit sera gratuitement réparé ou remplacé (à l'appréciation de KIMEX INTERNATIONAL) . L'usure normale est expressément exclue de la garantie .
- La garantie de KIMEX INTERNATIONAL prend fin dans les cas suivants:
 - ✓ si le produit n'est pas assemblé et utilisé conformément aux instructions du mode d'emploi .
 - ✓ si le produit a subi des modifications ou des réparations par des tiers autres que KIMEX INTERNATIONAL .
 - ✓ si le problème est la conséquence de facteurs externes (extérieurs au produit) tels que foudre, dégâts des eaux, incendie, éraflures, exposition à des températures extrêmes, intempéries, solvants ou acides, mauvaise utilisation ou négligence .
 - ✓ si le produit est utilisé pour des appareils autres que ceux spécifiés sur ou à l'intérieur de l'emballage .

CONTENU DU COLIS

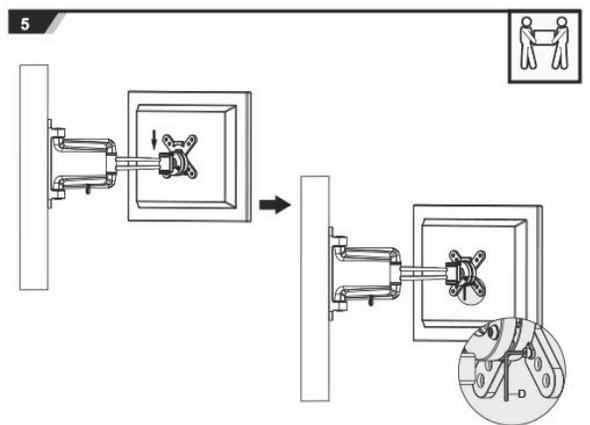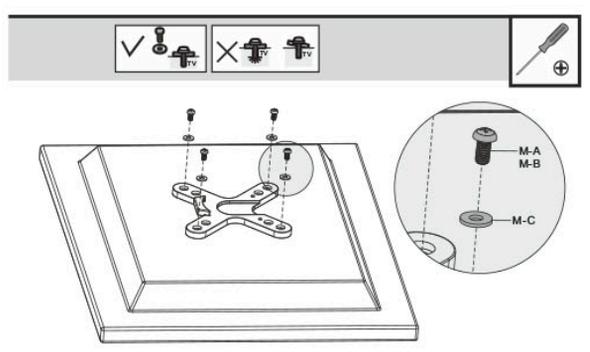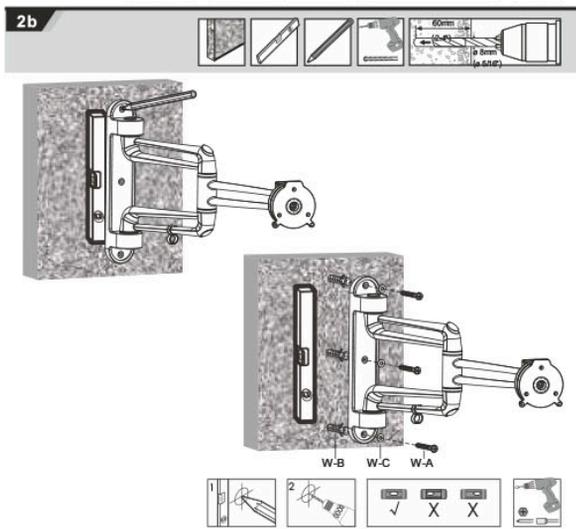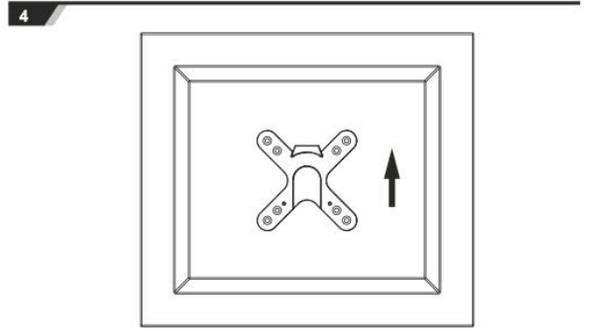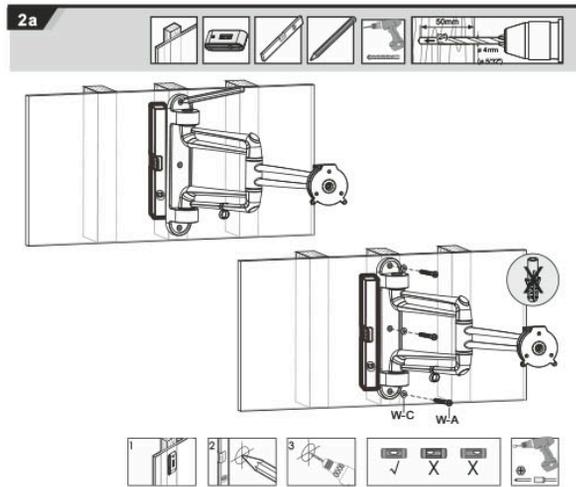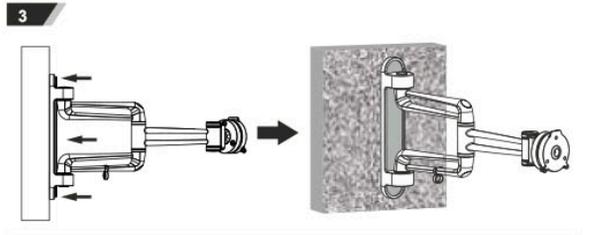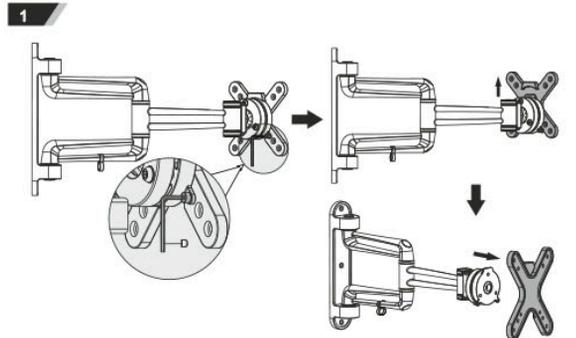
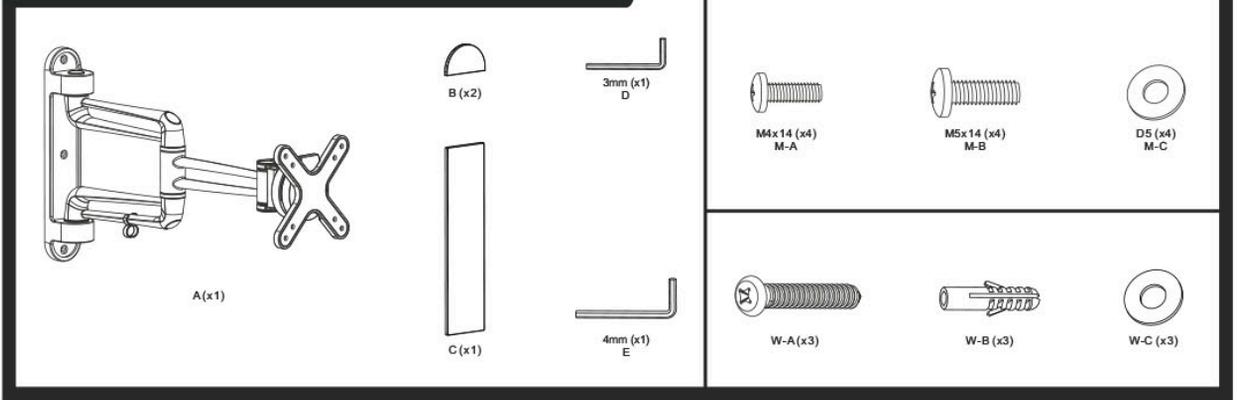


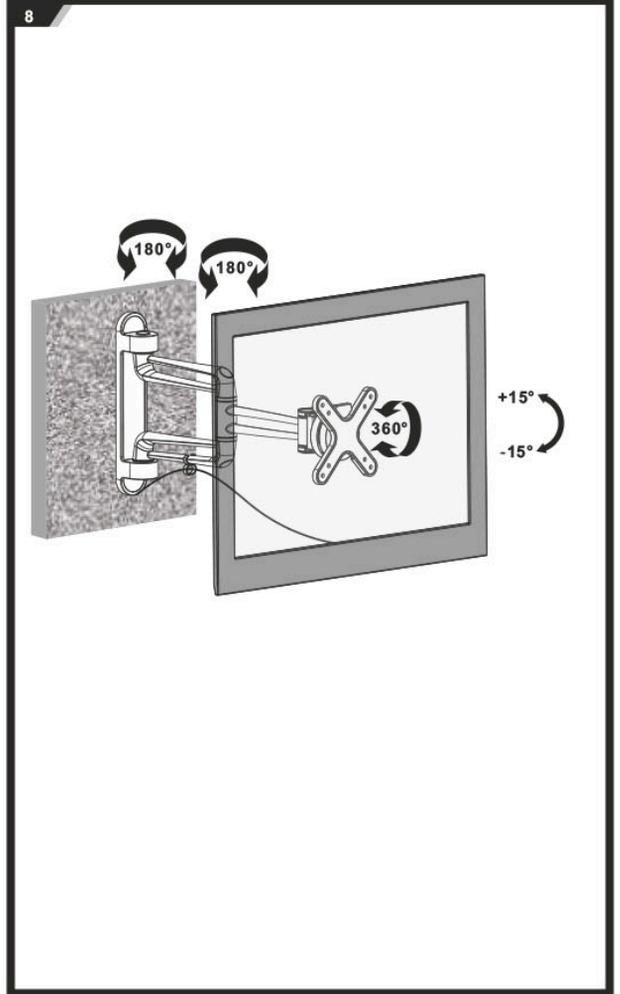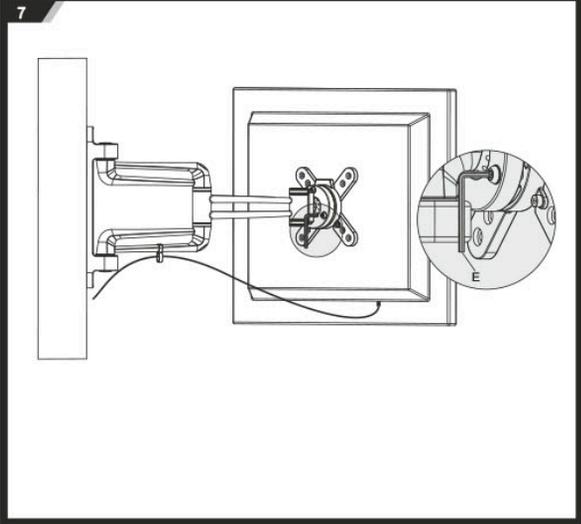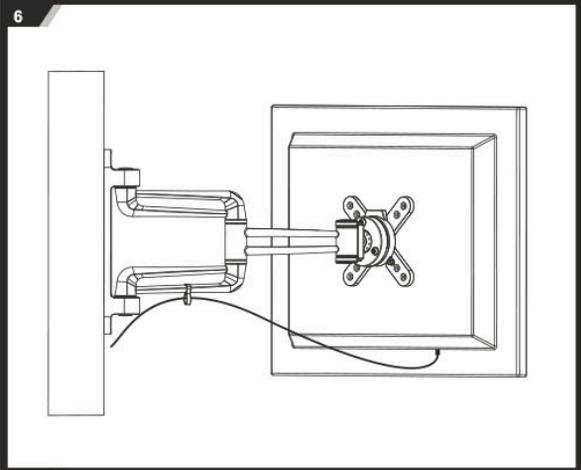

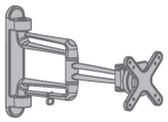

7. Adjustment

Depending on the weight of the display, it may be necessary to make adjustments to the Ball Joint Mechanism.

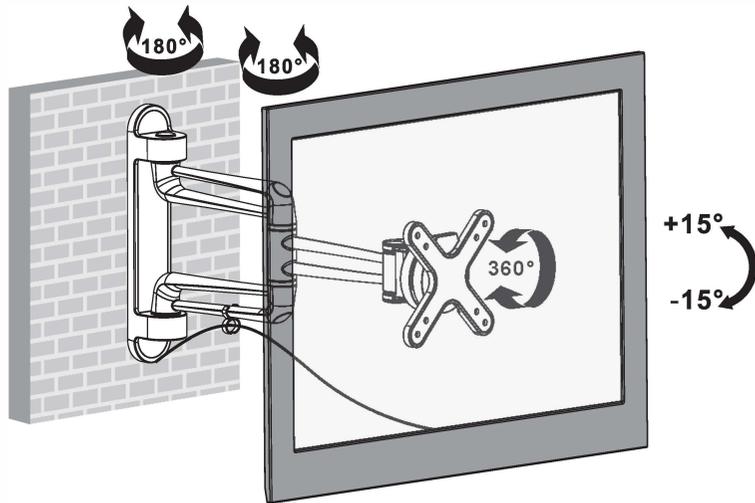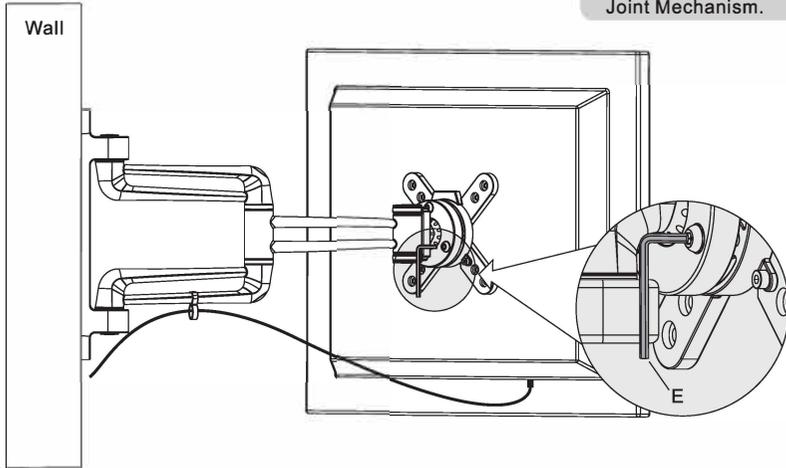


Adjust to the desired position or tilt.

Maintenance

- Check that the bracket is secure and safe to use at regular intervals (at least every three months).
- Please contact your distributor if you have any questions.

Full Motion LED, LCD TV Wall Mount

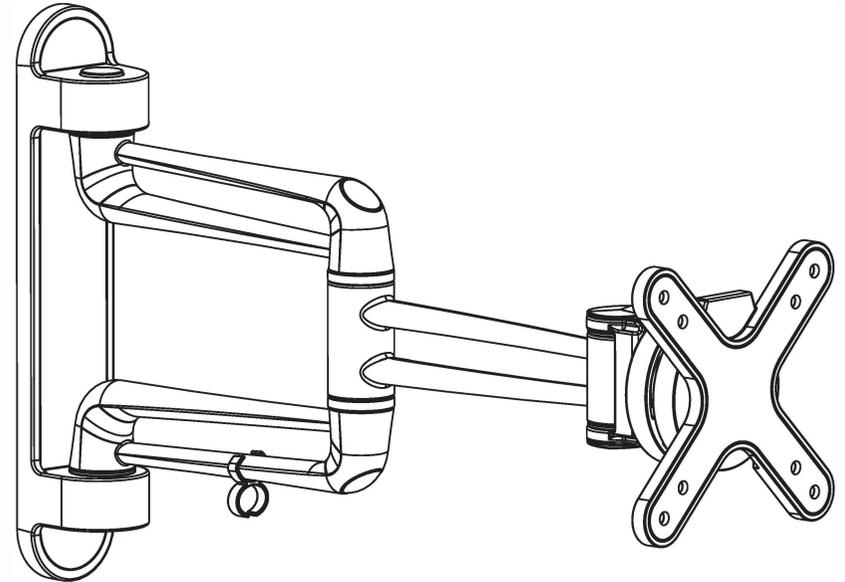

CAUTION: DO NOT EXCEED RATED LISTED WEIGHT. SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!

015-1531



75x75
100x100



ISSUED: MAY, 2013


NOTE: Read the entire instruction manual before you start installation and assembly.

WARNING

- Do not begin the installation until you have read and understood **all** the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instructions or warnings, please contact your local distributor.
- This mounting bracket was designed to be installed and utilised **ONLY** as specified in this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone with good mechanical ability who has basic building experience and fully understands this manual.
- Make sure that the supporting surface will safely support the combined weight of the equipment and **all** attached hardware and components.
- If mounting to wood wall studs, make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the items, This greatly reduces their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Component Checklist

IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, telephone your local distributor for a replacement.

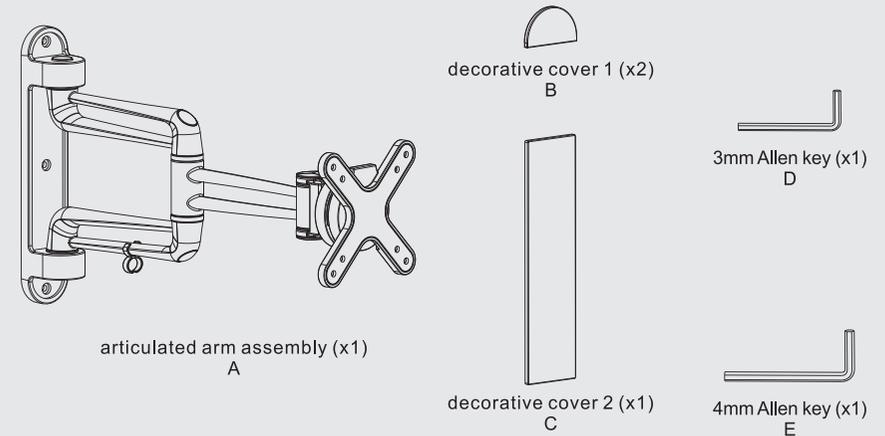

Package M



M4x14 (x4)
M-A



M5x14 (x4)
M-B



D5 washer (x4)
M-C

Package W



ST5.5x50 (x3)
W-A




concrete anchor (x3)
W-B







D6 washer (x3)
W-C



1. Separating the VESA Plate from the Wall Mount

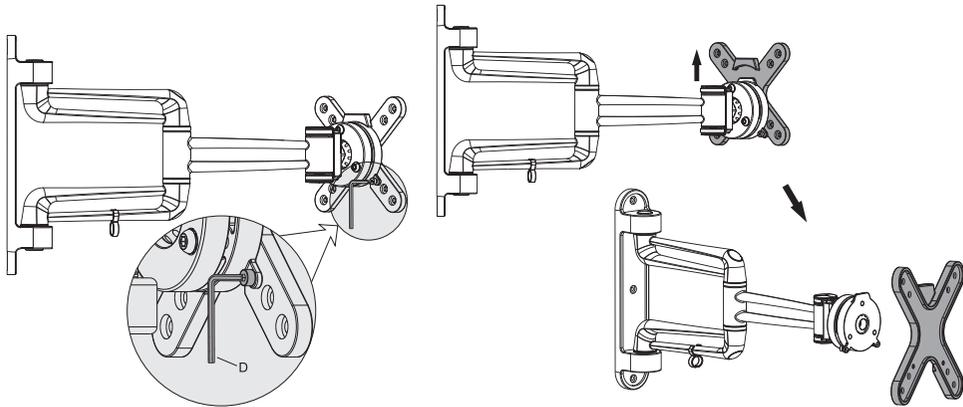

2a. For Wood Stud Wall Mounting

 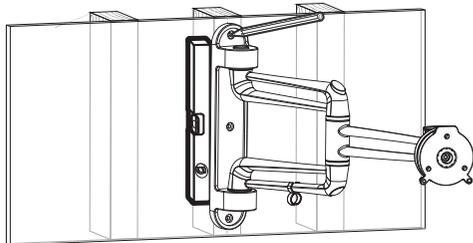  

 Find and mark the exact location of mounting holes



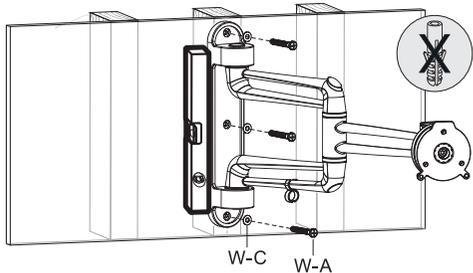



Screw the wall mount onto the wall


⚠ WARNING

- Make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Installers are responsible to provide hardware for other types of mounting situations.
- Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.



2b. For Solid Brick and Concrete Mounting

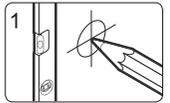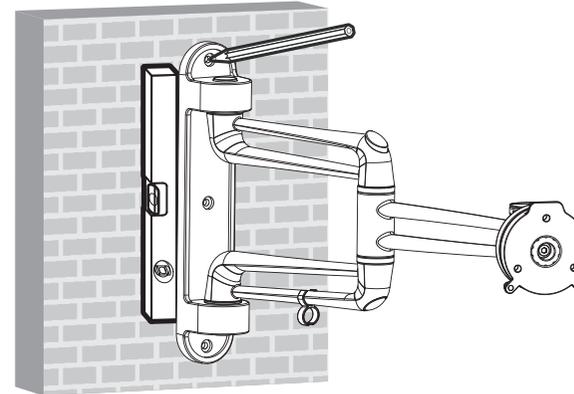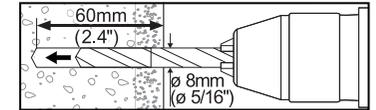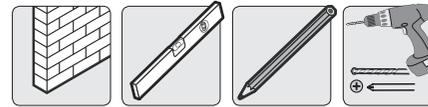

Mark the exact location of mounting holes

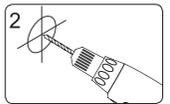

Drill pilot holes

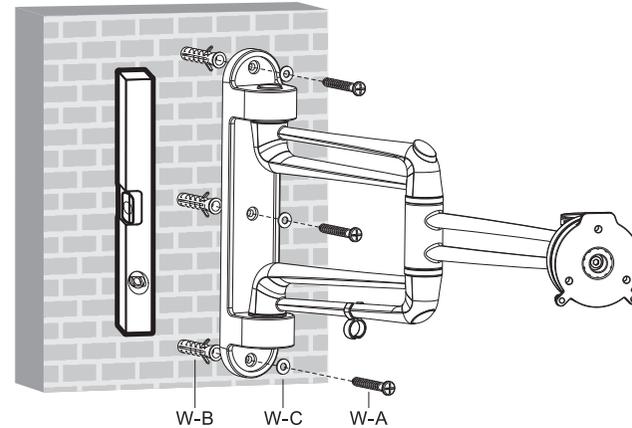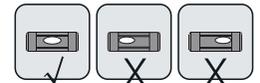


Screw the wall mount onto the wall

⚠ WARNING



Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.

3. Installing the Decorative Covers

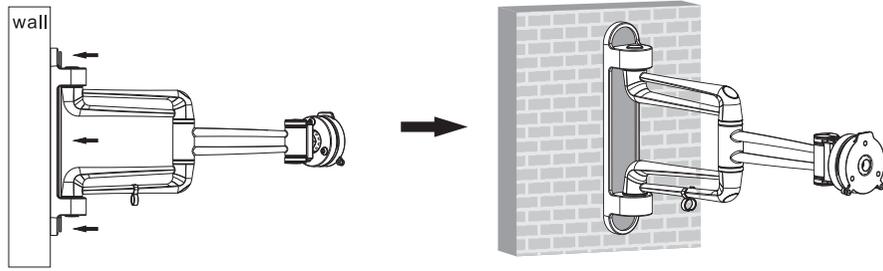

Install the decorative covers along the wall plate rail until they fit snugly onto the wall plate.


4. Installing the VESA Plate

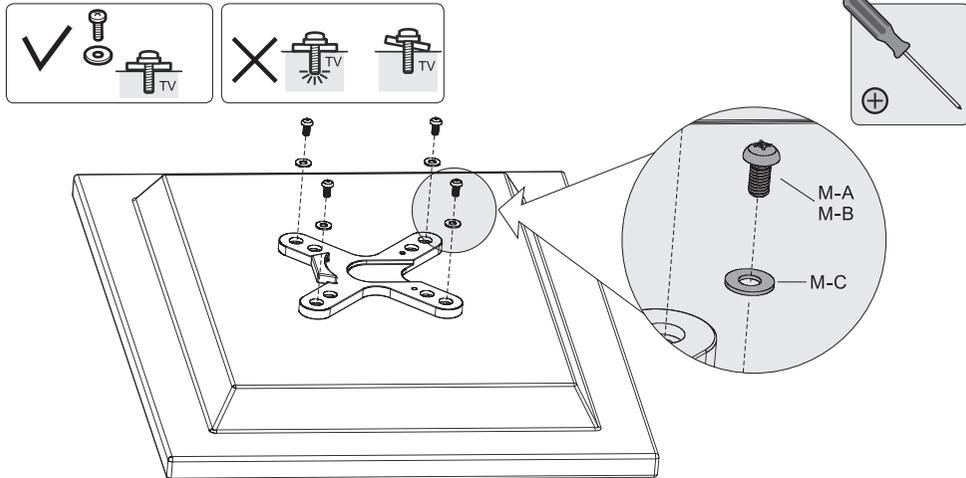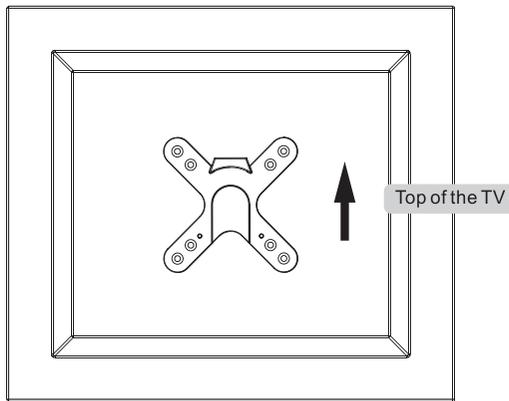

Screw the VESA plate onto the TV.


Tighten all screws but do not over tighten.

5. Hooking the TV onto the Wall Mount

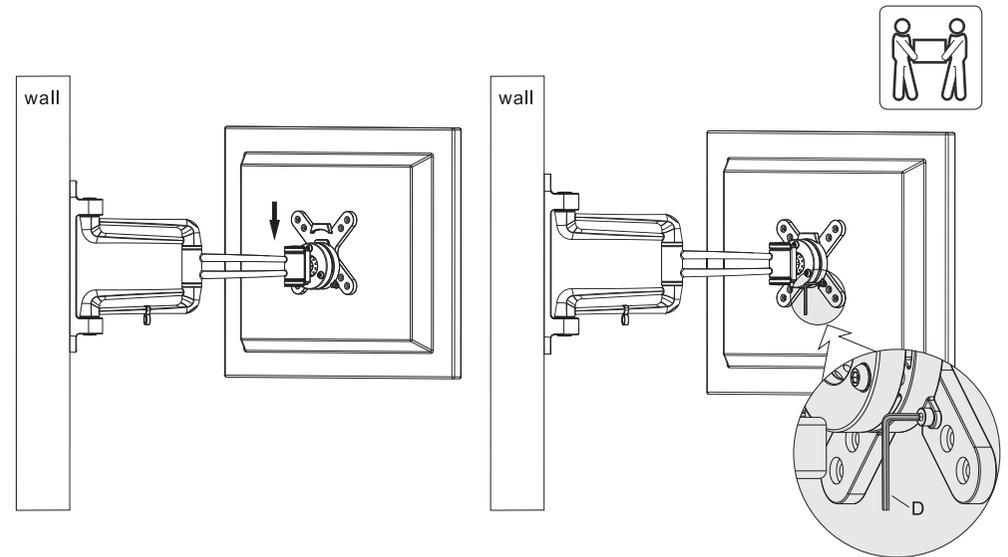

Carefully lift your TV and hook VESA plate onto the mounted head. Tighten screws (that is previously removed) to secure.

6. Cable Management

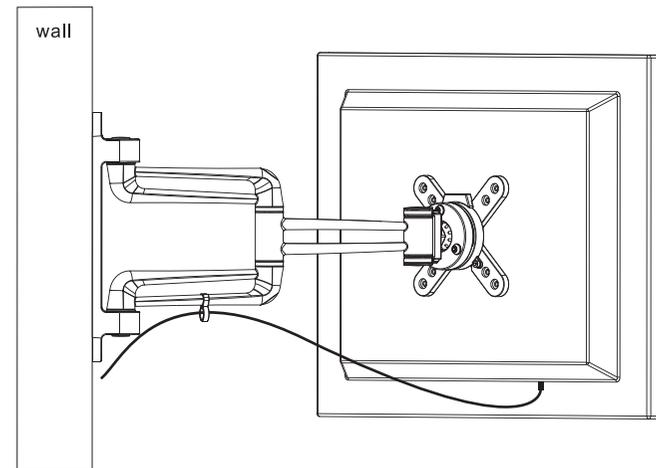

Connect the cables to your TV and run the cables through the wire clip.
Note: Leave slack in the cable for the arm movement.