



11. Orientation de l'écran

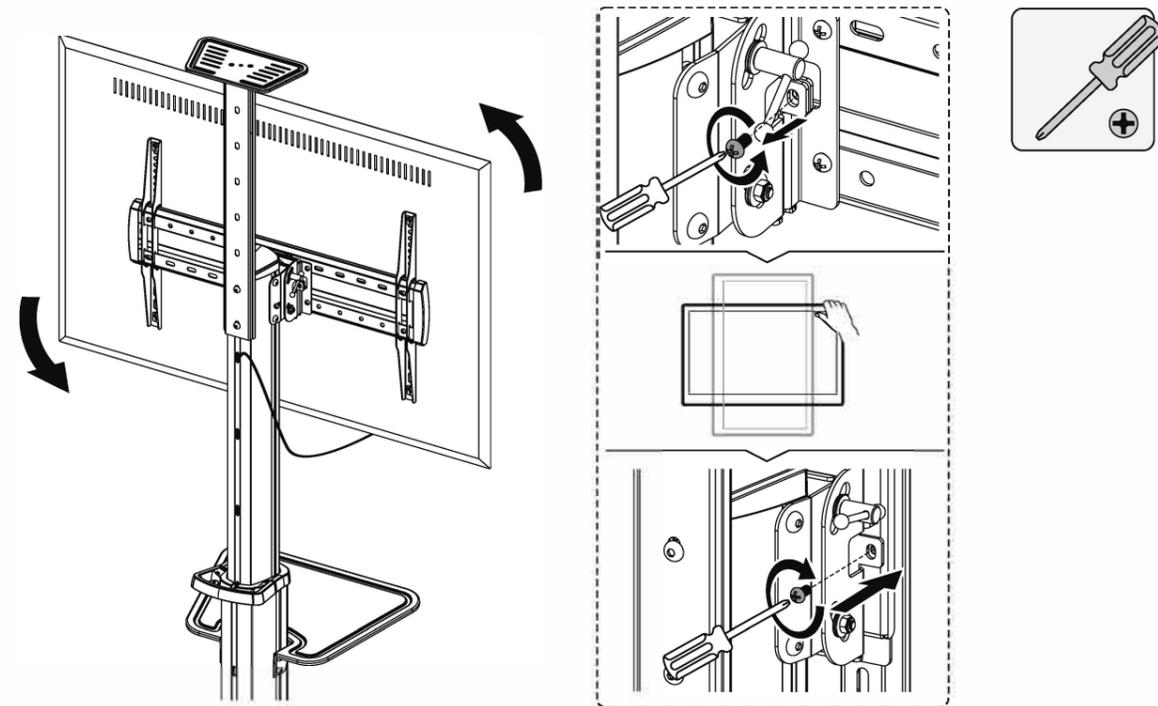

12. Ajustement

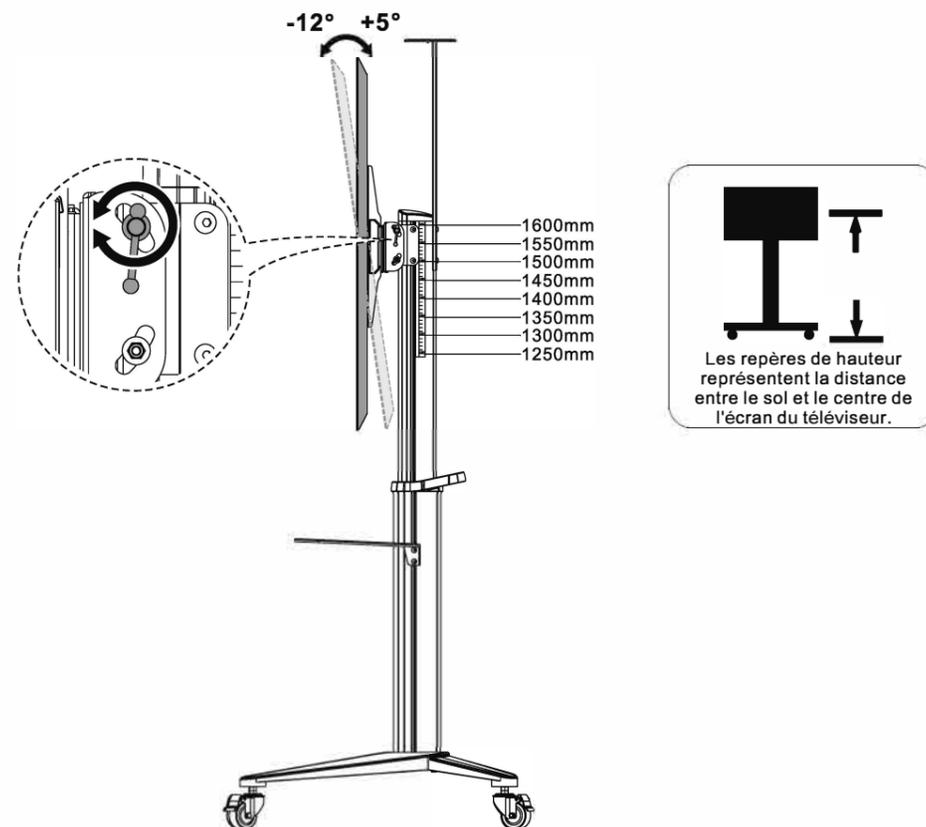


Maintenance

- Vérifiez si le support est sécurisé et sûr à utiliser à intervalles réguliers (au moins tous les trois mois).
- Veuillez contacter votre distributeur si vous avez des questions.

Kimex
ÉQUIPEMENTS AUDIOVISUELS

Support mobile pour écran
Visioconférence 37"-70"

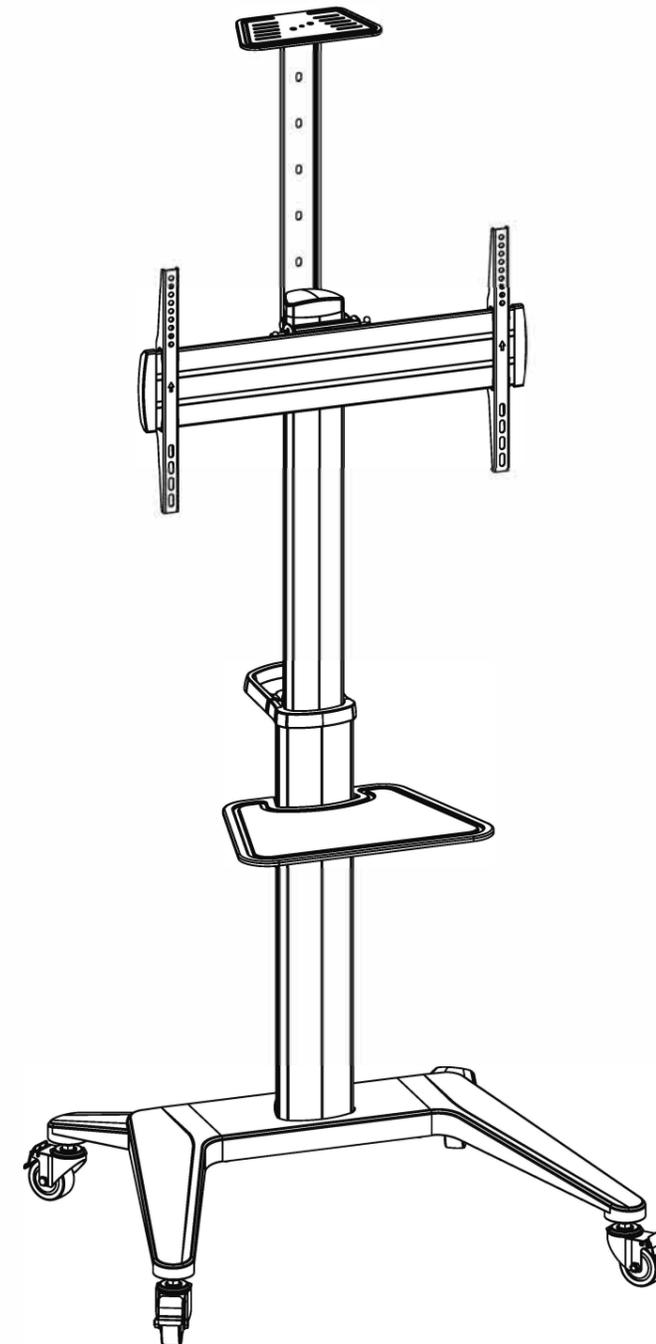

Manuel d'installation V2

030-1202
030-1204



200x200/300x200
300x300/400x200
400x300/400x400
600x400

70"
MAX

rated
for TV
70kg/154lbs

rated
for DVD
5kg/11lbs

rated
for CAMERA
5kg/11lbs

Lisez l'intégralité du manuel d'instructions avant de commencer l'installation et l'assemblage. Si vous avez des questions concernant l'une des instructions ou des avertissements, veuillez nous contacter pour obtenir de l'aide.

⚠ Attention

- L'utilisation avec des produits plus lourds que les poids indiqués peut entraîner une instabilité pouvant causer des blessures.
- Veuillez suivre scrupuleusement les instructions de montage. Une installation incorrecte peut entraîner des dommages ou des blessures graves.
- Un équipement de sécurité et des outils appropriés doivent être utilisés. Ce produit ne doit être installé que par des professionnels.
- Assurez-vous que la surface de support supportera en toute sécurité le poids combiné de l'équipement et de tout le matériel et les composants attachés.
- Utilisez les vis de montage fournies et **NE SERREZ PAS TROP** les vis de montage.
- Ce produit contient de petits objets qui pourraient présenter un risque d'étouffement en cas d'ingestion. Gardez ces articles hors de portée des enfants.
- Ce produit est destiné à une utilisation en intérieur uniquement. L'utilisation de ce produit à l'extérieur pourrait entraîner une défaillance du produit et provoquer une blessure.

Requis pour l'installation




Liste des composants

IMPORTANT: Assurez-vous d'avoir reçu les pièces conformément à la liste des composants avant l'installation. Si des pièces sont manquantes ou défectueuses, contactez-nous pour un remplacement.



Pied gauche
A (x1)

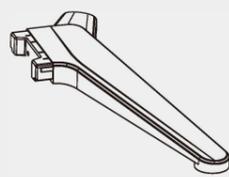

Pied droit
B (x1)



Support
C (x1)



Roulette
D (x4)




Colonne inférieure
E (x1)



Colonne supérieure
F (x1)



Etagère G (x1)

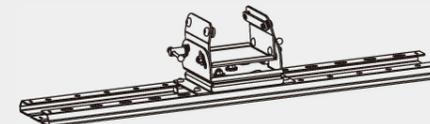

Plaque de montage
H (x1)



Poignée
I (x1)



Barre VESA
J (x2)



Support de
connexion K (x1)



Etagère caméra
L (x1)



Embout
M (x2)



Couvercle supérieur
N (x1)



Couvre-câble
O (x8)

Paquet P



Rondelle
P-A (x4)



M8x80
P-B (x4)



M8x20
P-C (x12)



M6x12
P-D (x4)



 
M5x8
P-E (x2)




Clé M6
P-F (x1)



Clé M12
P-G (x1)



Clé Allen 5mm
P-H (x1)

 

Clé Allen 6mm
P-I (x1)

Paquet M



M5x14
M-A (x4)



M6x14
M-B (x4)



M6x30
M-C (x4)



M8x30
M-D (x4)



M8x50
M-E (x4)



Rondelle
M-F (x4)




Petite entretoise
M-G (x8)




Grande entretoise
M-H (x8)

1. Assemblez la base

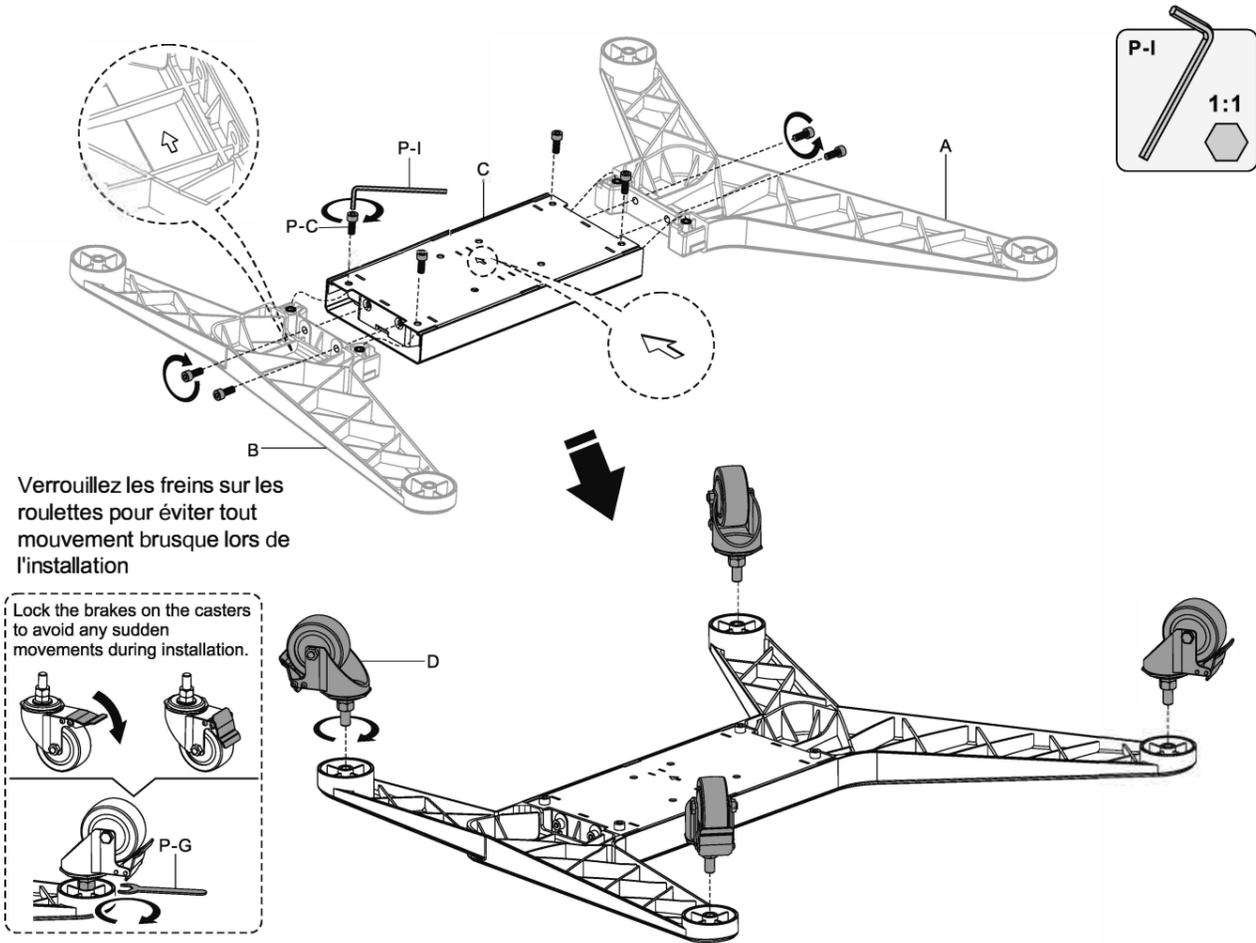


2. Assemblez la colonne

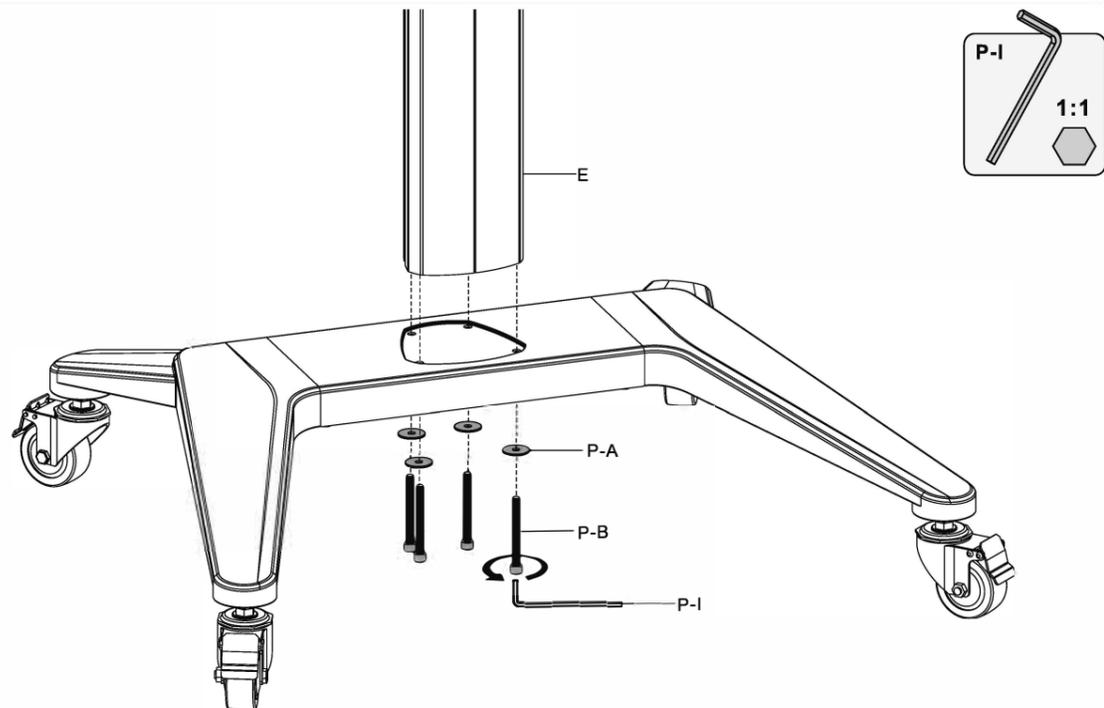


3. Assemblez l'étagère d'équipement AV




Desserrez les vis pour laisser un espace de plus de 4 mm.

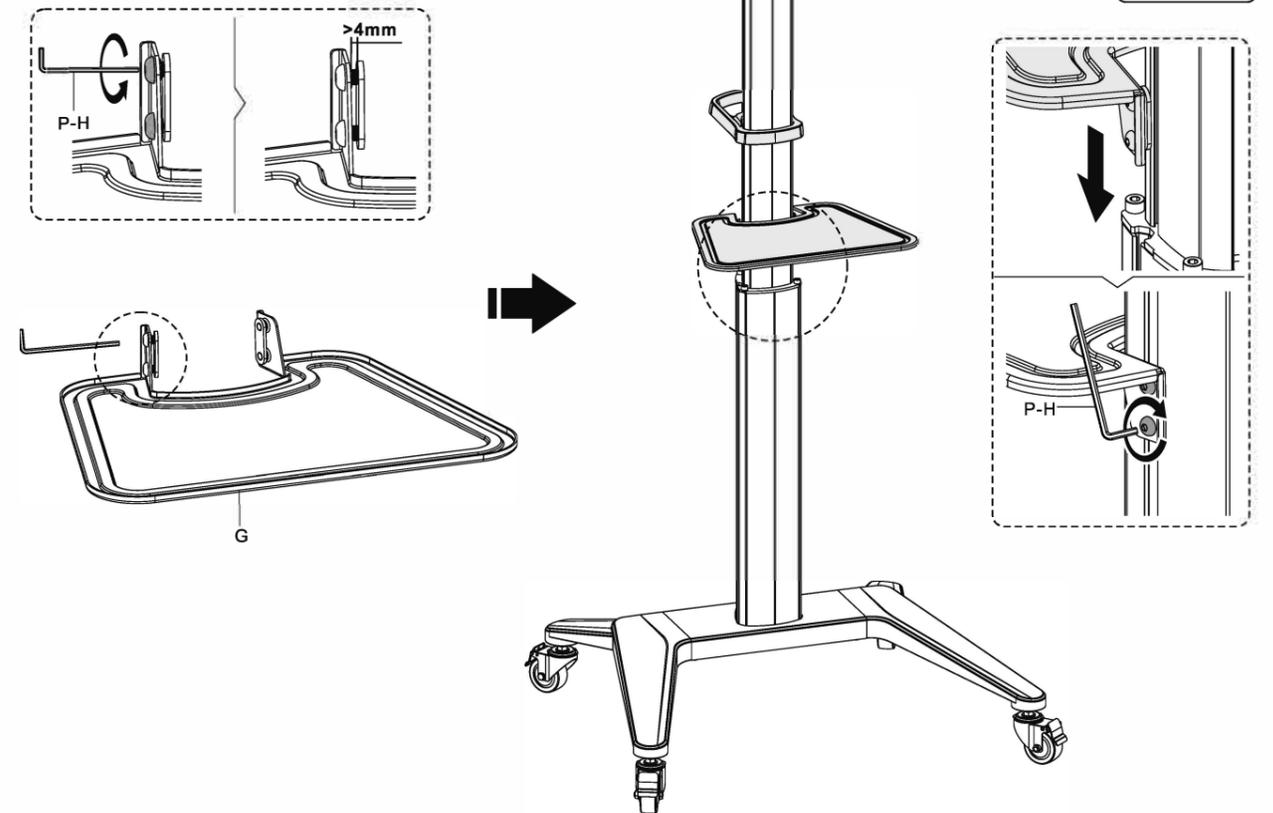


4. Attachez le connecteur à la colonne

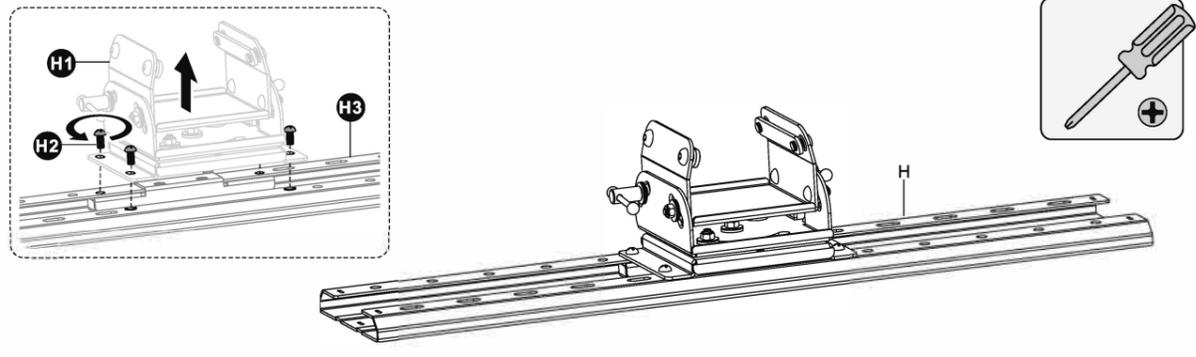


Desserrez les vis pour laisser un espace de plus de 4 mm.

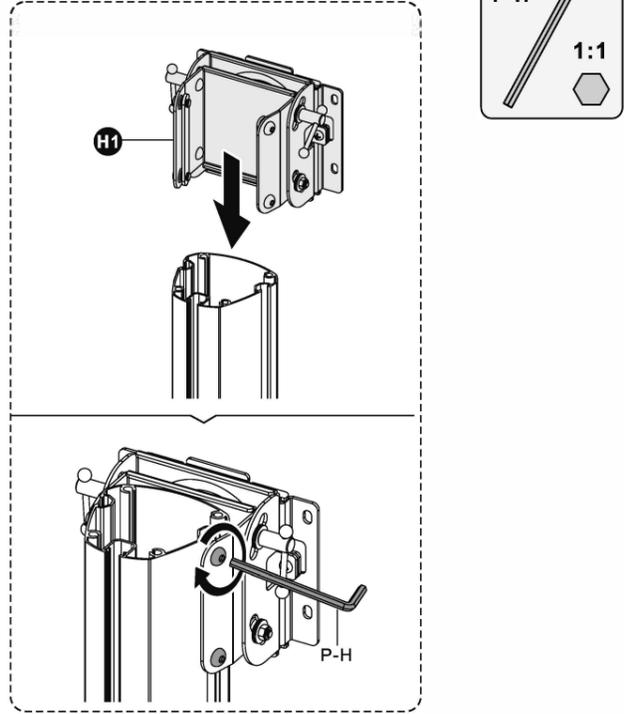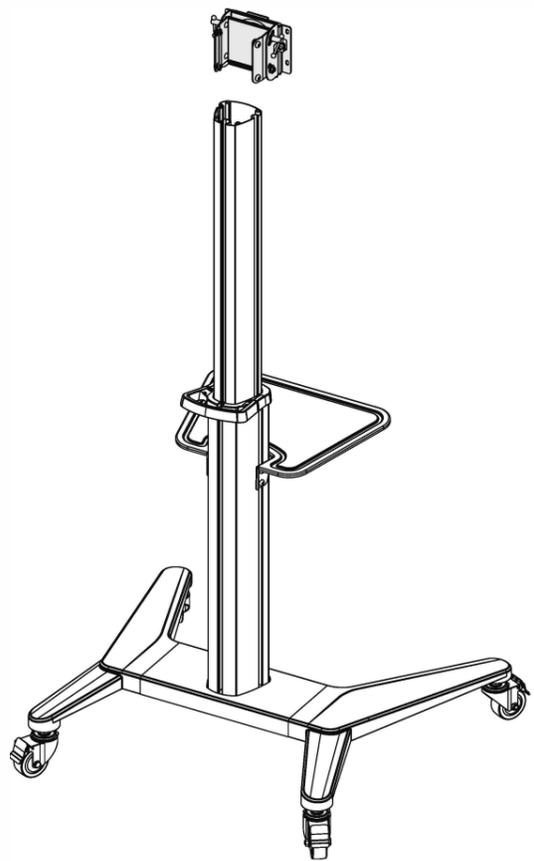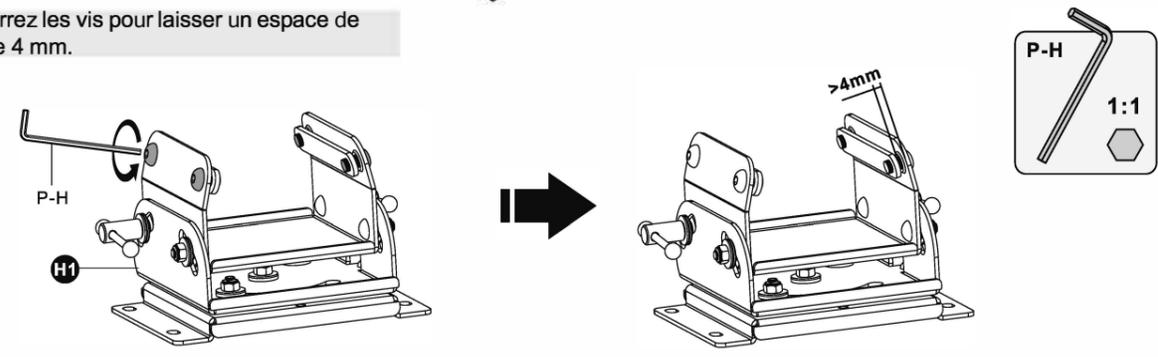

5. Fixez les barres VESA à la plaque de montage


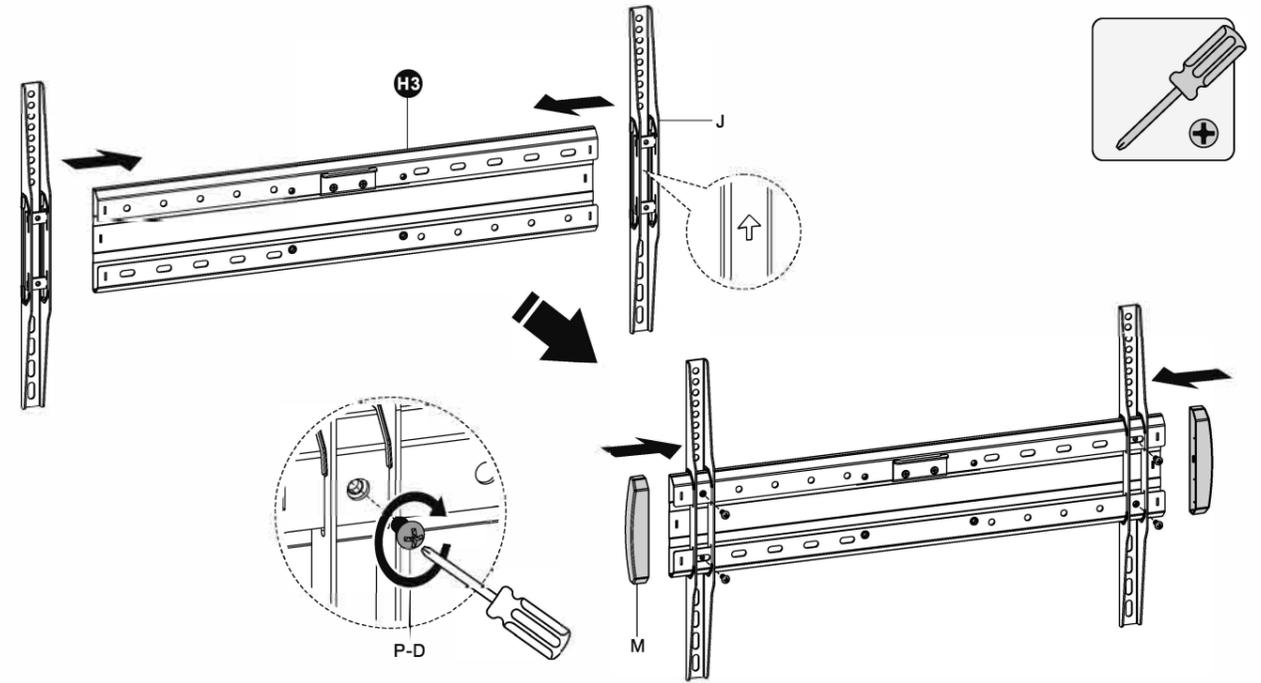


6a Fixez le support pour un écran à dos plat

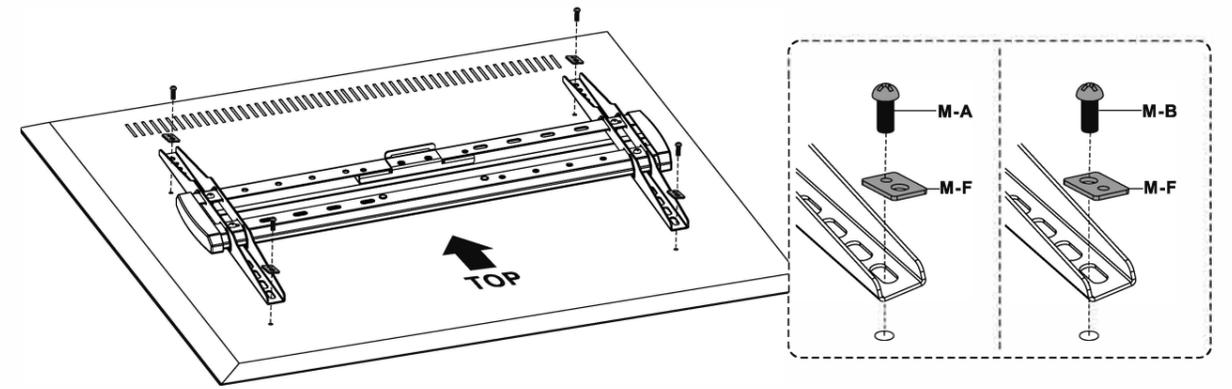



M-A			M-B		
M-F					

6b. Fixez le support pour un écran à dos incurvé

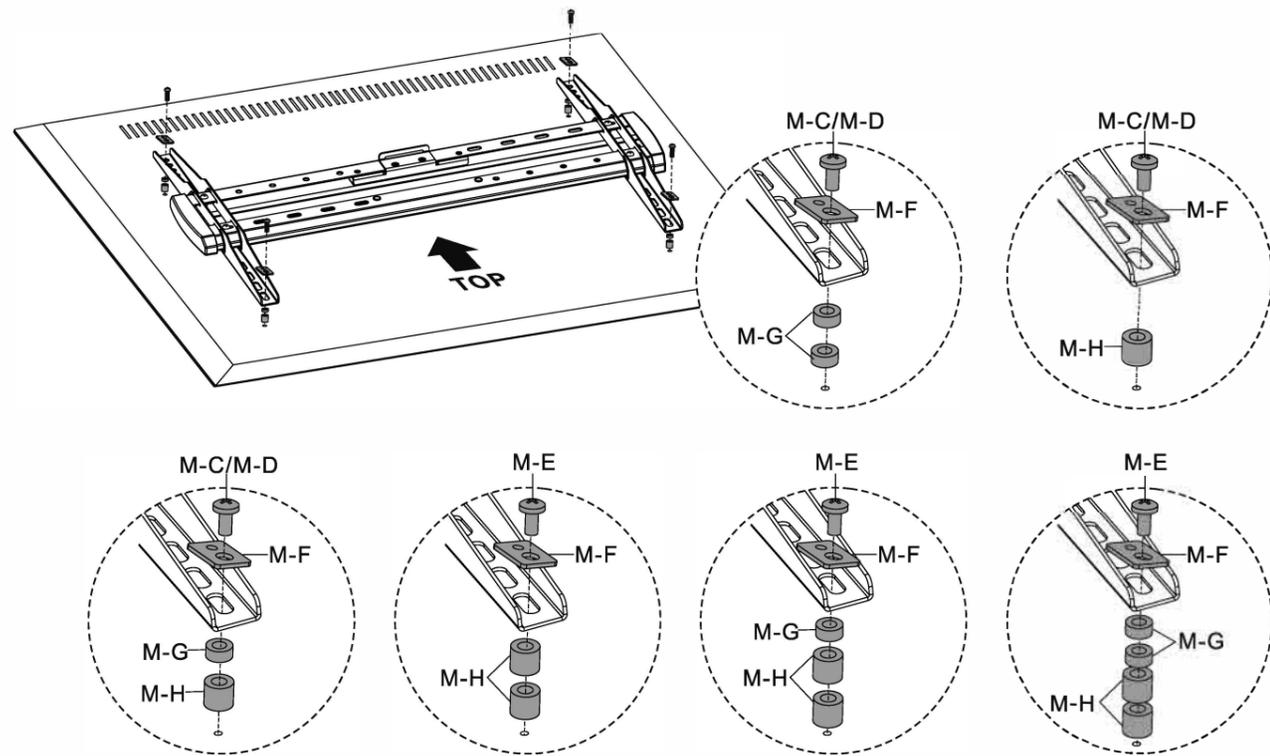
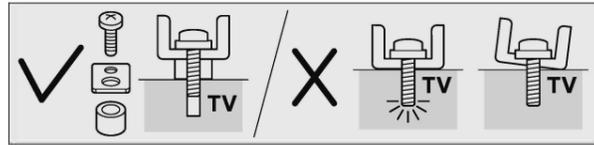


M-C		M-D		1:1
M-E		M-F		
M-G		M-H		


7 Accrochez et sécurisez l'écran

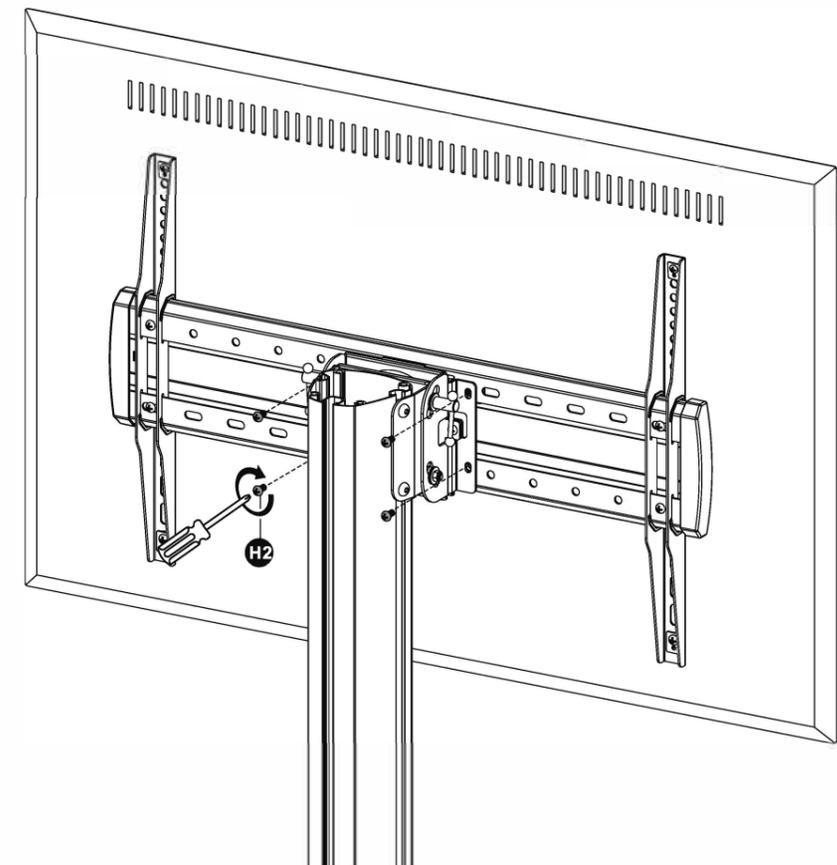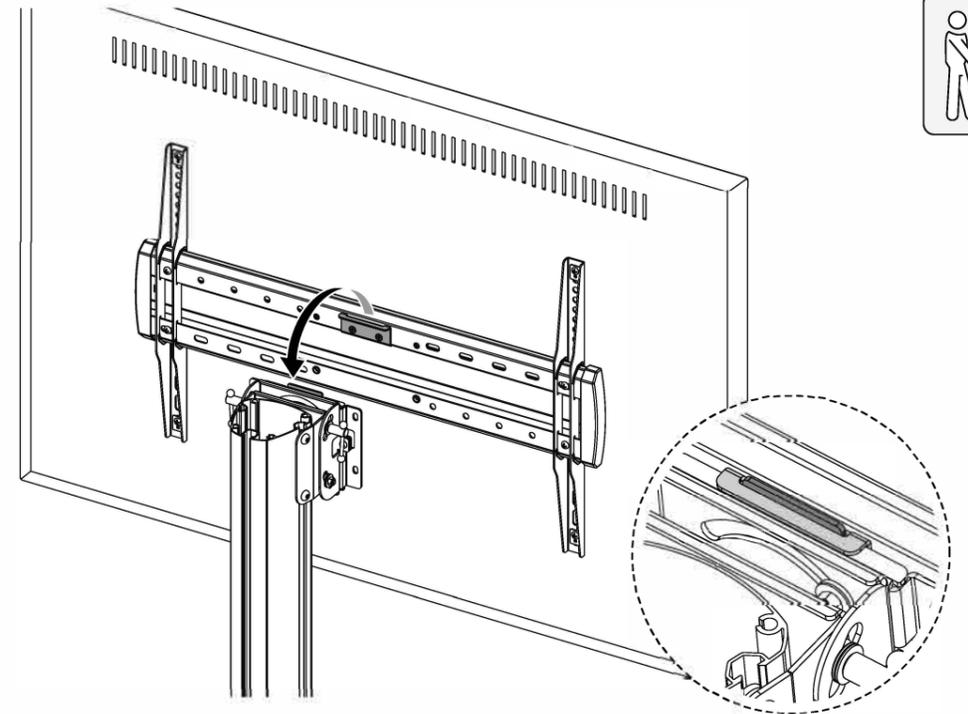


8. Assemblez l'étagère à caméra

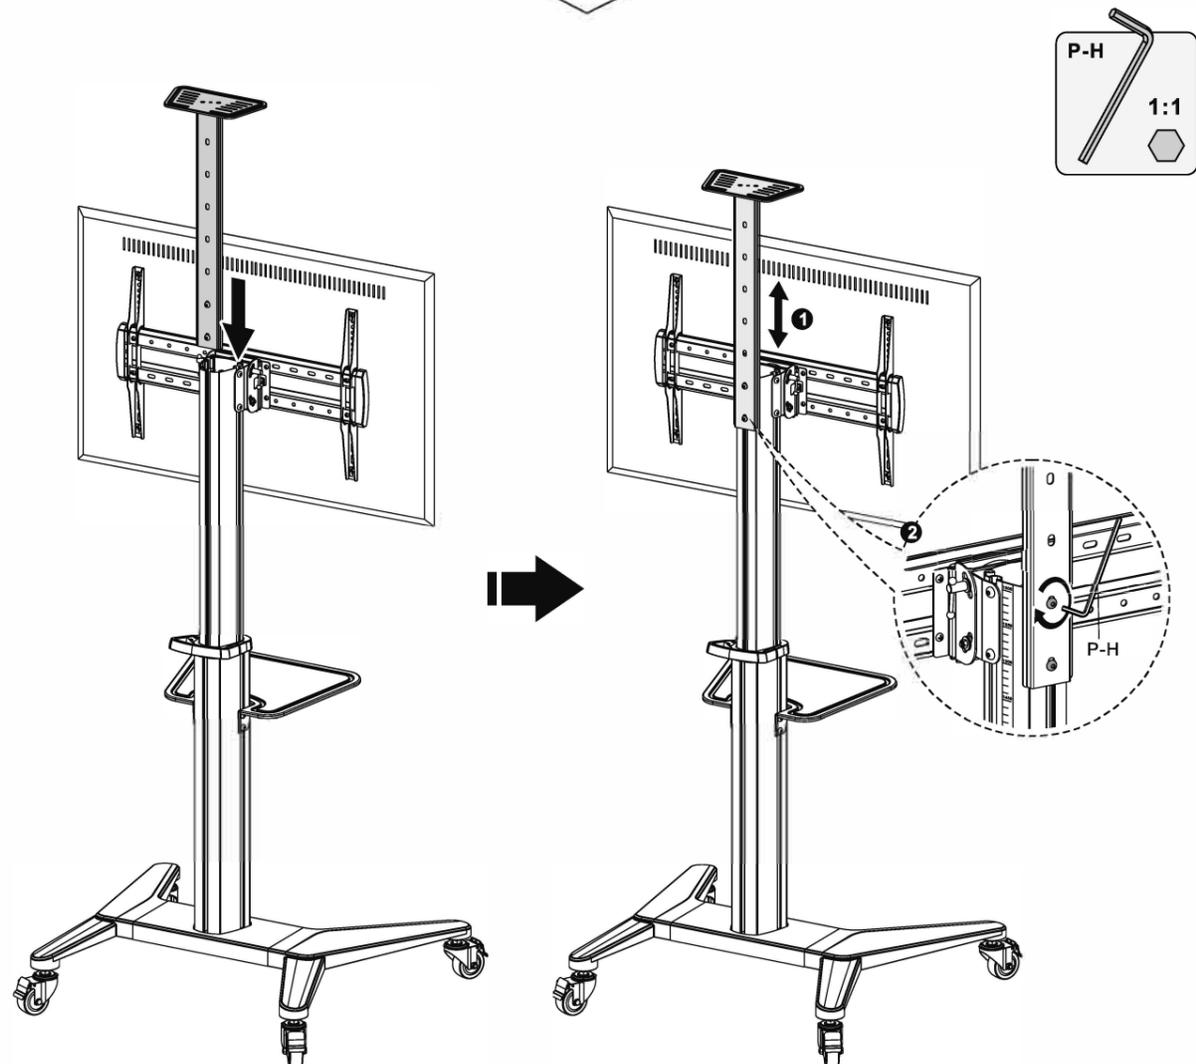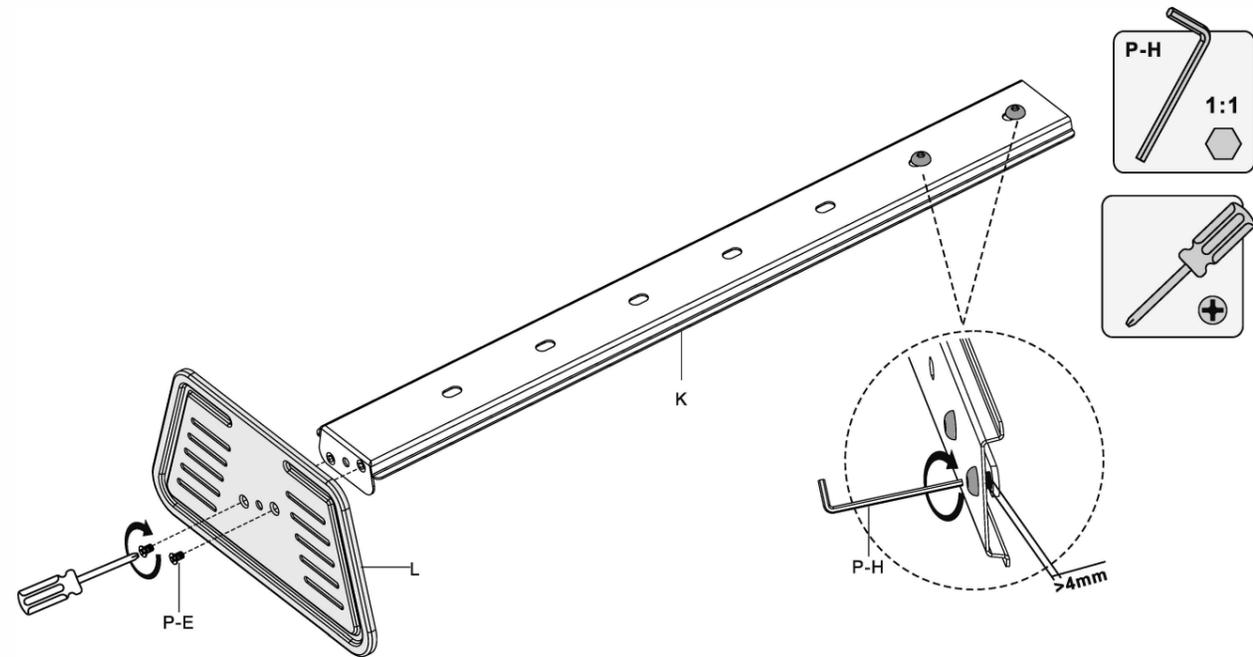


9. Assemblez la couvercle supérieur

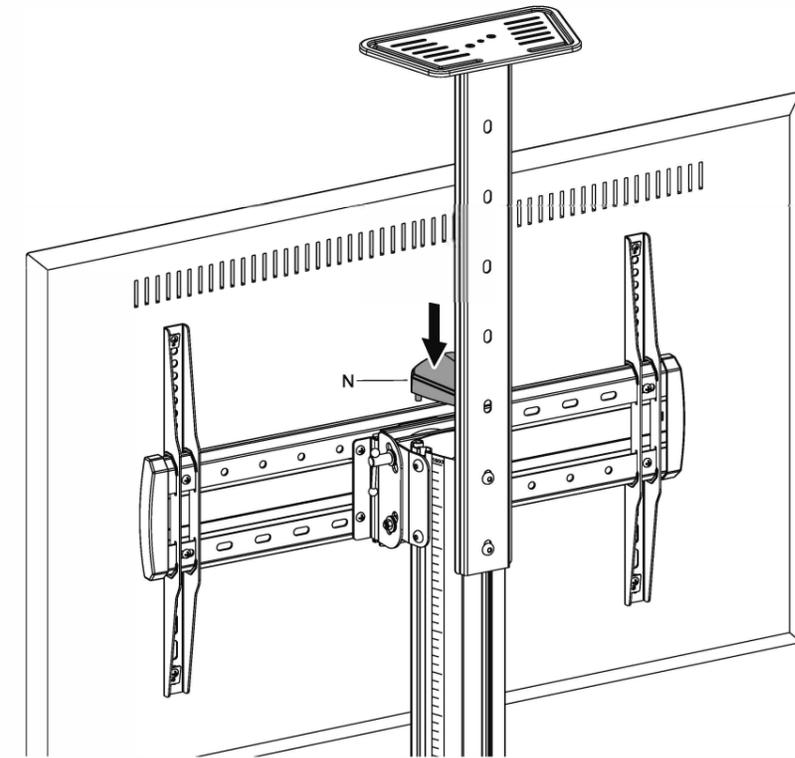


10. Rangement des câbles

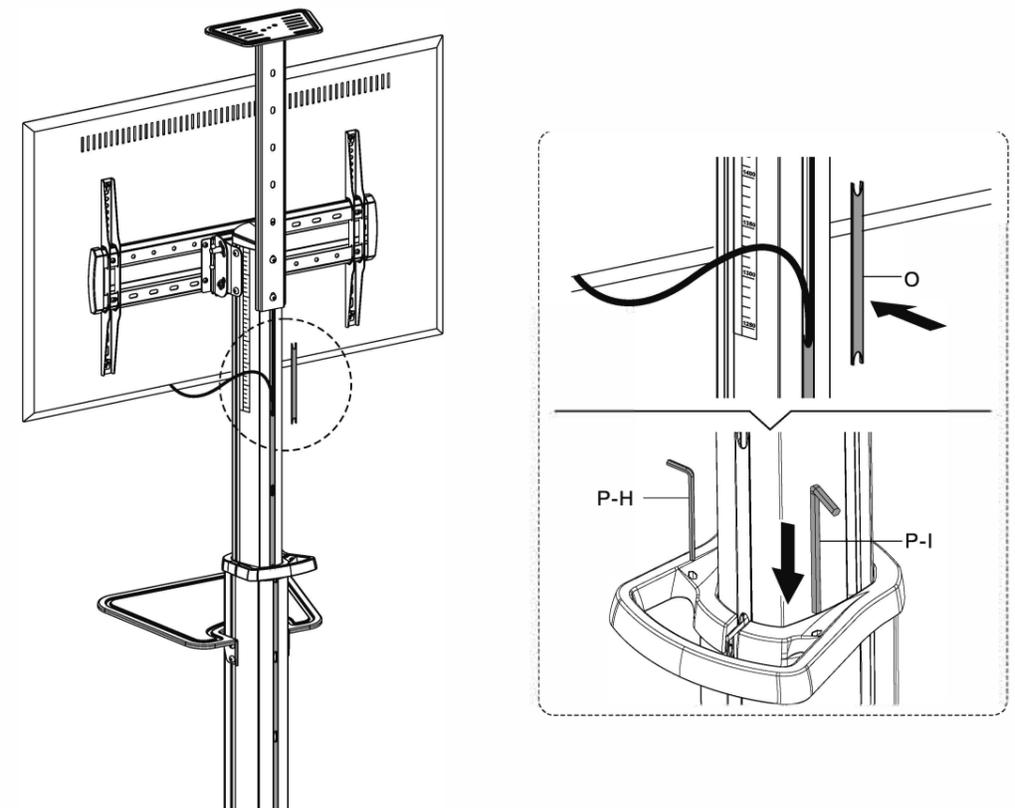

11. TV Orientation

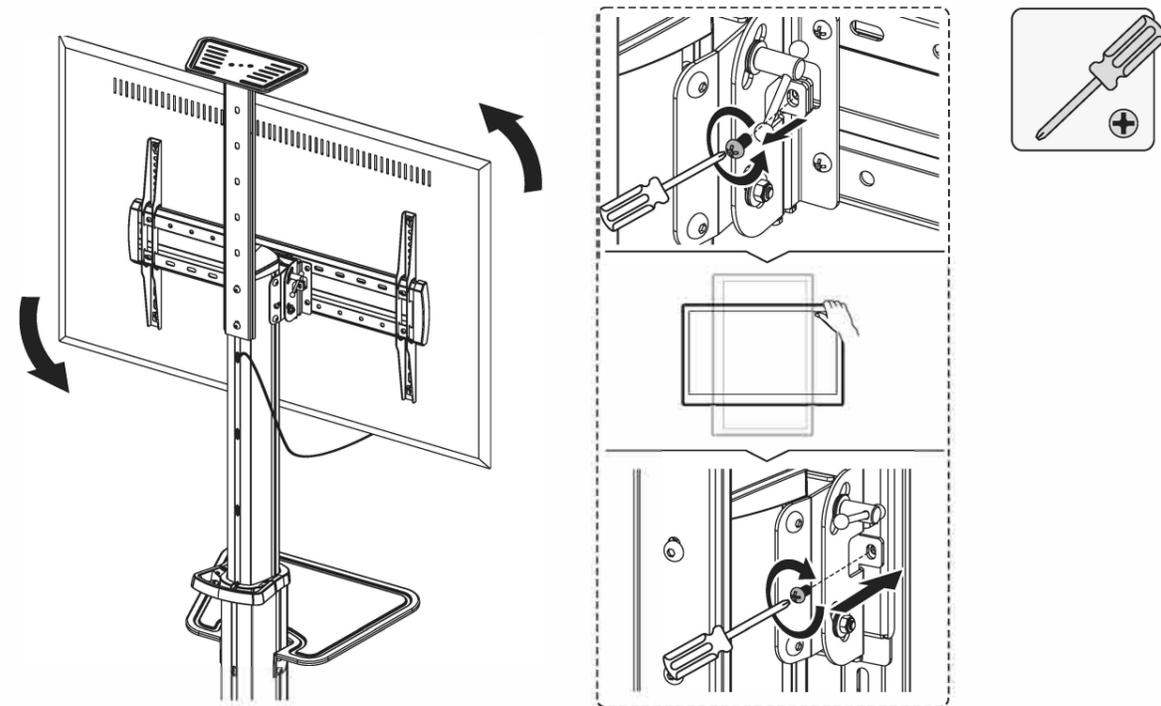

12. Adjustment

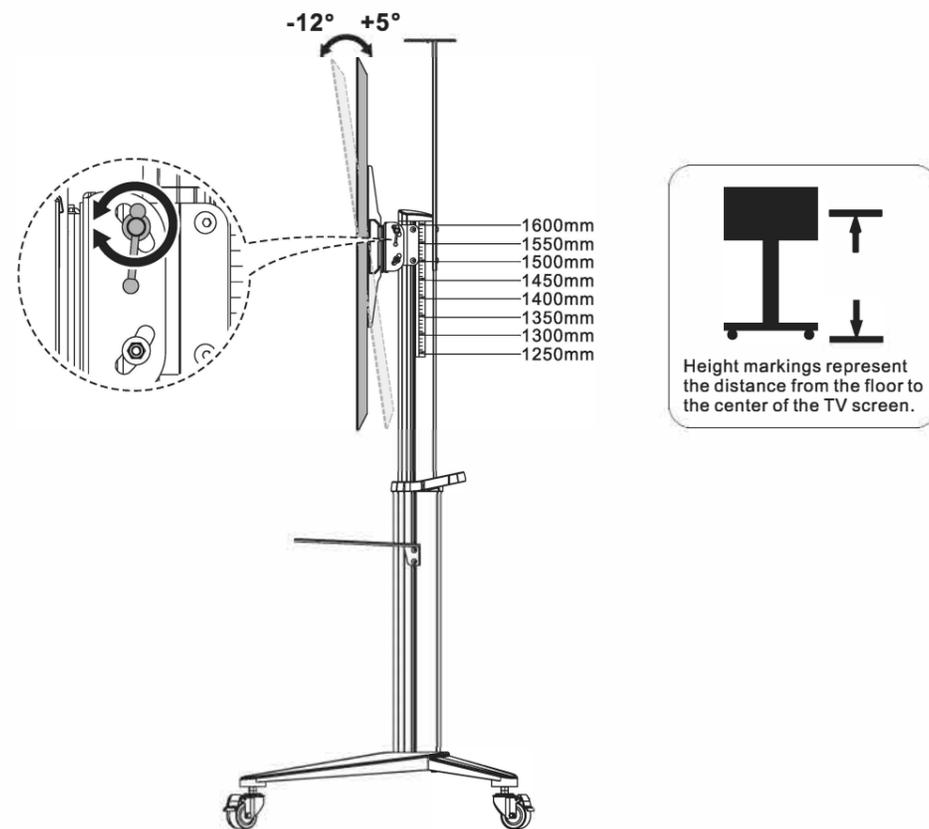


Maintenance

- Check if the bracket is secure and safe to use at regular intervals (at least every three months).
- Please contact your distributor if you have any questions.

Kimex
ÉQUIPEMENTS AUDIOVISUELS

TV Cart

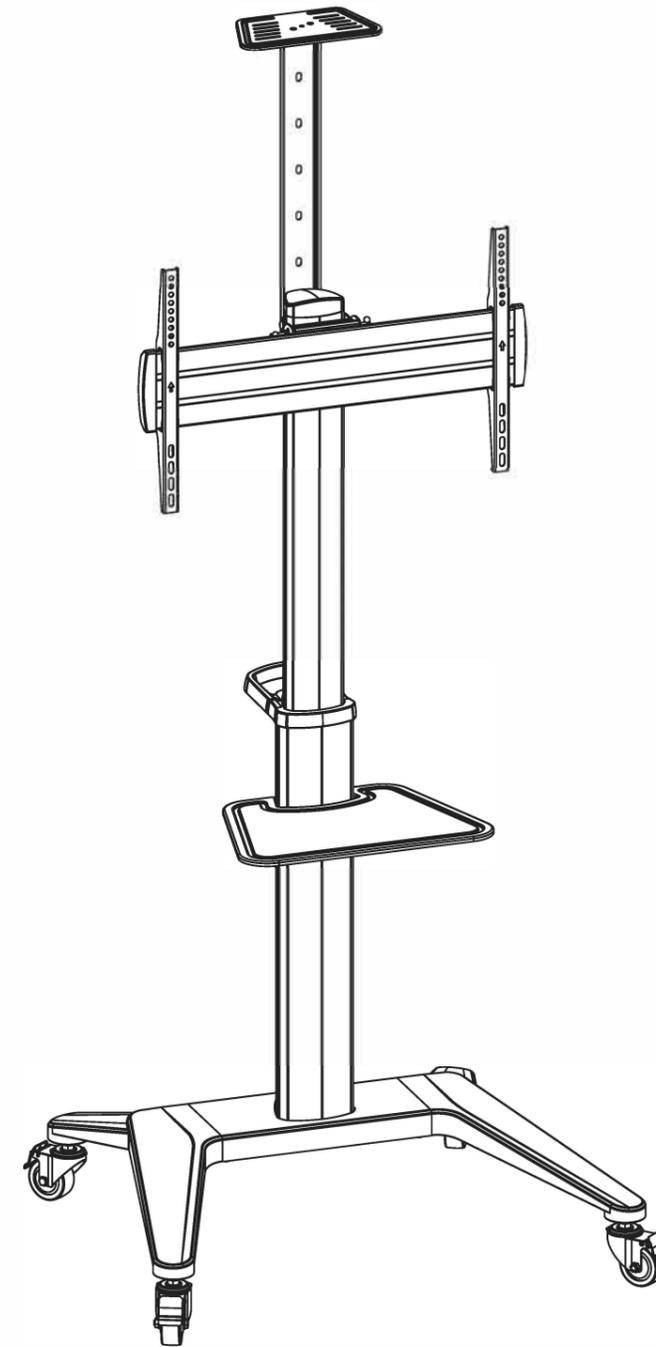

INSTALLATION MANUAL

030-1202
030-1204



200x200/300x200
300x300/400x200
400x300/400x400
600x400



70kg/154lbs



5kg/11lbs



5kg/11lbs

 **Read the entire instruction manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact your local distributor for assistance.**

CAUTION


- Use with products heavier than the rated weights indicated may result in instability causing possible injury.
- Please closely follow the assembly instructions. Improper installation may result in damage or serious personal injury.
- Safety gear and proper tools must be used. This product should only be installed by professionals.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Use the mounting screws provided and **DO NOT OVER TIGHTEN** mounting screws.
- This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Requirement for Installation




Component Checklist


IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, contact your place of purchase for a replacement.

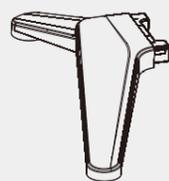

left leg
A (x1)

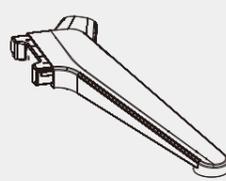

right leg
B (x1)

 

cross bracket
C (x1)



caster
D (x4)




lower column
E (x1)



upper column
F (x1)



AV equipment shelf
G (x1)

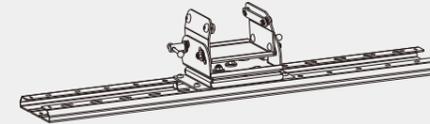

mounting plate assembly
H (x1)



handle
I (x1)



TV bracket
J (x2)



connecting bracket
K (x1)



camera shelf
L (x1)



end cap
M (x2)



top cover
N (x1)



cable cover
O (x8)

Package P



washer
P-A (x4)



M8x80
P-B (x4)



M8x20
P-C (x12)



M6x12
P-D (x4)



M5x8
P-E (x2)



 
M6 wrench
P-F (x1)



M12 wrench
P-G (x1)



5mm Allen key
P-H (x1)



6mm Allen key
P-I (x1)

Package M



M5x14
M-A (x4)



M6x14
M-B (x4)



M6x30
M-C (x4)



M8x30
M-D (x4)



M8x50
M-E (x4)



washer
M-F (x4)




small spacer
M-G (x8)





big spacer
M-H (x8)


1. Assemble the Base

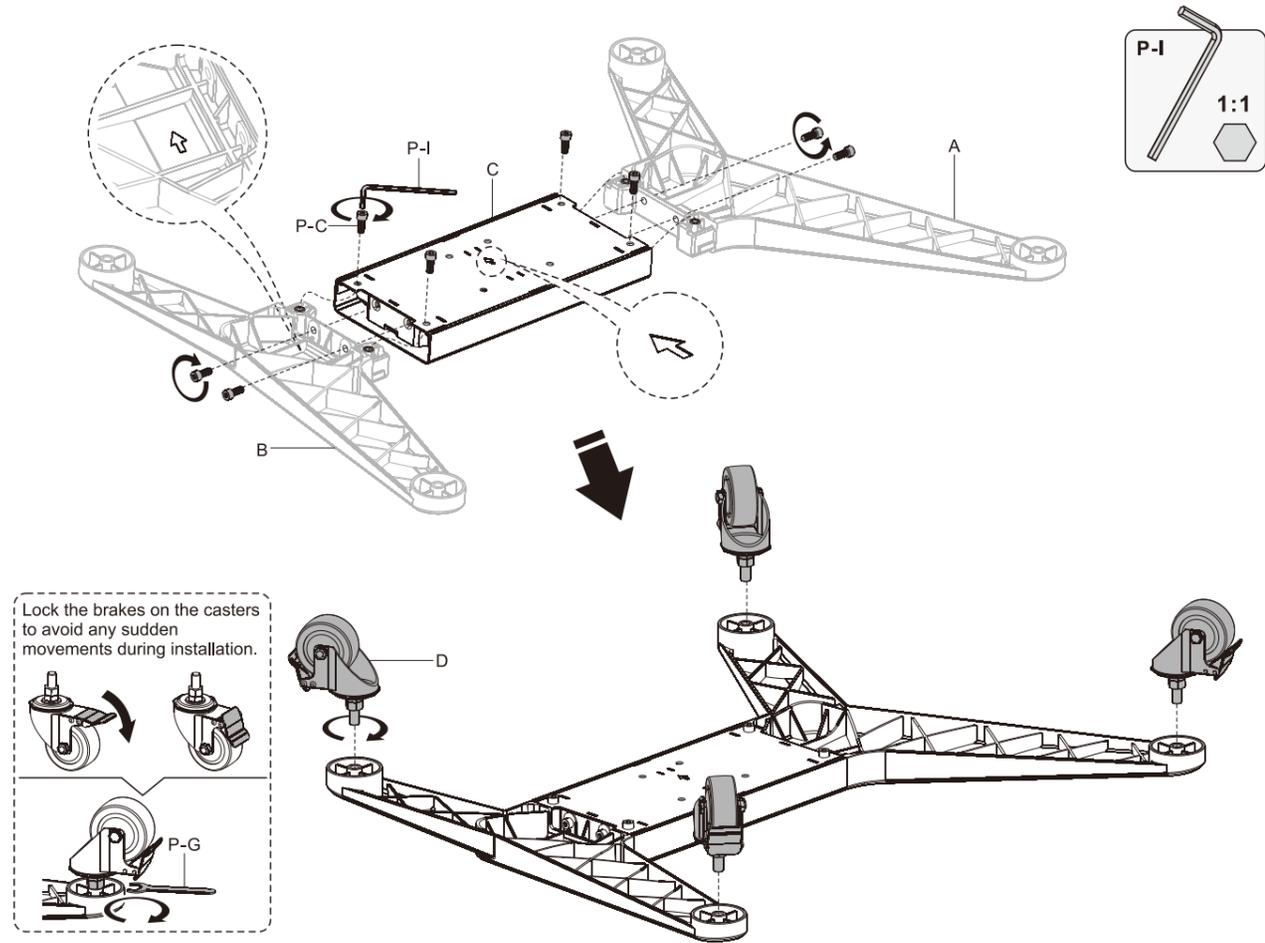


2. Assemble the Columns

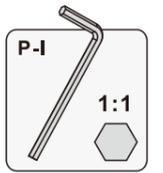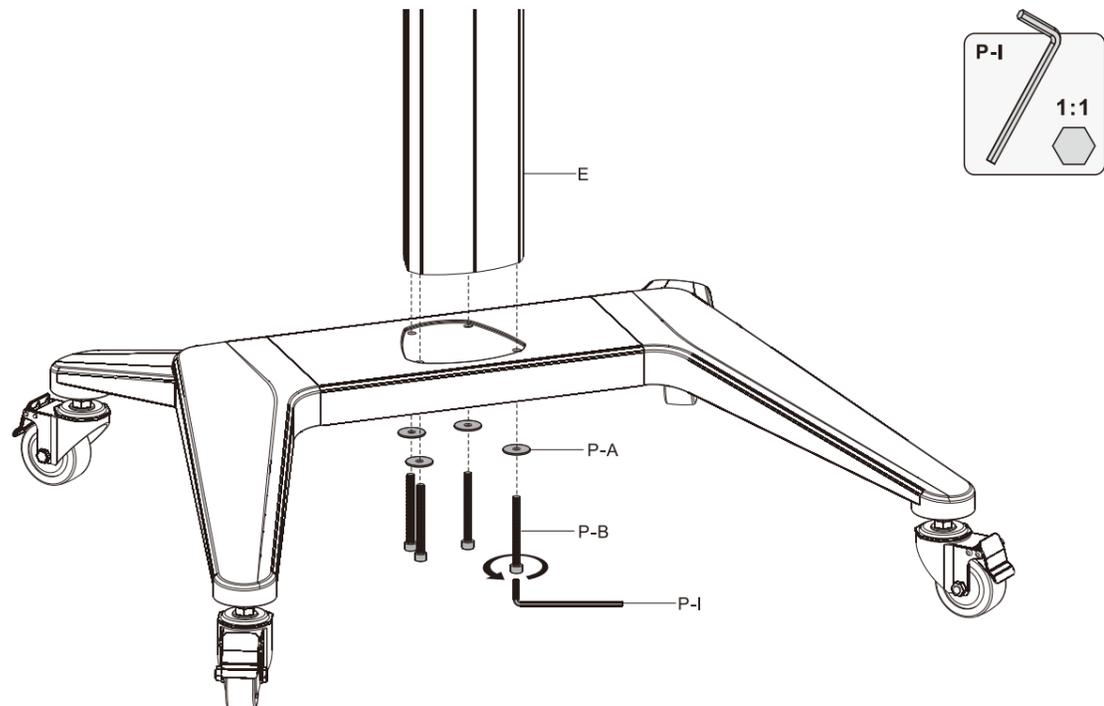




3. Assemble the AV Equipment Shelf

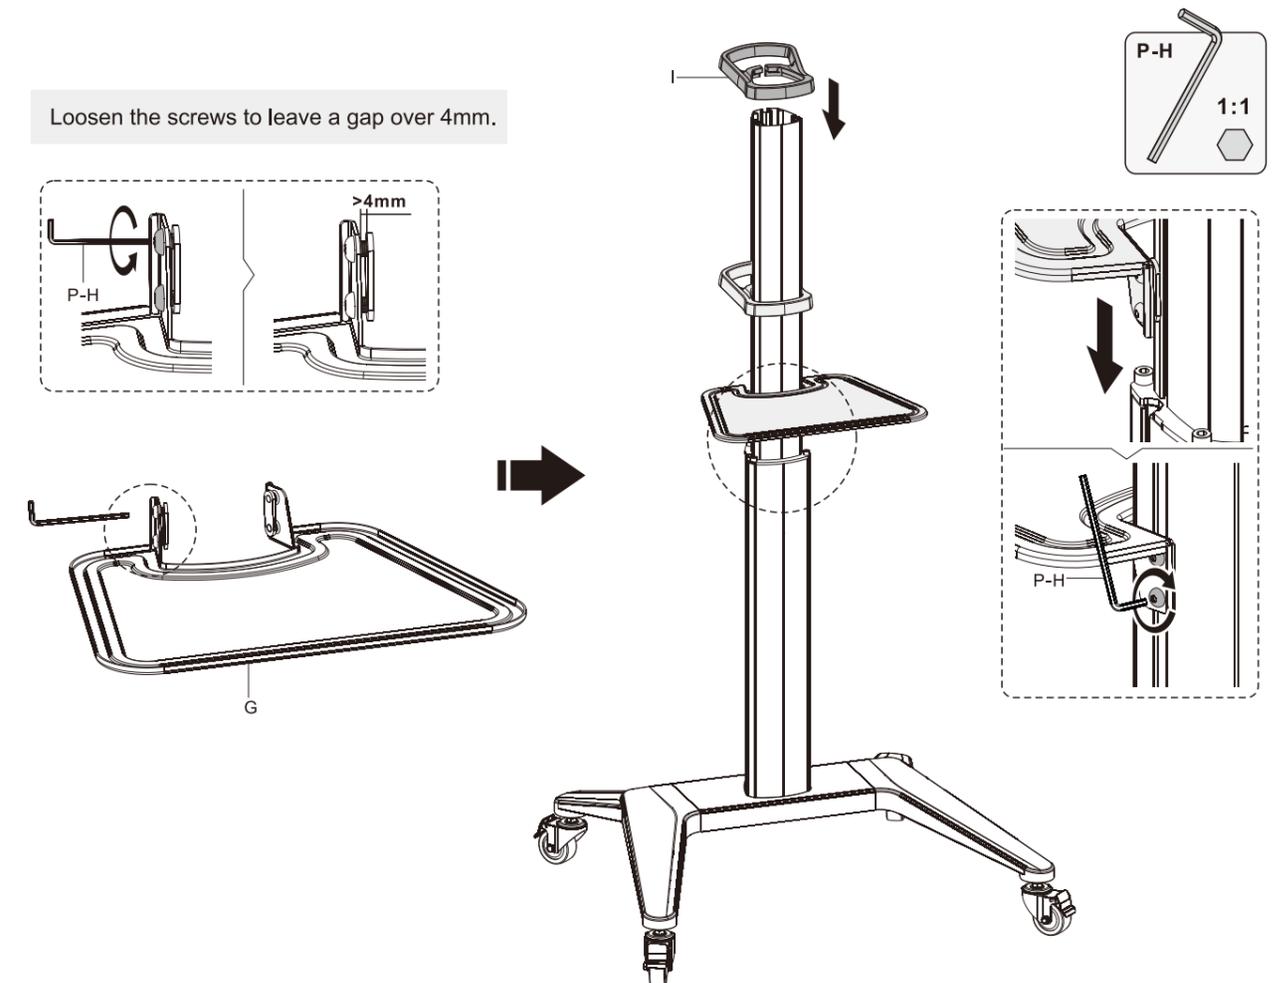


4. Attach the Connector to the Column

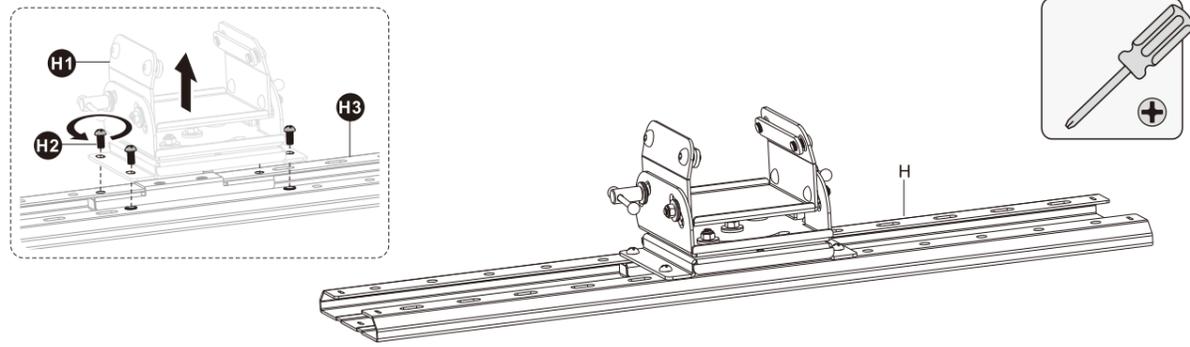


Loosen the screws to leave a gap over 4mm.

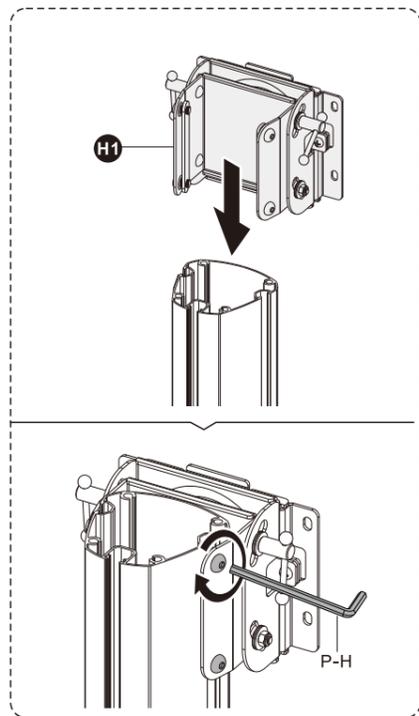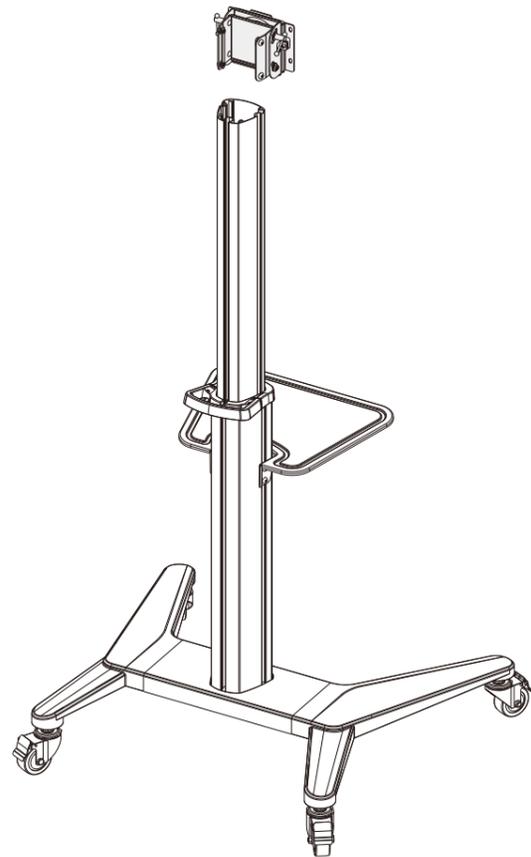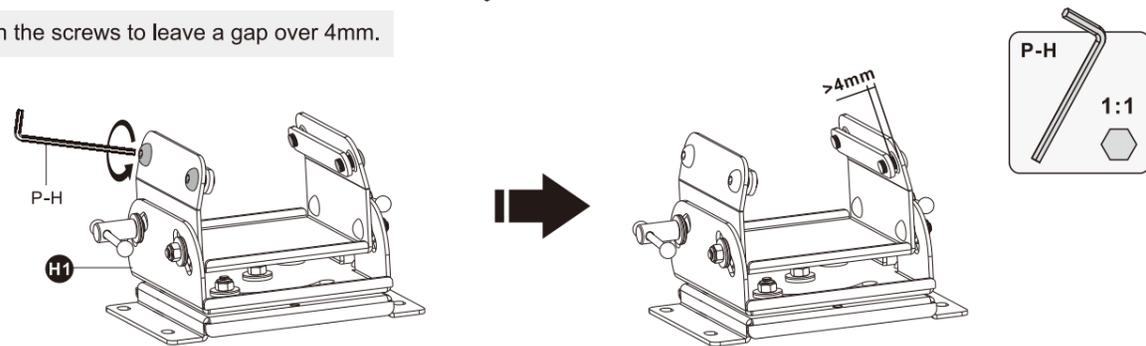

5. Attach TV Bracket to the Mounting Plate


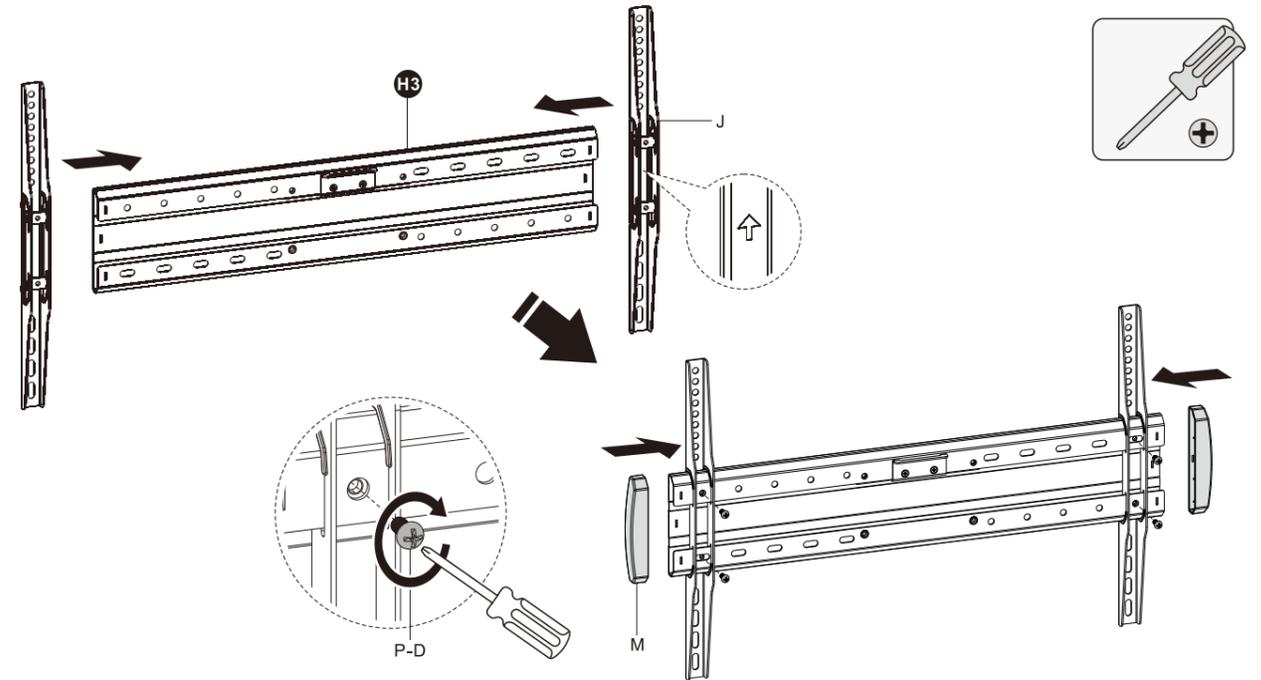


6a. Attach TV Bracket to Flat Back Screen

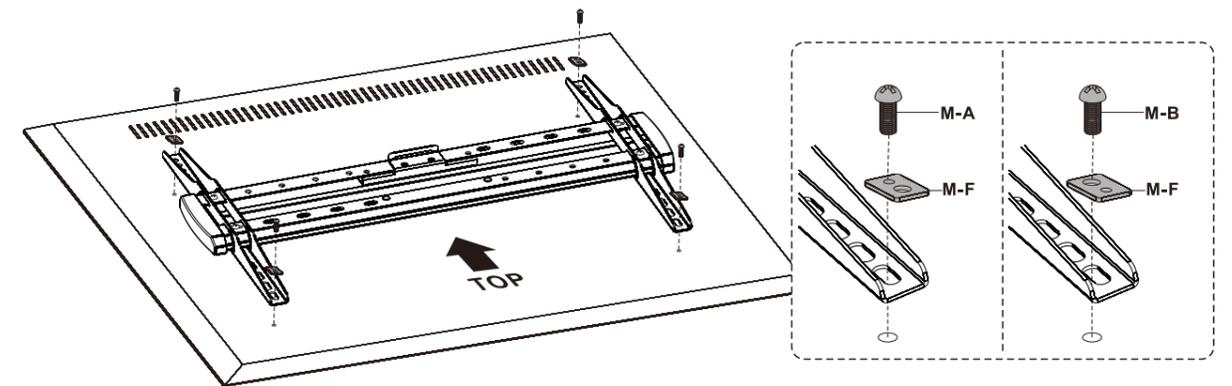

M-A			M-B		
M-F			1:1		



6b. Attach TV Bracket to Irregular Back Screen

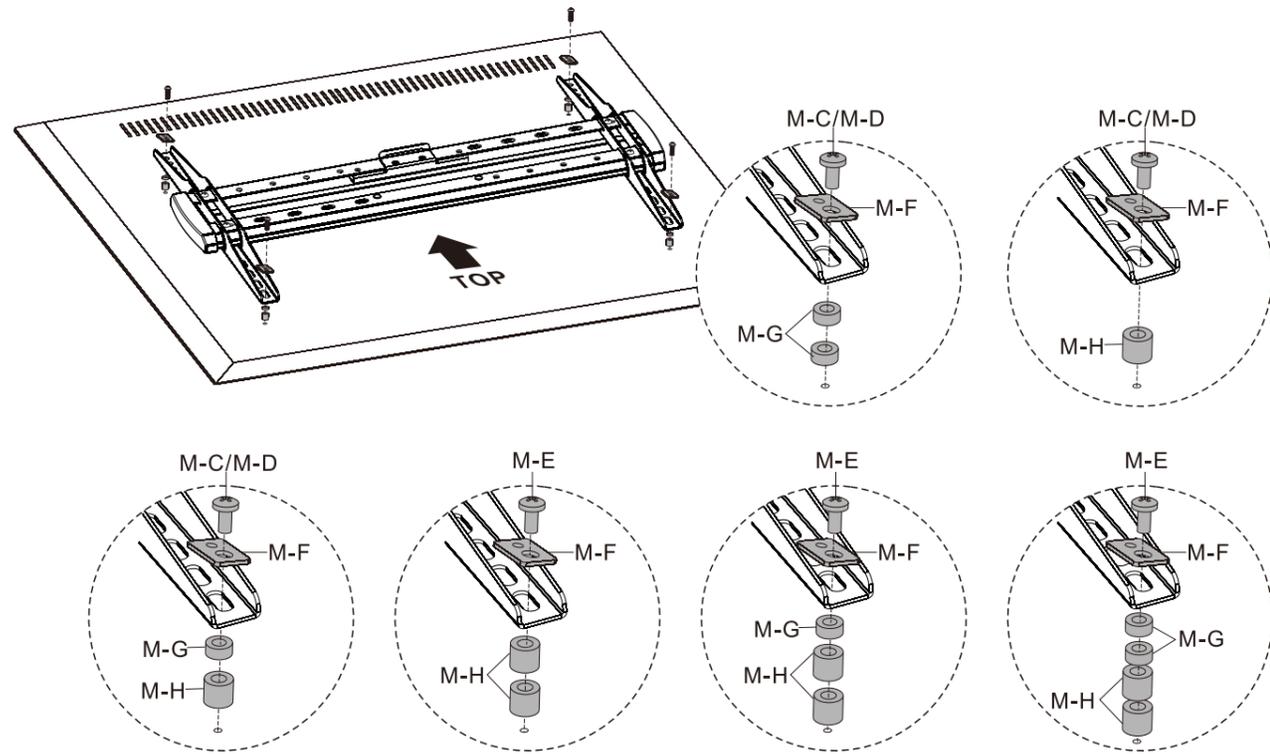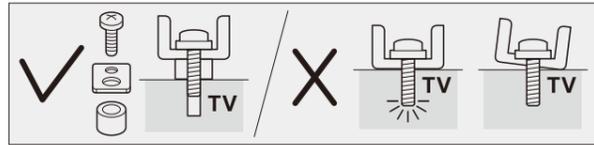



M-C		M-D	
M-E		M-F	
M-G		M-H	

1:1


7. Hang and Secure the Screen

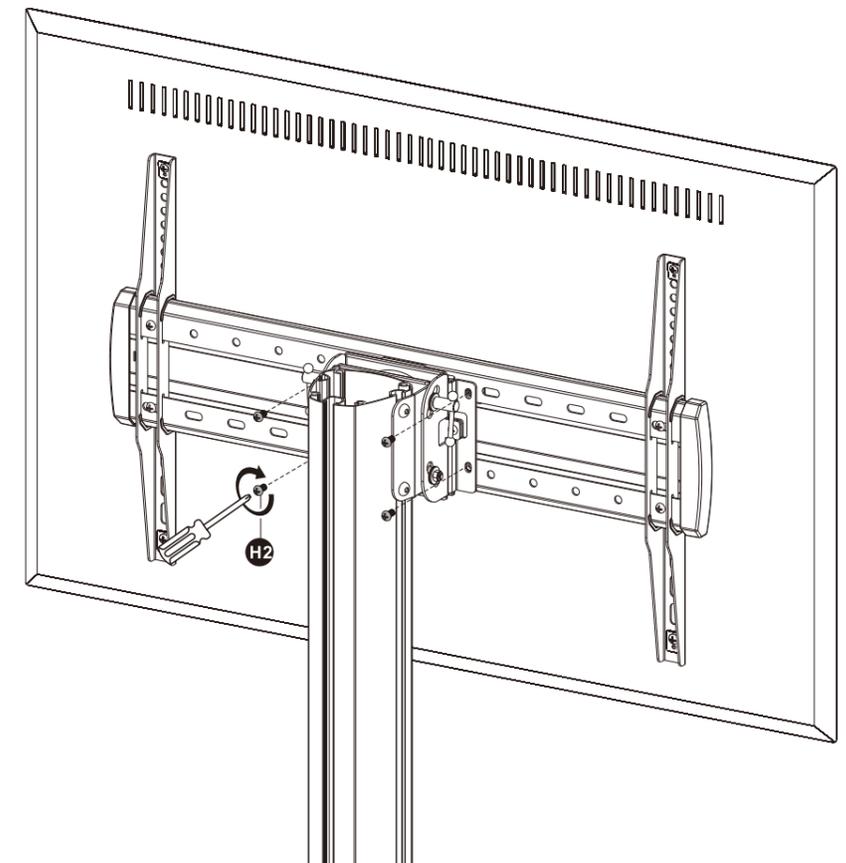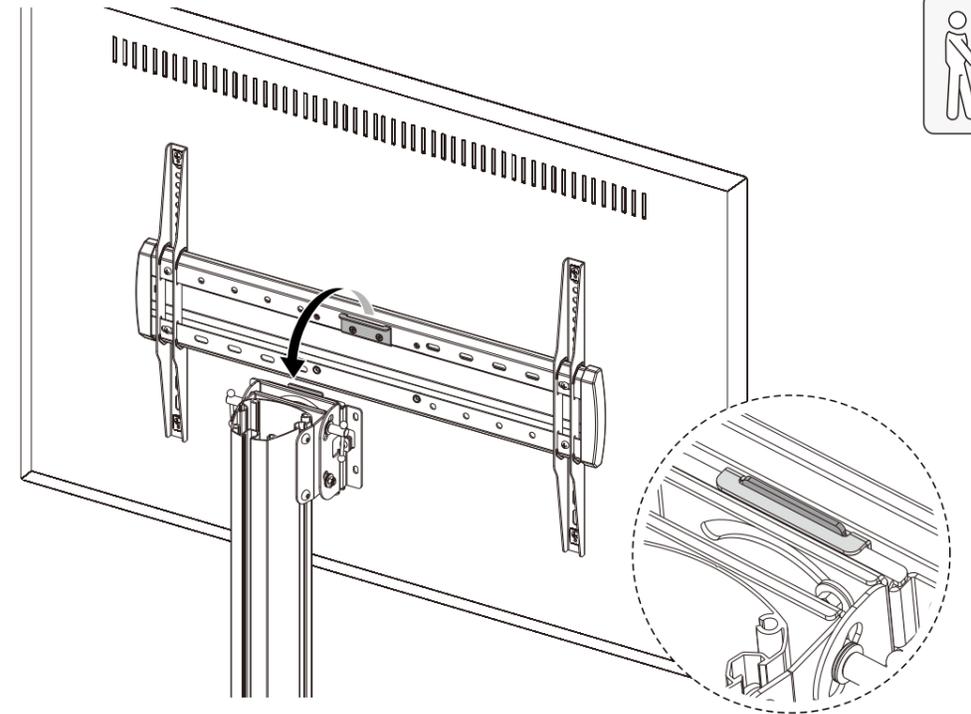

8. Assemble the Camera Shelf

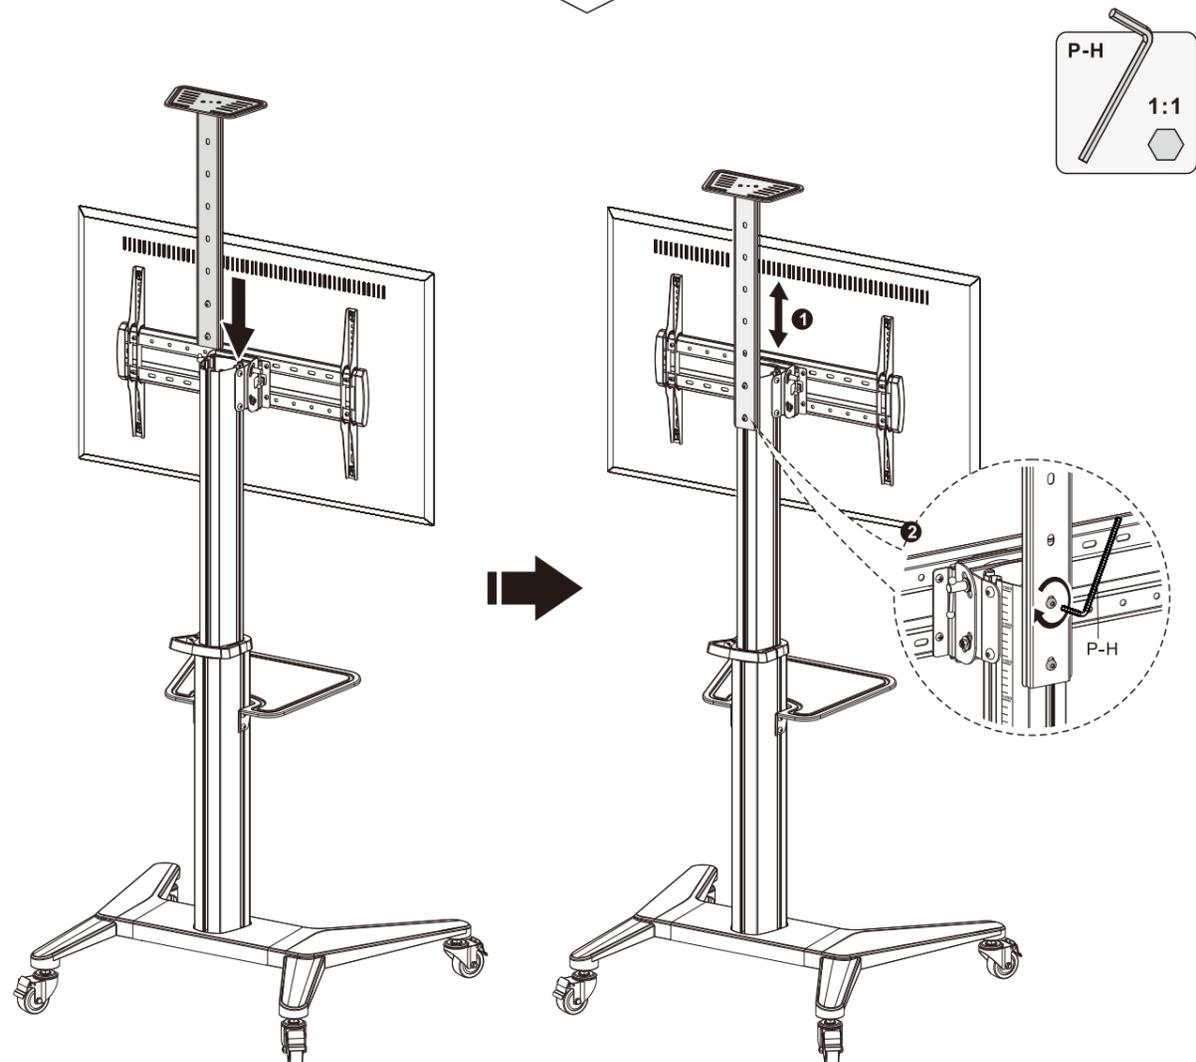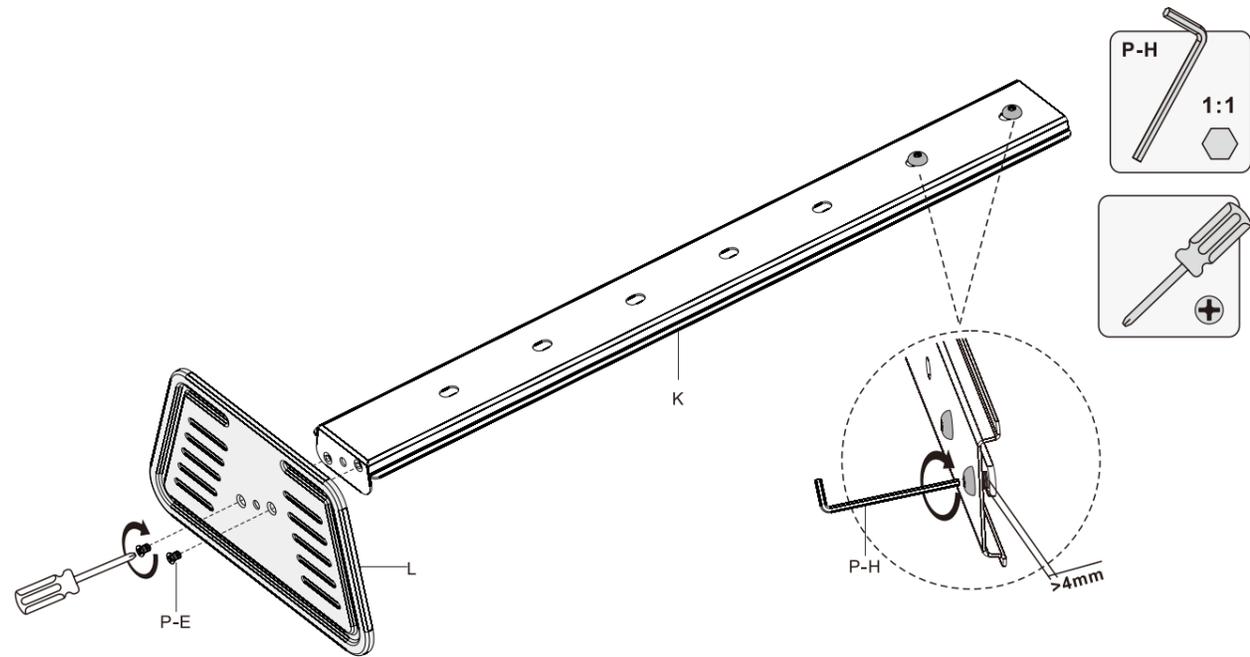

9. Assemble the Top Cover

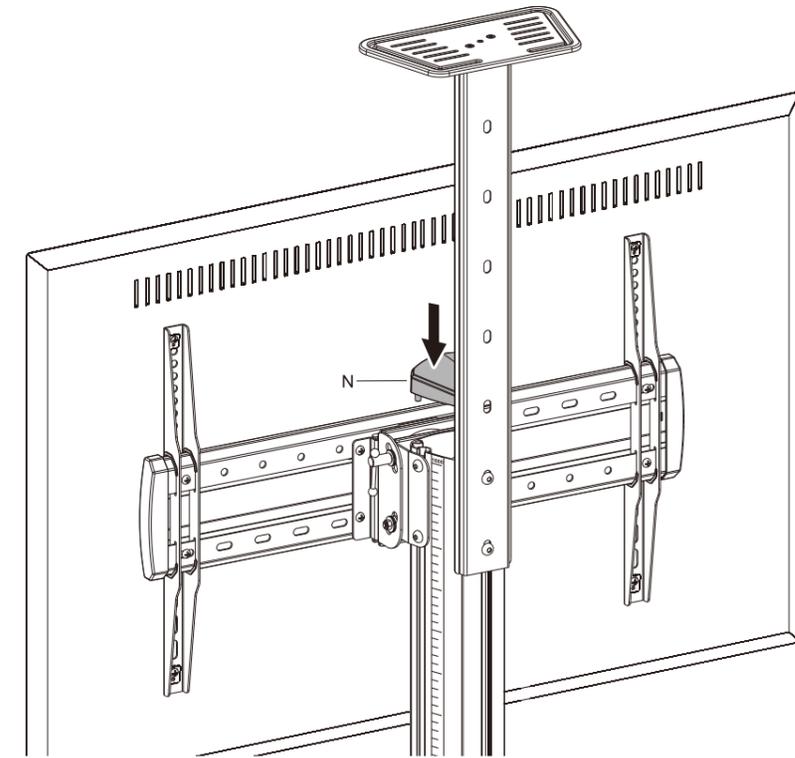

10. Cable Management

