



Waterproof Kids Camera

Realikids Cam Waterproof 2

User Manual

Manuel d'utilisation

Benutzerhandbuch

Manual del usuario

Manuale d'uso

Manual do utilizador

Gebruikershandleiding

Podręcznik użytkownika

Uživatelská příručka

Felhasználói kézikönyv

ユーザーマニュアル



Руководство пользователя доступно по адресу:
www.support.agfaphoto-gtc.com

SAFETY AND WARNING

CAMERA :

1. This user manual will provide detailed instructions on how to use, operate, technical specifications, and precautions. Please read this manual carefully.
2. During the printing process of this manual, if the machine's appearance, software or hardware repair process results in inconsistencies with some of the operations in this manual, our company reserves the right of final interpretation.
3. This product has a 3 meter body waterproof design. Please be sure the USB compartment cover is fully closed before using under water. After underwater use, please rinse with clean water and wipe off any remaining moisture on the surface. **(After use in seawater or salt water, be sure to clean it with fresh water.)**
4. Do not attempt to open the casing or attempt self repair this product. If there is a malfunction with this product or any of its components, please go to a professional repair shop to repair.
5. Do not use irritating chemicals, cleaning solvents or cleaning agents to clean this product. Please wipe this product with a slightly damp soft cloth.
6. Please pay attention to environmental protection and do not dispose of this product at will. Do not expose this product to fire or high temperatures.
7. Before using, be sure to remove the protective film on the lens and the screen.
8. Please pay attention to the cleanliness of the lens surface. Use a slightly damp soft cloth to clean it before use to avoid problems with poor camera performance.

PRODUCT STRUCTURE

- 1 Power button
- 2 Shutter button
- 3 W button
- 4 T button
- 5 Up button
- 6 Right button
- 7 Down button
- 8 Left button
- 9 OK button
- 10 Flash

- 11** Front lens
- 12** USB compartment
- 13** Speaker
- 14** MIC



BUTTONS AND INTERFACE FUNCTIONS

Power button

- a) Press and hold for 3 seconds to power on/off.
- b) Press and hold for 15 seconds to force a restart of the camera. Use this in case of a camera malfunction

Shutter button

- a) In photo mode: press once to take photo.

- b) In video recording mode: press once to start recording, press once again to stop recording.

W button

- a) In Photo/Video recording mode, press the W button once to switch lenses between the Front lens and Selfie lens.
- b) long press for digital zoom (zooming in).

T button

- a) Short press to exit/return to mode interface.
- b) Long press for digital zoom (zooming out).

OK button

- a) Press once to confirm the selection.

Up button

- a) Press the Up button to browse the modes or settings.
- b) In Photo mode, press the Up button to select filter effects/cartoon frames.
- c) In Video recording mode: press up button to select filter effects.

Down button

- a) Press the down button to browse the modes or settings
- b) In photo mode, press down button 1 time to select filter effects/cartoon frames.

- c) In video recording mode: press down button 1 time to select filter effects.

Left button

- a) Press the left button to browse the modes or settings
- b) In Photo/Video recording mode, press 1 time to open Photo/Video recording settings.

Right button

- a) Press the right button to browse the modes or settings.
- b) In Playback mode, press once to open the delete file option.

Reset hole

- a) When the camera is not working properly, use the reset control to restart the camera.



USB Compartment

Push down the compartment lid and open USB compartment.



- a) Type-C charging port.
- b) Micro memory card slot:
Supports C10 and above card speeds, with a capacity of 16-128GB.

Do not insert or remove cards while recording, taking photos, or playing files.

BASIC OPERATING INSTRUCTIONS

Menu homepage

Press the T button to open the mode selection interface.

Photo mode

Select this icon , and press the OK button to enter **photo mode**.

Photo Mode controls

- a) Press the shutter button once to take a photo.
- b) Press the W button once to switch between the front lens and selfie lens.
- c) Press the Up/Down buttons to select the filter effects/cartoon frames.
- d) Press the Left button to enter the photo settings menu, press the T button to exit.

- e) Press the Right button to enter **playback mode**, press it again to **delete a file**, press T button to exit.

Video recording mode

Select this icon  and press the OK button once enter Video recording mode.

- Press the shutter button once to start recording, and press it again to stop recording.
- Press the W button once to switch lenses between front and selfie lens.
- Press the up and down keys to select the filter effects.
- Press the left button to enter the recording settings, press the T button to exit.
- Press right button to enter playback mode, press right button again to delete the file, press T button to exit.

Playback mode

Select this icon  and press the OK button once to enter playback mode.

- Press the Up/Down button to select and view files.

- Press the 'OK' button to play/pause video files.

- Press the Right Button once to choose to delete the current

Game mode

Select this icon  and press the OK button once to enter game mode interface. Press the left/right buttons to choose a game then press the OK button to start the game. In game mode, press the T button to return to modes interface.

Camera settings

Select this icon , press the OK button once to enter the camera settings.

Press the Up/Down button to select the a setting.

Press the OK button to confirm and save the change.

Battery Levels

Battery level indicator, please refer to the diagram:

Full battery 
 Slightly low battery 
 Low battery 
 Out of battery 

PRODUCT SPECIFICATION

TFT screen	2.8 inch colorful high definition screen
Video resolution	2.7K, 1080P
Video format	MOV
Shooting pixel	12M, 10M, 8M, 5M
Photo format	JPG
Loop recording	Off, 1 min, 2 mins, 3 mins, 5 mins
Storage medium	Micro Memory card, supports up to 128G (not included)
Charging voltage	DC-5V



Attention ! Ne convient pas aux enfants de moins de 36 mois. Petits éléments et longue corde. Dangers d'étouffement et de strangulation. **Warning !** Not suitable for children under 36 months. Small elements and long rope. Choking and strangulation hazards. **Achtung!** Nicht für Kinder unter 36 Monaten geeignet. Kleinteile und langes Seil Erstickungs- und Strangulationsgefahr. **Attention !** Ne convient pas aux enfants de moins de 36 mois. Petits éléments et longue corde . Dangers d'étouffement et de strangulation. **¡Atención!** No conviene para niños menores de 36 meses. Piezas pequeñas y cordón largo. Peligro de asfixia y estrangulación. **Avvertenza!** Non adatto a bambini sotto i 36 mesi. Piccoli elementi e corda lunga . Pericoli di soffocamento e strangolamento. **Atenção!** Contra indicado para crianças com menos de 36 meses. Peças pequenas e correia de pescoço comprida. Riscos de asfixia e estrangulamento. **Waarschuwing!** Niet geschikt voor kinderen onder de 36 maanden. Kleine elementen en lang lanyard . Gevaar van verstikking en wurging. **Ostrzezenie!** Nie nadaje się dla dzieci poniżej 36 miesięcy. Małe elementy i długa lina . Ryzyko zadławienia i uduszenia. **Figyelem!** 36 hónaposnál fiatalabb gyermekek számára nem alkalmas. Kis részek és hosszú nyakpánt. Fulladás és fojtogatás veszélye. **Varovani!** Není vhodné pro děti do 36 měsíců. malé části a dlouhý remínek na krk. Nebezpečí udusení a uskrvení. **ПРЕДУПРЕЖДЕНИЕ !** Не подходит для детей младше 36 месяцев. Мелкие элементы и длинный шнур. Опасность удушения и удусения. **警告 !** 36ヶ月未満のお子様には適していません。小さなエレメントと長いロープ。窒息や首を絞める危険があります。



Notice of compliance for the European Union

Products bearing the CE mark comply with the applicable European directives and associated harmonised European standards.

Disposal of waste equipment by users in the European Union

This symbol means that according to local laws and regulations it is prohibited to dispose of this product with household waste. Instead it is your responsibility to protect the environment and human health by handing over your used device to a designated collection point for the recycling of waste electrical and electronic equipment. For more information about where you can drop off your waste equipment for recycling please contact your local city office, your household waste disposal service or the shop where you purchased the product.



GT Company declares that the electric radio equipment of the type Digital camera/video camera complies with directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following web address: www.agfaphoto-gtc.com

GT Company déclare que l'équipement radio électrique du type Appareil photo / vidéo numérique est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante : www.agfaphoto-gtc.com



FR

**Cet appareil,
ses accessoires
et son cordon
se recyclent**

**À DÉPOSER
EN MAGASIN**



OU

**À DÉPOSER
EN DÉCHÈTERIE**



Points de collecte sur www.quefairedemesdechets.fr



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Warranty : 2-year limited warranty / garantie limitée de deux ans / 2 Jahre eingeschränkte Garantie / Garantía limitada de 2 años / Garanzia limitata di 2 anni / Garantia limitada de 2 anos / 2-letnia ograniczona gwarancja / 2 év korlátozott garancia / 2letá omezená záruka / 2 jaar beperkte garantie / 2-летняя ограниченная гарантия / 2 års begrænset garanti / 2 vuoden rajoitettu takuu / 2 vuoden rajoitettu takuu.

After sales service / Service après vente / Kundendienst / Servicio postventa / Assistenza post vendita / Értékesítés utáni szolgáltatás / Service na verkoop / Serviço pós venda / Serwis pogwarancyjny / Poprodejní servis / Послепродажное обслуживание :

aftersales@agfaphoto-gtc.com / +33 (0) 1 85 49 10 26

Made in China

Product manufactured for and distributed by GT Company:

FR Office : 5 Rue de la Galmy, 77700 Chessy

UK Office : 1st floor gallery court 28 arcadia avenue London -
United Kingdom - N3 2FG

USA Office : 1251 Avenue of the Americas, fl.3, 10020 New York
www.gtcompany.fr - info@gtcompany.fr

AgfaPhoto is used under license of Agfa-Gevaert NV. For this product a sub-license has been granted by AgfaPhoto Holding GmbH (www.agfaphoto.com). Neither Agfa-Gevaert NV nor AgfaPhoto Holding GmbH manufacture this product or provide any product warranty or support. For service, support and warranty information, contact the distributor or manufacturer.

