

BRAUN

FaceSpa Pro








91283802/X-17






Type 5366
Modèle 5366
Modelo 5366

www.braun.com

911
921

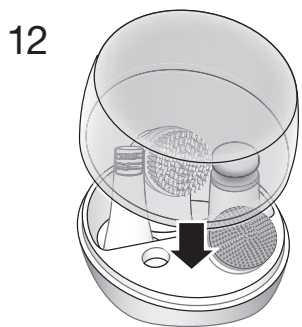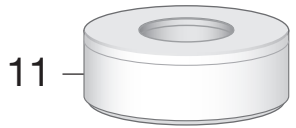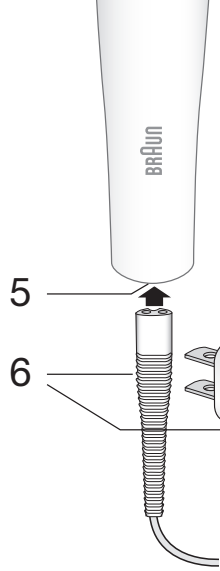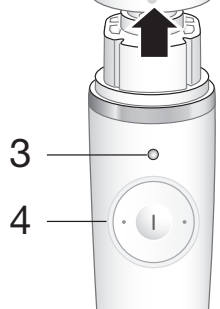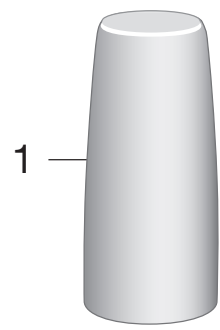

911	✓	✓	✓	✓	
921	✓	✓	✓	✓	✓

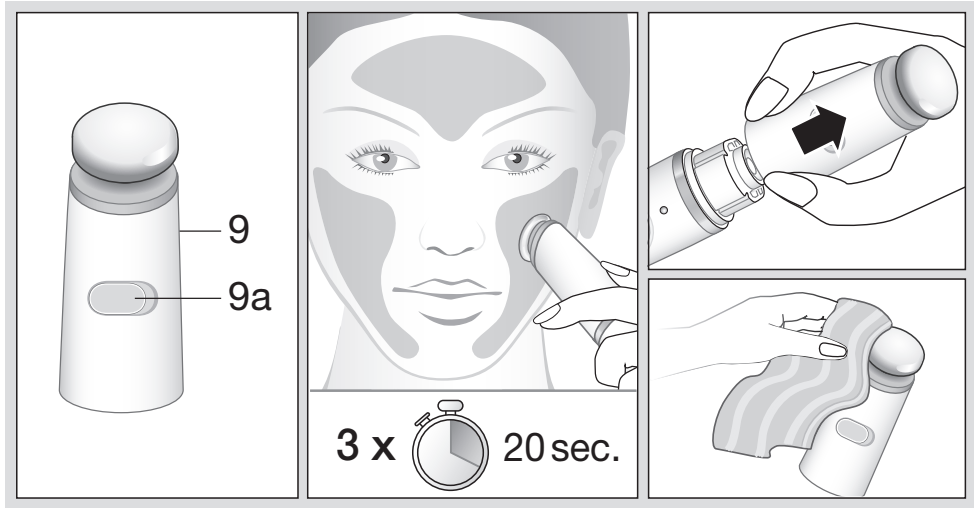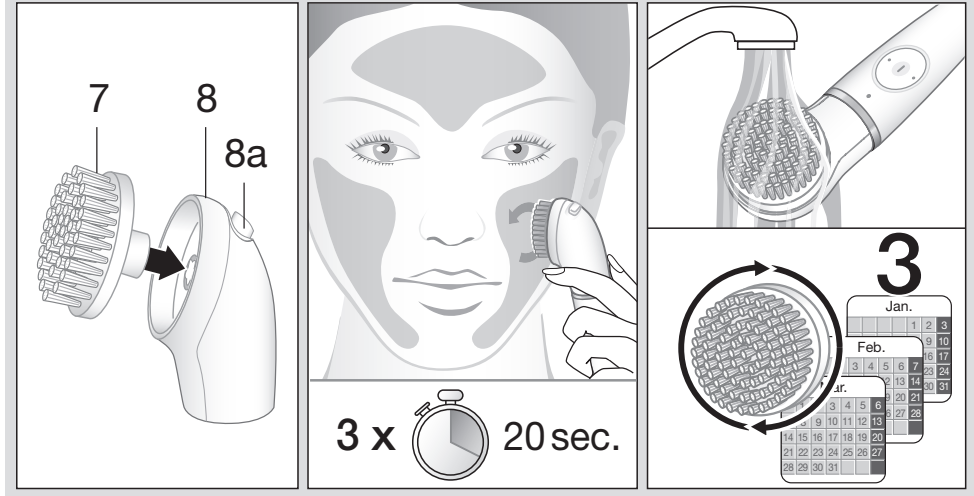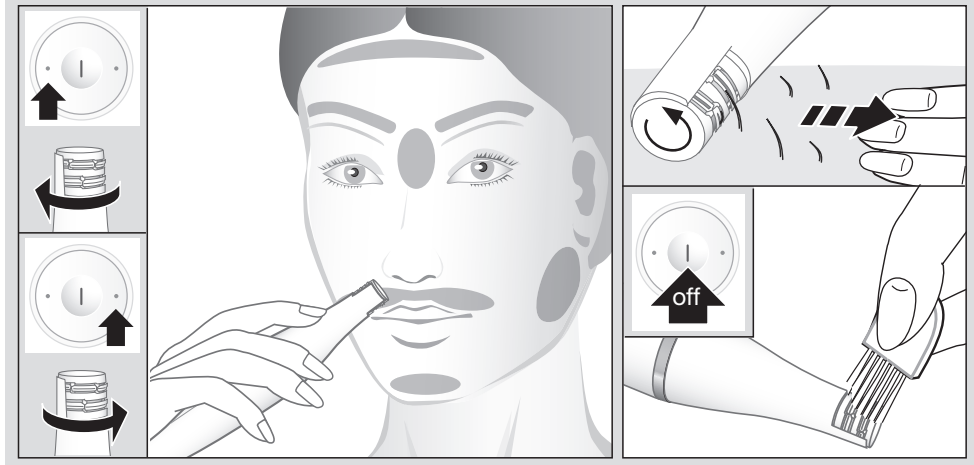

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using this appliance.



When disconnected, the hand-held part of this appliance may be used in a bath or shower.

DANGER


To reduce the risk of electric shock:

1. The charger unit is not for immersion in water or for use in shower.
2. Do not reach for a charger that has fallen into water. Unplug immediately.
3. Do not place, store or charge the appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Except when charging, always unplug this appliance from the electrical outlet.
5. Unplug this appliance before cleaning.
6. Do not use an extension cord with this appliance.

FOR HOUSEHOLD USE ONLY

WARNING


To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Close supervision is necessary when this appliance is used by, on, or near children or persons with disabilities.
2. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if the power supply has been dropped into water. Return the appliance to a service center for examination and repair.
4. Keep the cord away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
7. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to «off», then remove plug from outlet.
8. When plugging to an electrical outlet outside the USA, use a plug adapter to match the outlet's pin configuration.
9. Caution: The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100 °C (212 °F) or incinerate.
10. To recharge the battery, only use the detachable power supply provided with this appliance. If the appliance is marked  492-XXXX, only use Braun power supplies coded 492-XXXX.

SAVE THESE INSTRUCTIONS

Before using the appliance, please read the use instructions carefully and completely and keep them for future reference.

Important

- For hygienic reasons, do not share this appliance with other persons.
- Do not use the appliance on irritated skin.
- Do not use the epilation head on eyelashes. You may use the epilation head for removing individual hairs between or above the eyebrows, but not for shaping eyebrows.
- When the appliance is switched on, ensure it never comes in contact with clothing, ribbons or long hair to prevent any risk of personal injury or damage.
-  This appliance is only suitable for use in a bath or shower when the cleansing brush (7/8) is attached. For safety reasons, it can only be operated cordless.

Description

1	Protective cap for epilation head	8	Brush/pad adapter with release button (8a)
2	Epilation head	9	MicroVibration head with switch (9a)
3	Pilot light	10	Cleaning brush
4	Switch	11	Stand
5	Socket	12	Storage box
6	Special cord set		
7	Cleansing brush		

Charging

Before use, charge the appliance for 1 hour using the special cord set (6). Unplug after charging and use the appliance cordless.

Pilot light (3)	Charging status
Flashing white	Charging is in progress
Constant white 5 sec, then turns off	Fully charged
Yellow flashing	Charging level has dropped below 10 %.
Yellow fast flashing	Motor has stopped, please recharge.



The best environmental temperature for charging, using and storing is between 59 and 86 °F. Beyond this range, charging might take longer.

In case of overheating/motor blocking, the red pilot light flashes/shines constantly and the motor turns off. Wait for the appliance to cool down and the red light to turn off before switching on again.

Switch (4)

Press the switch centre (I) to turn the appliance on and off.

Additional switch functions depend on the head attached:

		
Epilation head (2)	Left rotation	Right rotation
Brush attachment* (7,8) MicroVibration head* (9)	Speed 1	Speed 2

* Both the Brush attachment and the MicroVibration head are provided with a treatment timer that beeps after 20 seconds to show that it is time to move on to the next face zone (left cheek, right cheek, fore head).

Travel lock

Press the switch centre (I) 3 seconds to lock the appliance. A beep confirms that the travel lock is activated. To unlock, press the switch 3 seconds. 3 beeps will sound when your unlocking attempt failed. Try again or simply connect the appliance to the mains.

Using the epilation head (dry use only)

- The small, precise epilation head removes even the finest facial hairs from the roots. Before use, make sure your skin and the epilation head are thoroughly clean.
- Hold the appliance with the tweezers against a section of skin that you keep stretched with your free hand. Carefully guide it with gentle pressure against the direction of hair growth. Do not press too hard as this may lead to skin injury. To stretch the upper lip area, use your tongue to push from below.
- To relax the skin, we recommend applying a moisturizing cream after epilation. When epilating for the first time, it is advisable to epilate in the evening, so that any possible reddening can disappear overnight.

General information on epilation

All methods of hair removal from the root can lead to skin irritation (e.g. itching, discomfort, reddening) depending on the condition of your skin and hair.

This is a normal reaction and should quickly disappear, but may be stronger when you are removing hair at the root for the first few times or if you have sensitive skin.

In general, skin reactions and the sensation of pain tend to diminish considerably with the repeated use. If, after 36 hours, the skin still shows irritation, we recommend that you contact your physician. In order to minimise the risk of infection or inflammation due to penetrating bacteria (e.g. when sliding the appliance over the skin), thoroughly clean the epilation head before using it.

If you have any doubts about using this appliance, please consult your physician. In the following cases, this appliance should only be used after prior consultation with a physician: eczema, wounds, inflamed skin reactions such as folliculitis (purulent hair follicles) and varicose veins, around moles, reduced immunity of the skin, e.g. diabetes mellitus, during pregnancy, Raynaud's disease, Koebner phenomenon, haemophilia or immune deficiency.

When you begin taking hormones or if you change the type of hormone medication (e.g. contraceptive pill), the growth of your hairs may be influenced due to a change of your hormone level. This is caused by the change of hormonal conditions, but not by the appliance.

Using the cleansing brush (wet & dry use)

The cleansing brush attachment improves your skin's appearance through gentle and deep-pore cleansing.

Pull off the epilator head, attach the brush adapter (8) and click-in the cleansing brush (7).

Use this attachment as part of your daily cleansing routine with water, soap, cleanser, cleansing milk, gel or peeling products.

Guide the brush with gentle pressure and circular motions. Avoid the eye area and hairline.

Using the MicroVibration head

Attach the MicroVibration head (9). Choose the vibration mode by sliding the switch (9a) to the left (gentle) or right (intense). Each mode can be operated with speed 1 or 2.

We recommend the MicroVibration head for applying liquid skin care products.

The delicate tapping action ensures an efficient and economic application of your skin care product. Slowly guide the MicroVibration head and enjoy the gentle massage.

After use, clean the toning head with a damp cloth.

Cleaning and maintenance

After use, clean the appliance as follows:

MicroVibration head (9): Use a damp cloth for cleaning. Do not clean in water.

Epilation head (2): Use the brush (10) to carefully clean the tweezers. You may want to dip the brush into ethanol (70%). Do not clean the epilation head under running water.

Cleansing brush: Only this attachment can be rinsed under running water.

If you prefer cleaning it thoroughly with soap and warm water, you may detach the brush (7) by pressing the release button (8a). After cleaning, leave all parts to dry before reattaching them.

For best results, replace the brush (7) every 3 months or sooner if bristles become deformed due to frequent usage. A range of brush refills (ref. no. 80 Face) is available at your retailer, Braun Service Centers or via www.braun.com.

Subject to change without notice

Battery removal at the end of the product's useful life

This appliance contains a rechargeable battery. Before disposing of the appliance disassemble the housing as shown, remove the rechargeable battery and recycle or dispose of properly, according to local guidelines.

Caution: Disassembling the appliance will destroy it and invalidate the warranty.

Make sure the battery is discharged before you disassemble as shown below:

