 
 
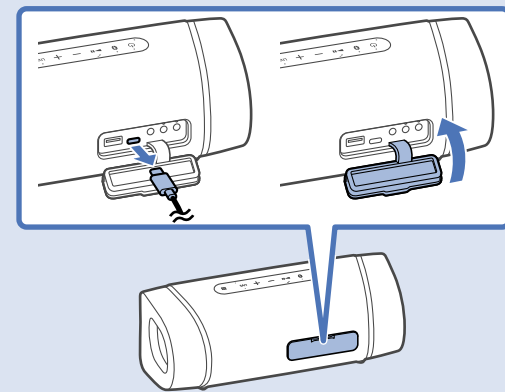 
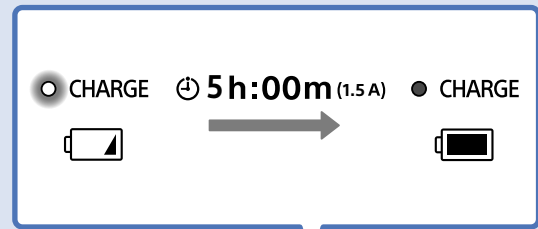 
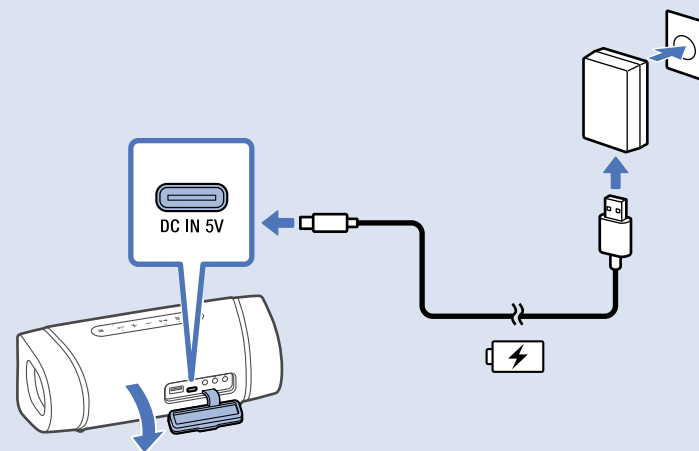 
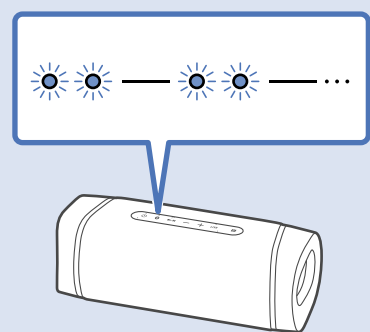 
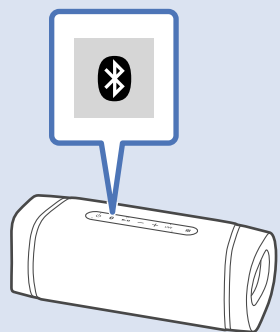 






1

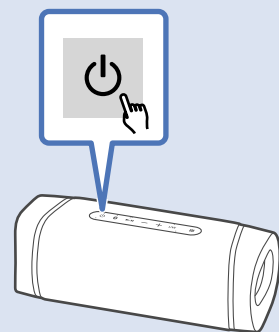






2

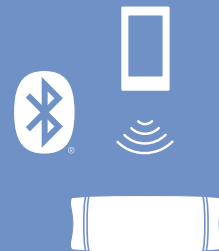

    Android™ iPhone

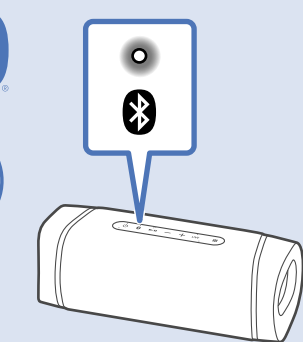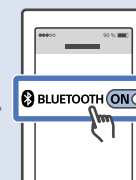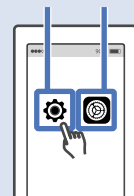


3

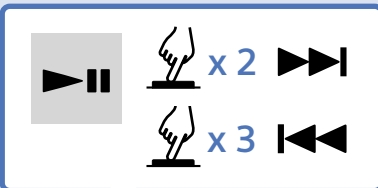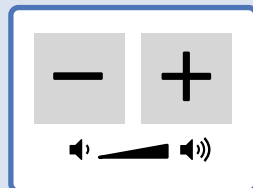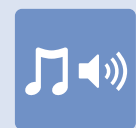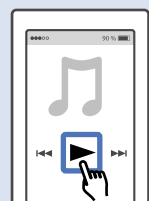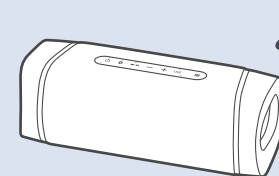     


SRS-XB33




  (1)






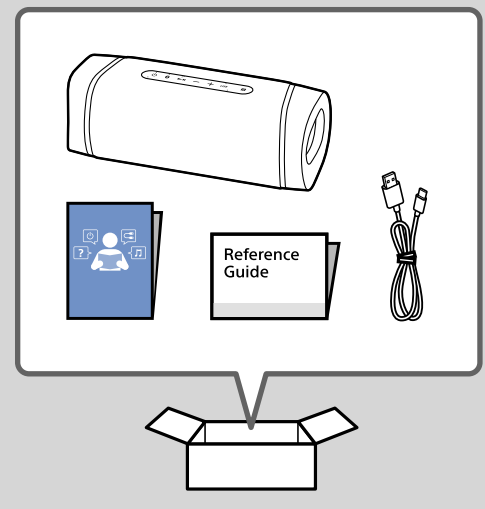


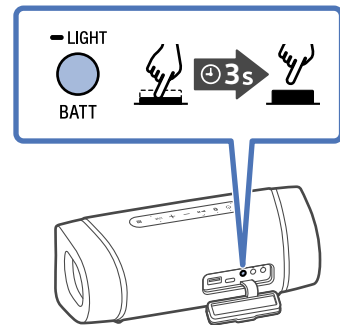


ON

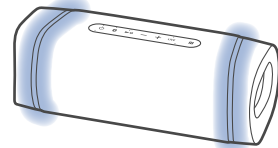 

OFF

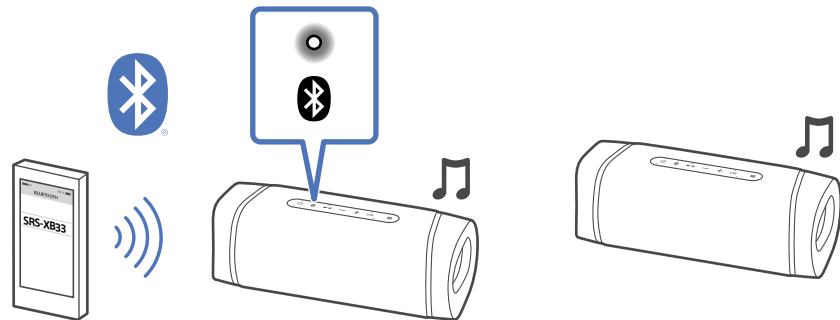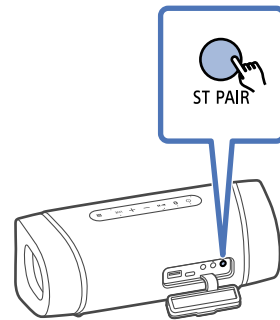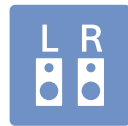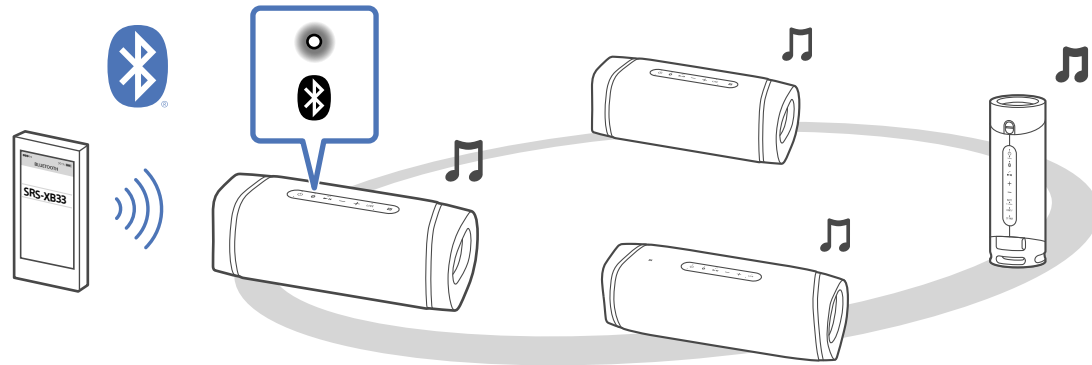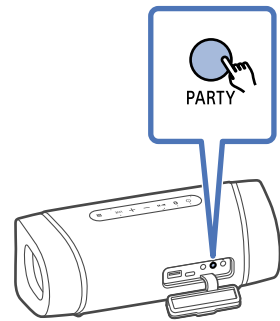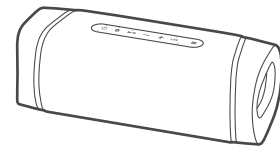      



Android

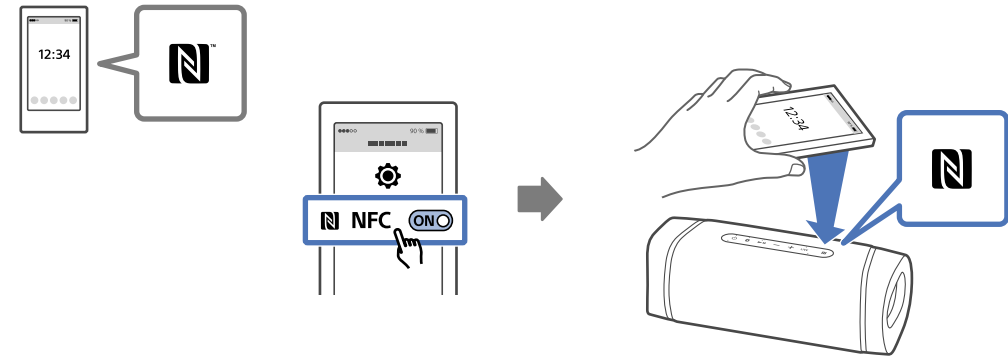 

Android / iPhone


  
<https://www.sony.net/smcapp/>

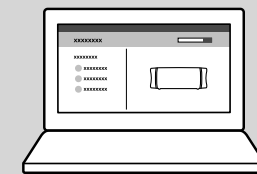

https://rd1.sony.net/help/speaker/srs-xb33/h_zz/