

Home Theatre System

Reference Guide
EN
Guide de référence
FR
Guía de referencia
ES



https://rd1.sony.net/help/ht/2080/h_zz/

©2024 Sony Corporation
Printed in Malaysia
<https://www.sony.net/>



* 5 0 4 9 8 3 1 1 1 * (1)

BRAVIA Theatre Quad

Model: YY2080C

English Home Theatre System

Before using the unit, be sure to access the following URL and read the End User License Agreement (EULA). The content of the agreement also applies to speakers (available separately) connected to the unit (unless those speakers have a separate license agreement).

https://rd1.sony.net/help/ht/2080/h_zz/

Model: YY2080C

The term "product" in this document refers to the unit or its accessories.

For customers in Europe

Do not install the product in a confined space, such as a bookcase or built-in cabinet.

To reduce the risk of fire, do not cover the ventilation opening of the unit with newspapers, tablecloths, curtains, etc. Do not expose the unit to naked flame sources (for example, lighted candles).

To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing, and do not place objects filled with liquids, such as vases, on the product.

The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

The AC adaptor is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

Install the unit so that the power cord can be unplugged from the wall socket immediately in the event of trouble.

As the main plug of the AC adaptor is used to disconnect the AC adaptor from the mains, connect it to an easily accessible AC outlet. Should you notice an abnormality in it, disconnect it from the AC outlet immediately.

For Remote Commander

CAUTION Risk of explosion if battery is replaced by an incorrect type.

Dispose of used batteries according to local rules and regulations.

Do not expose the batteries (battery pack or batteries installed) to excessive heat, such as sunshine, fire or the like for a long time.

This product has magnet(s) which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

The nameplate and important information concerning safety are displayed on the bottom of the device.

This unit has been tested and found to comply with the limits set out in the EMC regulation using a connection cable shorter than 3 m.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this unit.

The validity of the CE marking is restricted to only those countries/regions where it is legally enforced, mainly in the EEA (European Economic Area) countries/regions and Switzerland.

The validity of the UKCA marking is restricted to only those countries/regions where it is legally enforced, mainly in the UK.

For details on the effects of contact with the human body from the mobile phone or other wireless devices connected to the unit, refer to the instruction manual of the wireless device.

Notice for customers: the following information is only applicable to products sold in countries/regions applying EU directives and/or UK applying relevant statutory requirements.

This product has been manufactured by or on behalf of Sony Corporation.

And UK Importer: Sony Europe B.V.

Inquiries to the EU Importer or related to product compliance in Europe should be sent to the manufacturer's authorized representative, Sony Belgium, bijkantoor van Sony Europe B.V., Da Vincielaan 7-9, 1190 Zaventem, Belgium.

Inquiries to the UK Importer related to product compliance in the UK should be sent to the manufacturer's authorized representative, Sony Europe B.V., The Heights, Brooklands, Weybridge, Surrey KT19 0XW, United Kingdom.

About recommended cables

Properly shielded and grounded cables and connectors must be used for connection to host computers and/or peripherals.

Hereby, Sony Corporation declares that this equipment is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://compliance.sony.eu>


Hereby, Sony Corporation declares that this equipment is in compliance with the UK relevant statutory requirements.

The full text of the declaration of conformity is available at the following internet address:

<https://compliance.sony.co.uk>

For audio products, the following restrictions on putting into service or of requirements for authorisation of use apply in BE, BG, CZ, DK, DE, EE, IE, EL, ES, FR, HR, IT, LV, LT, LU, HU, MT, NL, AT, PL, PT, RO, SI, SK, FI, SE, UK, IS, LI, NO, CH, AL, BA, MK, MD, RS, ME, XK, TR, UK (N):

5 150 MHz - 5 350 MHz band is restricted to indoor operations only.

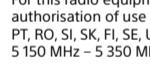

Disposal of waste batteries and electrical and electronic equipment (applicable in the European Union and other countries with separate collection systems)

This symbol on the product, the battery or on the packaging indicates that the product and the battery shall not be disposed as household waste. On certain batteries this symbol might also be in combination with a chemical symbol (Pb) added if the battery contains more than 0.004% lead. By ensuring that these products and batteries are disposed of correctly you will help to prevent potentially negative consequences for the environment and human health which could be caused by inappropriate waste handling. The recycling of the materials will help to conserve natural resources. In case of products that are for sale, performance or data integrity reasons require a permanent connection to the power supply, the battery shall not be removed or replaced by the user for safety only. To ensure that the battery and the electrical and electronic equipment will be treated properly, hand over these products at end-of-life to the appropriate collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the appropriate collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product or battery.

This unit should be installed and operated keeping the radiator at least 20 cm away from person's body.

Mounting the Speakers on a Wall

Note

Make sure to use the supplied wall mounting brackets when mounting the speakers on a wall, and do not mount the speakers on a wall directly. The temperature inside the speakers rises considerably, and it may cause damage or malfunction.

Prepare screws (not supplied) that are suitable for the wall material and stability. Depending on the wall material, the screw length may differ.

Fasten the screw securely in the wall beam.

Install the wall mounting bracket horizontally on the reinforced wall.

Have the installation done by a Sony dealer or licensed contractor and pay special attention to safety during the installation.


Sony shall not be liable for accidents or damage caused by improper installation, insufficient stability, improper screw installation, natural disasters, etc.

Do not place the speakers right below the ceiling so as not to block the sound output from the top of the speakers.

Do not place metal objects near the speakers. Wireless functions may become unstable.


Do not place any obstacle between the speakers.

1. Prepare 16 screws (not supplied) that are suitable for the holes of the wall mounting bracket.

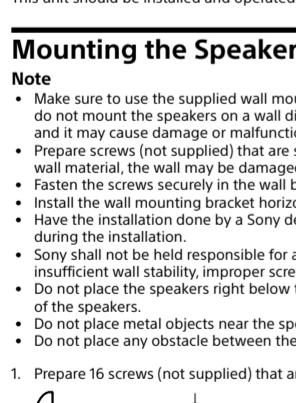


2. Remove the cover on the rear of the speaker.

First, open the cover downwards. Next, remove the screw with a screwdriver and then the cover.

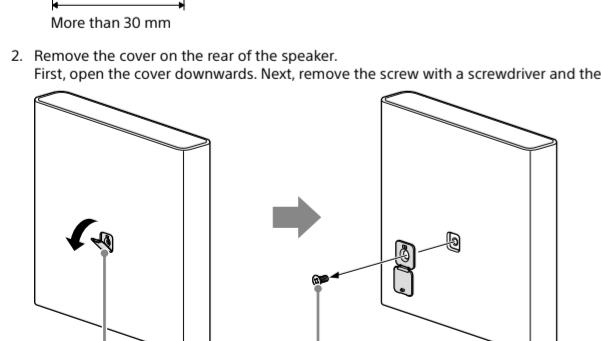


3. Attach the wall hook (supplied) to the speaker.
Use the screw that has been removed in step 2 to attach the hook.

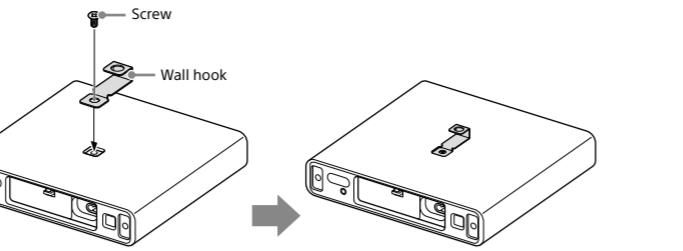


Note
Keep the cover that has been removed in step 2 for use when you do not mount the speaker on a wall.


4. Connect the AC power cord (mains lead) for the speaker (supplied) to the speaker.
Fix the power cord connected to the speaker in the cable holder on the bottom of the speaker.

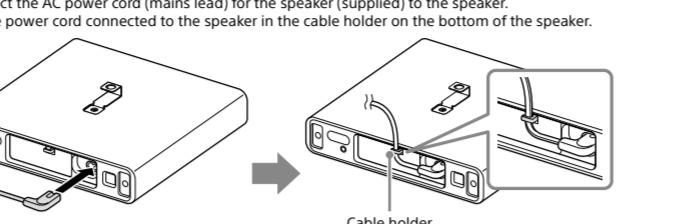

5. Insert the pins of the wall bracket (L) and (R) (supplied) in the holes of the common base (supplied) to assemble the wall mounting bracket.

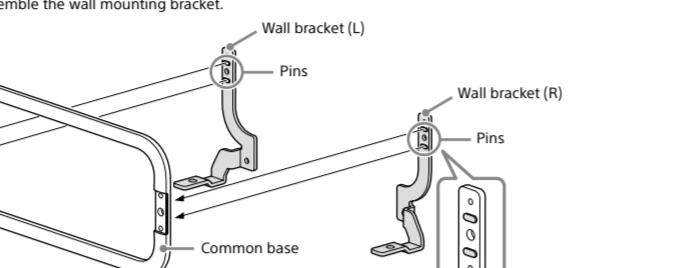


6. Decide the wall mounting position of the speaker and install the wall mounting bracket that had been assembled in step 5 in that position.
Install the wall mounting bracket horizontally on the wall. Use the 4 screws (not supplied) that have been prepared in step 1 to install. When you install the wall mounting bracket, hold it down to avoid dropping the wall bracket.

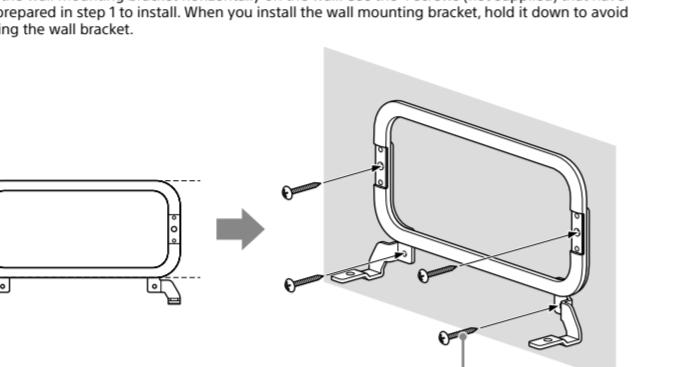


7. Confirm the type of the speakers.
Check the label on the bottom of the speaker to make sure it matches the installation position.

- FRONT L: Front left
- FRONT R: Front right
- REAR L: Rear left
- REAR R: Rear right

8. Hang the speaker on the wall mounting bracket.
Hang the wall hook on the rear of the speaker on the bracket.

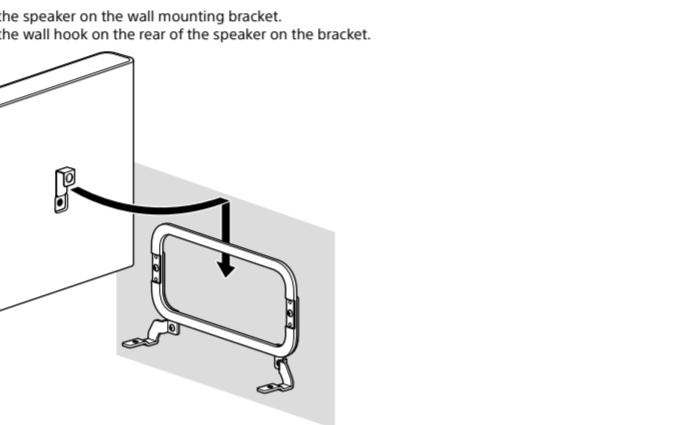

9. Align the positions of the screw holes on the bottom of the speaker and holes of the wall mounting bracket, then fix the speaker to the bracket by fastening the screws (supplied) securely.

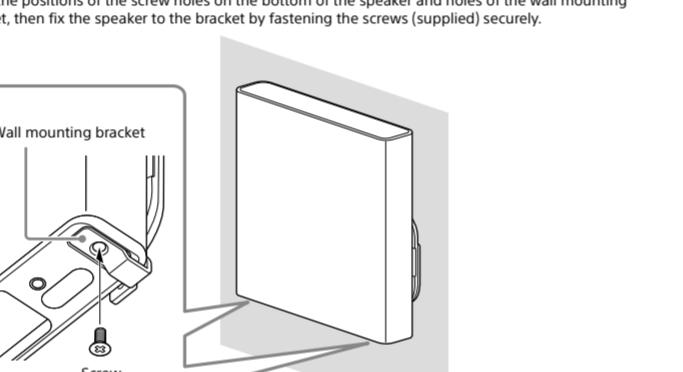

10. Connect the AC power cord (mains lead) connected with the speaker to the AC outlet (mains).

Licenses

Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation.

Manufactured under license from Dolby Laboratories. Confidential unpublished works.

Copyright © 2022 Dolby Laboratories. All rights reserved.

For further information, see <http://patents.sony.com>.

Manufactured under license for DTS, Inc., DTS-X, and the DTS-X logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.

• This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obligated to acknowledge the contents of the agreement to customers under the terms of the license of the software for the software. Please access the following URL and read the contents of the license.

<https://rd1.sony.net/help/ht/sl/23c/>

• The software included in this product contains copyrighted software that is licensed under the GPL/LGPL and other licenses which may require access to source code. You may find a copy of the relevant source code as required under the GPL/LGPL (and other licenses) at the following URL.

<https://oss.sonny.net/Products/Linux/>

Please note that Sony cannot answer or respond to any inquiries regarding the content of this source code.

• The Spotify Software is subject to third party licenses found here:

<https://www.spotify.com/connect/third-party-licenses>

Disclaimer regarding services offered by third parties

• Services offered by third party may be changed, suspended, or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.

Precautions

Before operating the unit, check that the operating voltage is identical to your local power supply.

The operating voltage is indicated on the nameplate on the bottom of the unit.

• The supplied AC adaptor is designed exclusively for this unit. It should not be used in combination with any other devices.

• Completely disconnect the AC power cord (mains lead) from the AC outlet (mains) if it is not going to be used for an extended period of time. When unplugging the AC power cord (mains lead), always grip the plug. Never pull the cord itself.

• AC power cord (mains lead) must be changed only at a qualified service shop.

On placement

• Do not place any solid object or liquid fall into the unit, unplug the unit and have it checked by qualified personnel before operating it any further.

• Do not place the unit near heat sources or in a place subject to direct sunlight, excessive dust, or mechanical shock.

• The speakers of this unit are not of magnetically shielded type. Do not place magnetic cards on the unit while it is in operation.

• Do not place metal objects other than a ground around the unit. Wireless functions may be unstable.

• Although the unit heats up during operation, this is not a malfunction.

• Place the unit in a location with adequate ventilation to prevent heat buildup and prolong the life of the unit.

• Use caution when placing the unit on a surface that has been specially treated (with wax, oil, polish, etc.), as staining or discoloration of the surface may result.

How to care for the unit

• Use a soft, dry cloth. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzene.

On BLUETOOTH® communications

Microwaves emitted from a BLUETOOTH device may affect the operation of electronic medical devices. Turn off this unit and other BLUETOOTH devices in the following locations, as it may cause an accident.

- in hospitals, near priority seating in trains, locations where flammable gas is present, near automatic doors, or near fire alarms.

• During the BLUETOOTH and Wireless LAN functions on/off

Press the [BLUETOOTH] (Input) → [Volume] ←, and [Muting] in that order on the supplied remote control, displaying [RF (ON)] on the front panel display of the unit, to turn off the BLUETOOTH and Wireless LAN functions.

• Press the [INPUT] (Input) → [Volume] ←, and [Muting] again in that order on the supplied remote control, displaying [RF (ON)] on the front panel display of the unit, to turn on the BLUETOOTH and Wireless LAN functions.

Notes on transferring/disposing

• Before you reset the unit, deleting private information and setting information before transferring/disposing.

• If the unit is transferred or disposed without resetting, private information may be inspected by a third person and abused.

For details of the resetting method, refer to Help Guide.

Other notes

• Disabling the [Auto Standby] function may increase the power consumption because the product will not turn off even when it is not being used.

• Internet Connection and IP Address

Technical data such as IP address (or device detail) is used when this product is connected to the internet for software update or receiving third party services. For software updates, these technical data may be communicated to our update servers in order to provide you with the software update appropriate to your device. If you do not want such technical data to be used at all, do not set-up the wireless

