

NIKKOR

NIKKOR Z 14-24mm f/2.8 S

En User's Manual (with Warranty)
 De Benutzerhandbuch (inkl. Garantiebeleg)
 Fr Manuel d'utilisation (avec garantie)
 Nl Gebruikshandleiding (met garantie)



NIKON CORPORATION

Printed in Thailand
7MMA4145-01

Nikon Worldwide Service Warranty Card

Model Name/Produkt-Nom du modèle/Modellnamen	NIKKOR Z 14-24mm f/2.8 S
Serial No./Séries-Nr./Numéro de série/Serie-Nr.	_____
Purchase Date/Kaufdatum/Date d'achat/Aankondatum	_____
Name and address of customer/Name und Adresse des Käufers/Name et adresse du client/Naam en adres van klant	_____
Distributor/Niederlasser/Distributeur/Distributeur	_____
Nikon Europe B.V. Tripolis 100, Burgerweeshuispad 101, 1076 ER Amsterdam, The Netherlands	_____
Manufacturer/Hersteller/Fabrik/Fabriek	_____
Nikon CORPORATION Shinagawa Intercity Tower C, 2-15-3, Konan, Minato-ku, Tokyo 108-6290 Japan	_____

Warranty Terms - Nikon Worldwide Service Warranty

Nikon Worldwide Service Warranty
 Your Nikon lens is guaranteed against manufacturing defects for one full year from the date of purchase. During this period, repairs or adjustments will be made free of charge only upon presentation of the Nikon Worldwide Service Warranty card together with the sales slip or other evidence of purchase to any authorized Nikon service facility. Establishing the original purchase date should be made at the original consumer level. This warranty does not cover damage resulting from misuse or abuse, accident, or normal wear and tear. The warranty does not cover damage caused by dropping, impact or storage, or damage resulting from sand or water. It is only valid at authorized Nikon service facilities.

The warranties are in lieu of all other express or implied warranties and of any other obligation on the part of the manufacturer and distributor except for the obligation provided by applicable law.

De Weltweite Nikon-Garantie
 De Wettbewerbsbedingungen für alle Herstellungsfehler eines Jahres Garantie ab dem Kaufdatum. Während dieser Garantie werden Reparaturen oder Nachberechnungen nur dann kostenfrei durchgeführt, wenn die Karte für die weltweite Nikon-Garantie zusammen mit dem Kassabon eines anderen Kaufstellers vorlegt wird. Die Garantie gilt nicht für Schäden, die durch Missbrauch, Unfall oder normale Verschleiß aufgetreten sind. Die Garantie ist weder übertragbar noch wird sie bei eventuellem Verlust oder Abtrennung von der Karte auf andere übertragen. Die Garantie gilt nicht für Schäden, die durch Gebrauch oder Unfälle, Reparatur, Staub- oder Falschschäden, falsche Pflege oder Aufbewahrung sowie Schäden durch Sand oder Flüssigkeiten. Sie ist nur bei autorisierten Nikon-Servicestellen gültig.

Die Garantie ersetzt alle anderen ausdrücklichen oder schweigend gewährten Garantien und sonstigen Verpflichtungen seitens des Herstellers und Vertriebshändlers mit Ausnahme der geltenden gesetzlichen Rechte und Ansprüche.

Infolgedessen sind die autorisierten Nikon-Servicestellen finden Sie im Internet unter <https://imaging.nikon.com/support/index.htm>.

Fr Garantie mondiale de réparations Nikon
 Ni Nikon-aparatuur is geverifieerd tegen alle fabrikagefehler gedurende één jaar vanaf de datum van aankoop. Tijdens deze periode worden reparaties en aanpassingen gratis uitgevoerd, alleen bij een erkende Nikon service faciliteit. Om de garantie te bewijzen moet de aankondiging van de datum van aankoop voorzien zijn. De garantie geldt niet voor schade door onjuist gebruik, ongeoorloofde reparatie, schade veroorzaakt door water, onjuist ophangen of schade door zand of vloeistoffen. De garantie is geldig bij geautoriseerde Nikon-servicecentra.

De garantie is in plaats van alle andere explicite of impliciete garanties en van alle andere verplichtingen seitens des Herstellers und Vertriebshändlers, behalve voor de verplichtingen voorzien die door de wet voorgeschreven zijn.

Voor informatie over geautoriseerde Nikon-servicecentra, bekijk <https://imaging.nikon.com/support/index.htm>

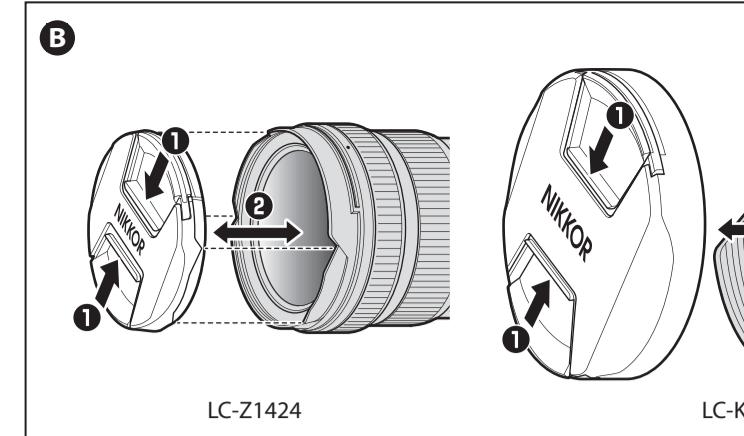


Figure 2/Abbildung 2

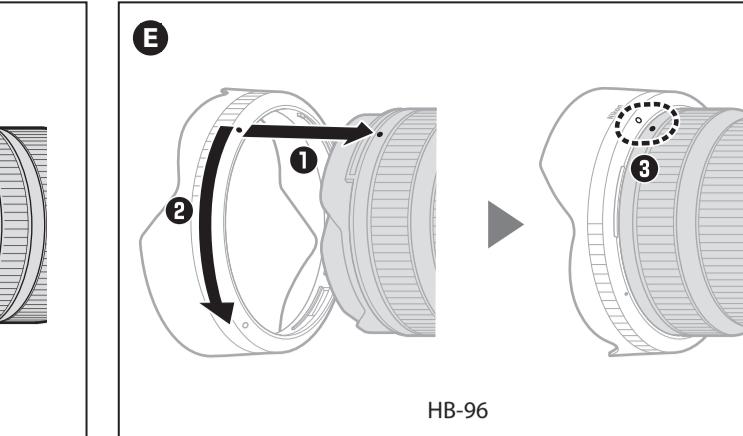


Figure 3/Abbildung 3

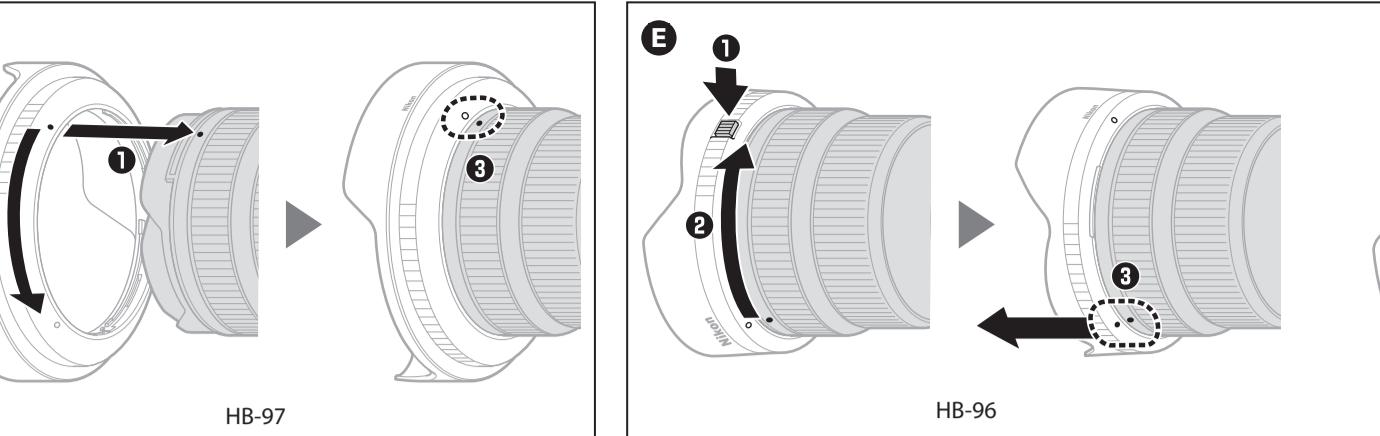


Figure 4/Abbildung 4

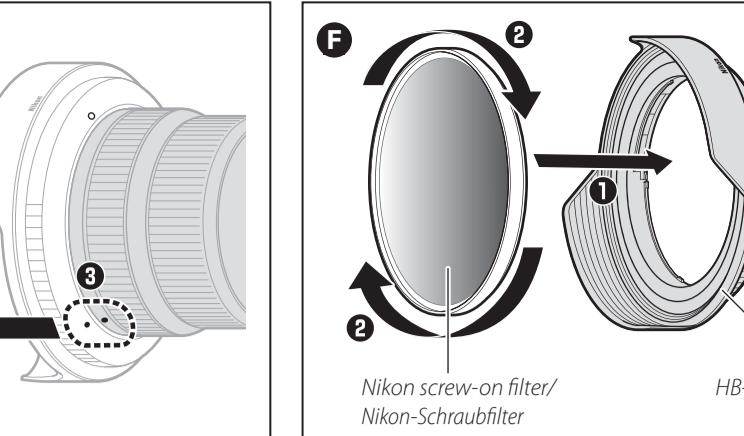


Figure 5/Abbildung 5

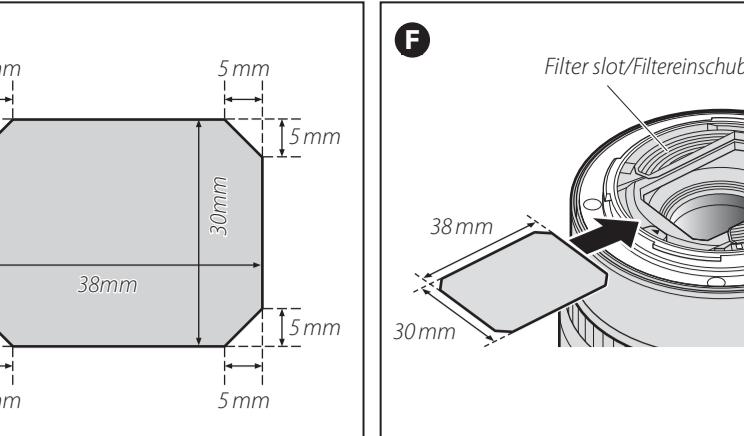


Figure 6/Abbildung 6


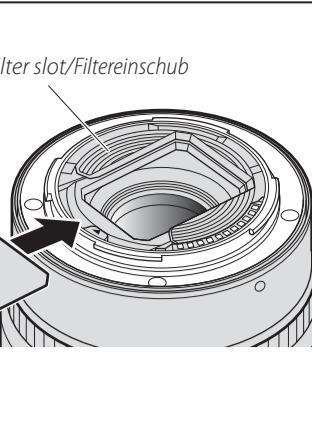


Figure 7/Abbildung 7

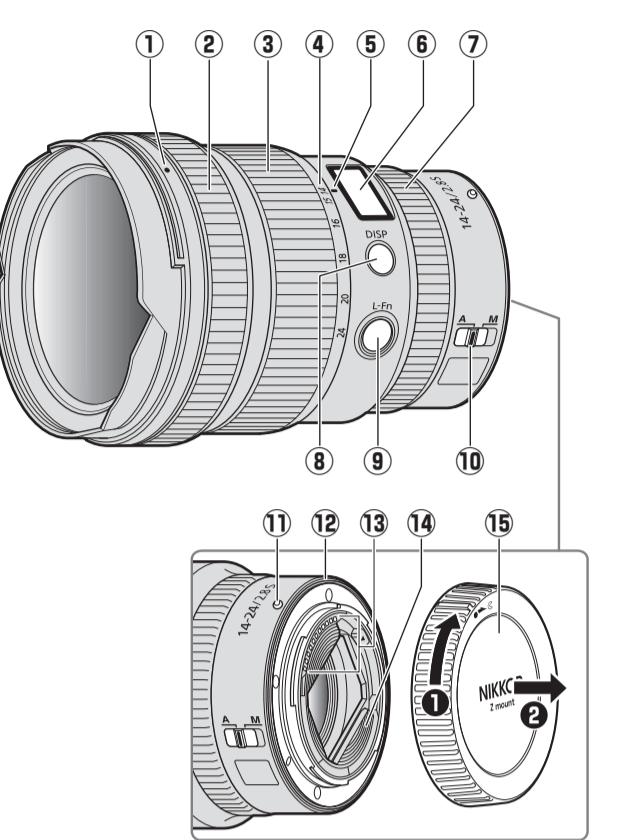

SAMPLE

En User's Manual

Before using this product, please read these instructions carefully. You will also need to consult the camera manual.

This lens is intended exclusively for use with mirrorless cameras featuring a Nikon Z mount.

Update the camera firmware to the latest version. With earlier versions, the camera may fail to detect the lens correctly and some features may not be available. The latest version of the camera firmware can be downloaded from the Nikon Download Center at the URL below.

<https://downloadcenter.nikonimglib.com/>

For Your Safety

To prevent damage to property or injury to yourself or to others, read "For Your Safety" in its entirety before using this product.

Keep these safety instructions where all those who use this product will read them.

WARNING: Failure to observe the precautions marked with this icon could result in death or severe injury.

CAUTION: Failure to observe the precautions marked with this icon could result in injury or property damage.

WARNING

• Do not disassemble or modify this product.

• Do not touch internal parts that become exposed as a result of a fall or other accident.

Failure to observe these precautions could result in electric shock or other injury.

• Should you notice any abnormalities such as the product producing smoke, heat, or unusual odors, immediately disconnect the camera power source.

Continued operation could result in fire, burns or other injury.

• Keep dry.

Failure to observe these precautions could result in fire or electric shock.

• Do not use this product in the presence of flammable dust or gas such as propane, gasoline or aerosols.

Failure to observe this precaution could result in explosion or fire.

• Do not directly view the sun or other bright light source through the lens.

Failure to observe this precaution could result in visual impairment.

• Keep this product out of reach of children.

Failure to observe this precaution could result in injury or product malfunction. In addition, note that small parts constitute a choking hazard. Should a child swallow any part of this product, seek immediate medical attention.

• Do not handle with bare hands in locations exposed to extremely high or low temperatures.

Failure to observe this precaution could result in burns or frostbite.

CAUTION

• Do not leave the lens pointed at the sun or other strong light sources.

Light focused by the lens could cause fire or damage to product's internal parts. When shooting backlit subjects, keep the sun well out of the frame. Sunlight focused into the camera when the sun is close to the frame could cause fire.

• Do not leave the product where it will be exposed to extremely high temperatures, for an extended period such as in an enclosed automobile or in direct sunlight.

Failure to observe this precaution could result in fire or product malfunction.

• Do not transport cameras or lenses with tripods or similar accessories attached.

Failure to observe this precaution could result in injury or product malfunction.

Notices for Customers in Europe

This symbol indicates that electrical and electronic equipment is to be collected separately.

The following applies only to users in European countries:

• This product is designated for separate collection at an appropriate collection point. Do not dispose of as household waste.

Separate collection and recycling helps conserve natural resources and prevent negative consequences for human health and the environment that might result from incorrect disposal.

For more information, contact the retailer or the local authorities in charge of waste management.

Using the Lens

Parts of the Lens: Names and Functions (Figure 1)

Refer to the diagram on the left edge of this sheet.

① Lens hood mounting mark Use when attaching the lens hood. See E

② Focus ring Use for manual focus.

When focusing using autofocus, you can adjust focus manually by rotating the ring while the shutter-release button is pressed halfway; after focusing, press the shutter-release button the rest of the way down to shoot.

③ Zoom ring Rotate to zoom in or out.

④ Focal length scale Determine the approximate focal length when zooming the lens in or out.

⑤ Focal length mark

⑥ Lens info panel View focus distance, depth of field, and other information. See C

⑦ Control ring Rotate to adjust a setting such as [Aperture] or [Exposure compensation] assigned using the camera. For more information, see the description of [Custom control assignment], [Custom controls], or [Custom controls (shooting)] in the camera manual.

⑧ Display button Save settings or choose the information shown in the lens info panel.

⑨ L-Fn button Press to perform a function assigned using the camera. For more information, see the description of [Custom control assignment], [Custom controls], or [Custom controls (shooting)] in the camera manual.

⑩ Focus-mode switch Choose a focus mode.

• A: Autofocus

• M: Manual focus

Note that regardless of the setting chosen, focus must be adjusted manually when manual focus mode is selected using camera controls.

⑪ Lens mounting mark Use when mounting the lens on the camera. See A

⑫ Rubber lens-mount gasket —

⑬ CPU contacts Used to transfer data to and from the camera.

⑭ Filter slot For use with trimmable third-party filter sheets. See F

⑮ Lens cap (rear cap) Use to protect the rear lens element.

⑯ LC-Z1424 and LC-K104 lens caps (front caps) Use to protect the front lens element. The LC-K104 is for use with the HB-97 lens hood. See B

Using Filters

Filters can be attached to the lens at the front and rear. Nikon 112 mm screw-on filters

filters can be used at the front of the lens and third-party trimmable filter sheets at the rear. These can be attached as follows:

Nikon Screw-on Filters

Nikon screw-on filters can be attached to the HB-97 lens hood (Figure 5).

• Use only one Nikon screw-on filter at a time.

Nikon screw-on filters

Nikon screw-on filters can be attached to the HB-97 lens hood (Figure 5).

• Use only one Nikon screw-on filter at a time.

Using Trimmed Filters

For use with trimmable third-party filter sheets. See F

• Use only one trimmable third-party filter sheet at a time.

Filter Sheets

The rear lens opening has a filter slot. Use trimmable filter sheets to the size shown in Figure 6 and insert them in the filter slot (Figure 7).

These appear at the periphery of pictures taken with third-party screw-on filters.

Filter slot/Filtereinröhre

For the Verwendung von zuschneidbaren Filterfolien von Zubehöranbietern. Siehe F

• The size shown in Figure 6 and insert them in the filter slot (Figure 7).

• The same procedure can be used when the lens hood is reversed.

When the Lens Is Attached

Before using this product, please read these instructions carefully. You will also need to consult the camera manual.

This lens is intended exclusively for use with mirrorless cameras featuring a Nikon Z mount.

Update the camera firmware to the latest version. With earlier versions, the camera may fail to detect the lens correctly and some features may not be available. The latest version of the camera firmware can be downloaded from the Nikon Download Center at the URL below.

<https://downloadcenter.nikonimglib.com/>

For Your Safety

To prevent damage to property or injury to yourself or to others, read "For Your Safety" in its entirety before using this product.

Keep these safety instructions where all those who use this product will read them.

WARNING: Failure to observe the precautions marked with this icon could result in death or severe injury.

CAUTION: Failure to observe the precautions marked with this icon could result in injury or property damage.

Attachment and Removing the Lens Hood

Attaching the Lens Hood (Figure 2)

• Align the lens hood mounting mark (①) with the lens hood alignment mark (②) and rotate the lens hood in the direction shown until ③ the mounting mark (③) is aligned with the lens hood lock mark (④). Gripping the front too tightly makes the lens hood difficult to attach or remove. When rotating the lens hood, hold it near the lens hood alignment mark (③) on its base.

• Keeping the lens hood release button pressed (⑤), rotate the lens hood in the direction shown (⑥) and remove it from the lens (⑦).

• The same procedure can be used when the lens hood is reversed.

Using the Lens on Cameras with a Built-in Flash

Lenses with built-in flash do not affect the built-in flash when the lens is attached.

For the latest information on using the lens with cameras that have built-in AF-assist illuminators, refer to the camera manual.

For the latest information on using the lens with cameras that have built-in AF-assist illuminators, refer to the camera manual.

<https://downloadcenter.nikonimglib.com/>

Cameras with AF-Assist Illuminators

The lens or lens hood may block the light from the camera's AF-assist illuminator.

