

A20 X

SETUP GUIDE



 
logitech




ENGLISH	3	ČESKÁ VERZE	63
DEUTSCH	7	SLOVENČINA.....	67
FRANÇAIS.....	11	УКРАЇНСЬКА.....	71
ITALIANO.....	15	EESTI	75
ESPAÑOL.....	19	LATVISKI	79
PORTUGUÊS	23	LIETUVIŲ.....	83
NEDERLANDS.....	27	БЪЛГАРСКИ	87
SVENSKA.....	31	HRVATSKI	91
DANSK	35	SRPSKI	95
NORSK.....	39	SLOVENŠČINA	99
SUOMI	43	ROMÂNĂ.....	103
ΕΛΛΗΝΙΚΑ	47	TÜRKÇE	107
ΠΟ-ΡΥССΚИ	51	111	العربية
PO POLSKU	55	115	עברית
MAGYAR	59		

XBOX SERIES X|S


1

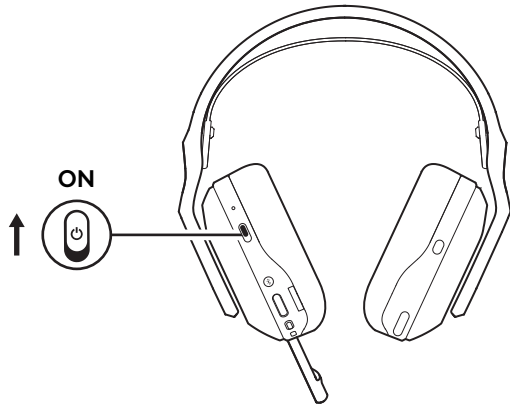


2

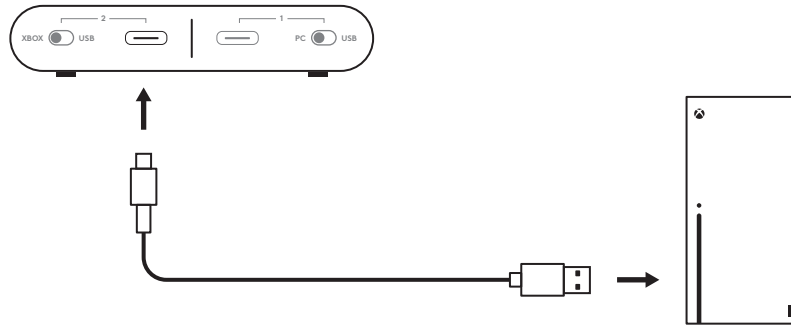 

3

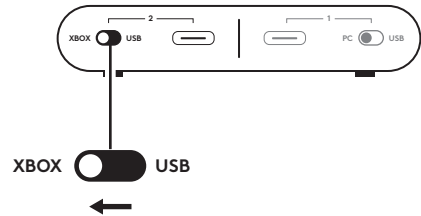 


4

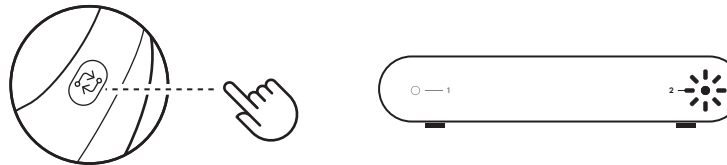 


PLAYSTATION / NINTENDO

 
1

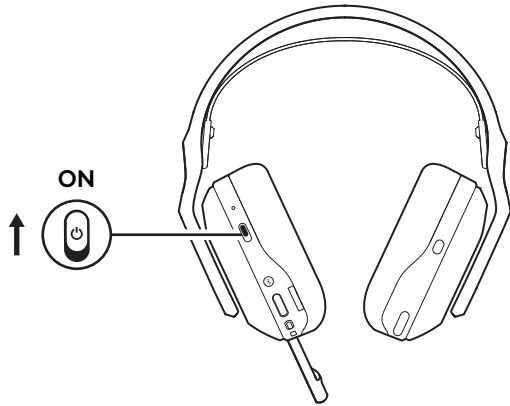


2

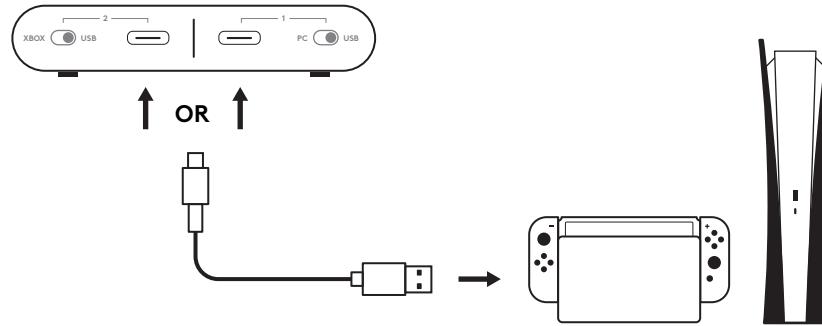 


3

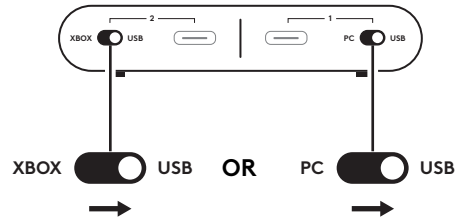 


4

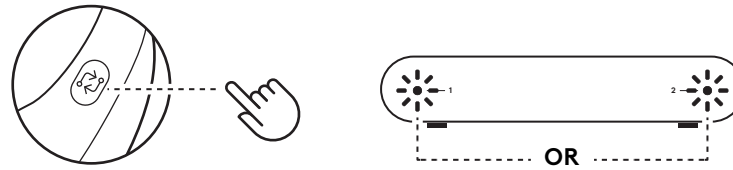 


1

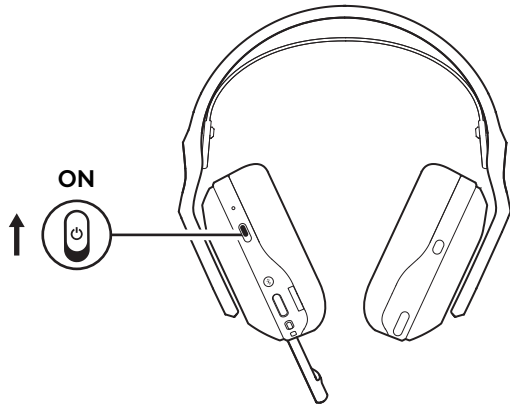 


2

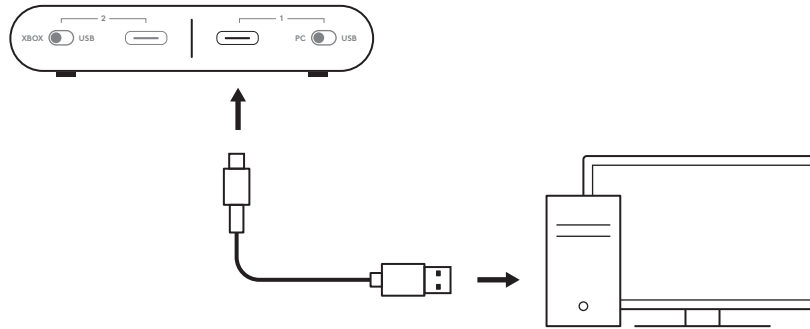 

3

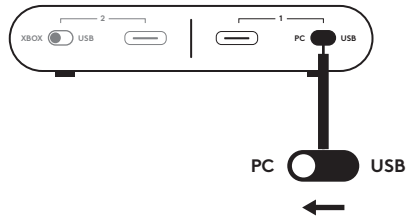 


4

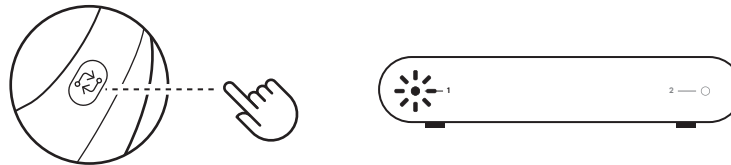 


Bluetooth®

 
1

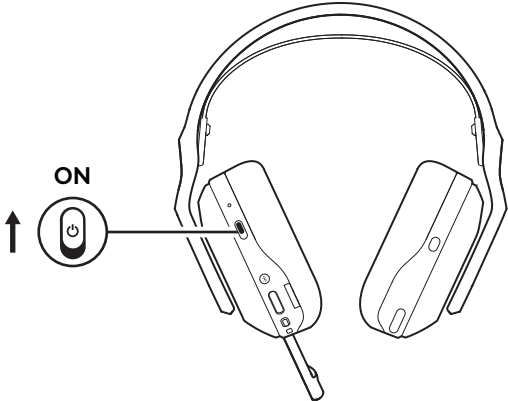

2

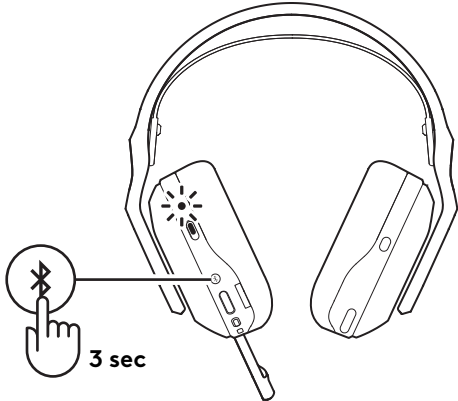 


3

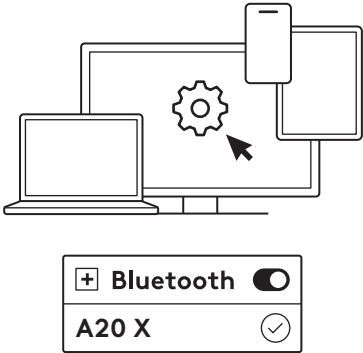 


USB

 1

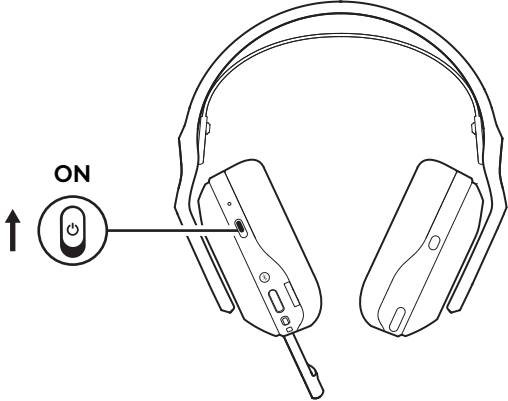


2

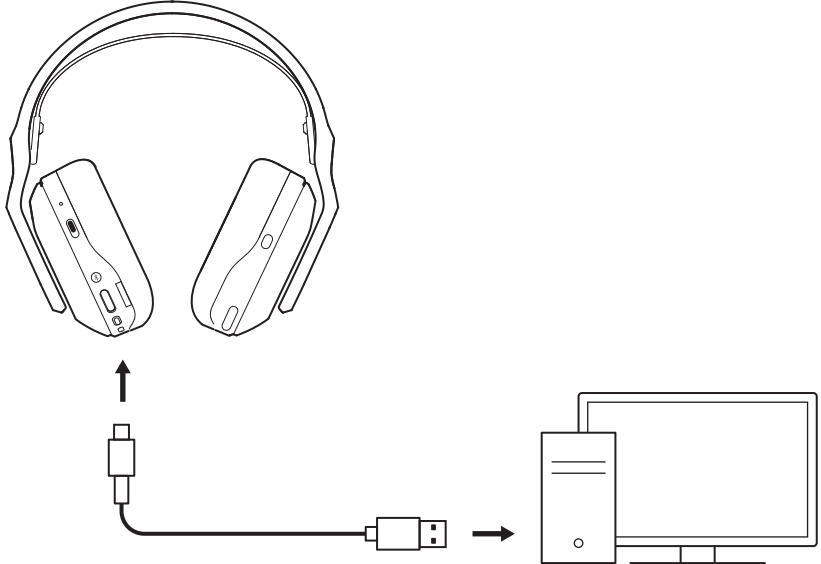 


XBOX SERIES X|S

 
1

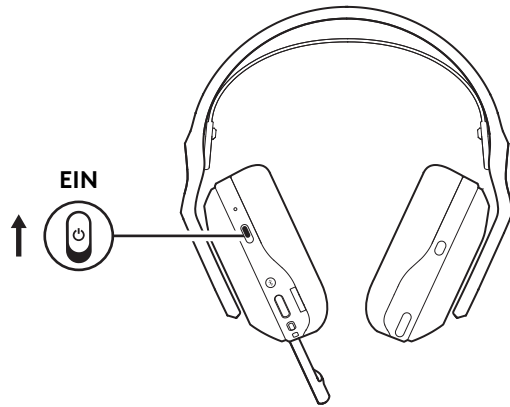


2

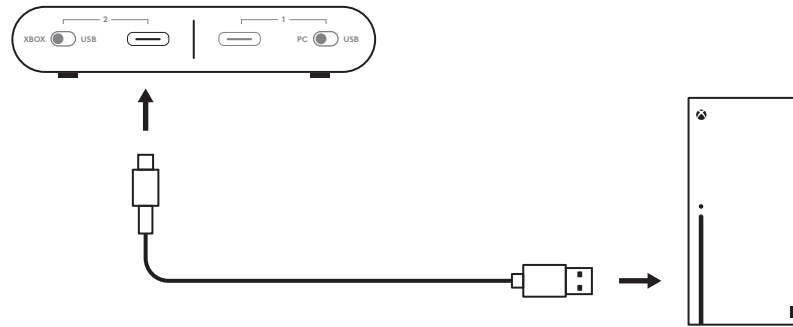 





3

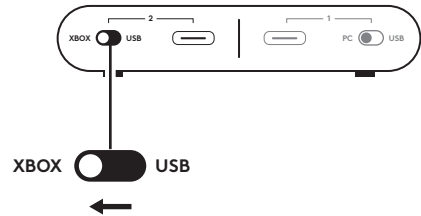 


4

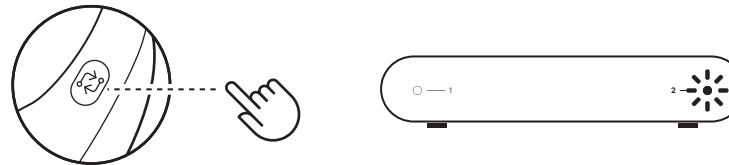 


PLAYSTATION / NINTENDO

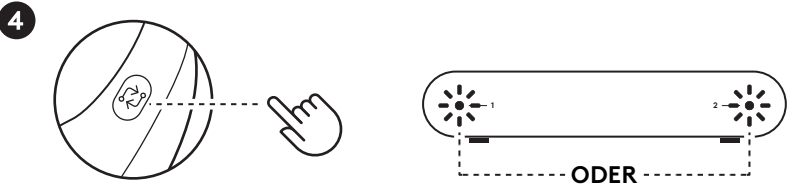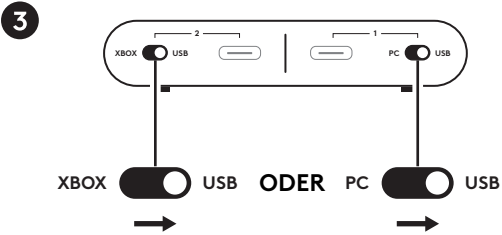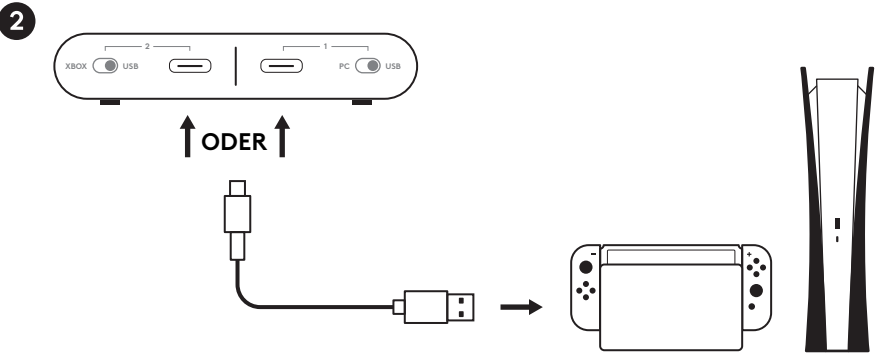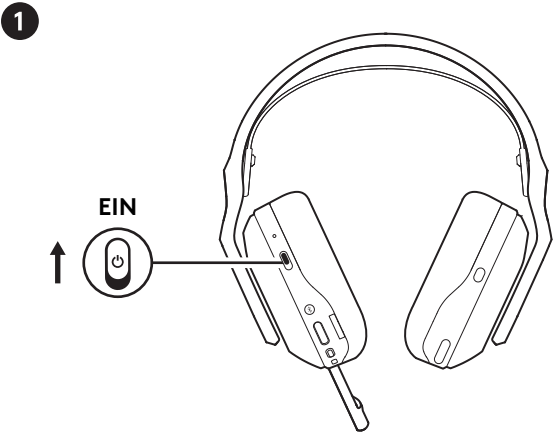    


1

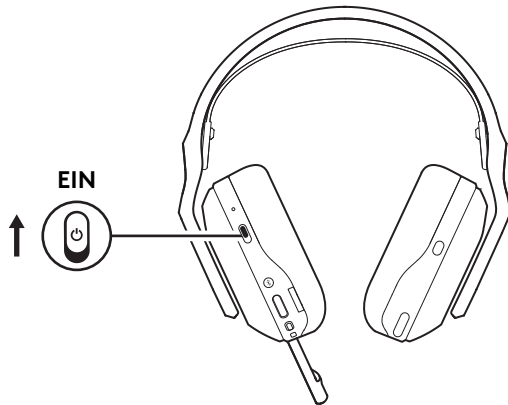 


2

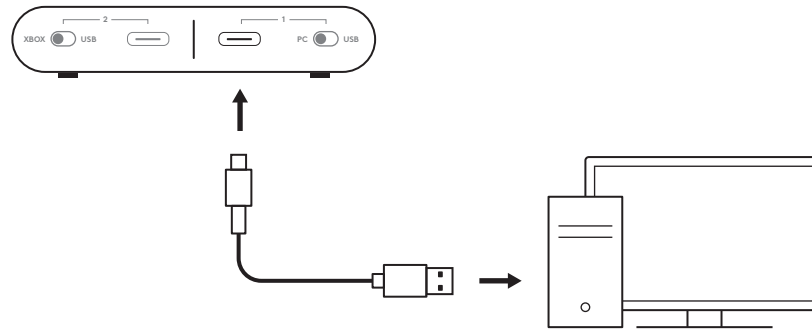 

3

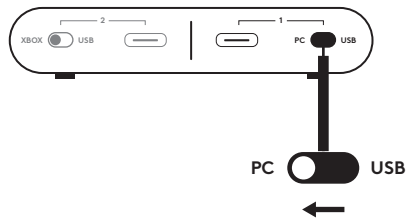 


4

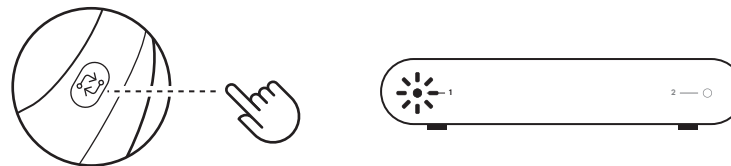 


Bluetooth®

 
1

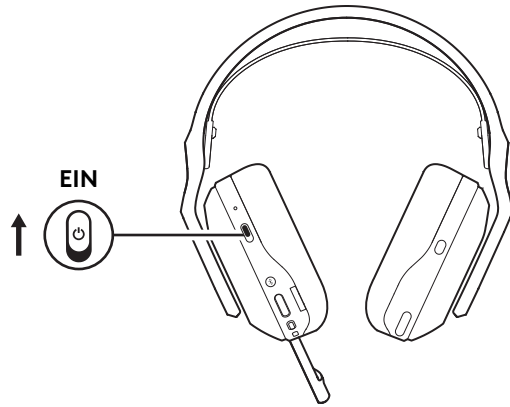

2

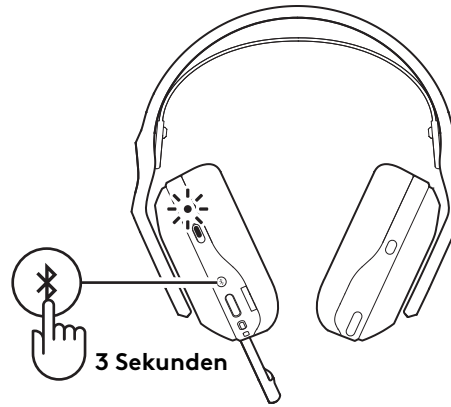 


3

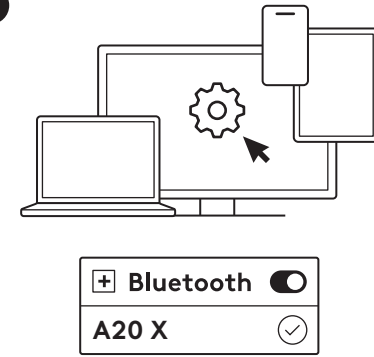 


USB

 1

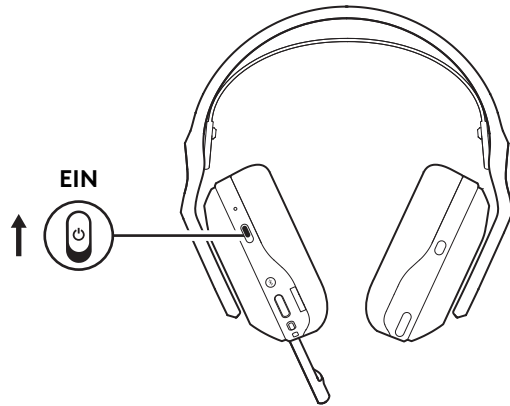


2

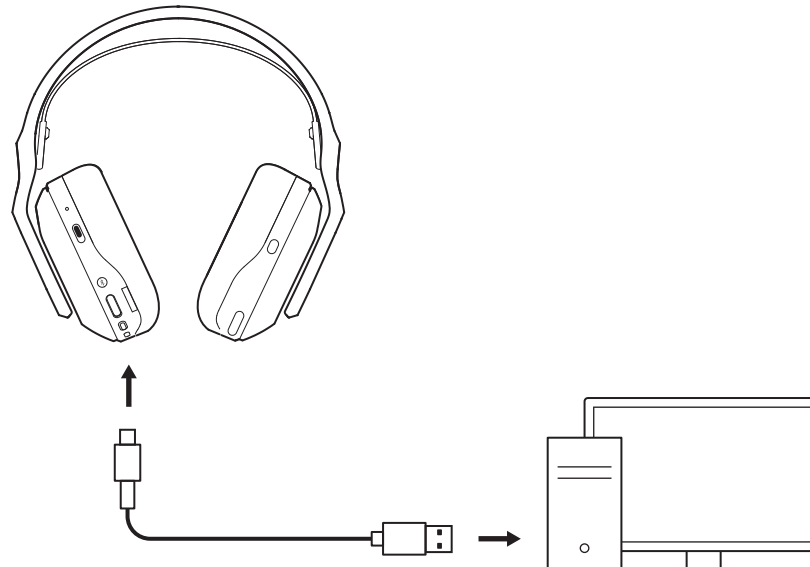 


XBOX SERIES X|S

 
1

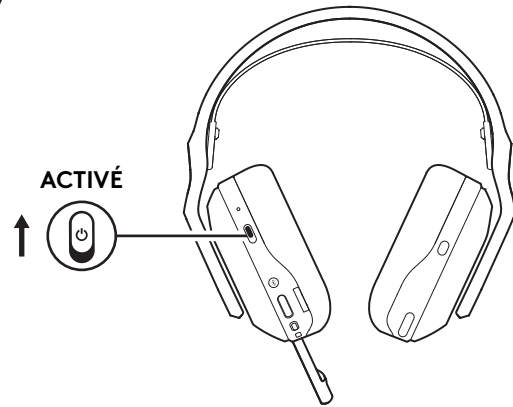


2

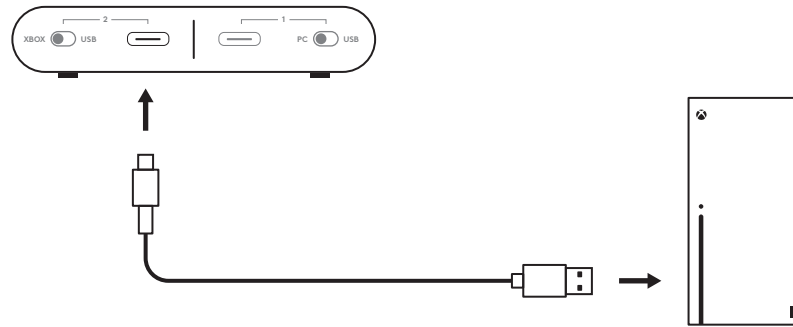 

3

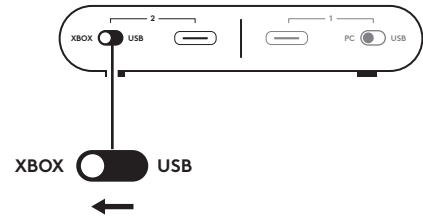 


4

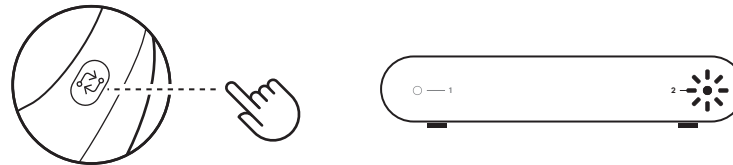 


PLAYSTATION / NINTENDO

 
1

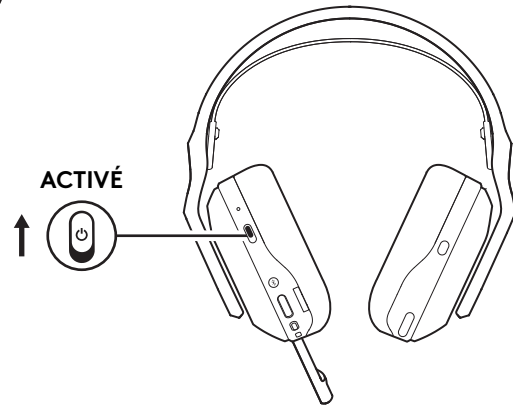


2

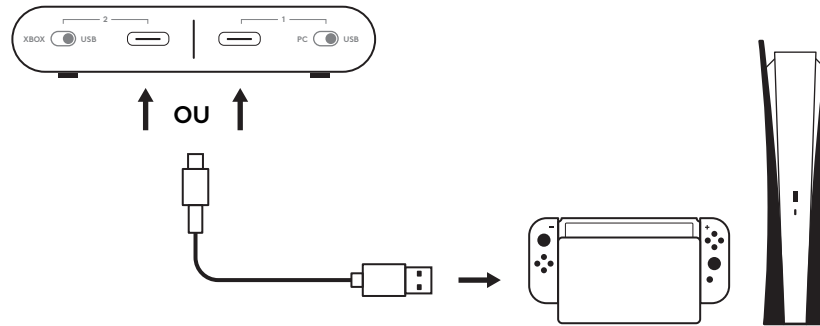 


3

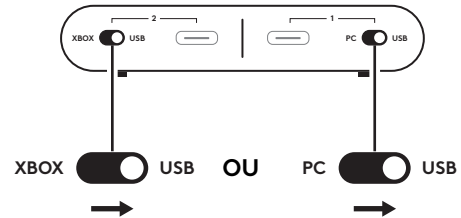 


4

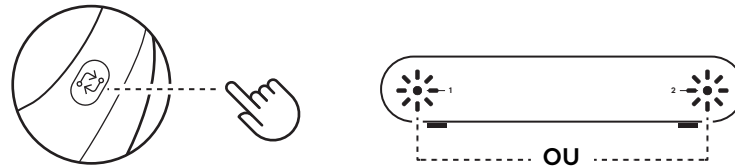 


1

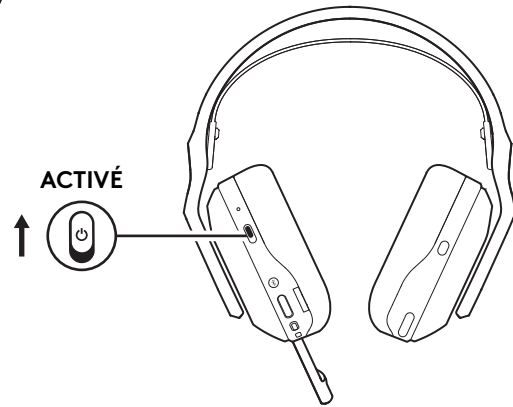 


2

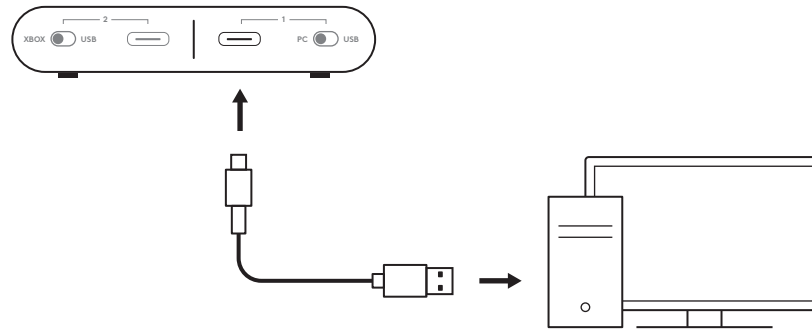 

3

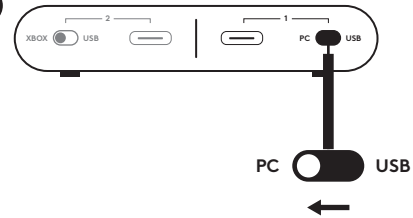 


4

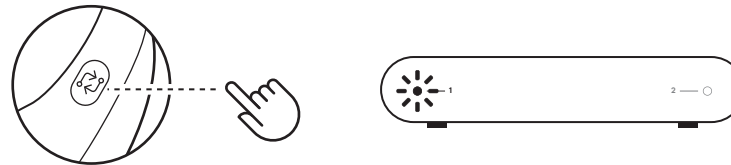 


Bluetooth®

 
1

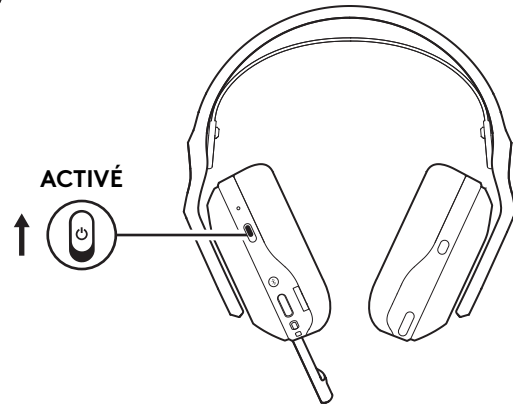

2

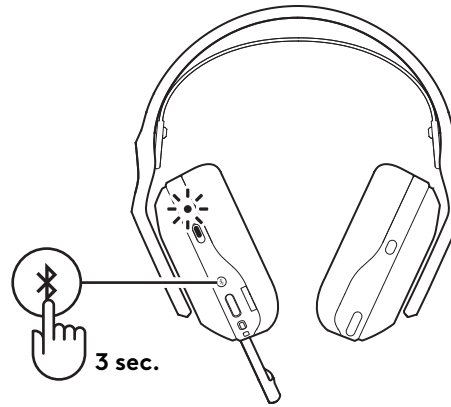 


3

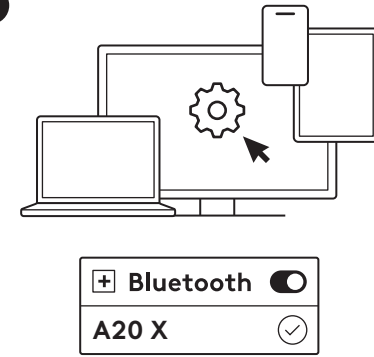 


USB

 1

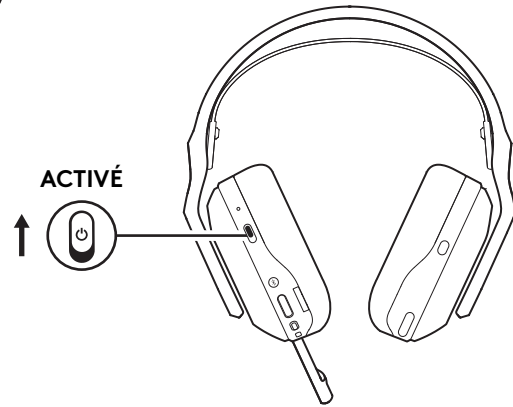


2

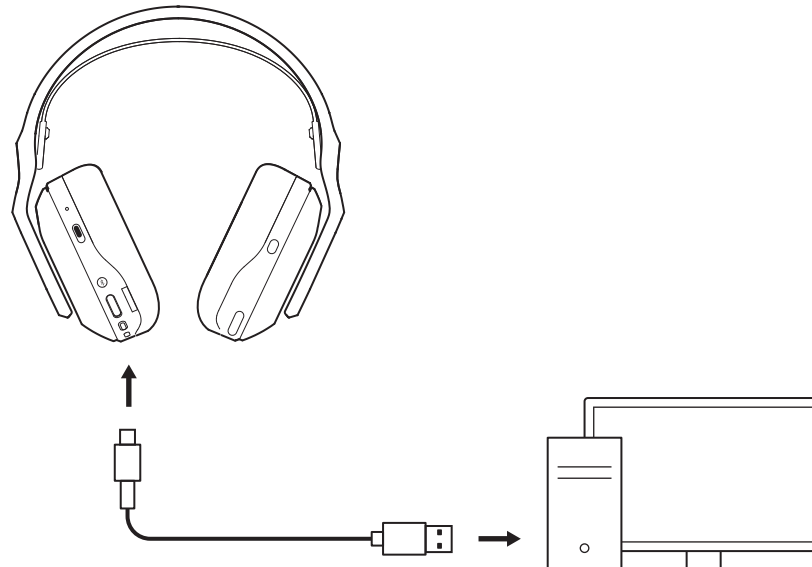 


XBOX SERIES X|S

 
1

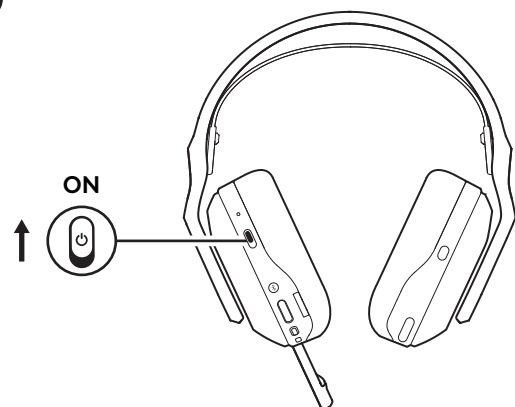


2

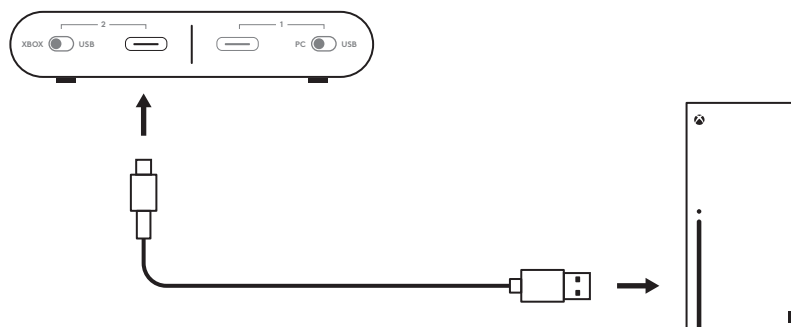 

3

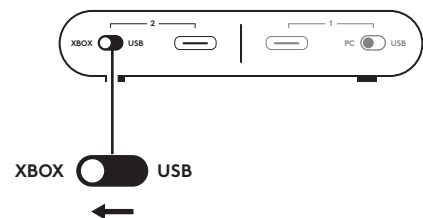 


4

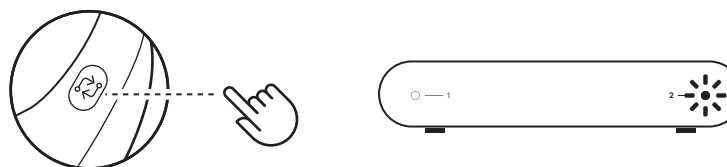 


PLAYSTATION / NINTENDO

 
1

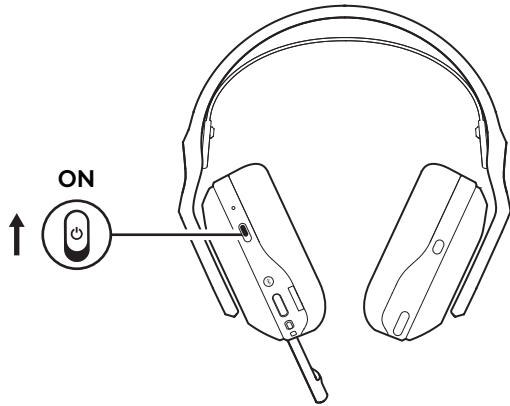


2

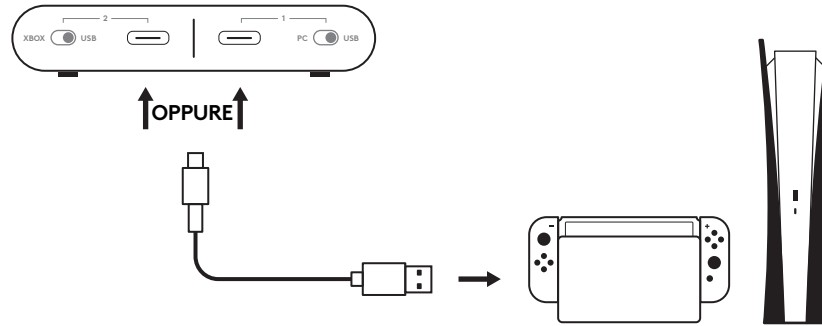 


3

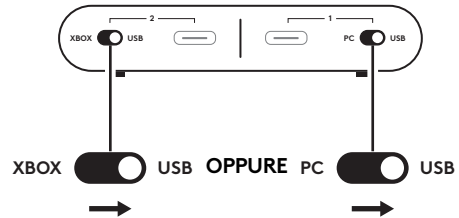 


4

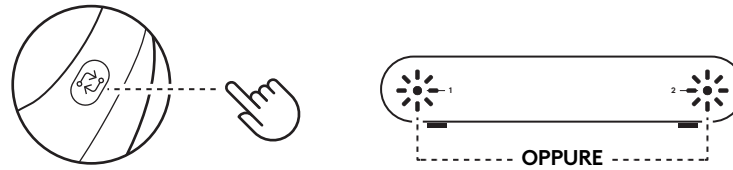 


1

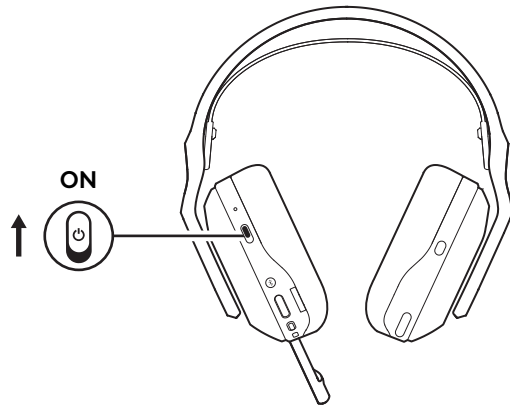 


2

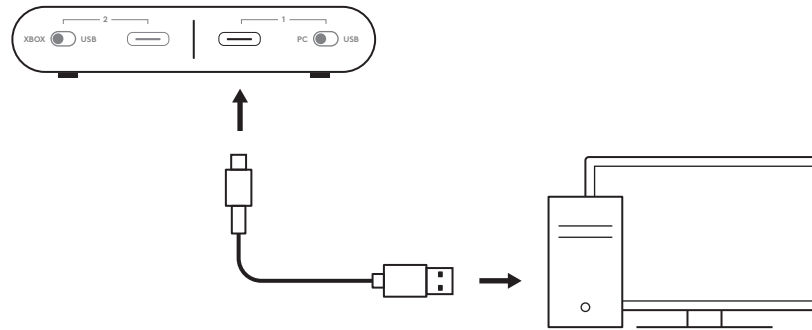 

3

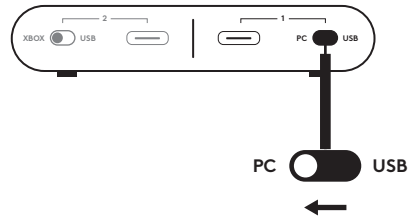 


4

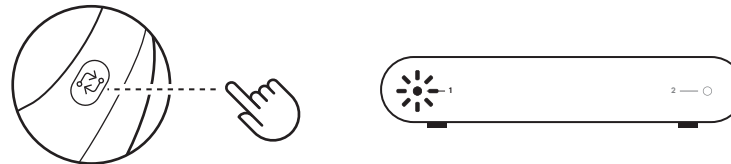 


Bluetooth®

 
1

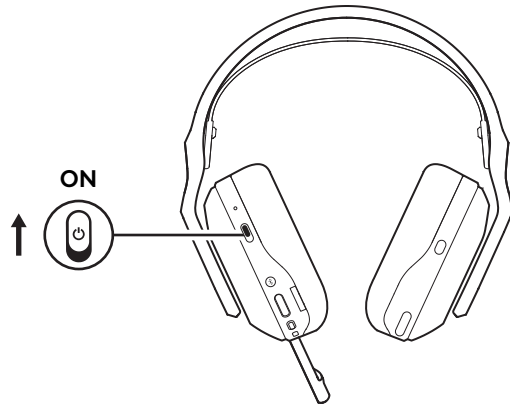

2

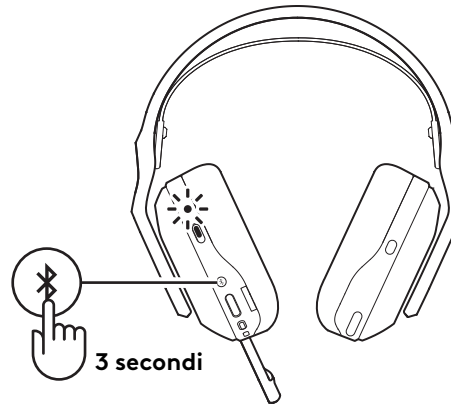 


3

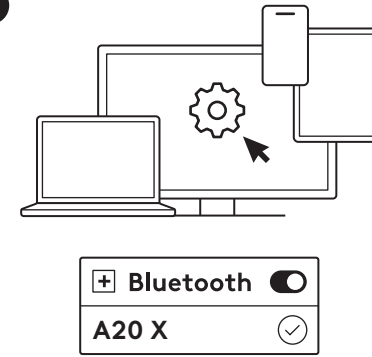 


USB

 1

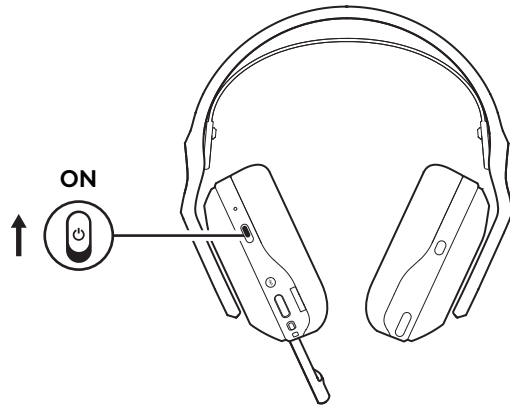

2

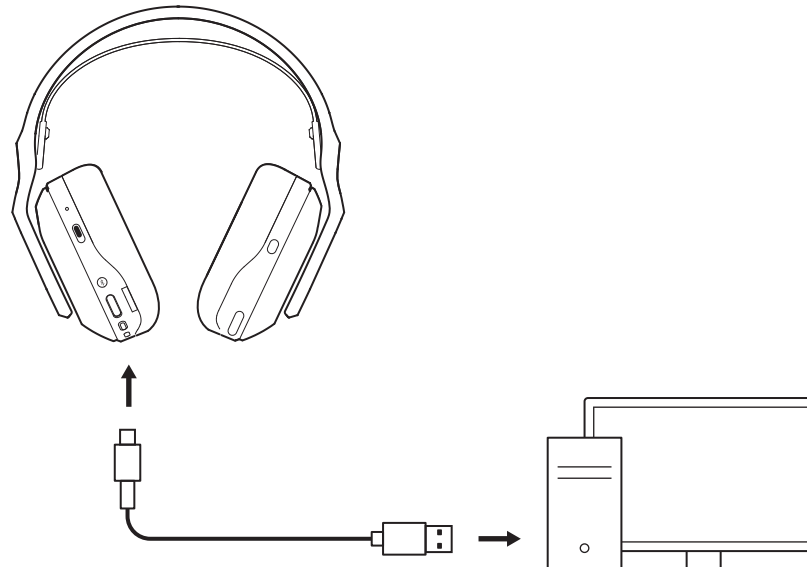 


XBOX SERIES X|S


1



 
2

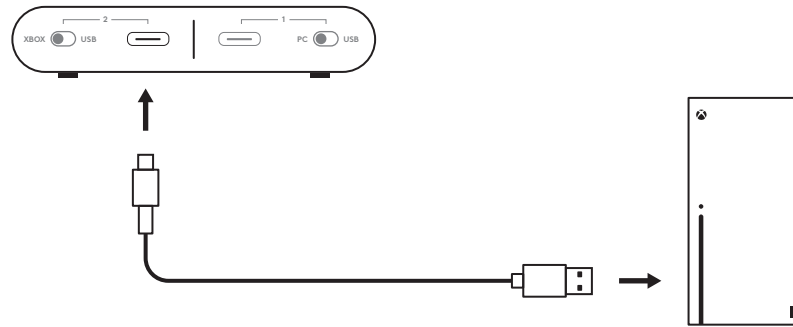

3

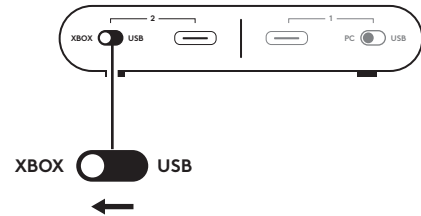 

4

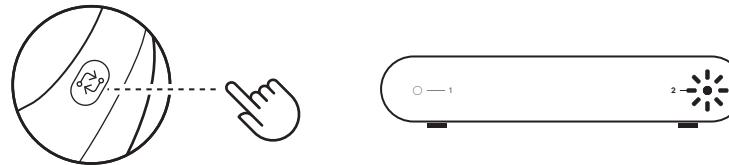 


PLAYSTATION / NINTENDO


1



 
2

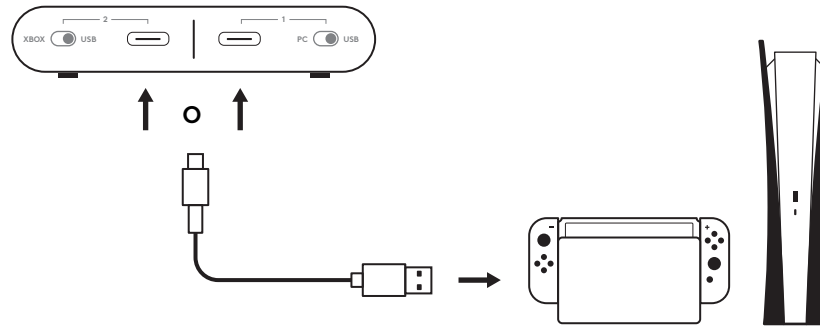

3

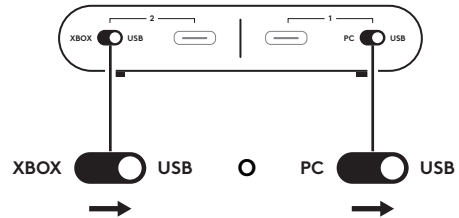 


4

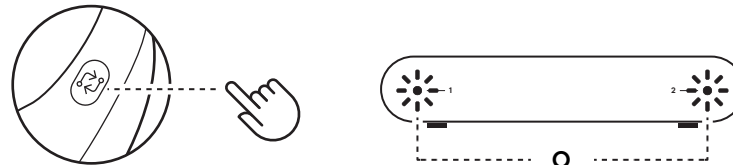 


1



 
2

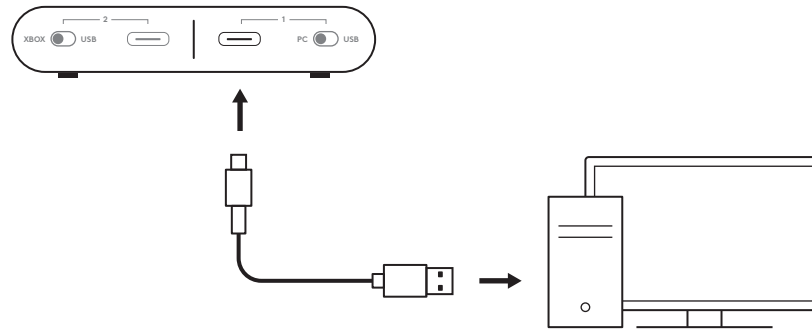

3

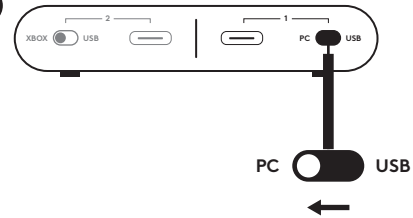 

4

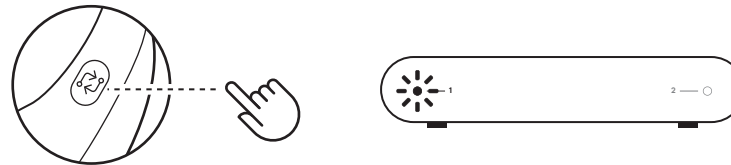 


Bluetooth®


1



 2

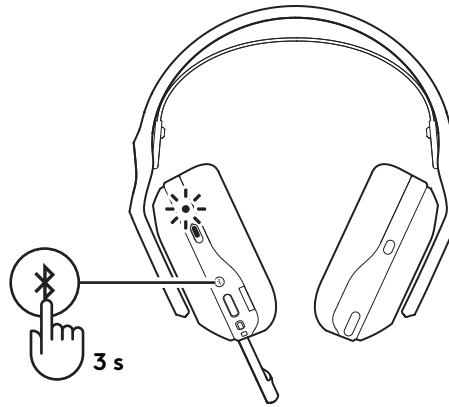

3

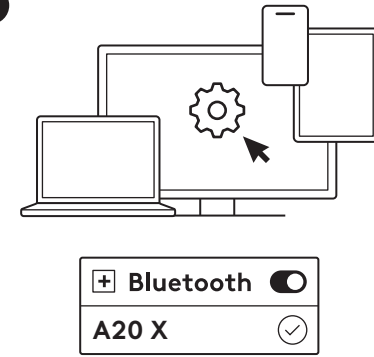 


USB

1




 2

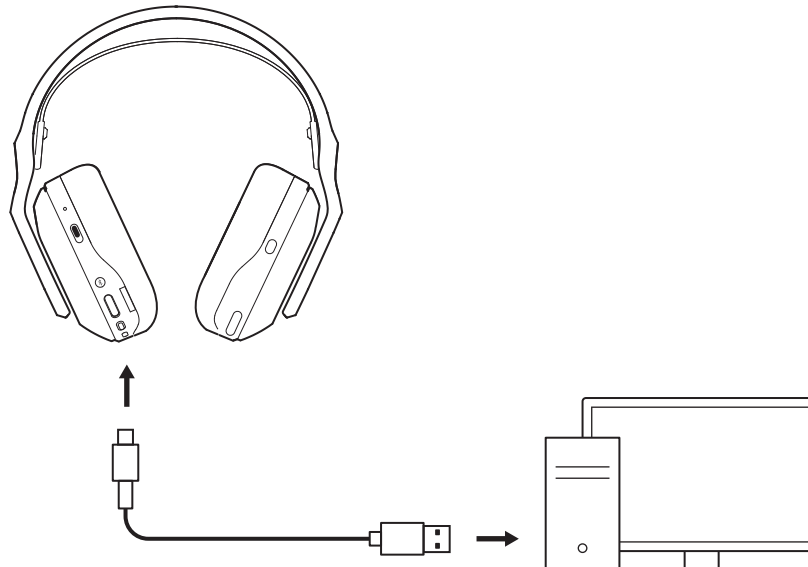


XBOX SERIES X|S

 
1

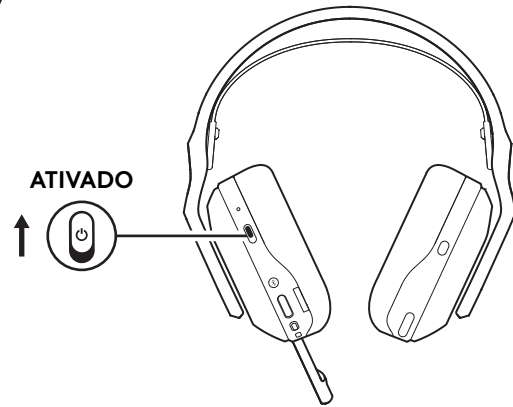


2

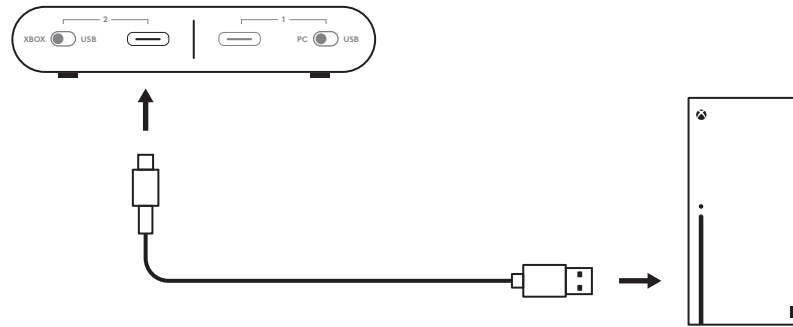 

3

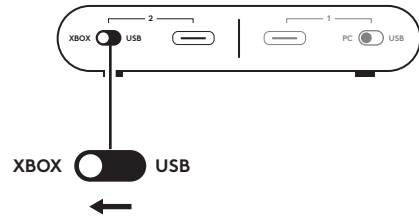 


4

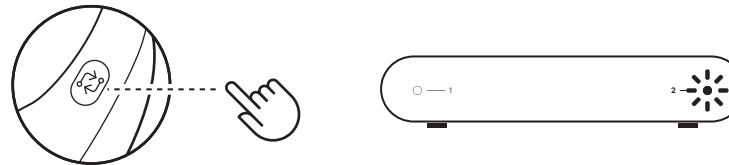 


PLAYSTATION / NINTENDO

 
1

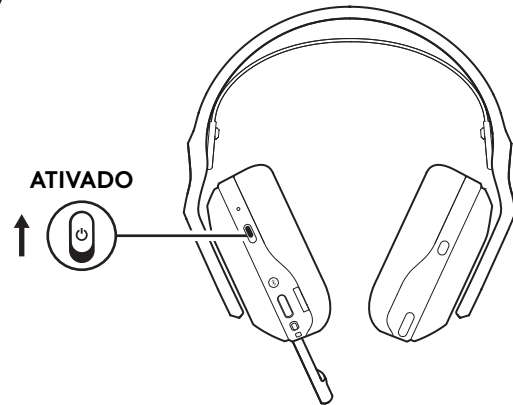


2

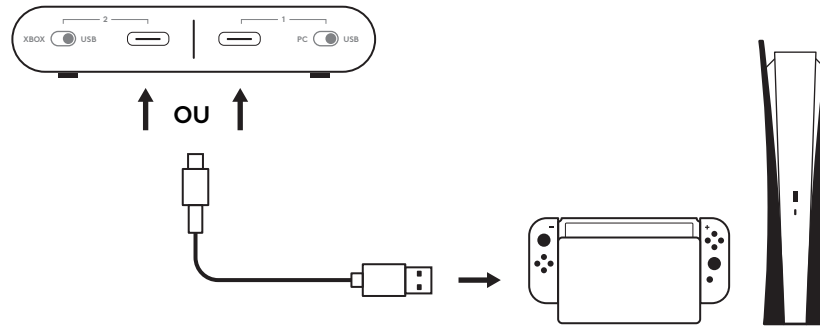 


3

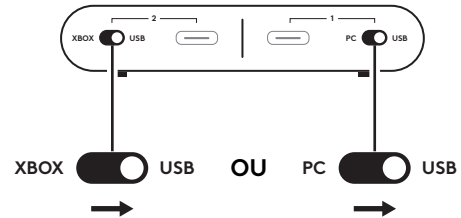 


4

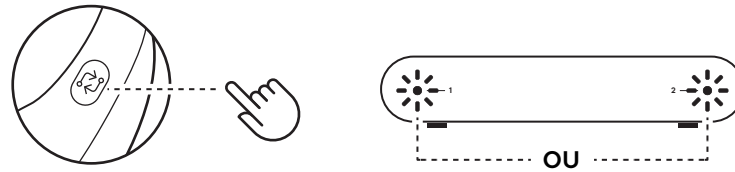 


1

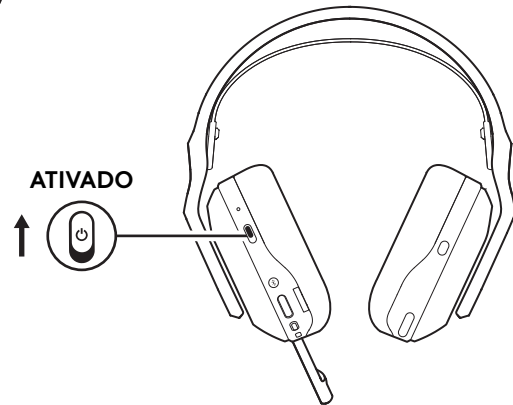 


2

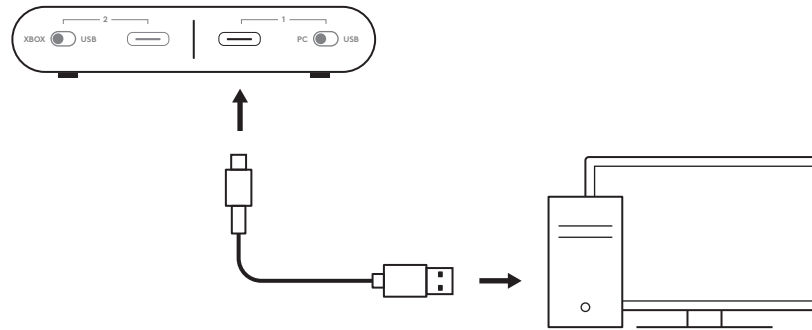 

3

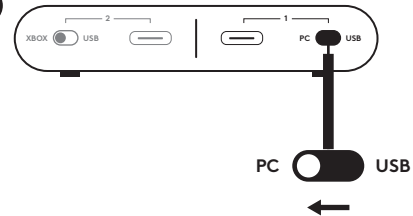 


4

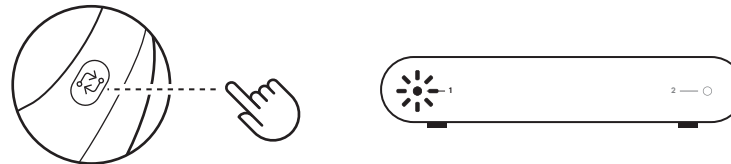 


Bluetooth®

 
1

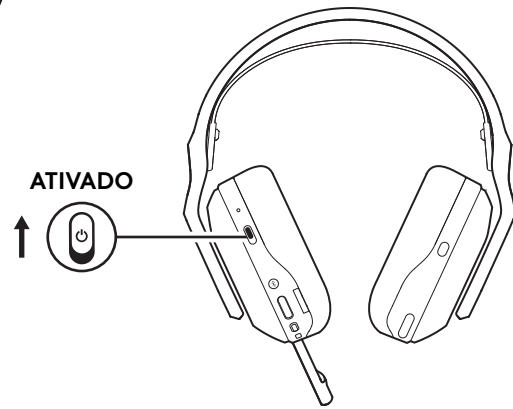

2

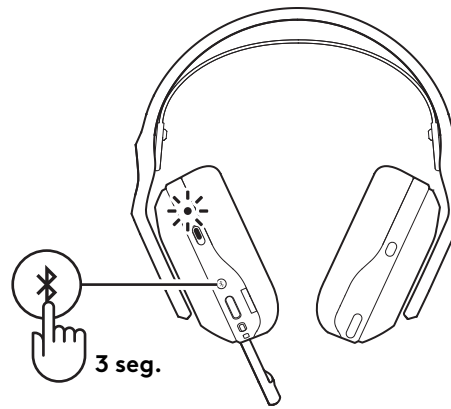 


3

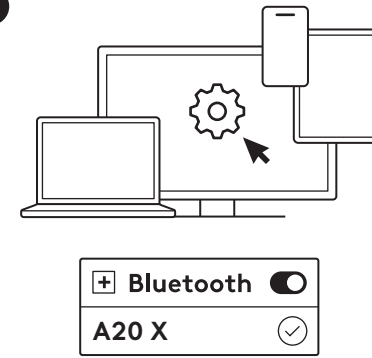 


USB

 1

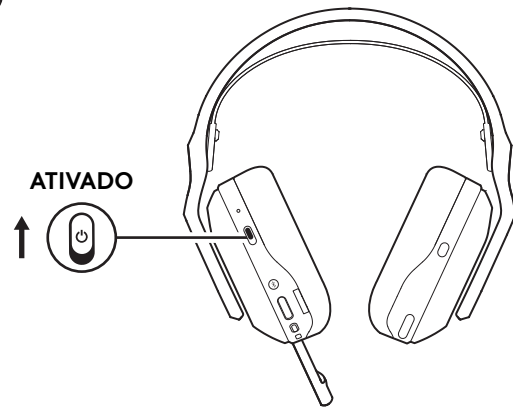


2

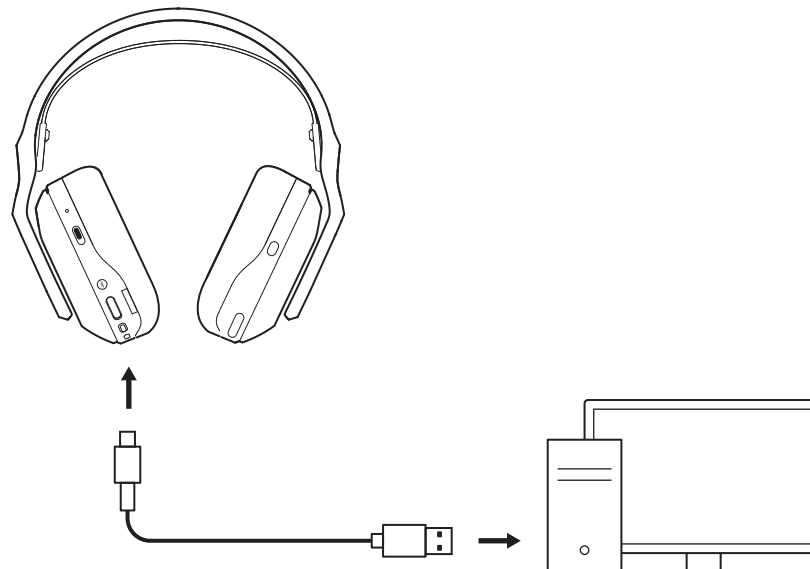 


XBOX SERIES X|S

 
1

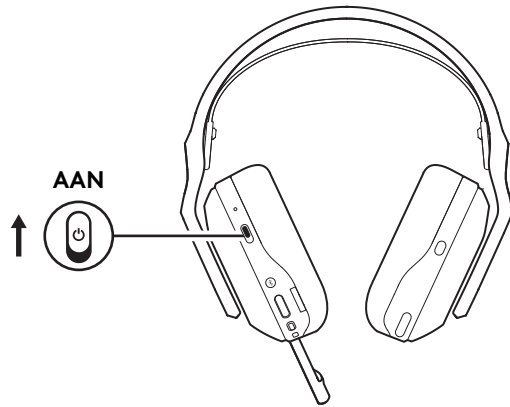


2

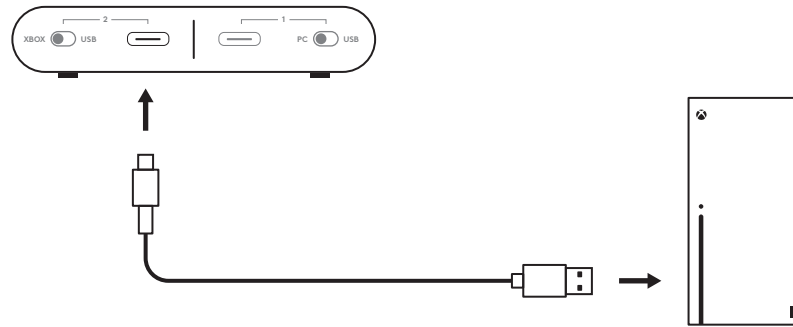 

3

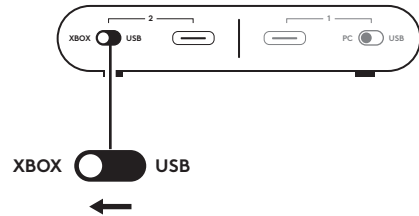 


4

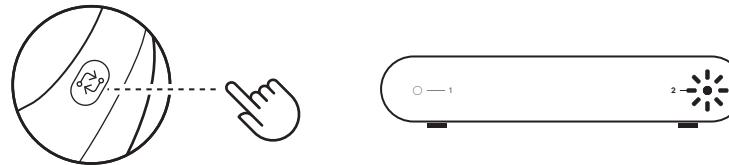 


PLAYSTATION / NINTENDO

 
1

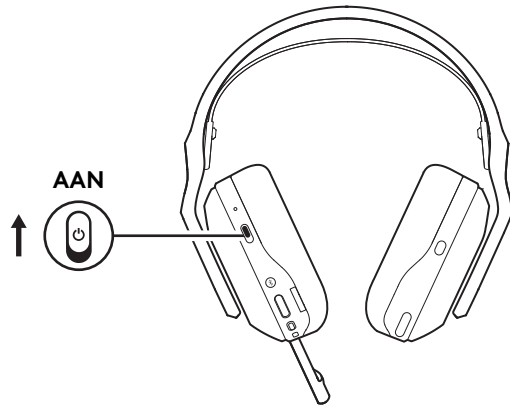


2

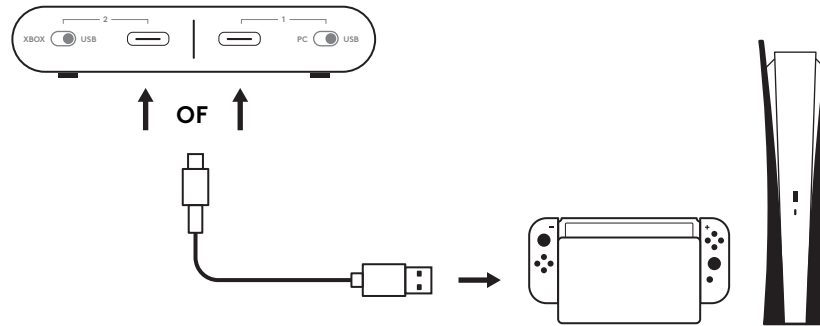 


3

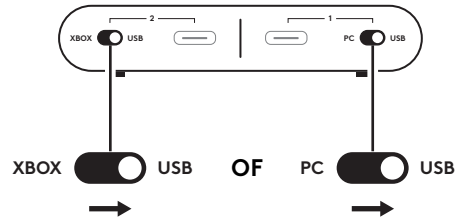 


4

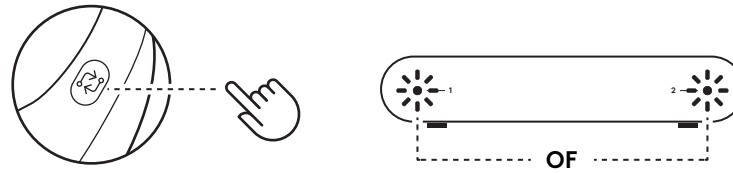 


1

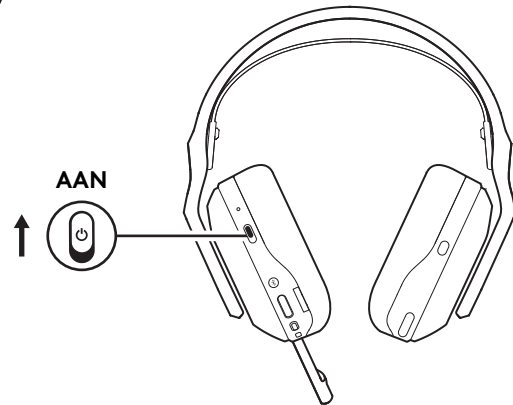 


2

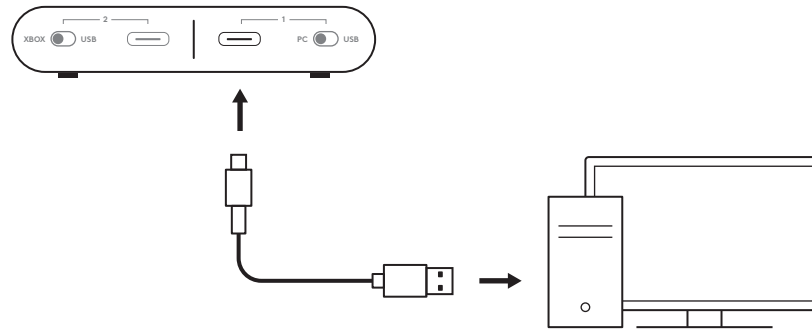 

3

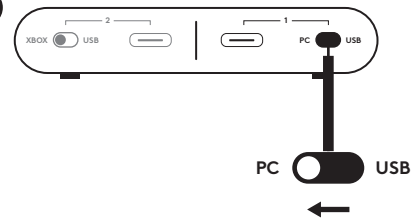 


4

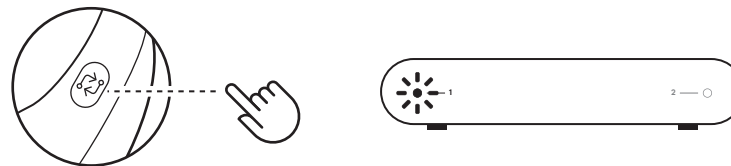 


Bluetooth®

 
1

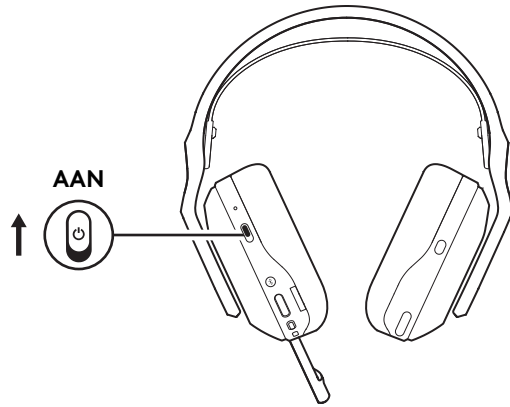

2

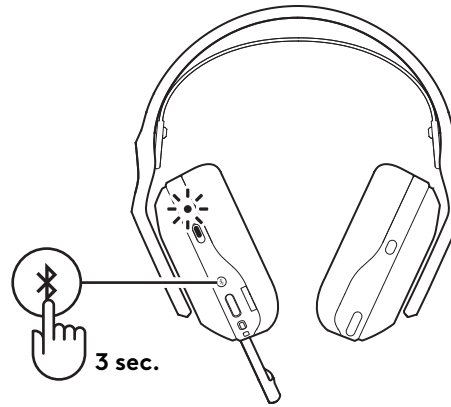 


3

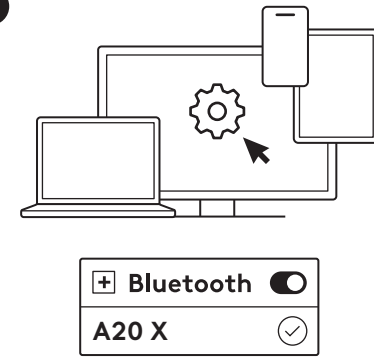 


USB

 1

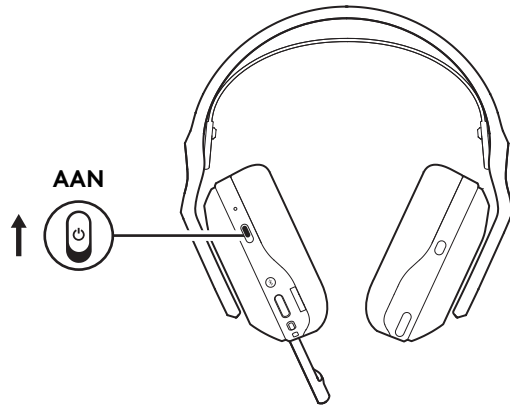


2

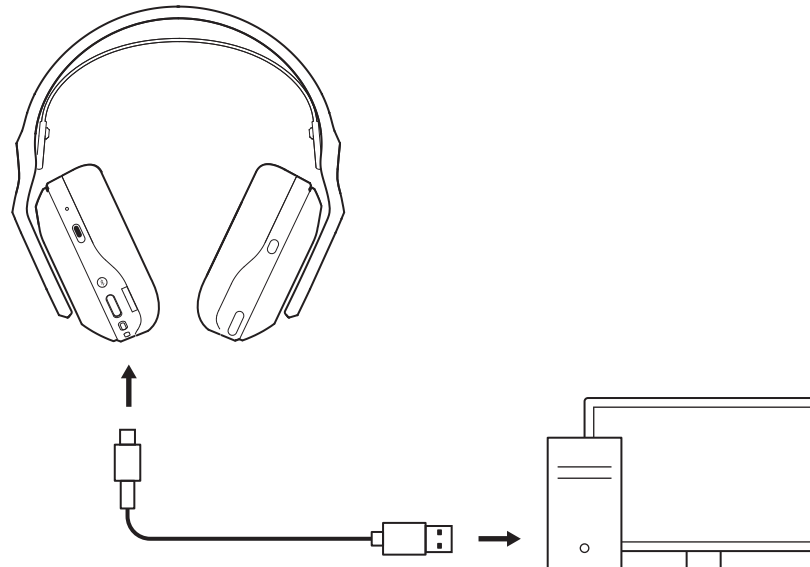 


XBOX SERIES X|S

 
1

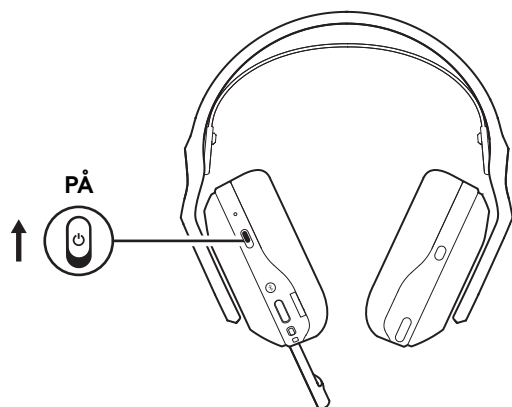


2

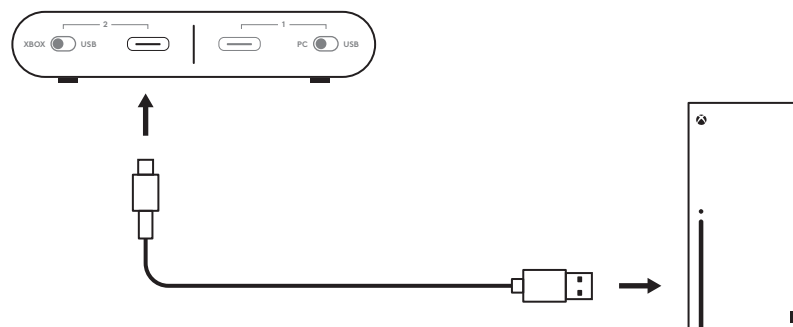 

3

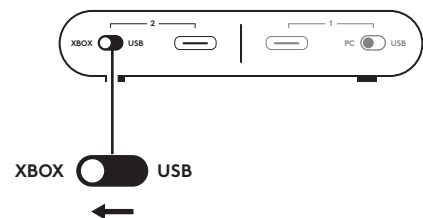 


4

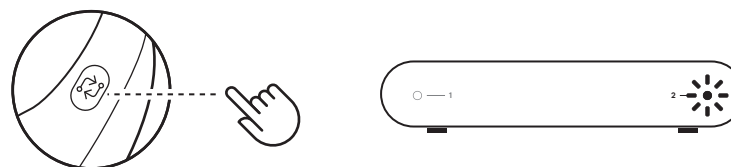 


PLAYSTATION/NINTENDO

 
1

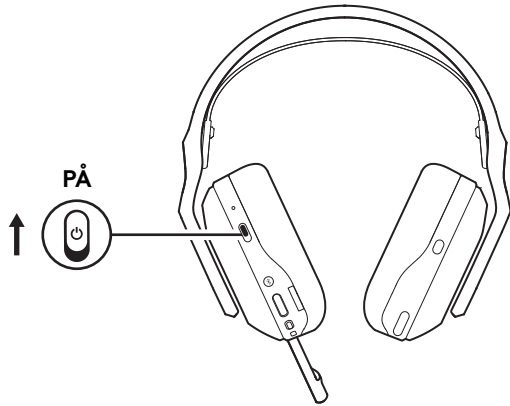


2

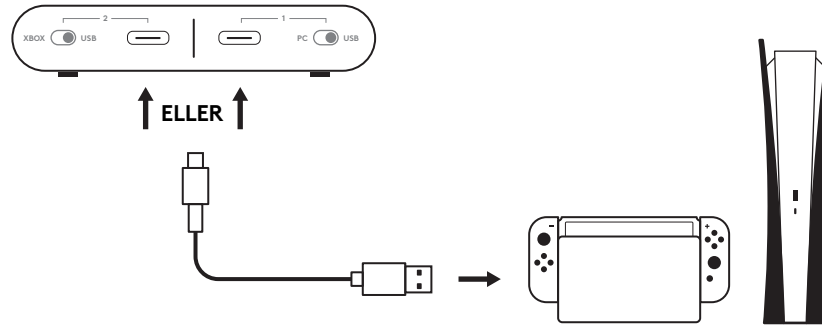 


3

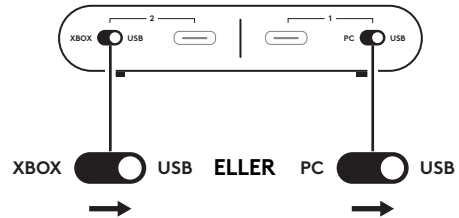 


4

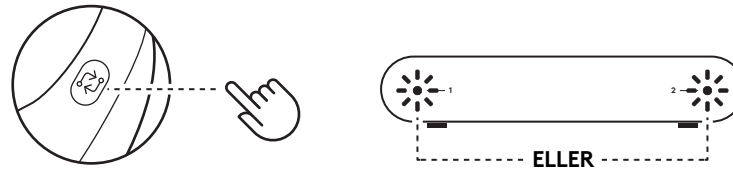 


1

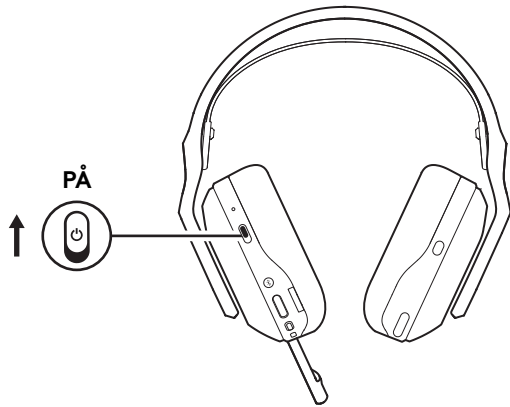 


2

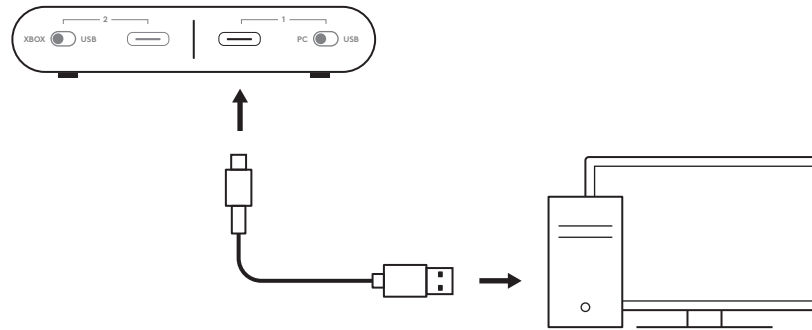 

3

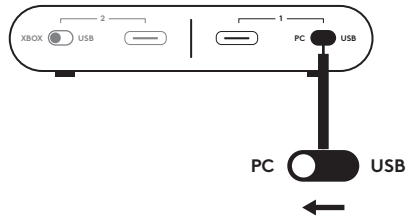 


4

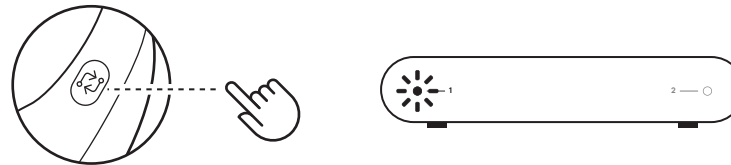 


Bluetooth®

 
1

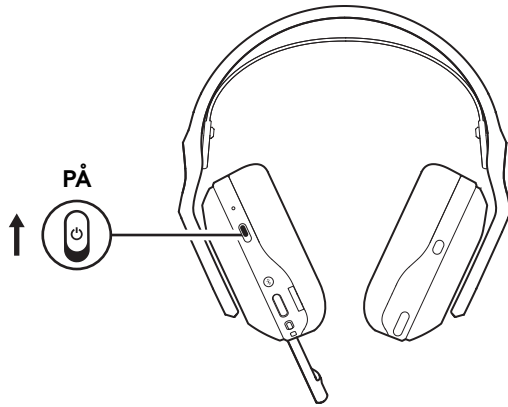

2

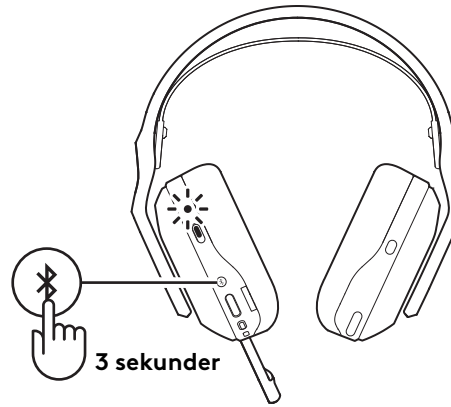 


3

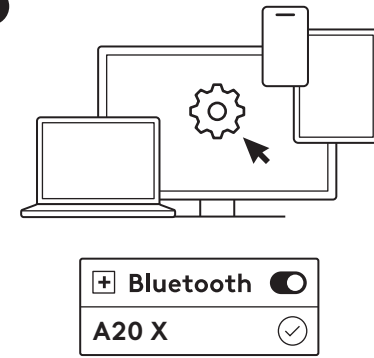 


USB

 1

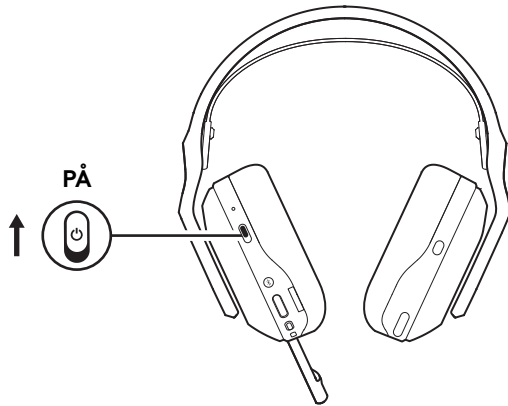


2

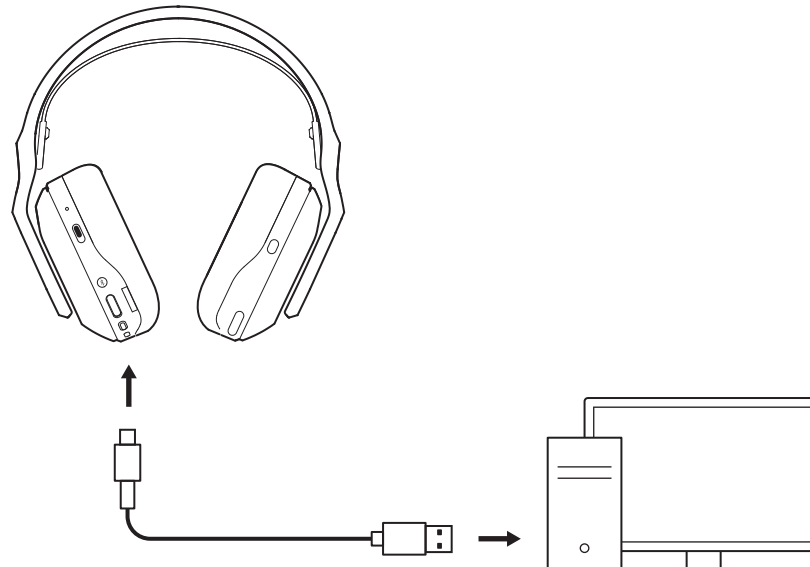 


XBOX SERIES X|S

 
1

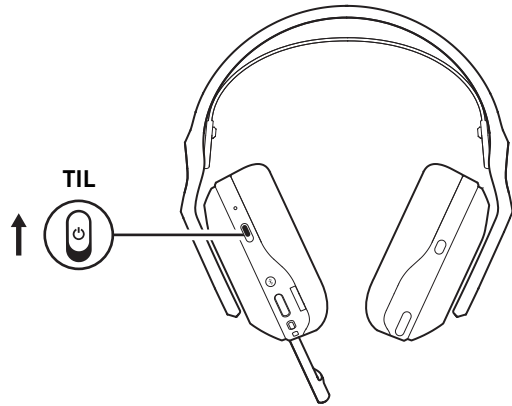


2

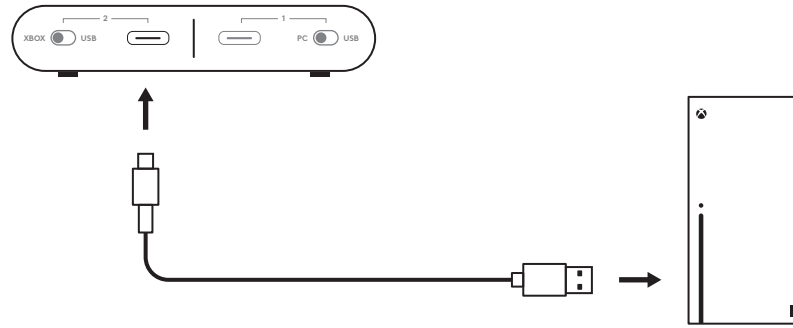 

3

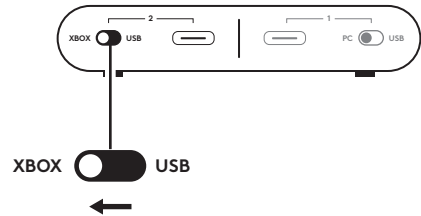 


4

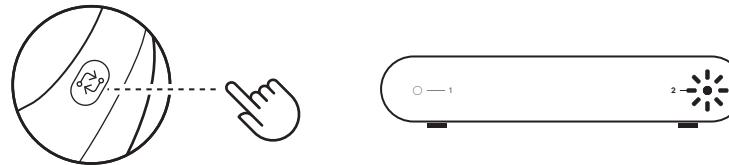 


PLAYSTATION/NINTENDO

 
1

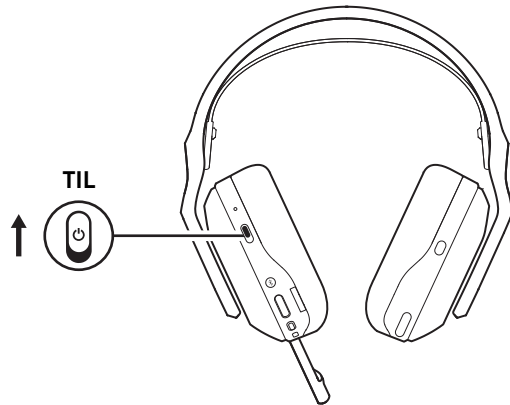


2

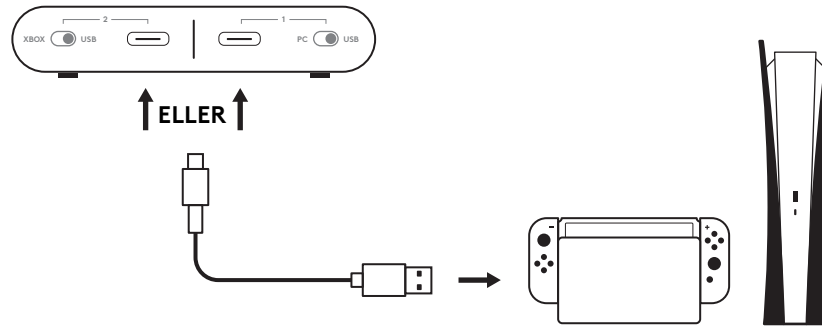 


3

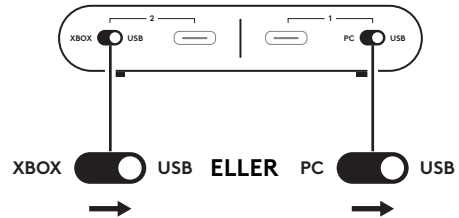 


4

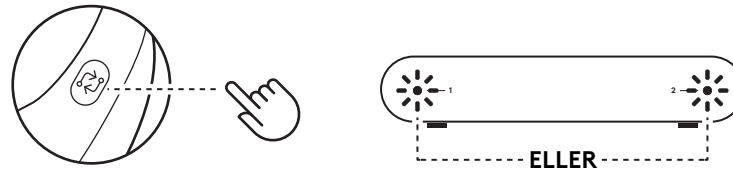 


1

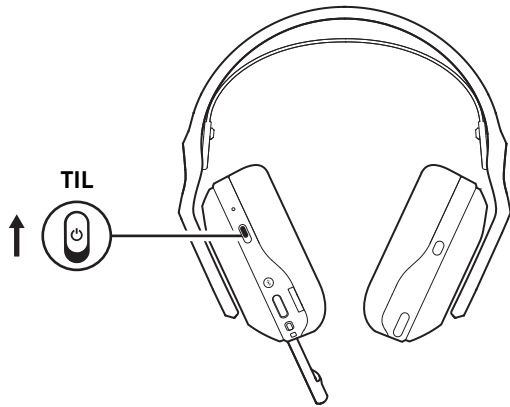 


2

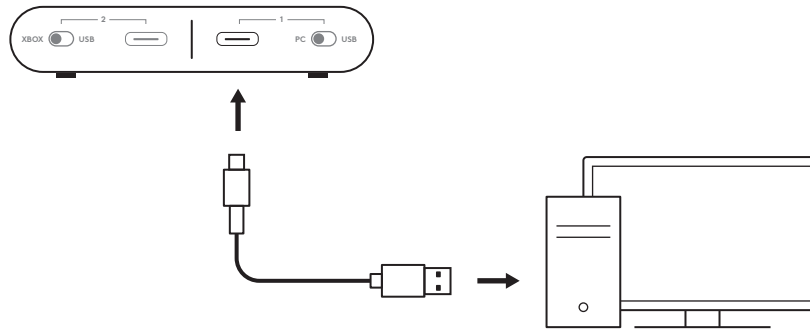 

3

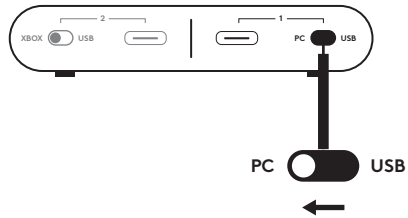 


4

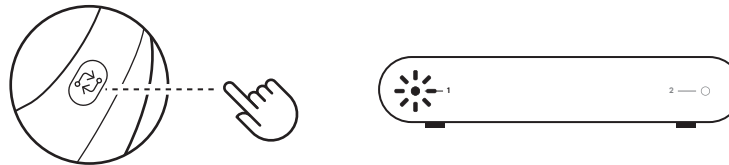 


Bluetooth®

 
1

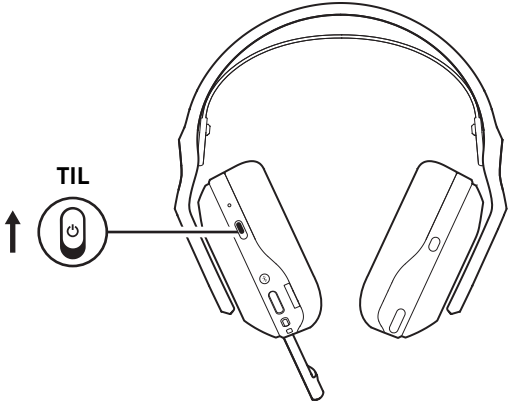

2

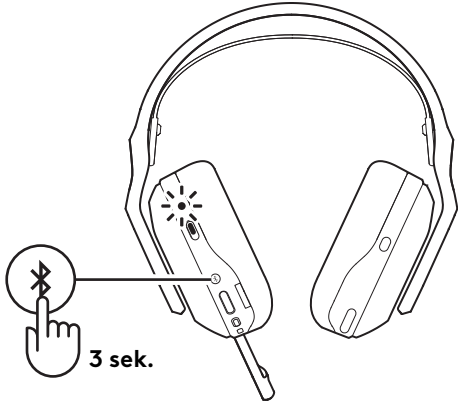 


3

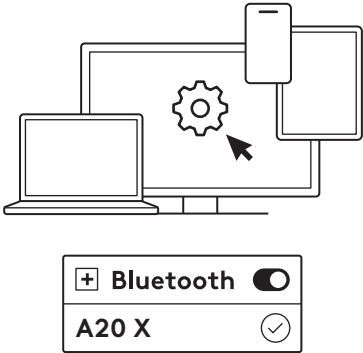 


USB

 1

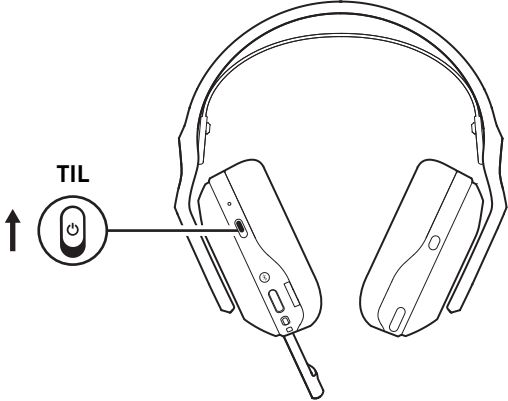


2

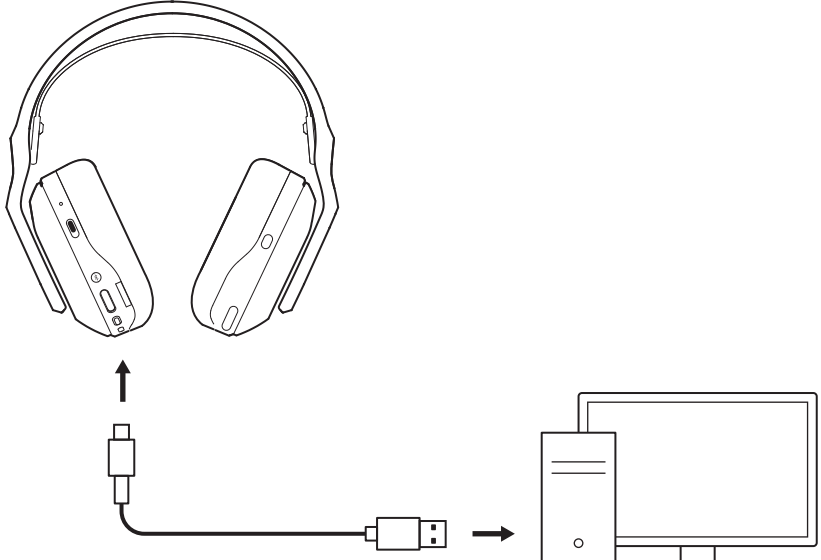 


XBOX SERIES X|S

 
1

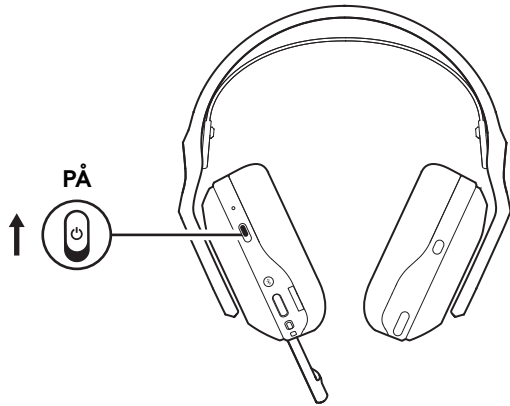


2

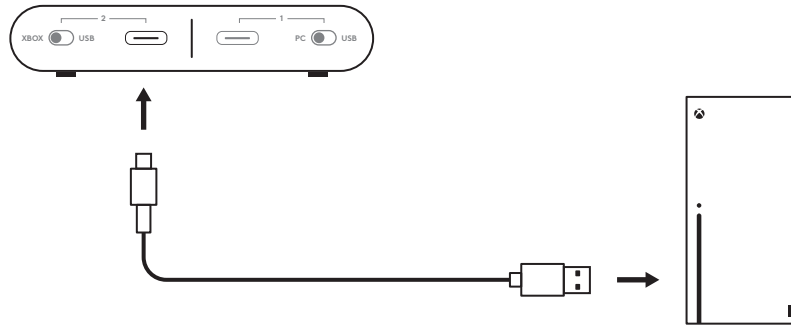 

3

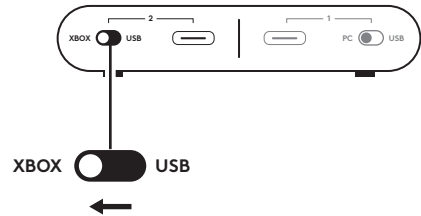 


4

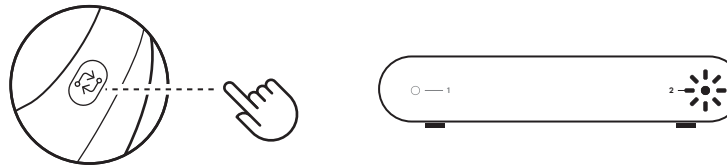 


PLAYSTATION/NINTENDO

 
1

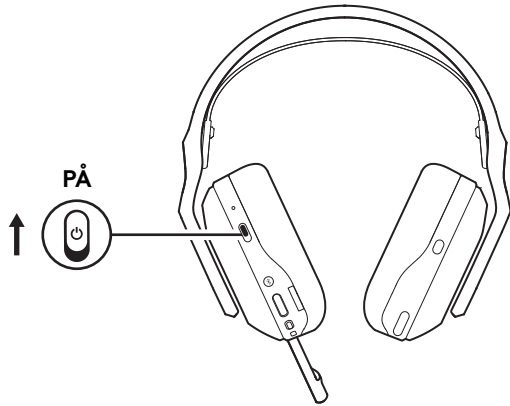


2

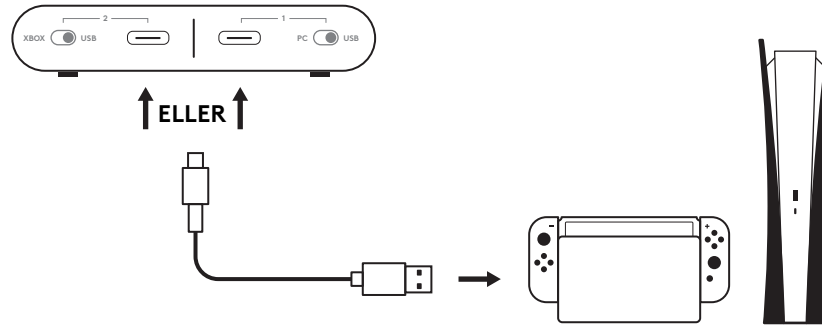 


3

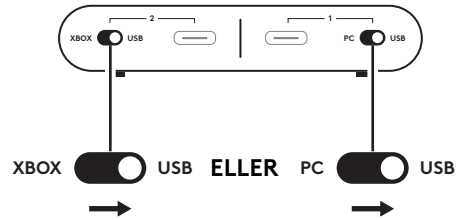 


4

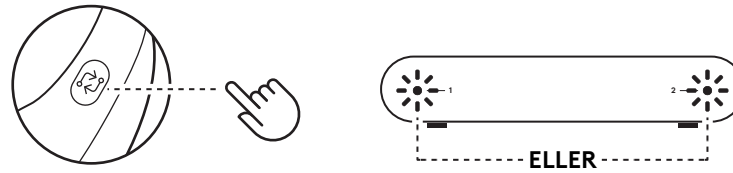 


1

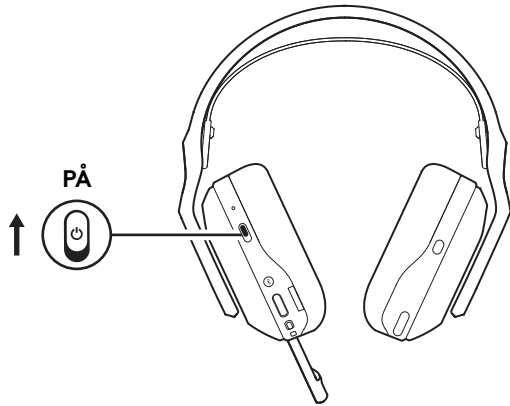 


2

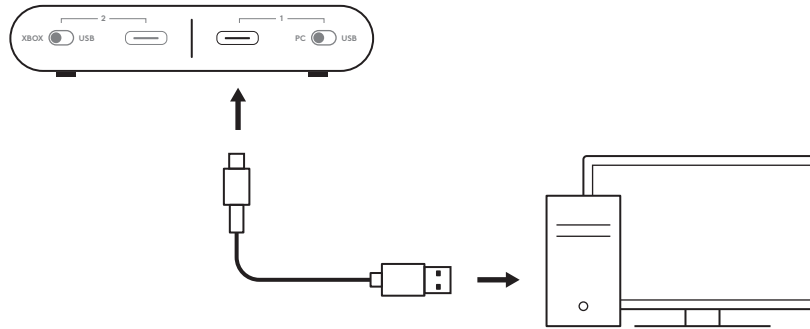 

3

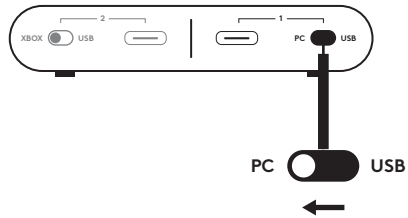 


4

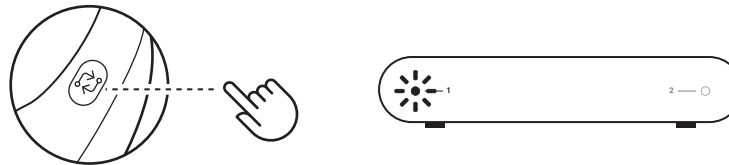 


Bluetooth®

 
1

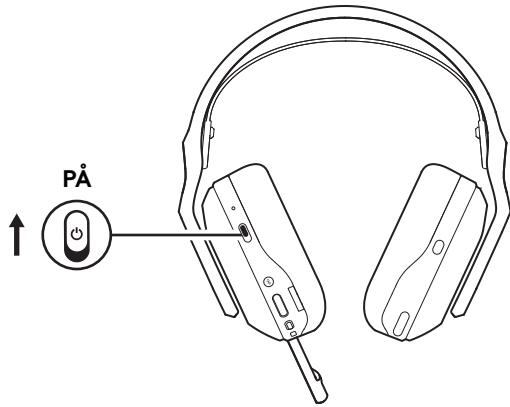

2

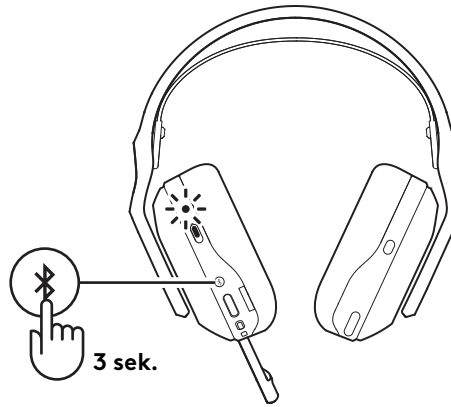 


3

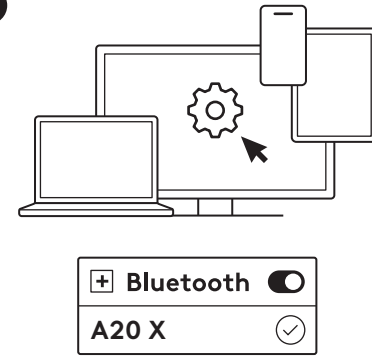 


USB

 1

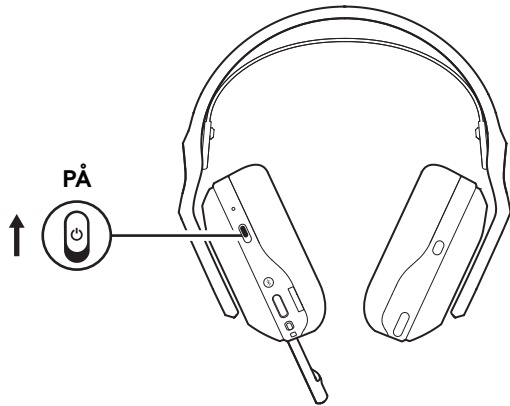


2

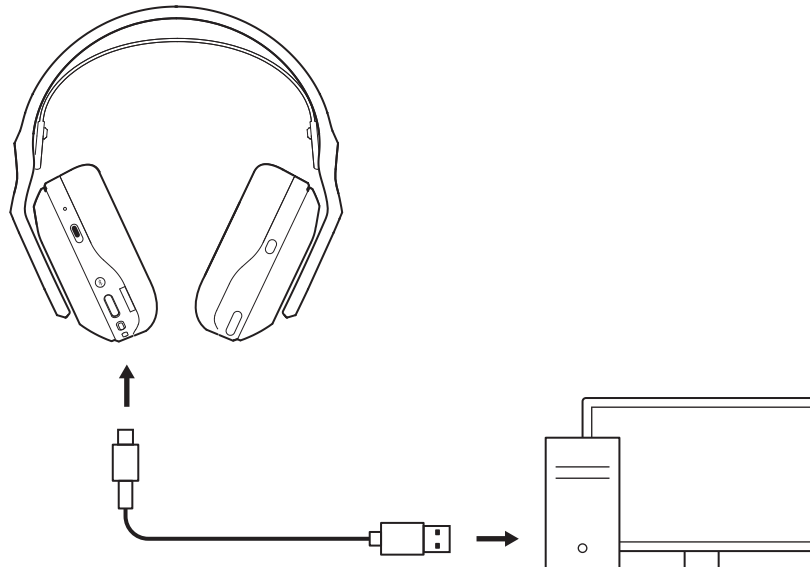 


XBOX SERIES X|S

 
1

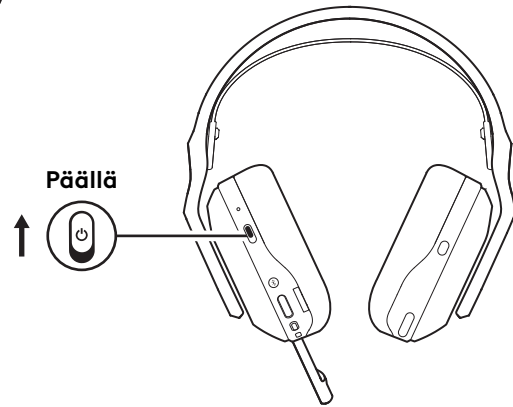


2

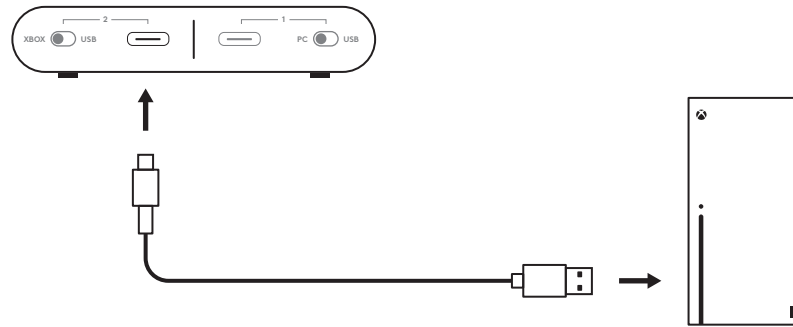 

3

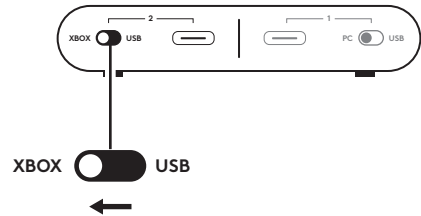 


4

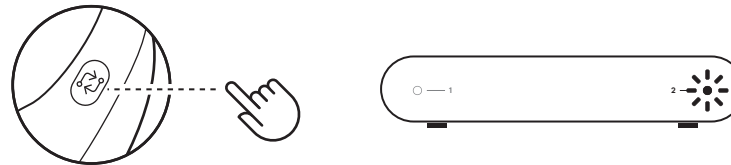 


PLAYSTATION/NINTENDO

 
1

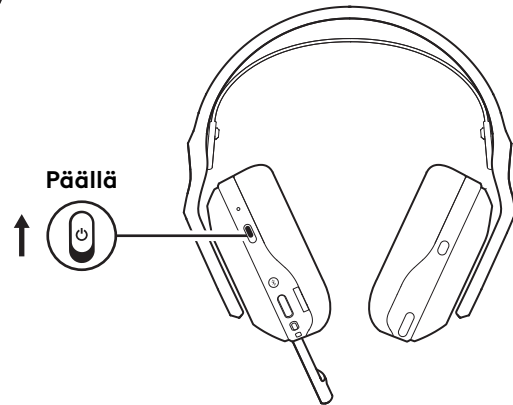


2

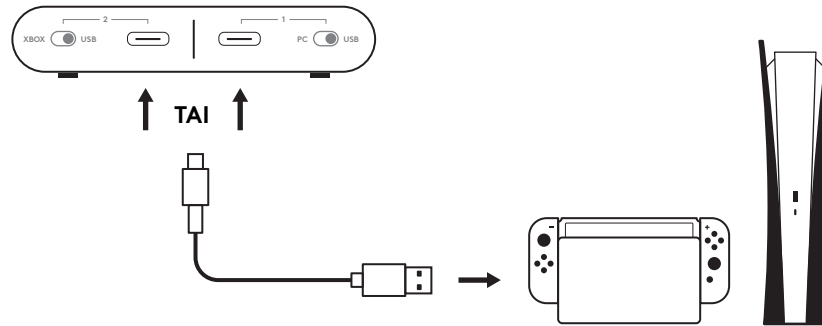 


3

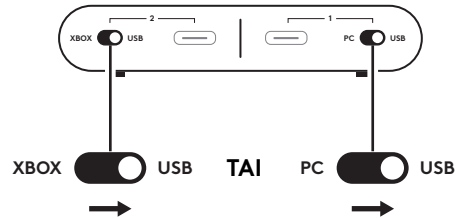 


4

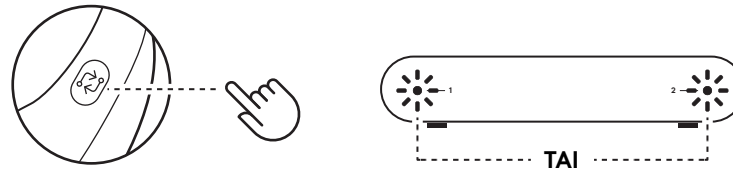 


1

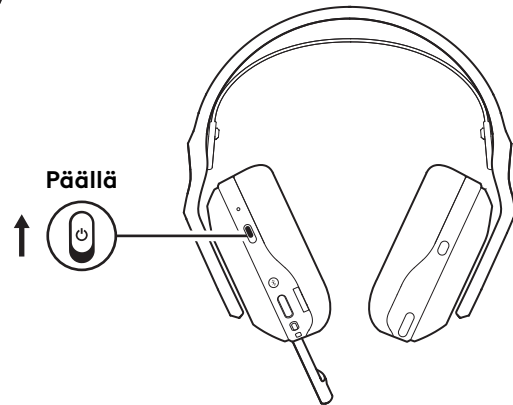 


2

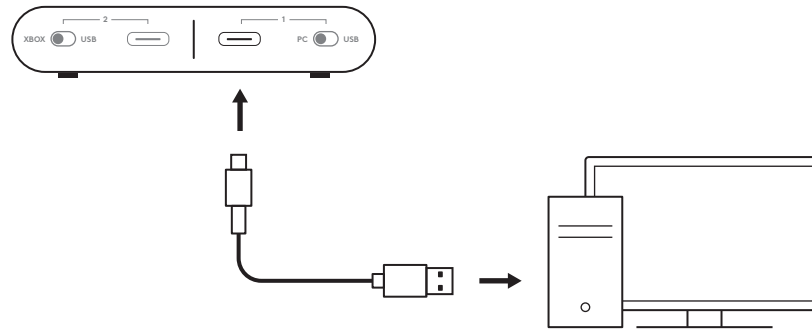 

3

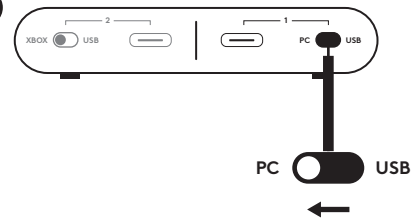 


4

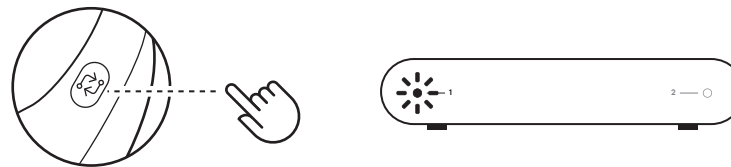 


Bluetooth®

 
1

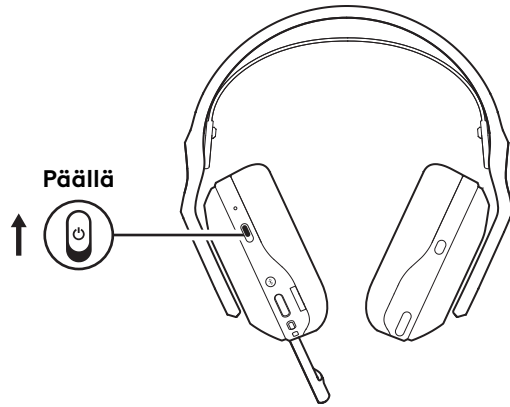

2

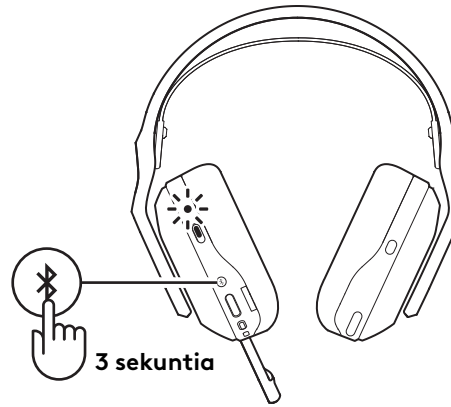 


3

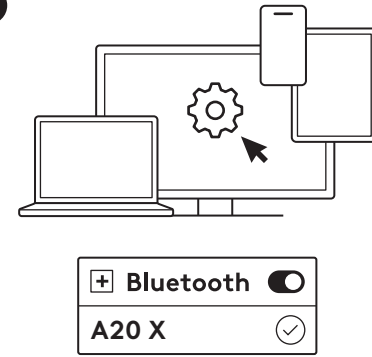 


USB

 1

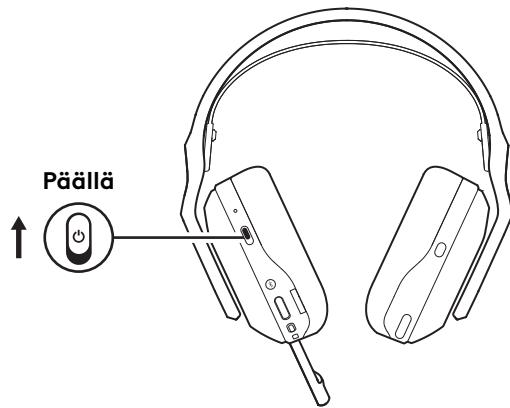

2

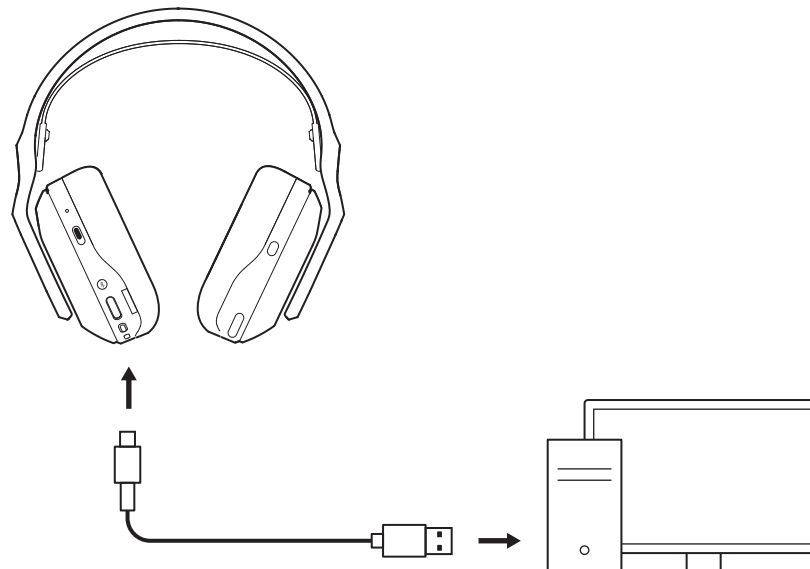 


XBOX SERIES X|S


1



 
2

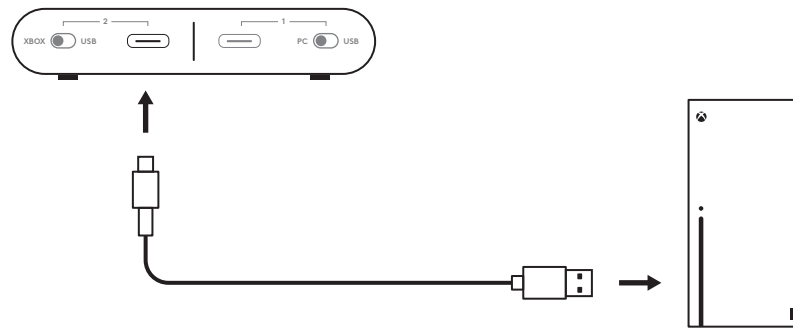

3

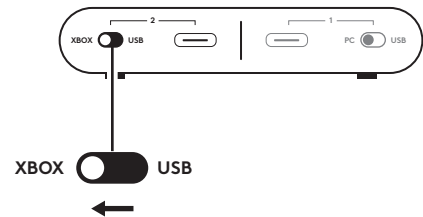 

4

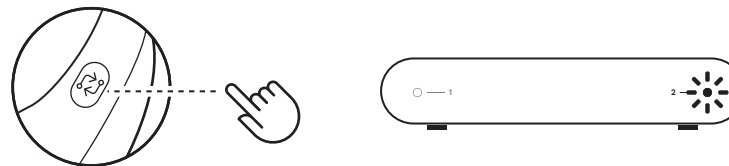 


PLAYSTATION / NINTENDO


1



 
2

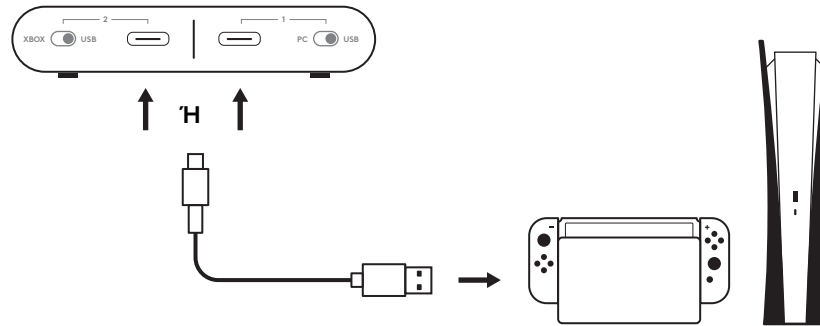

3

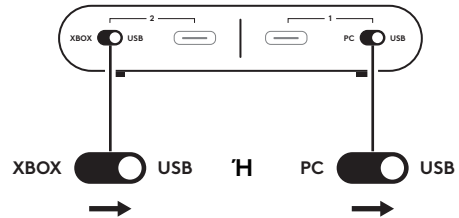 


4

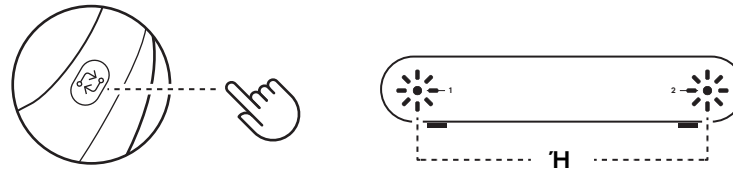 


1



 
2

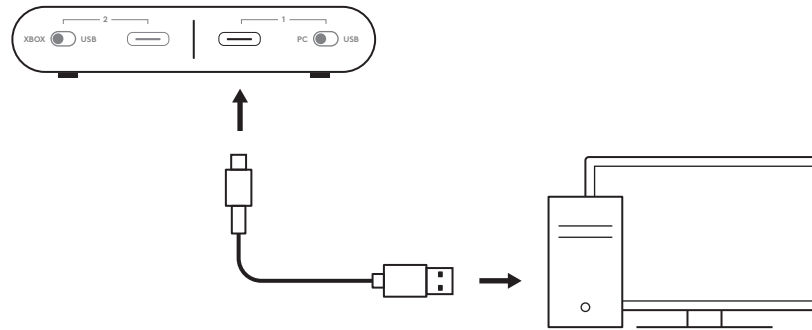

3

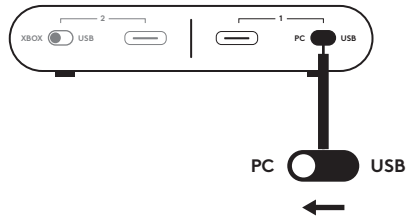 

4

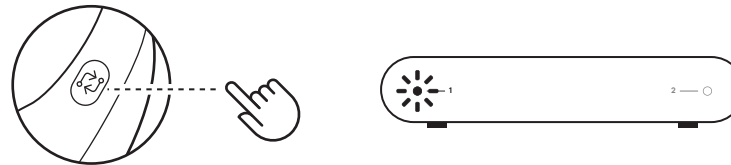 

Bluetooth®

1

 
ΕΝΕΡΓΟΠΟΙΗΣΗ




2



3 δευτ.

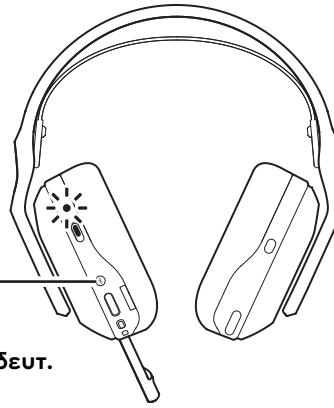


3

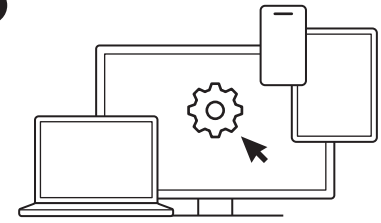 


USB

1

 ΕΝΕΡΓΟΠΟΙΗΣΗ

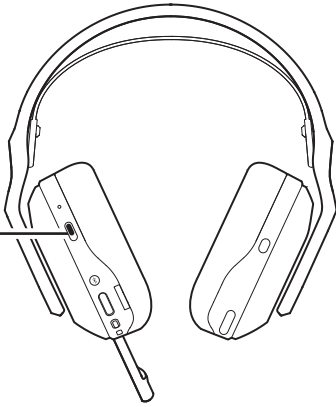


2

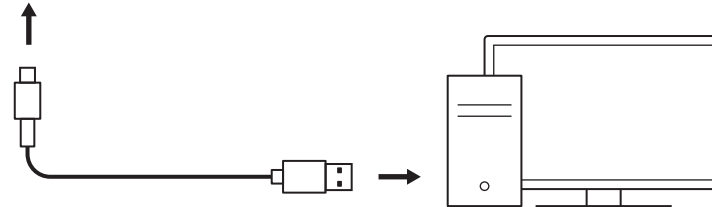 


XBOX SERIES X|S

 
1

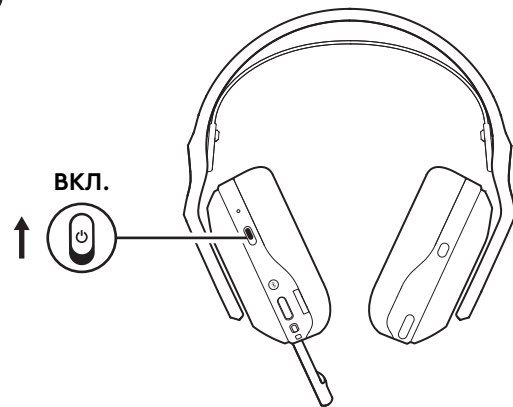


2

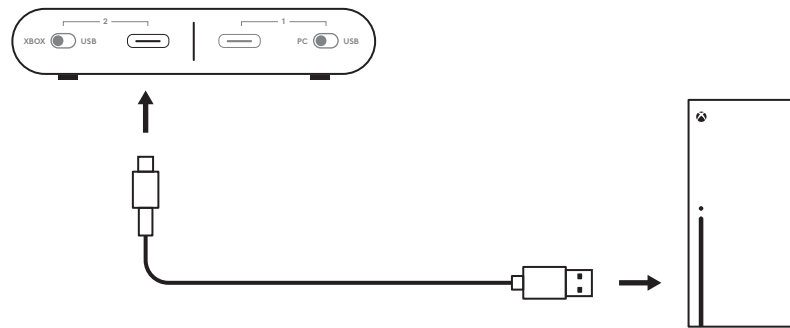 

3

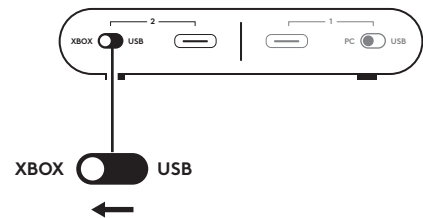 


4

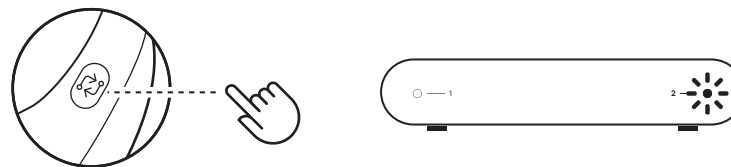 


PLAYSTATION / NINTENDO

 
1

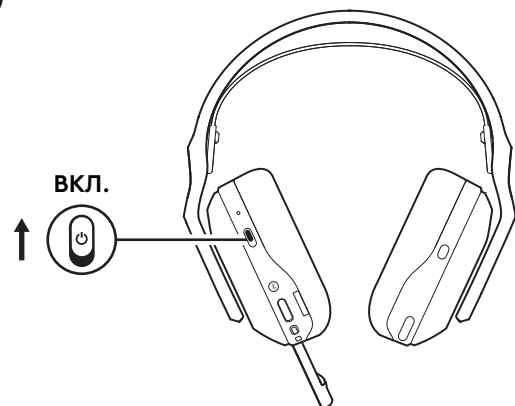


2

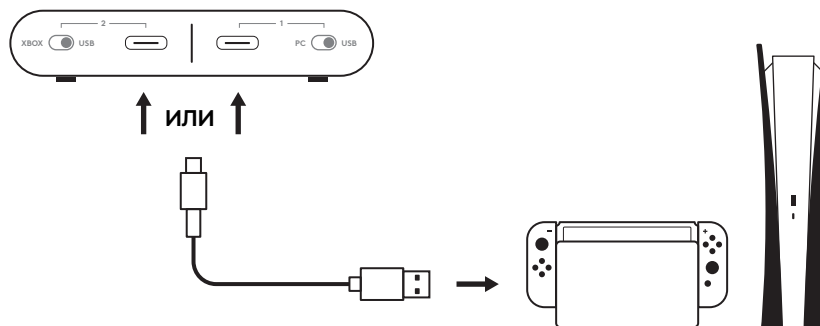 


3

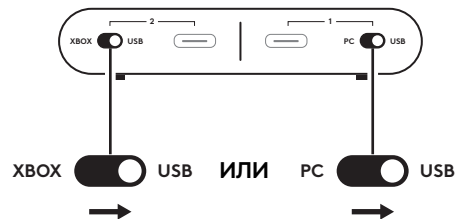 


4

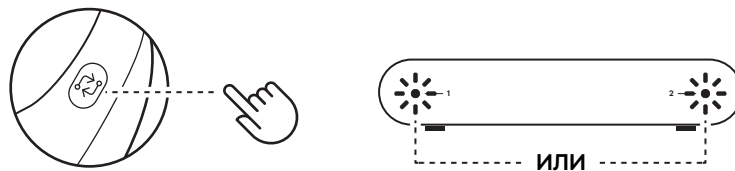 


1

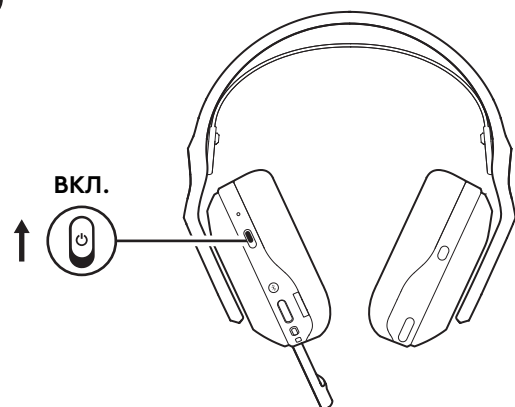 


2

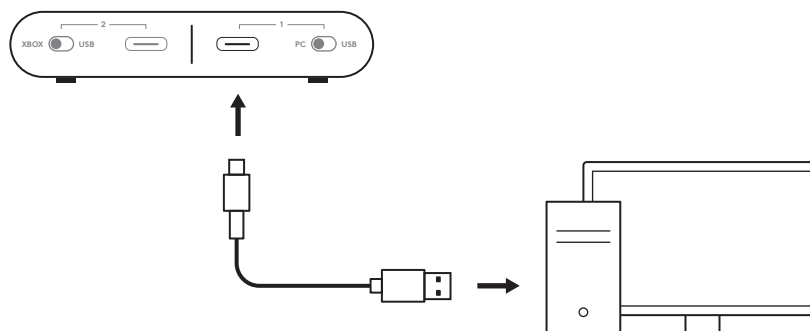 

3

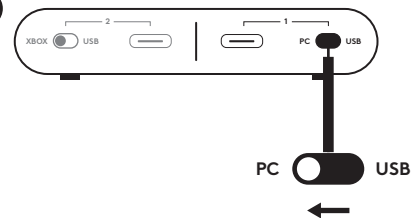 


4

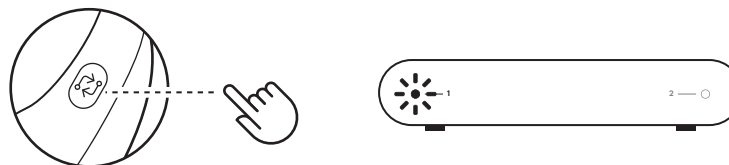 


Bluetooth®

 
1

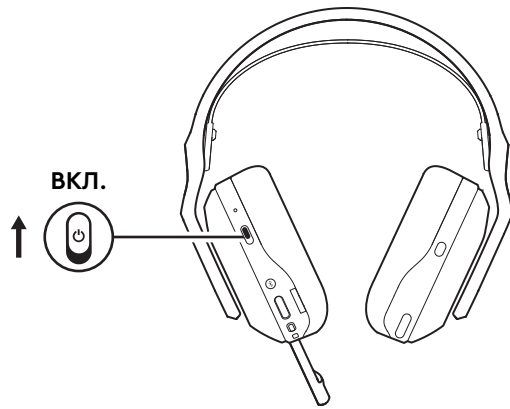

2

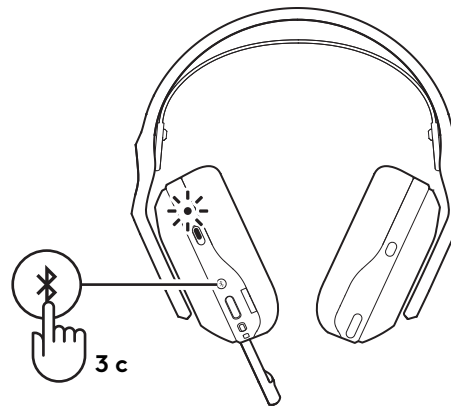 


3

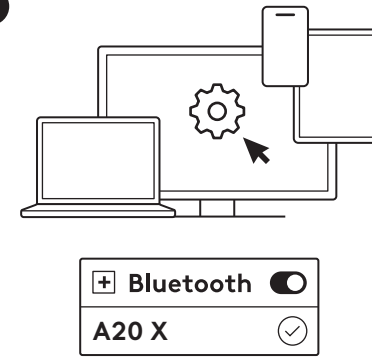 


USB

 1

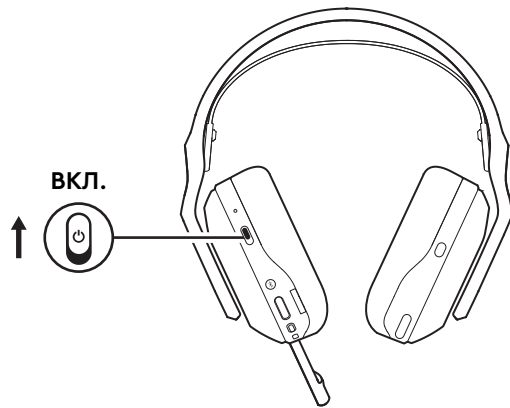


2

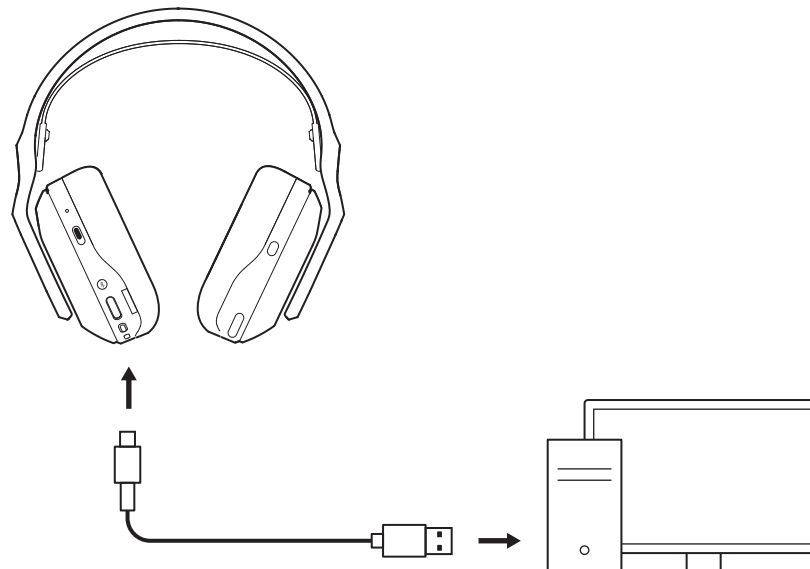 


XBOX SERIES X|S

 
1

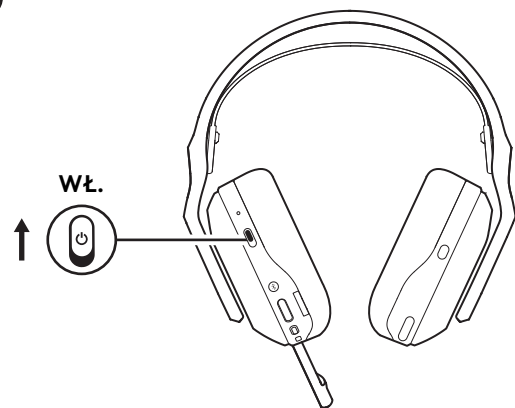


2

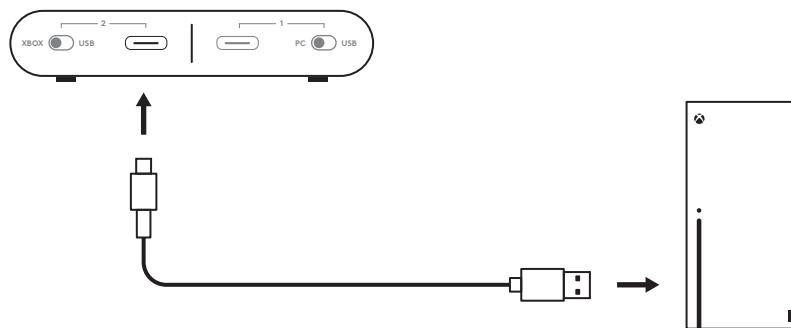 

3

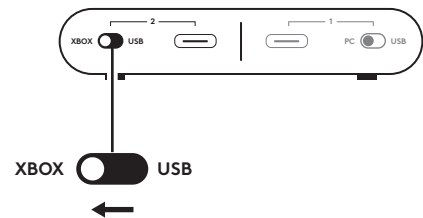 


4

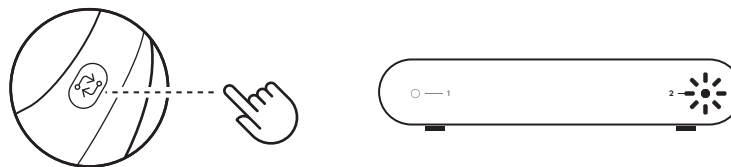 


PLAYSTATION / NINTENDO

 
1

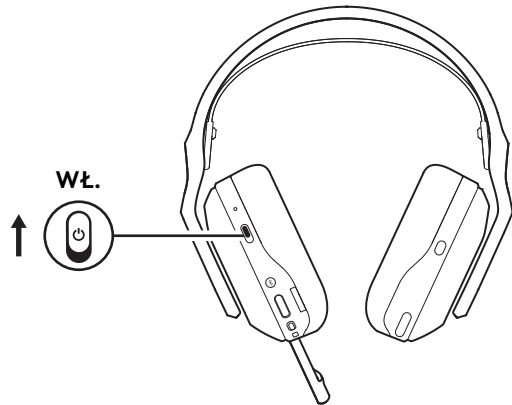


2

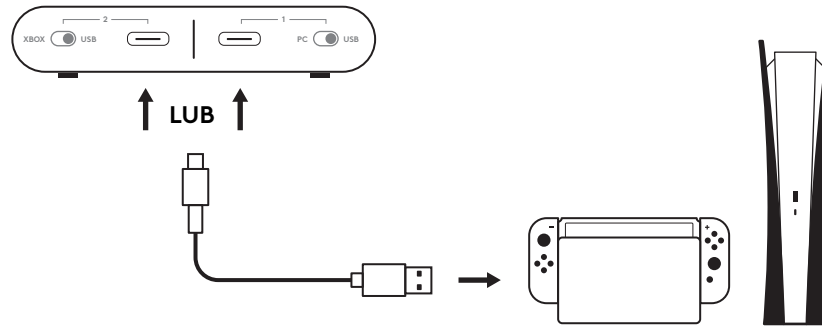 

3

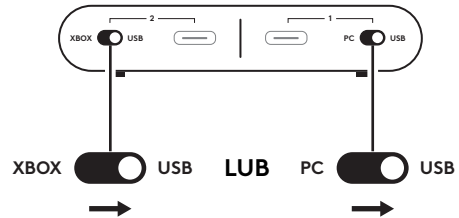 


4

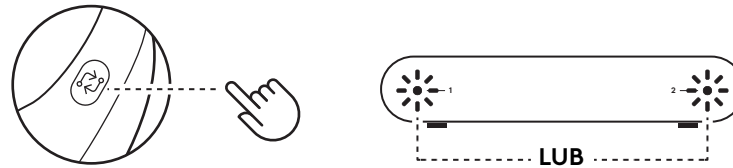 


KOMPUTERY Z SYSTEMEM WINDOWS | KOMPUTERY MAC

 
1

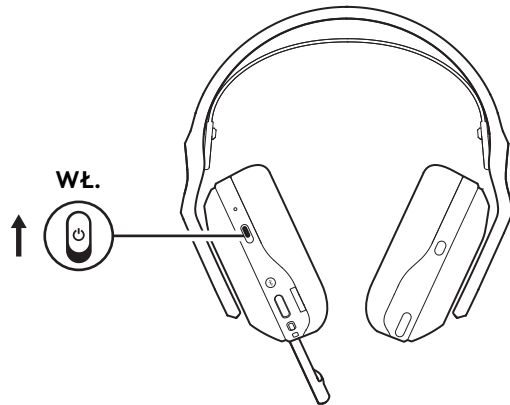


2

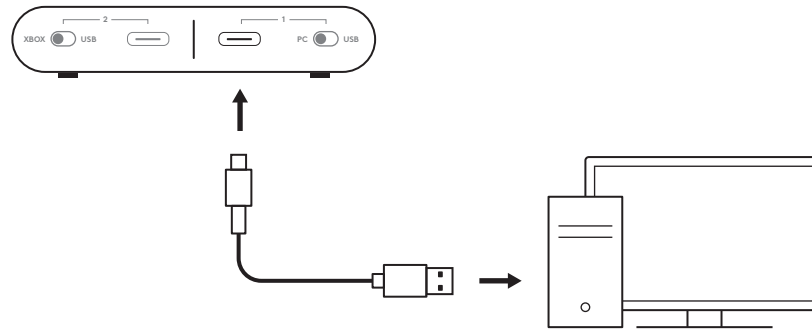 

3

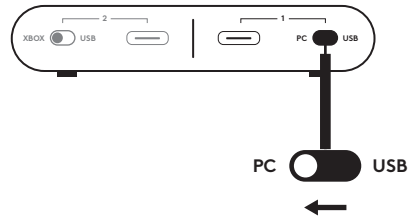 


4

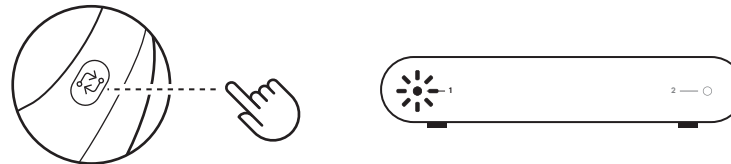 


Bluetooth®

 
1

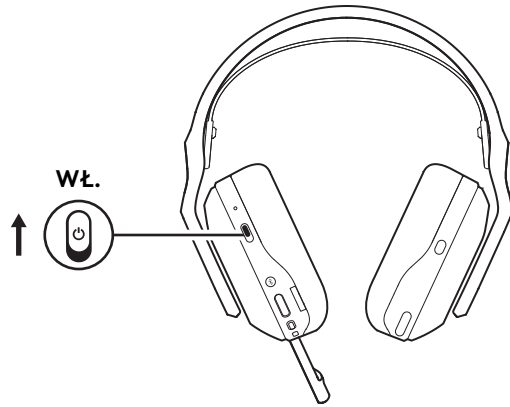

2

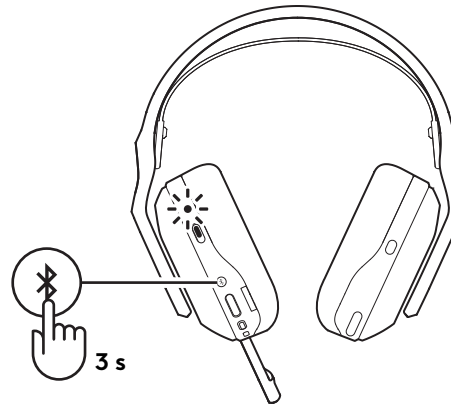 


3

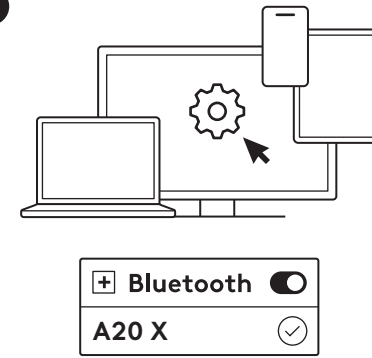 


USB

 1

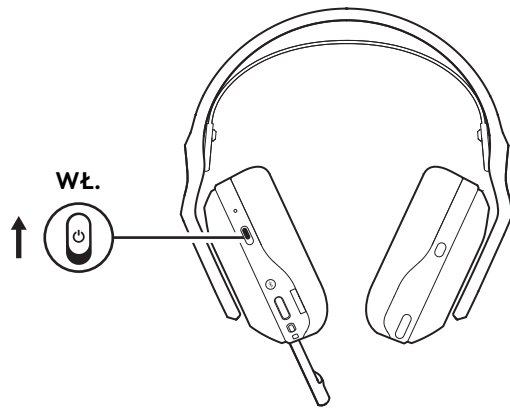


2

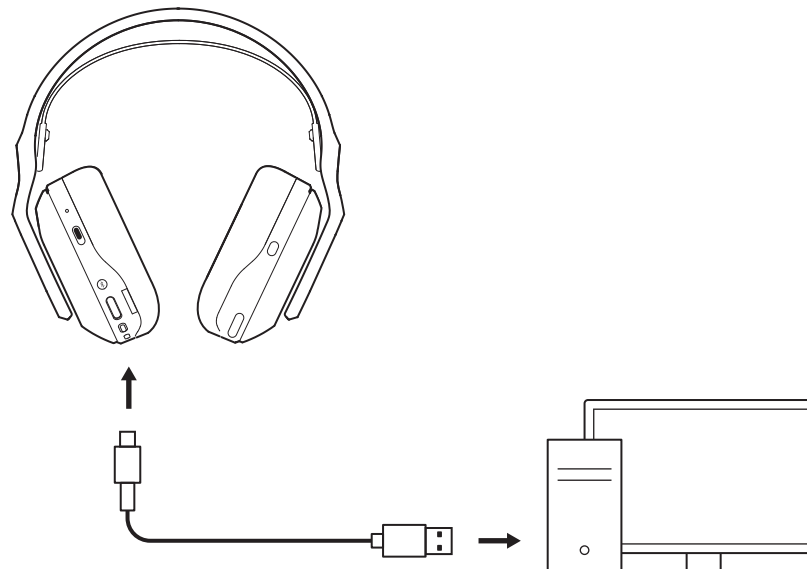 


XBOX SERIES X|S

 
1

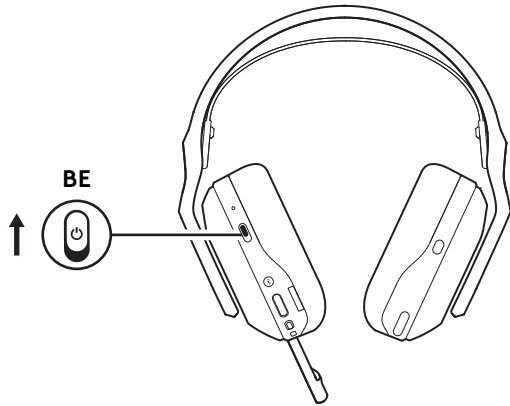


2

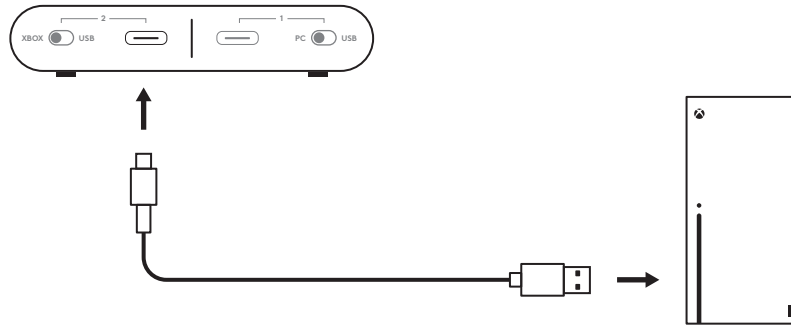 

3

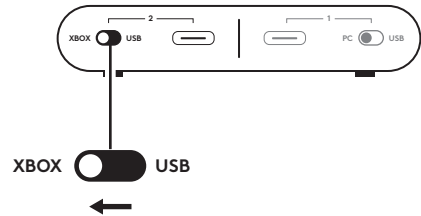 


4

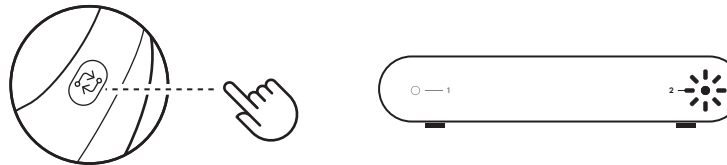 


PLAYSTATION / NINTENDO

 
1

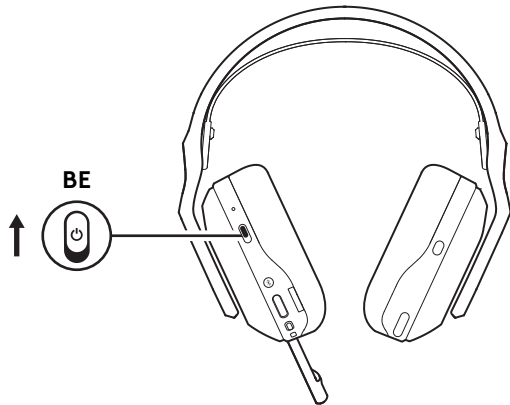


2

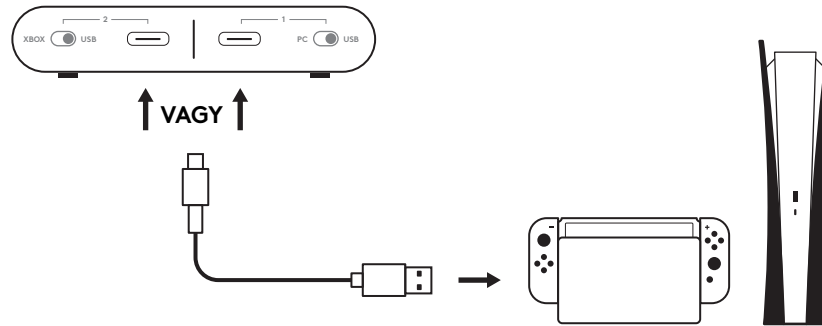 


3

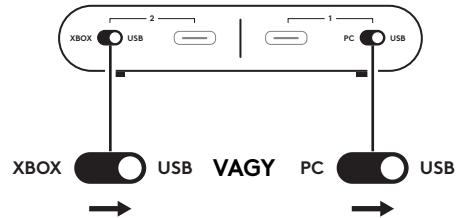 


4

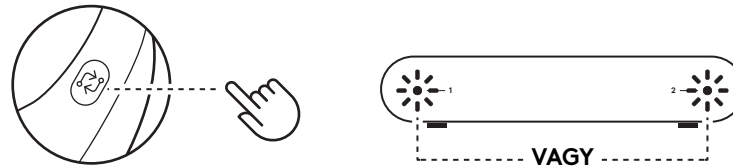 


1

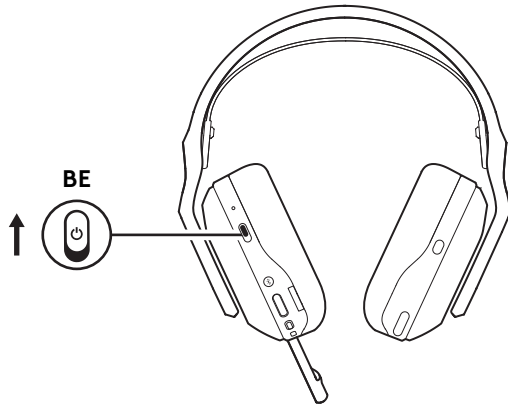 


2

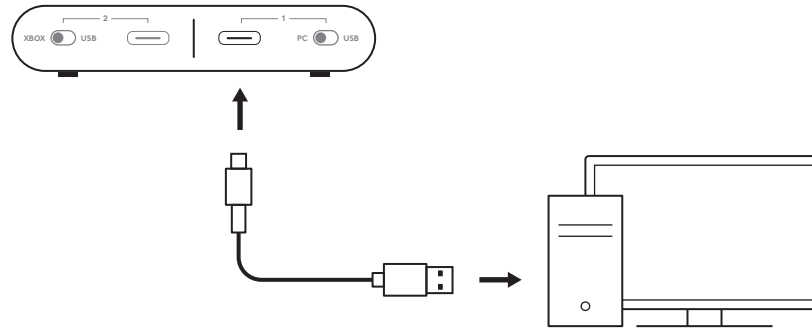 

3

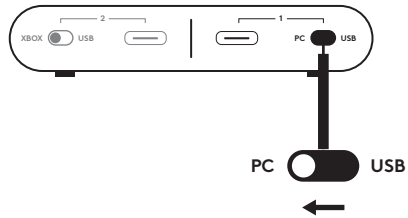 


4

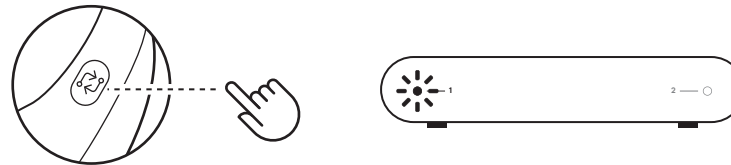 


Bluetooth®

 
1

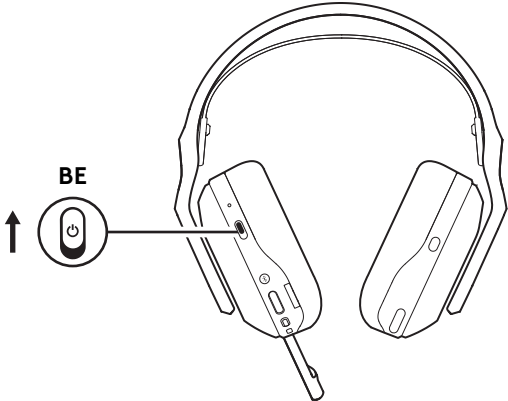

2

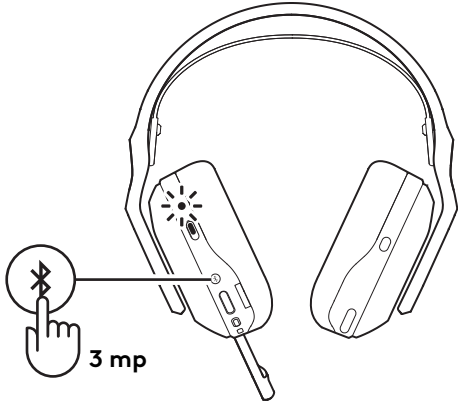 


3

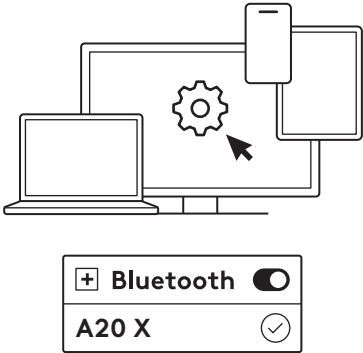 


USB

 1

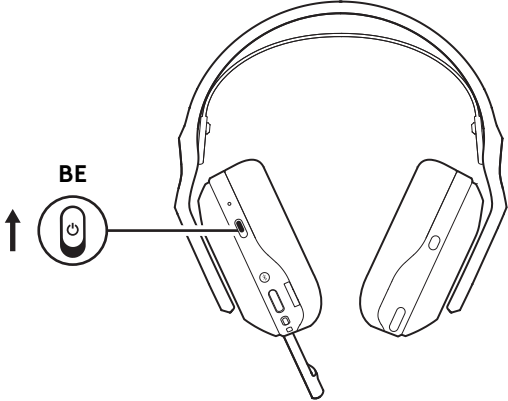


2

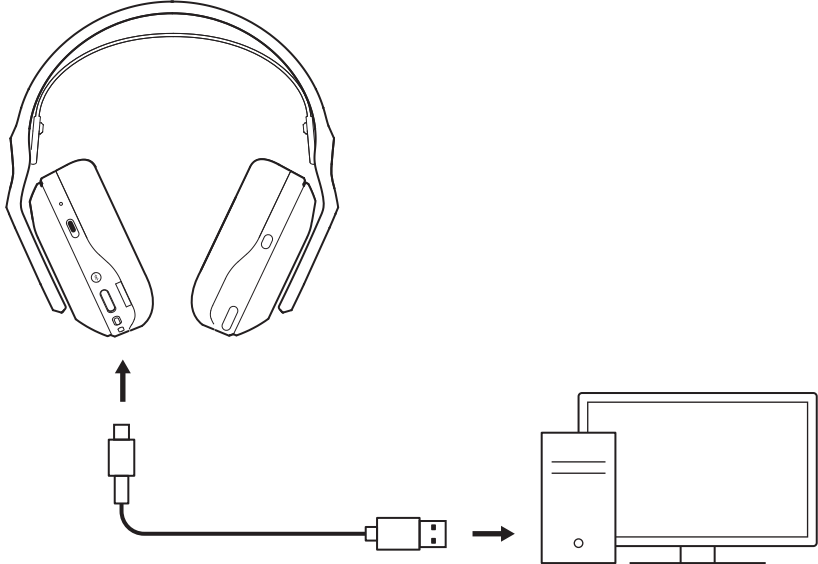 


XBOX SERIES X|S

 
1

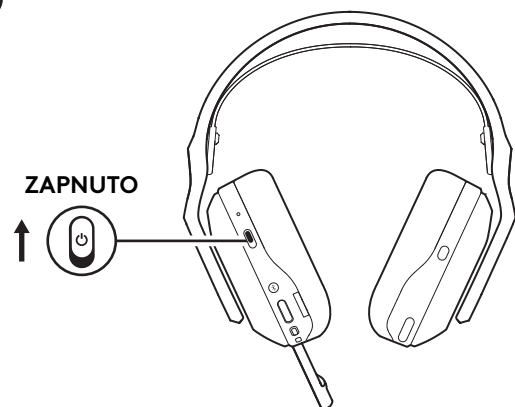


2

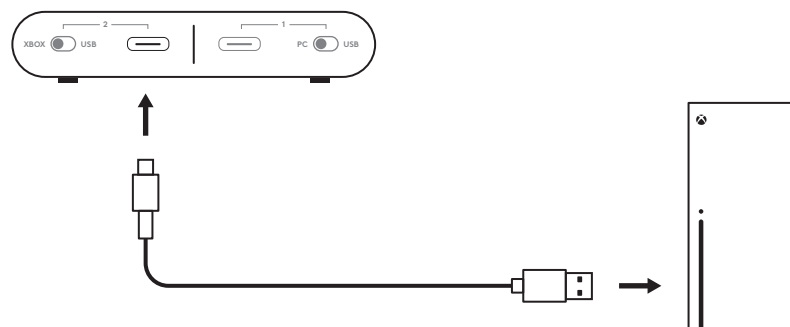 

3

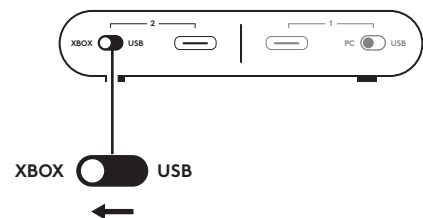 


4

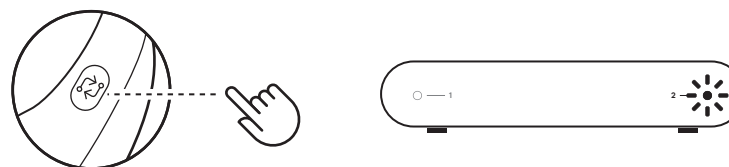 


PLAYSTATION / NINTENDO

 
1

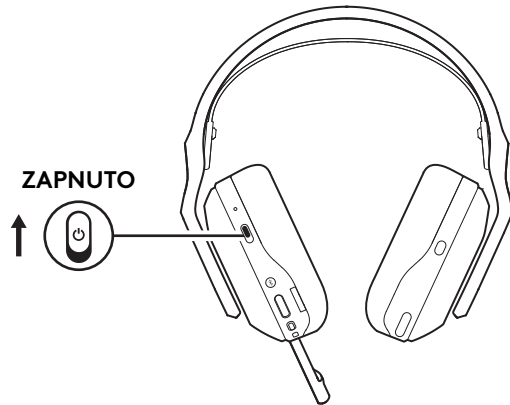


2

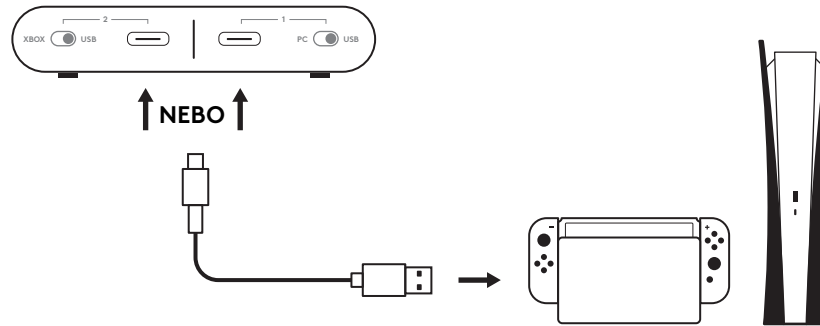 


3

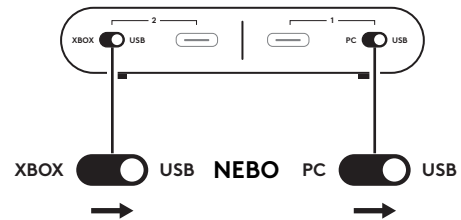 


4

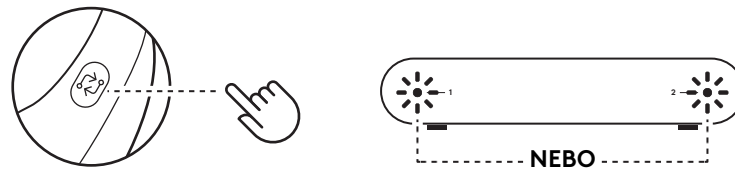 


1

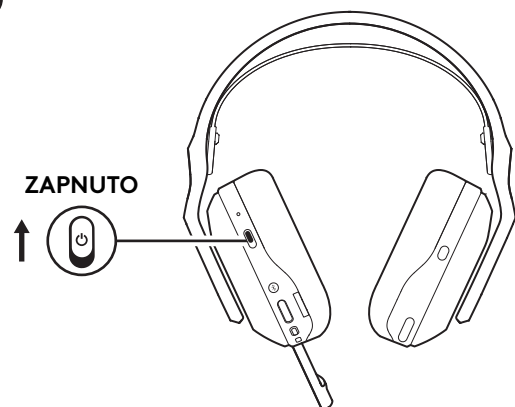 


2

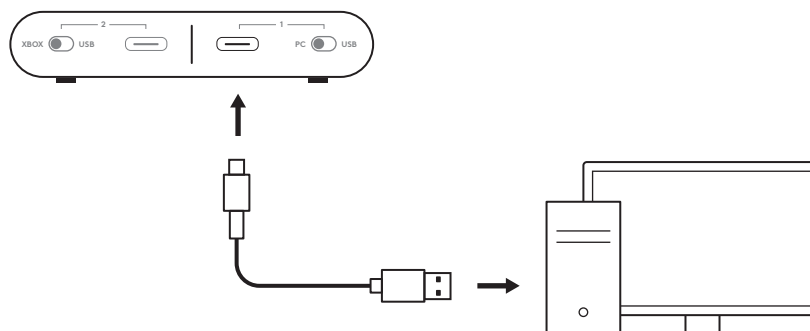 

3

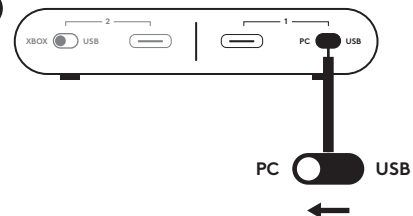 


4

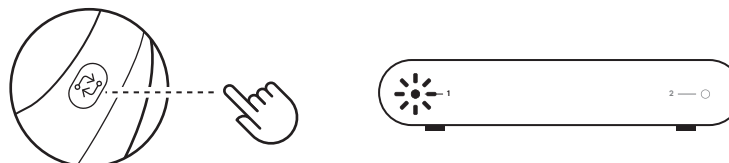 


Bluetooth®

 
1

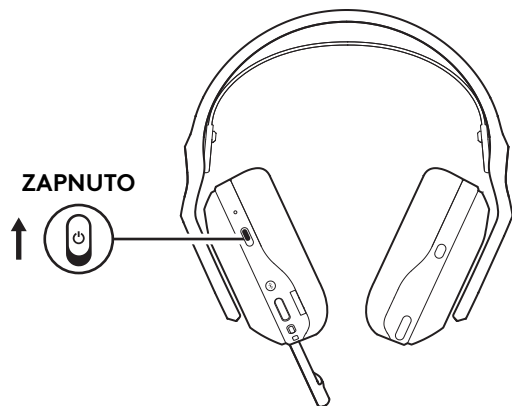

2

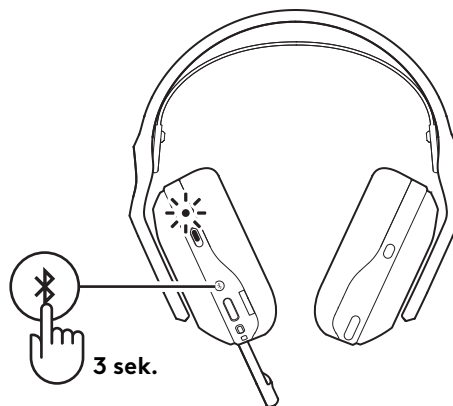 


3

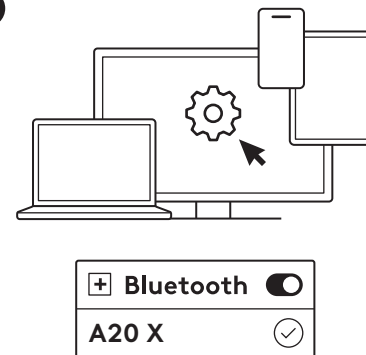 


USB

 1

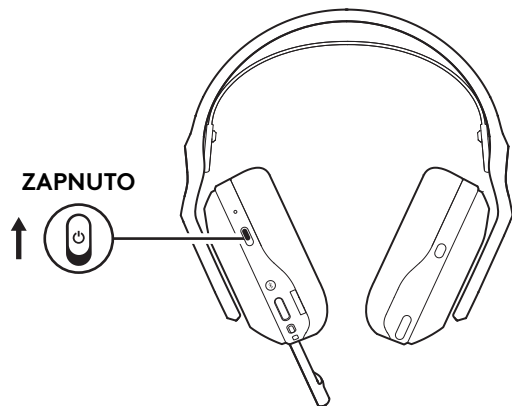


2

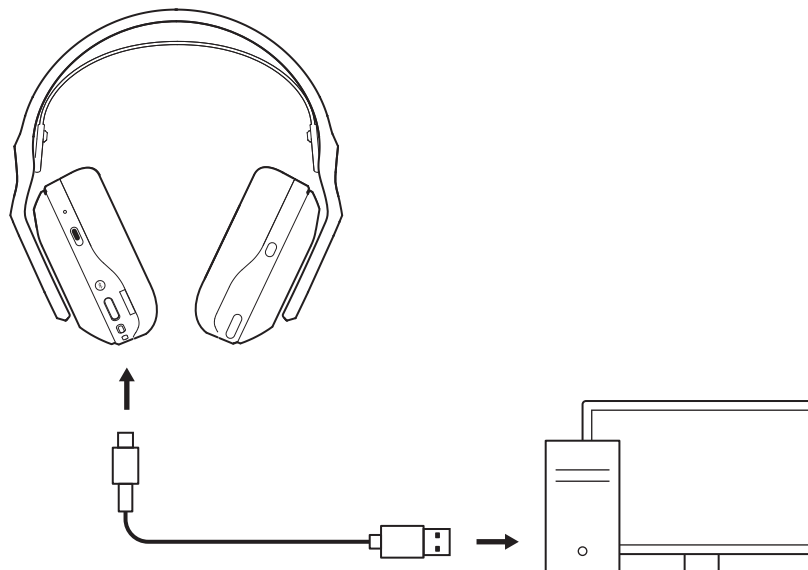 


XBOX SERIES X|S

 
1

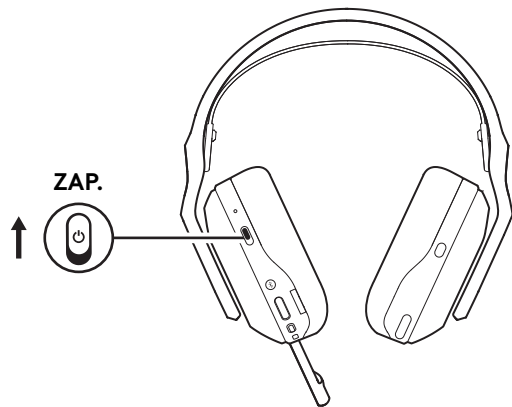


2

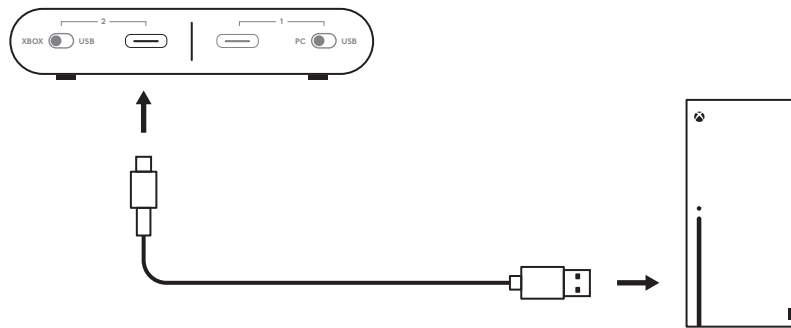 

3

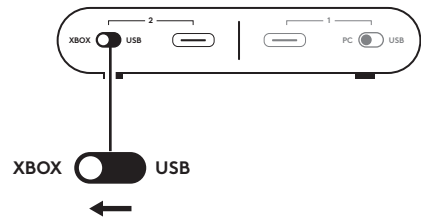 


4

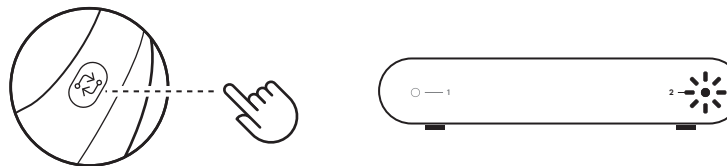 


PLAYSTATION/NINTENDO

 1

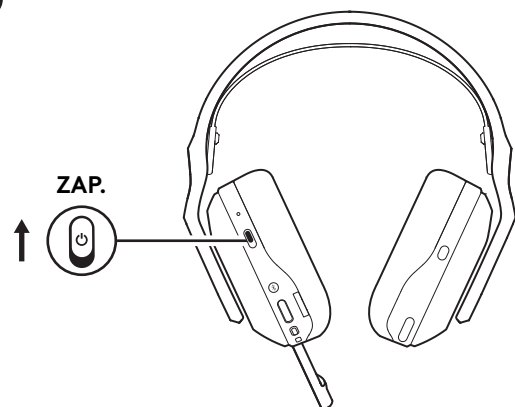


2

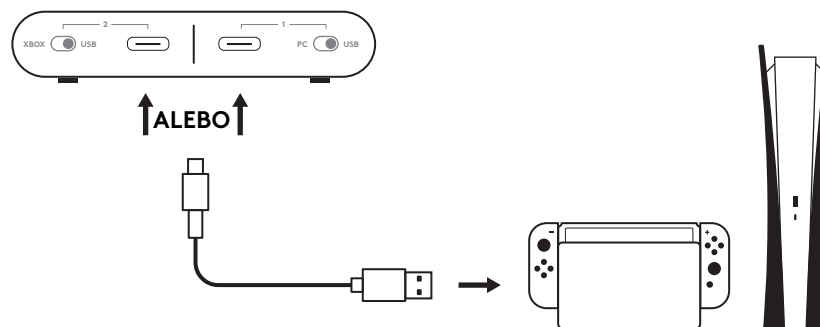 


3



 
4

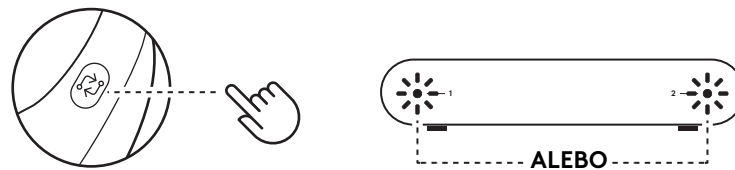


1

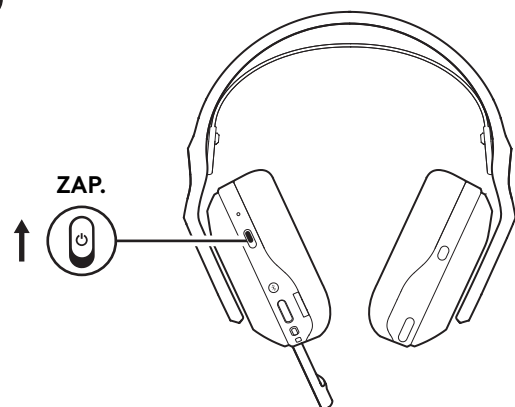 


2

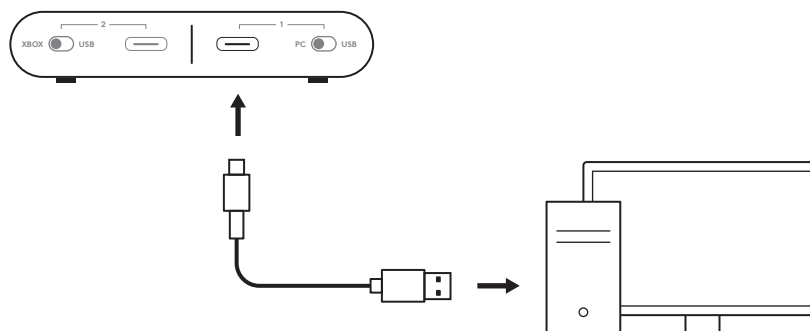 

3

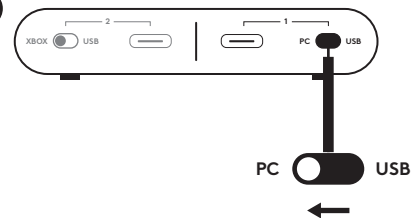 


4

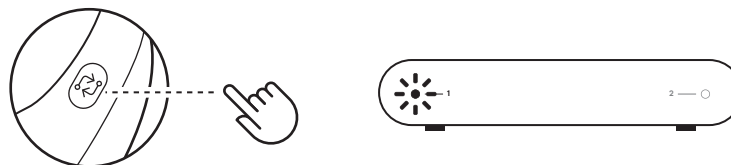 


Bluetooth®

 
1

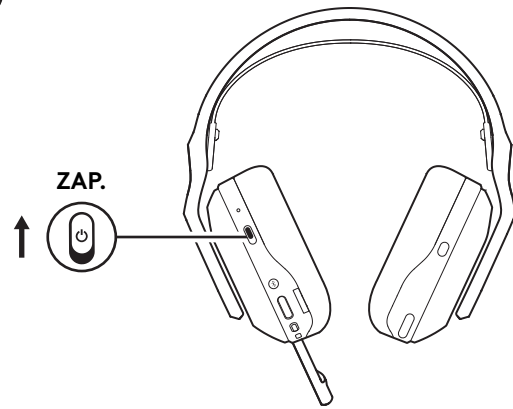

2

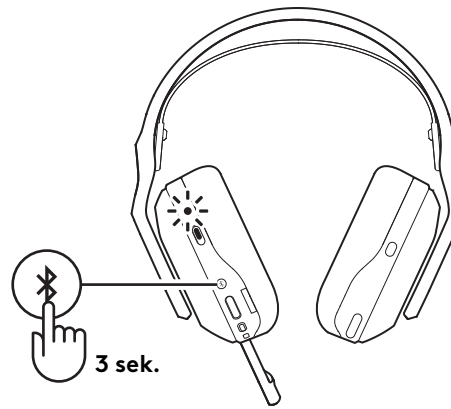 


3

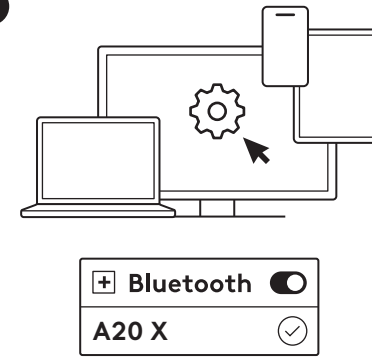 


USB

 1

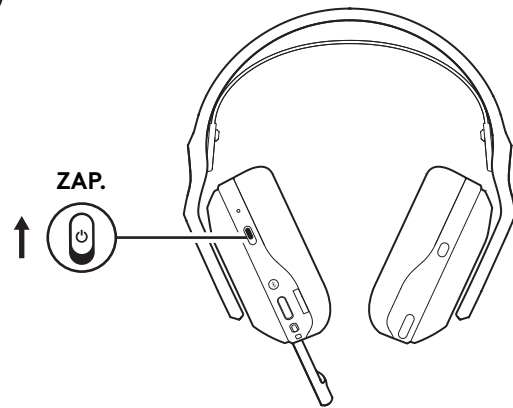


2

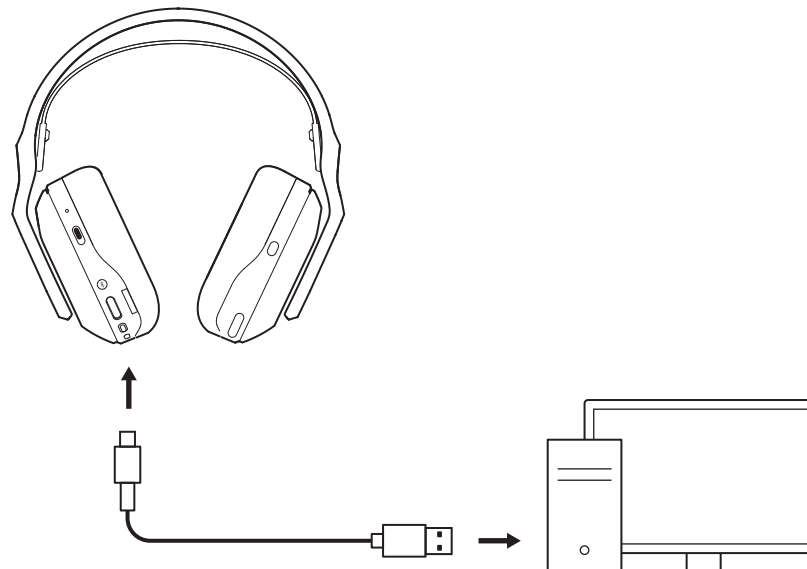 


XBOX SERIES X|S

 
1

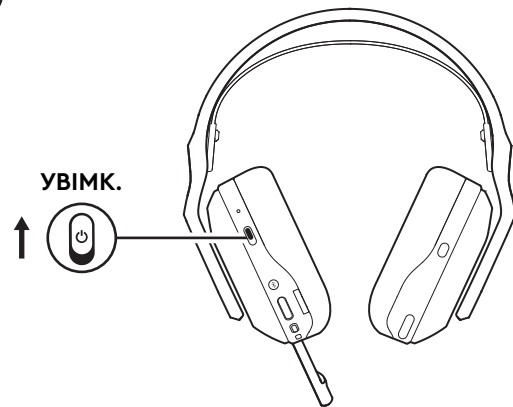


2

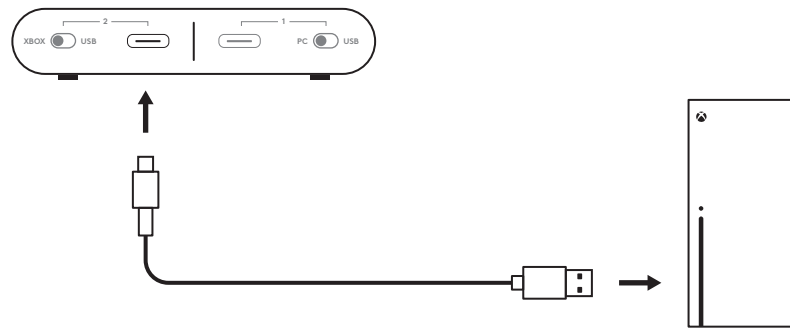 

3

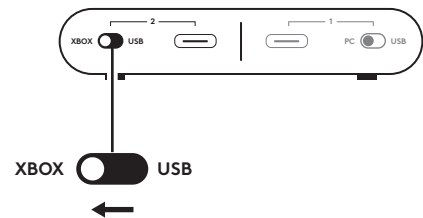 


4

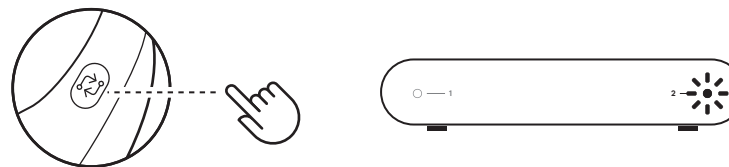 


PLAYSTATION / NINTENDO

 
1

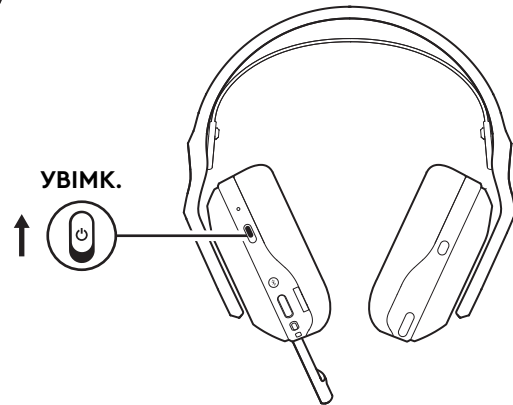


2

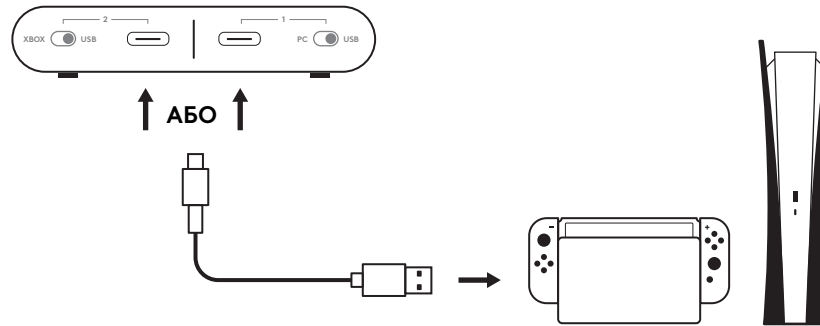 


3

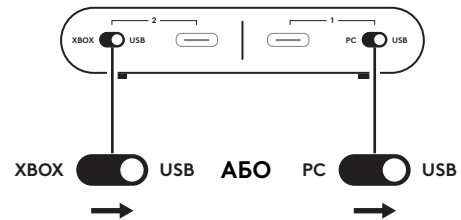 


4

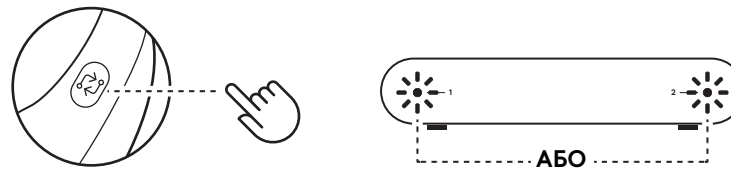 


1

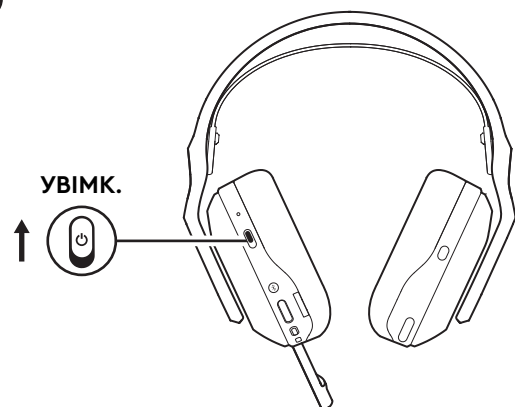 


2

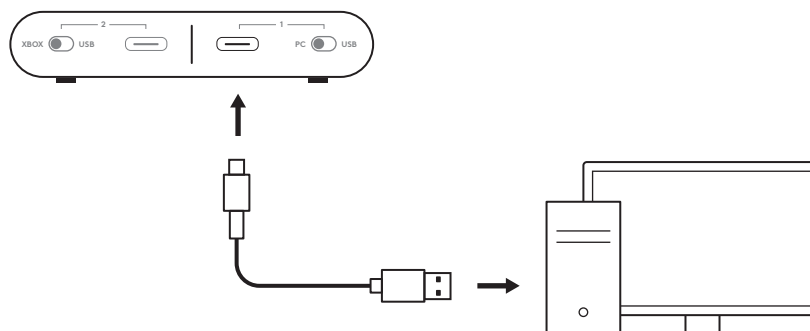 

3

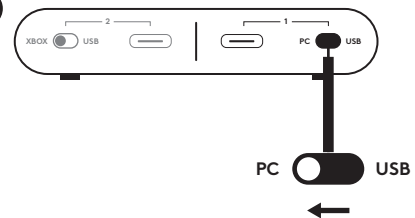 


4

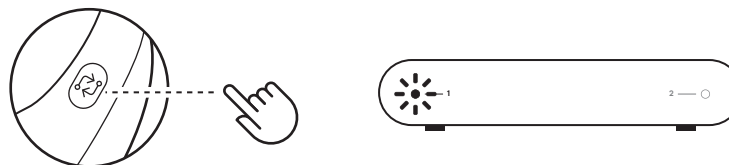 


Bluetooth®

 
1

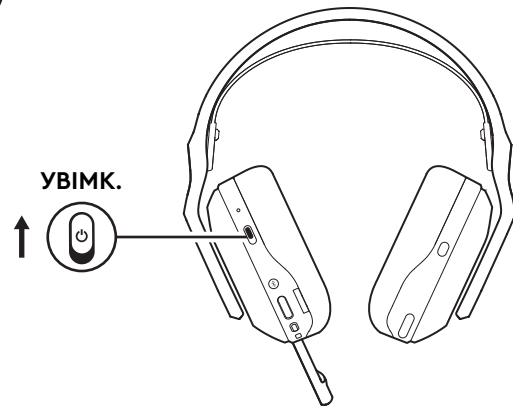

2

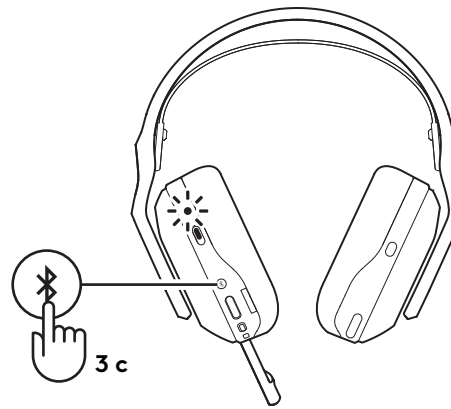 


3

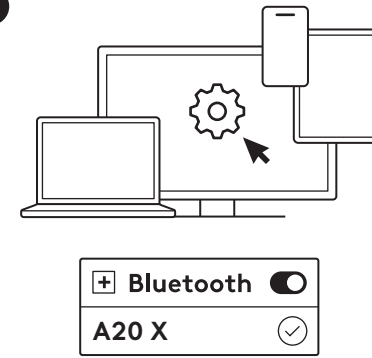 


USB

 1

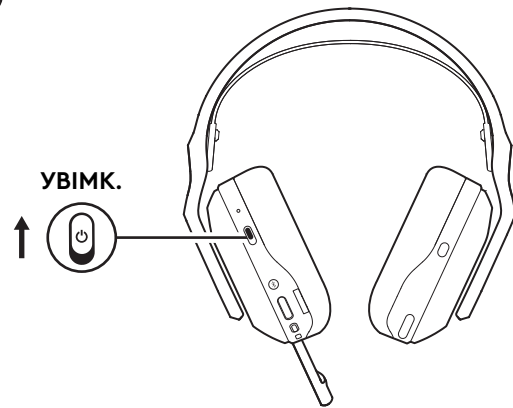


2

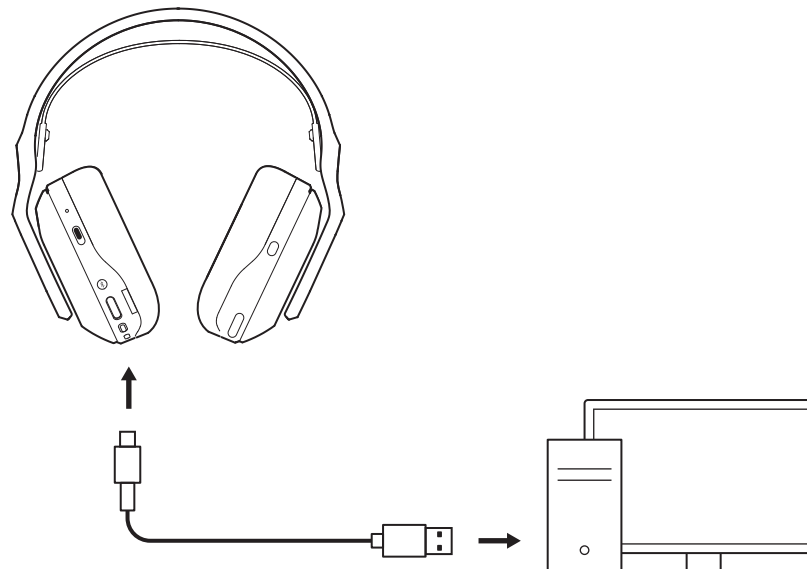 


XBOX SERIES X|S

 
1

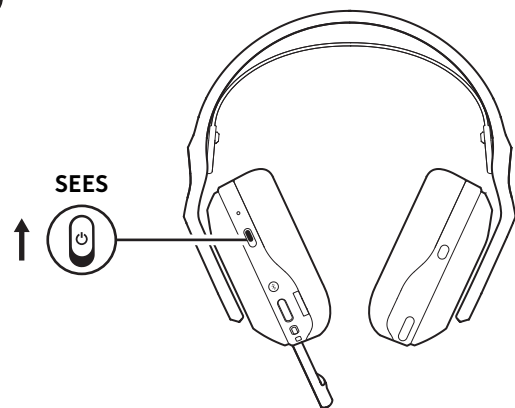


2

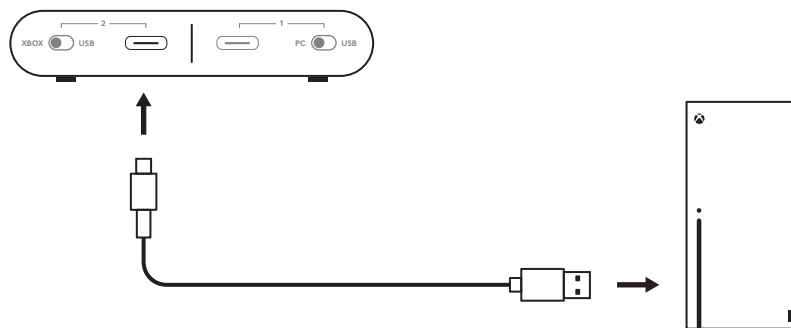 

3

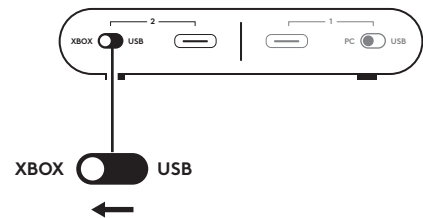 


4

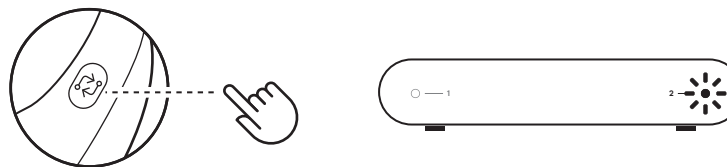 


PLAYSTATION / NINTENDO

 
1

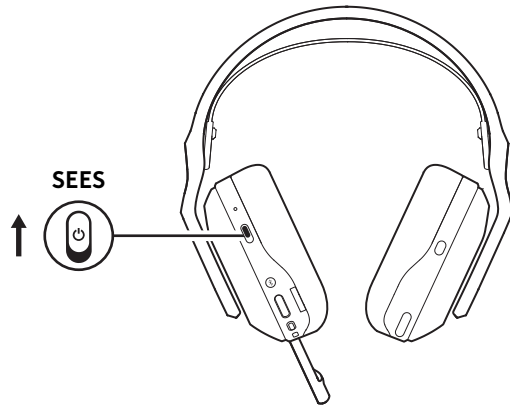


2

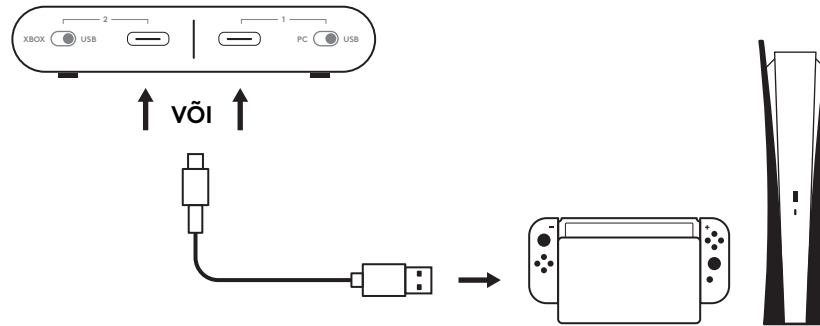 





3

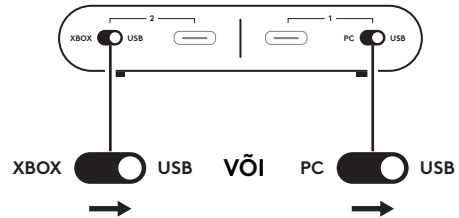 

4

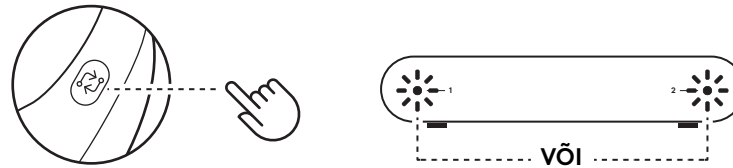 


ARVUTI WINDOWS | MAC

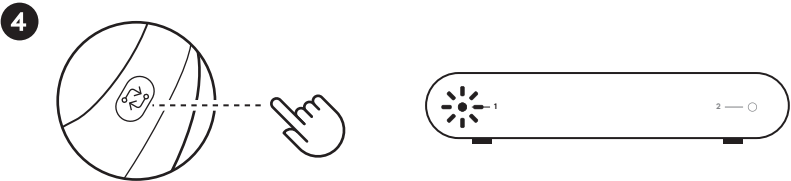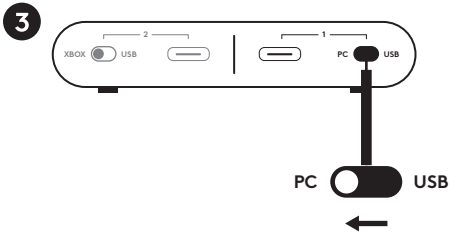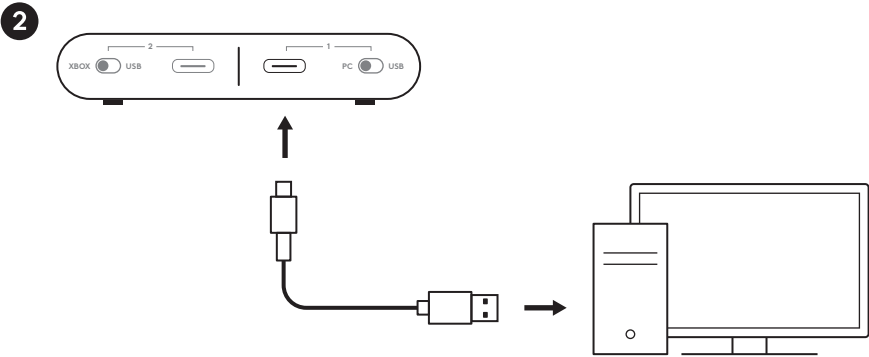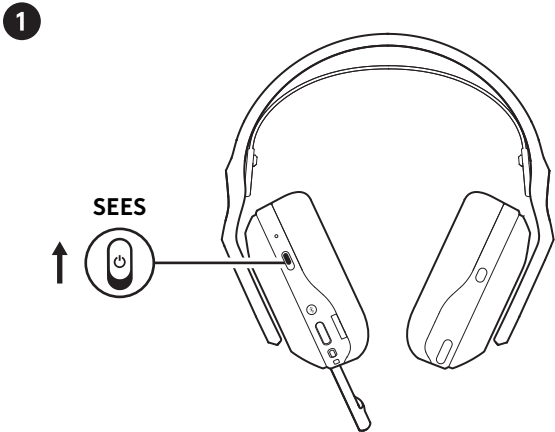    


Bluetooth®

 
1

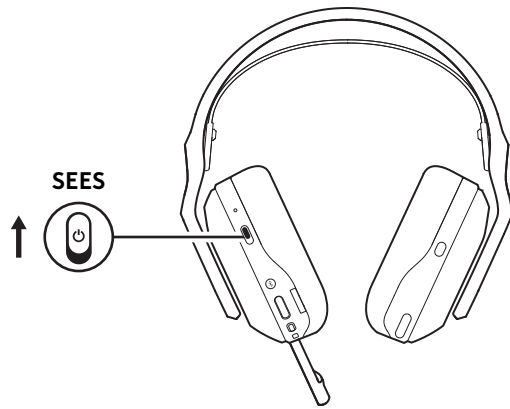

2

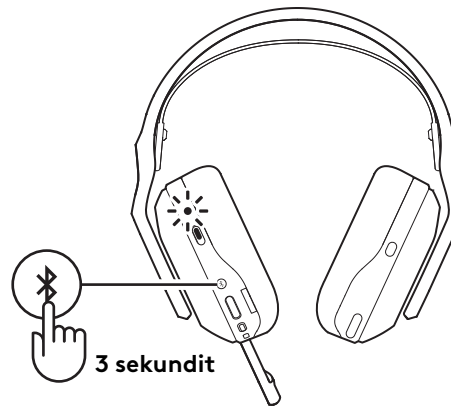 


3

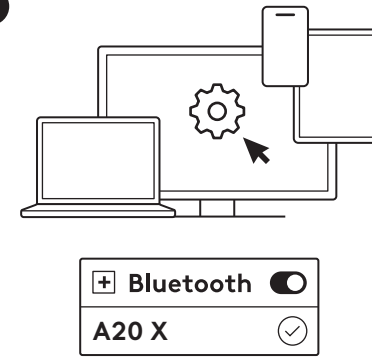 


USB

 1

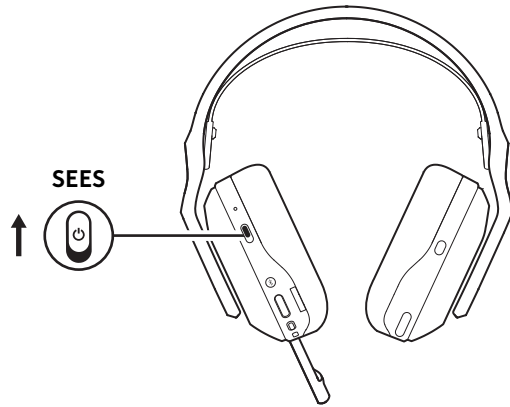


2

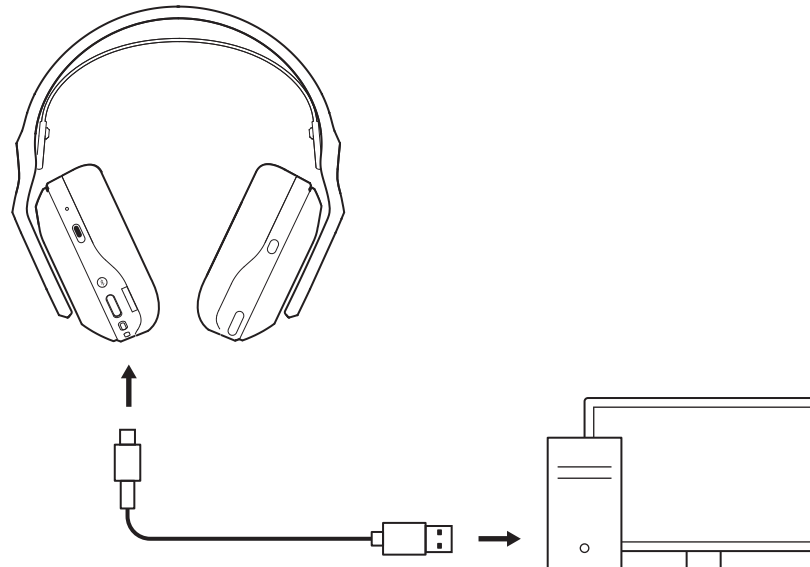 


XBOX SERIES X|S

 
1

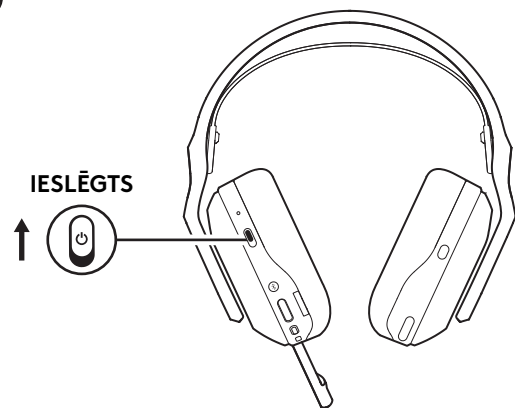


2

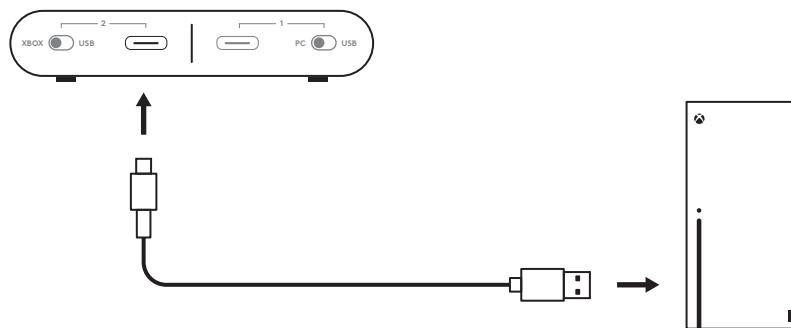 

3

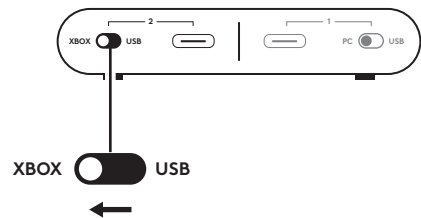 


4

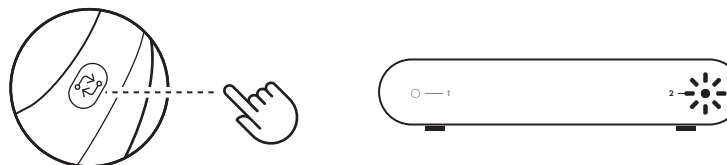 


PLAYSTATION/NINTENDO

 
1

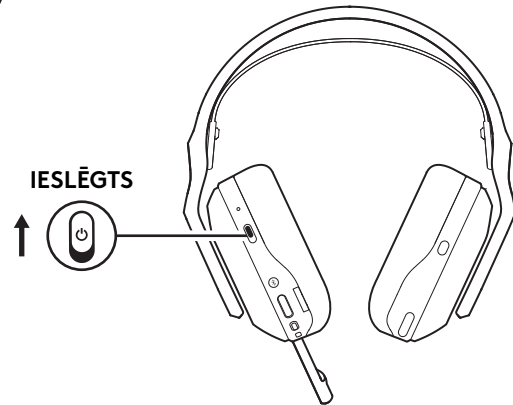


2

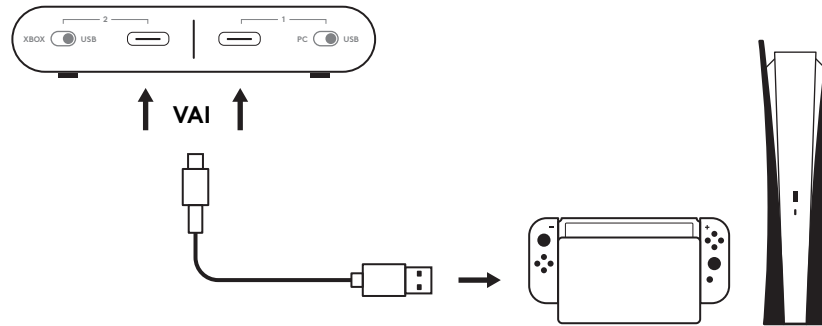 


3

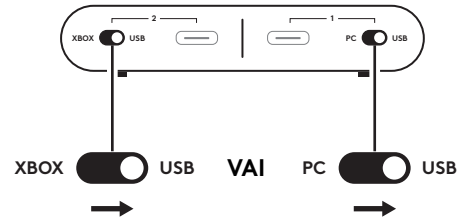 


4

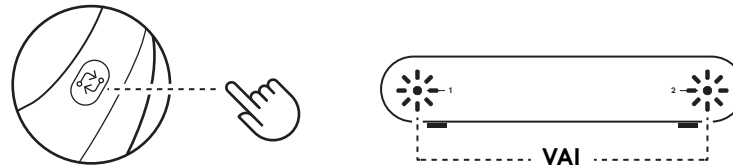 


1

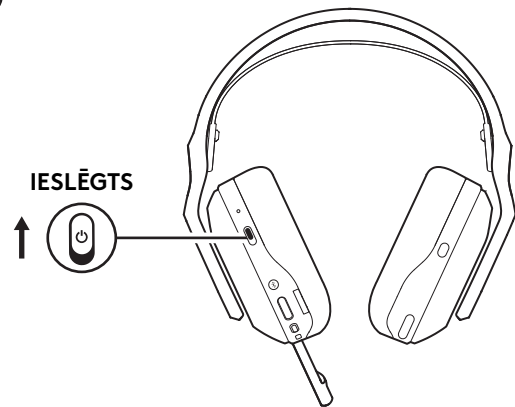 


2

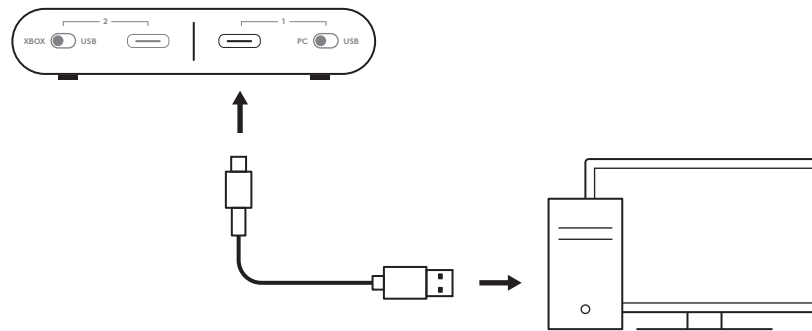 

3

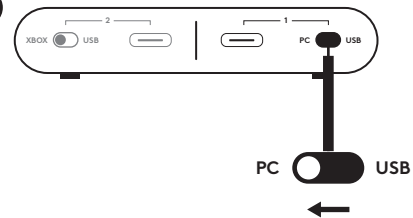 


4

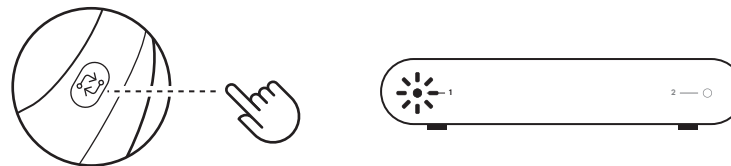 


Bluetooth®

 
1

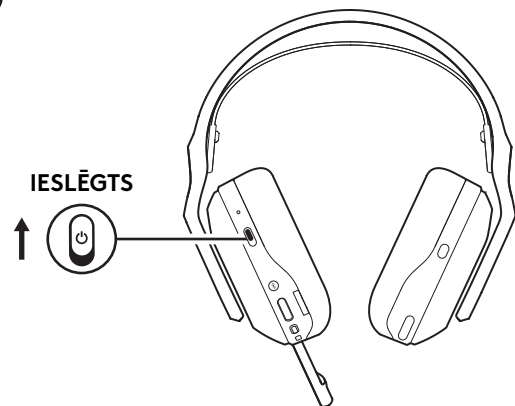

2

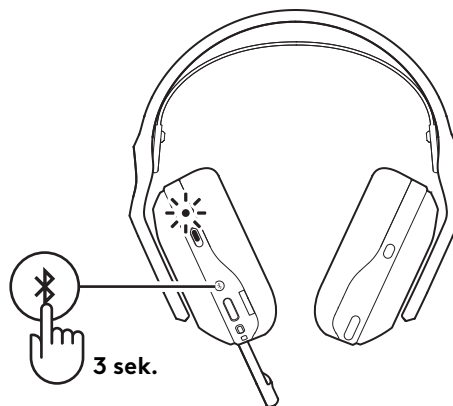 


3

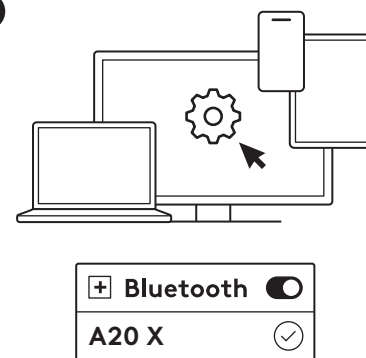 


USB

 1

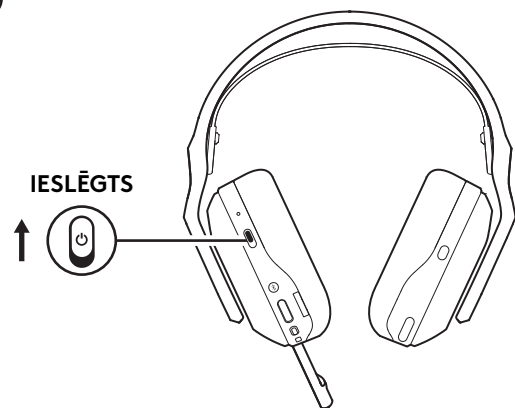


2

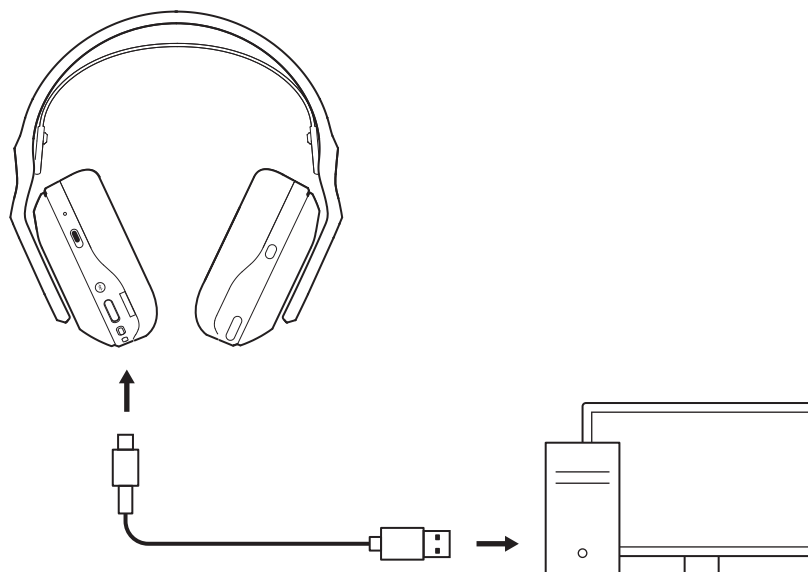 


XBOX SERIES X|S

 
1

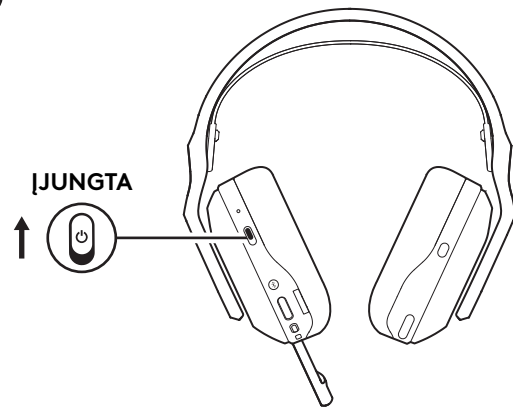


2

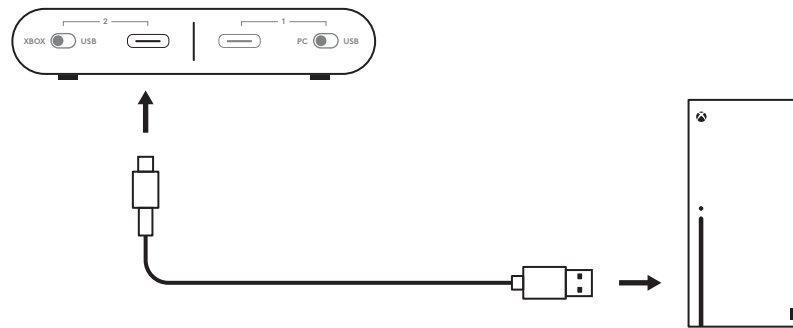 

3

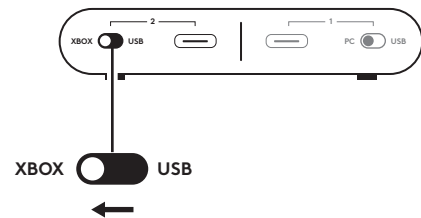 


4

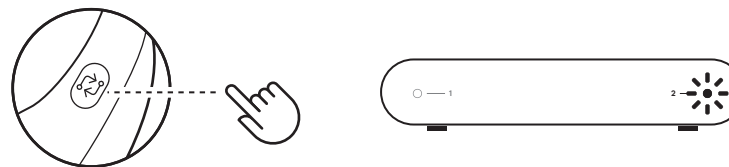 


PLAYSTATION / NINTENDO

 
1

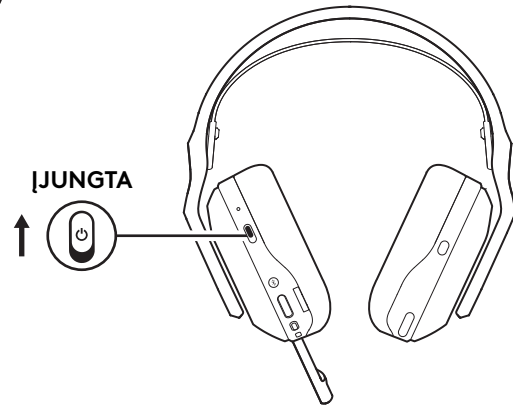


2

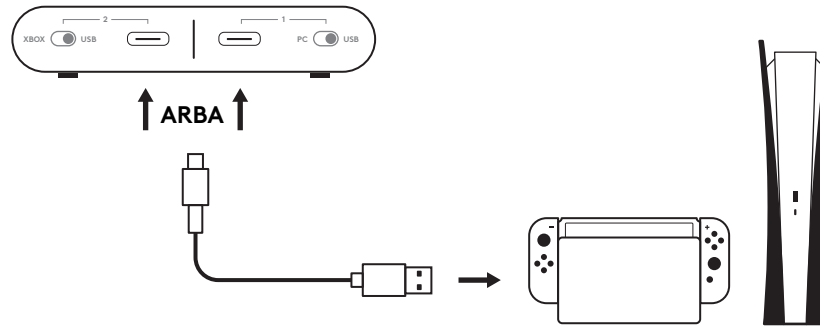 

3

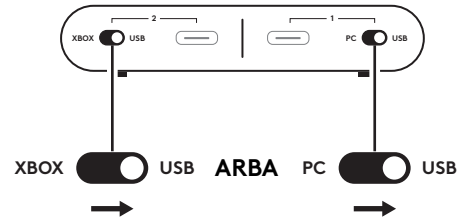 


4

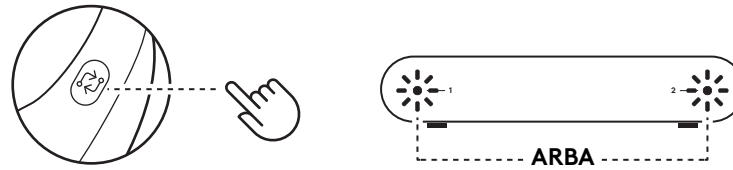 


KOMPIUTERIS SU „WINDOWS“ | „MAC“

 
1

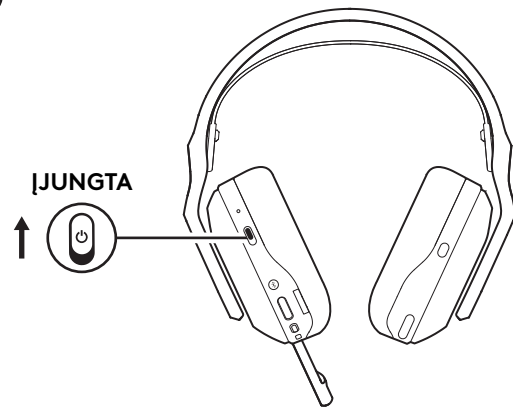


2

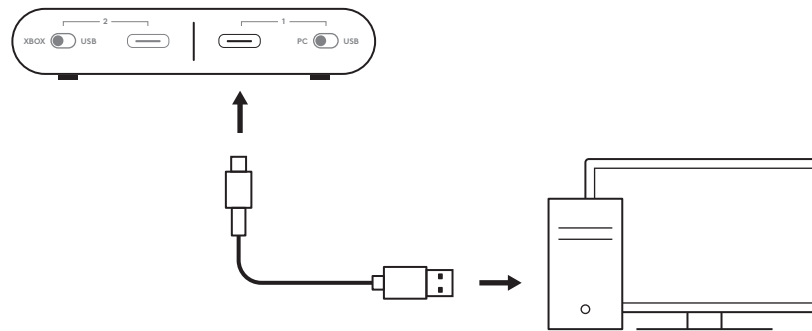 

3

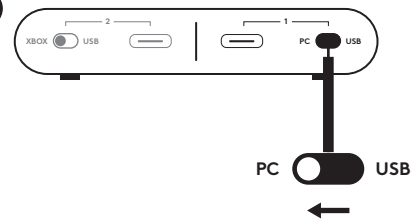 


4

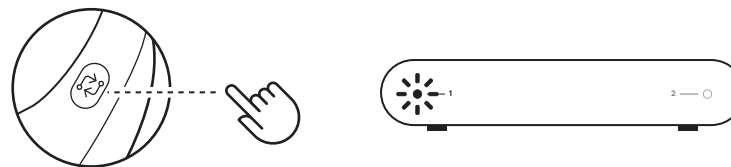 


„Bluetooth®“

 
1

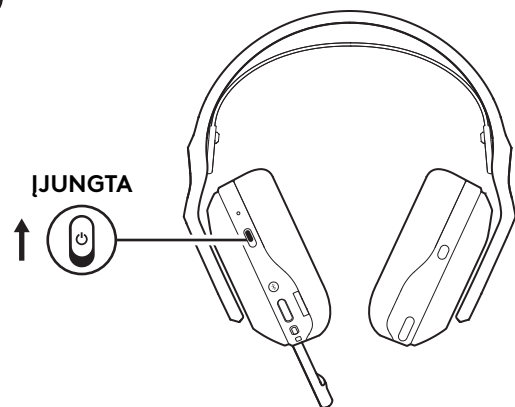

2

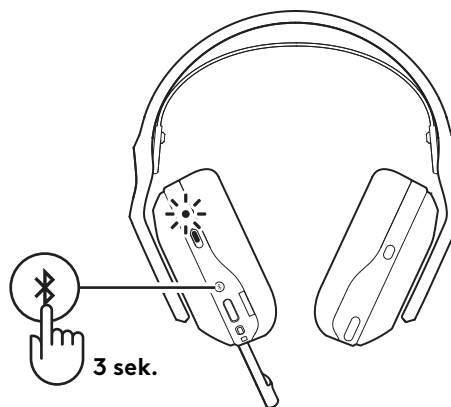 


3

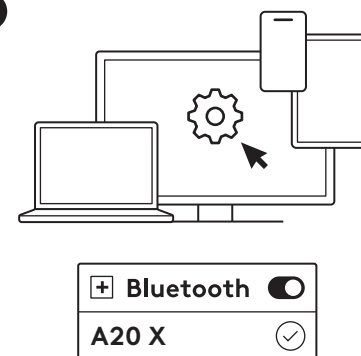 


USB

 1

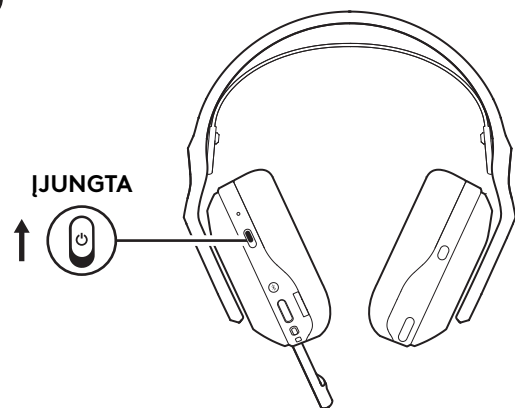


2

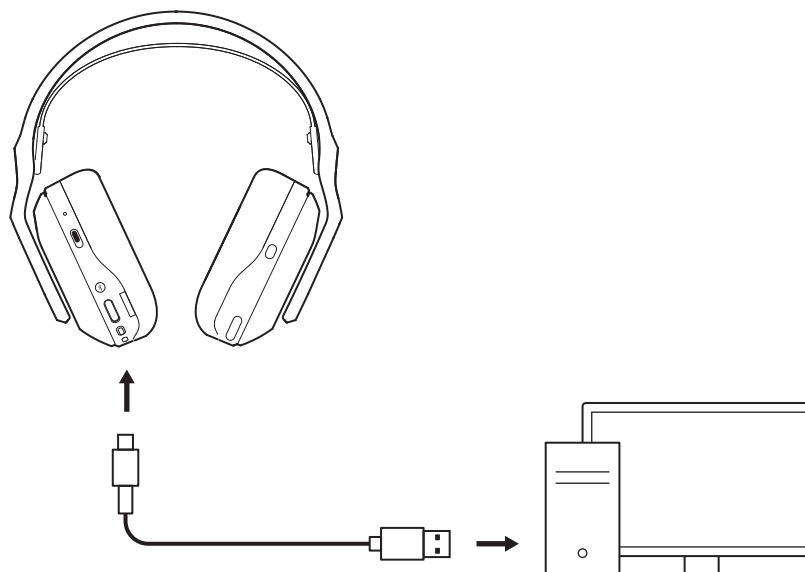 


XBOX SERIES X|S

 
1

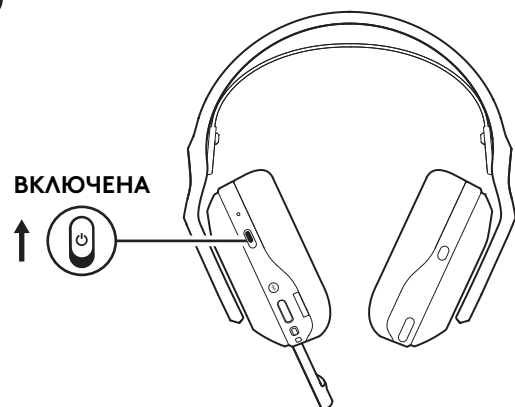


2

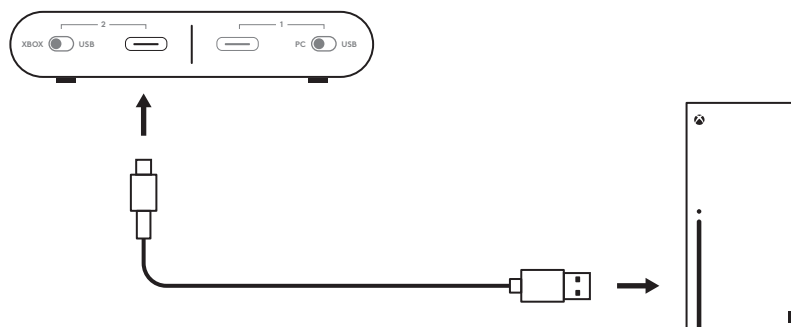 

3

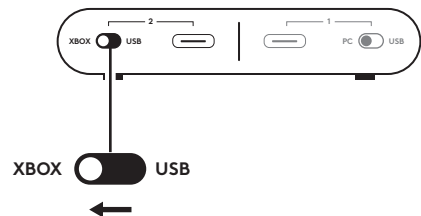 


4

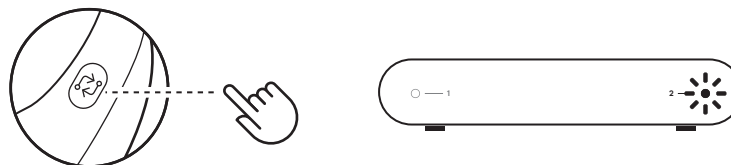 


PLAYSTATION / NINTENDO

 
1

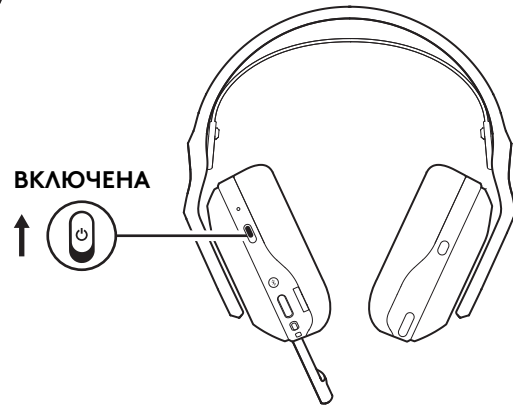


2

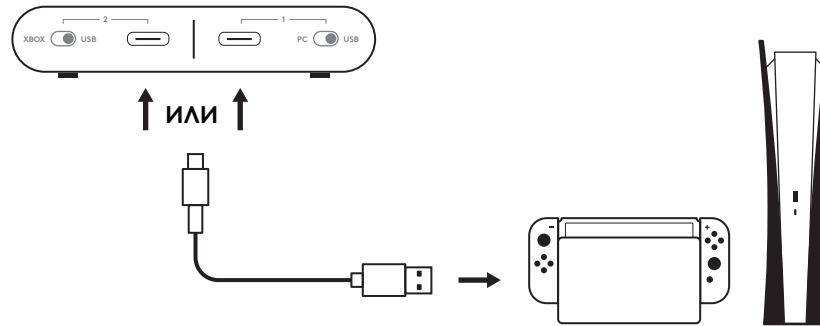 


3

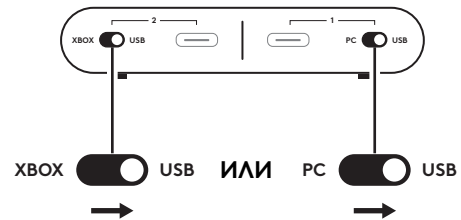 


4

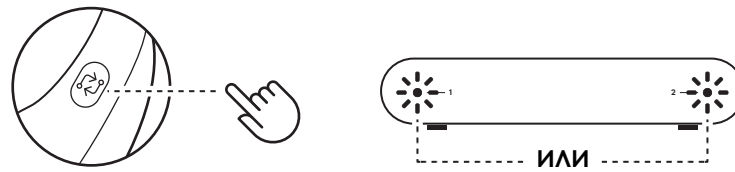 


1

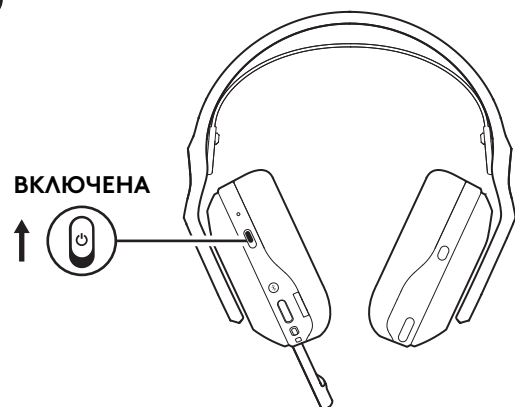 


2

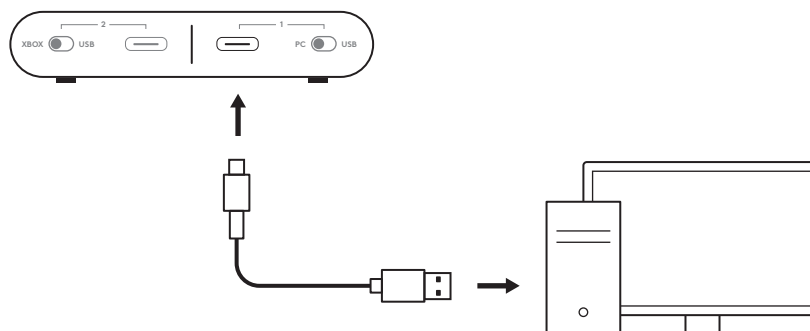 

3

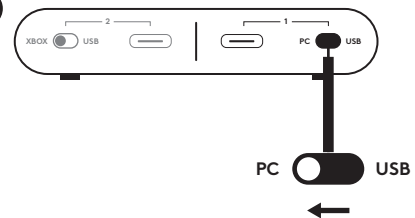 


4

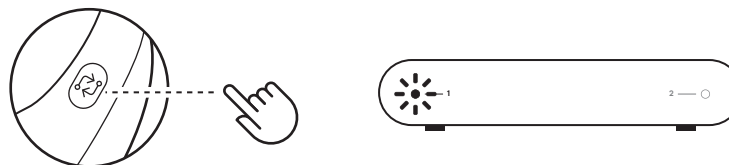 


Bluetooth®

 
1

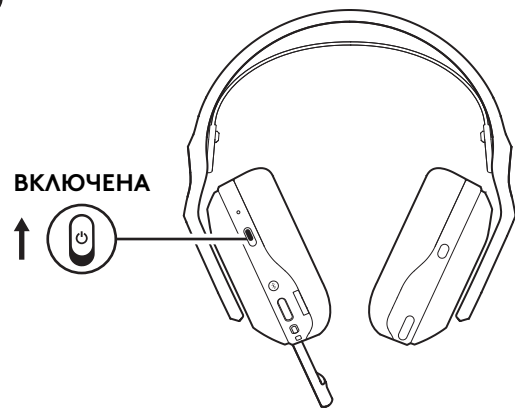

2

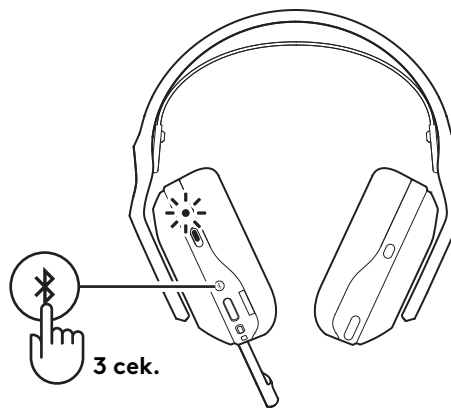 


3

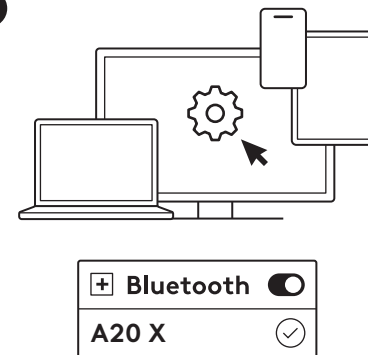 


USB

 1

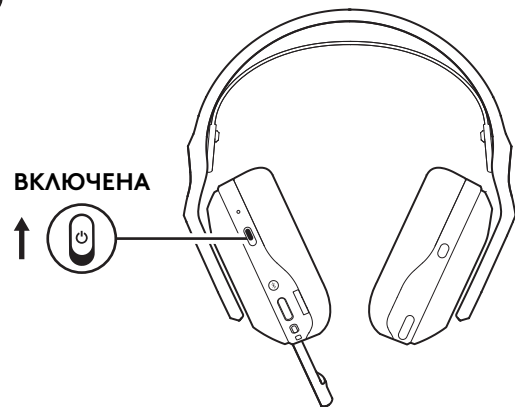


2

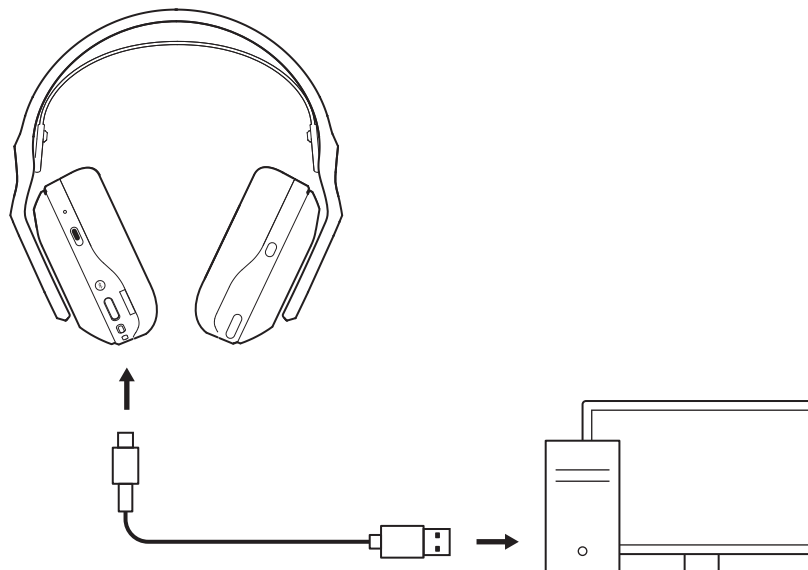 


XBOX SERIES X|S

 
1

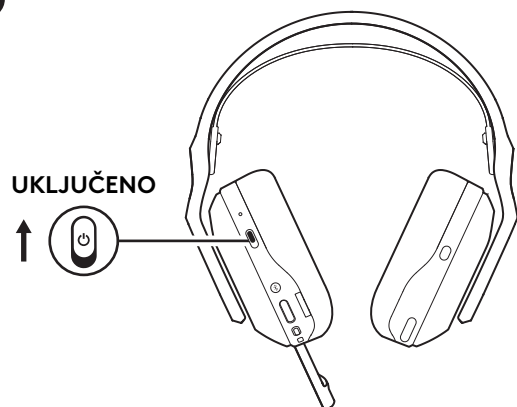


2

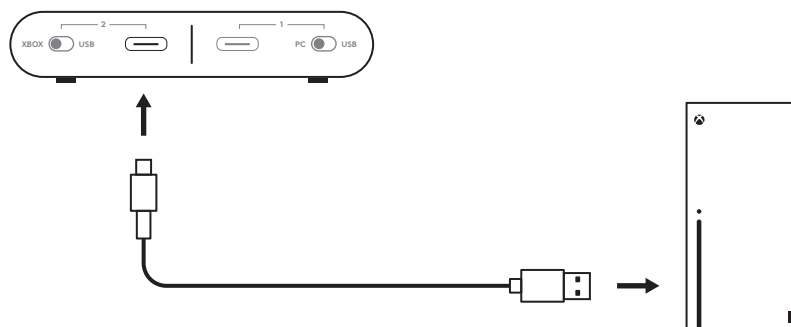 

3

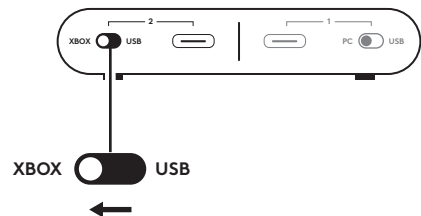 


4

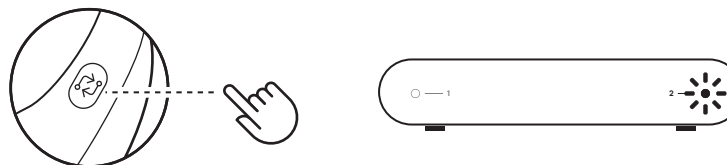 


PLAYSTATION/NINTENDO

 
1

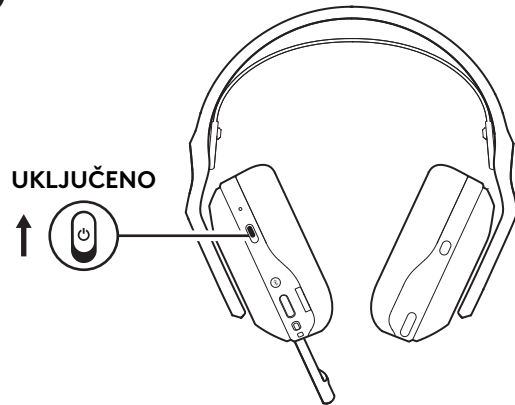


2

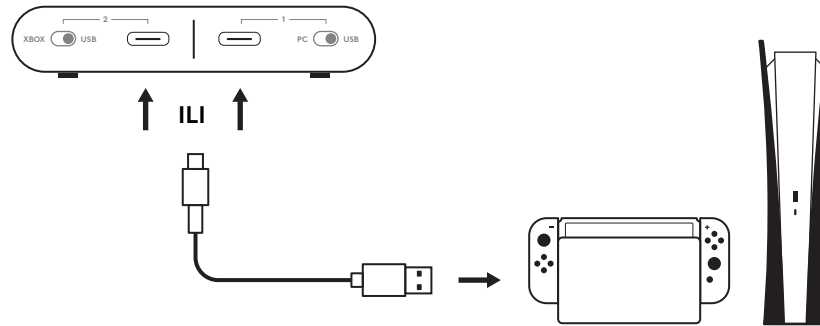 


3

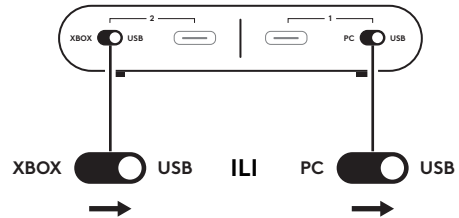 


4

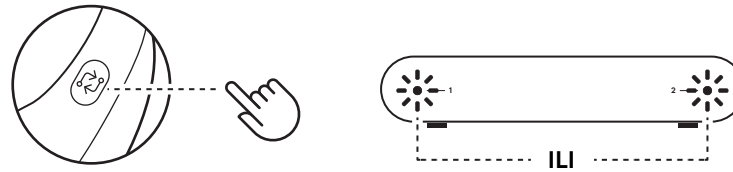 


1

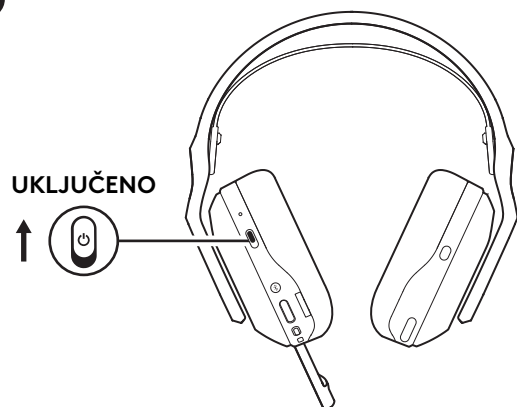 


2

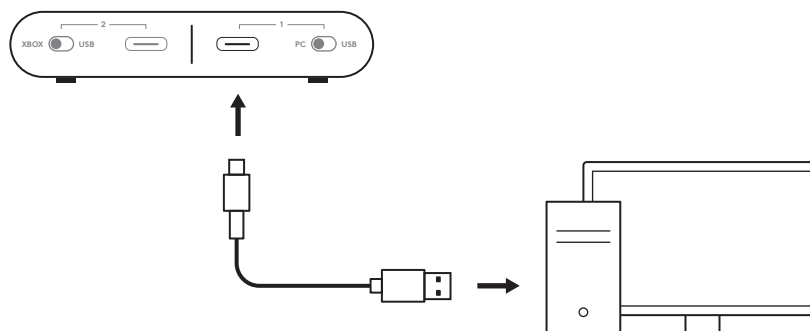 

3

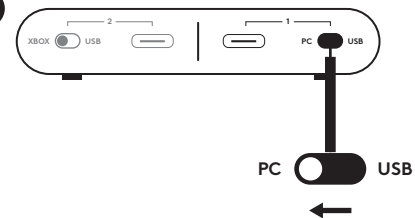 


4

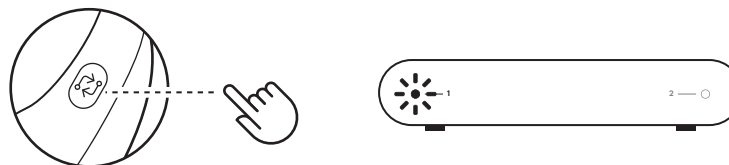 


Bluetooth®

 
1

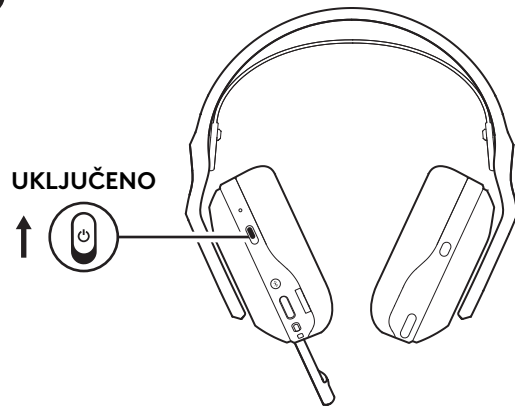

2

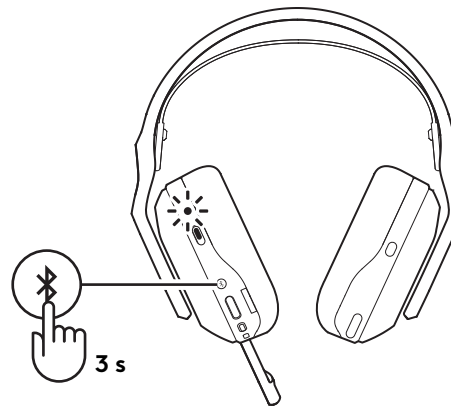 


3

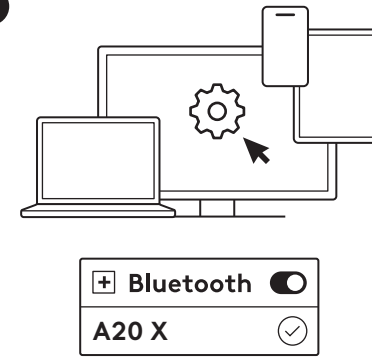 


USB

 1

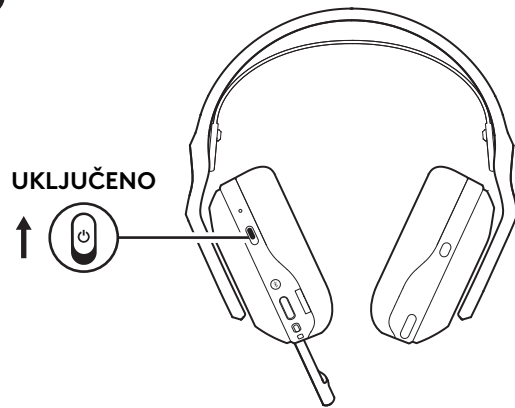


2

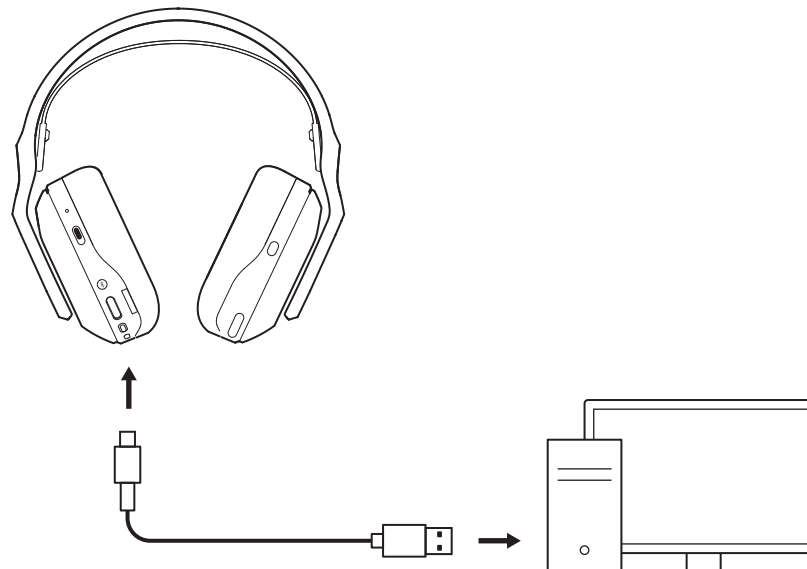 


XBOX SERIES X|S

 
1

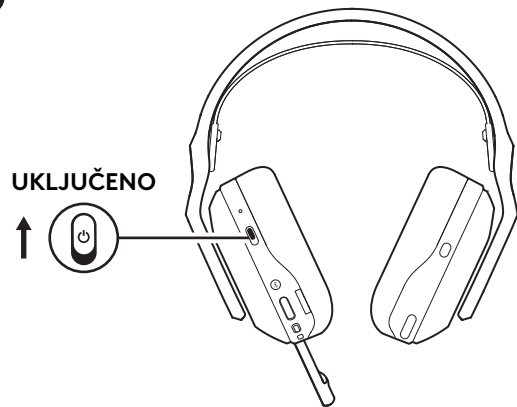


2

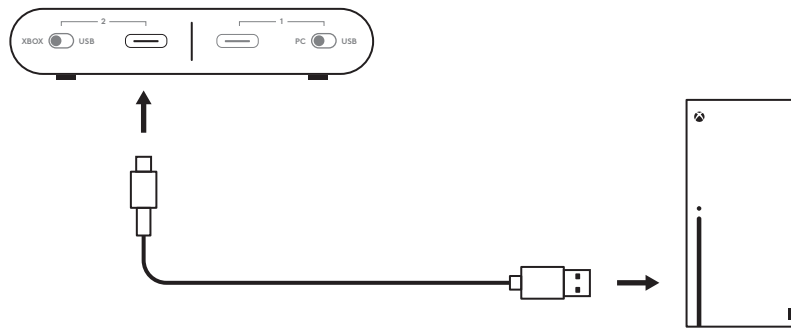 

3

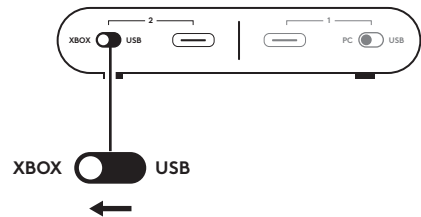 


4

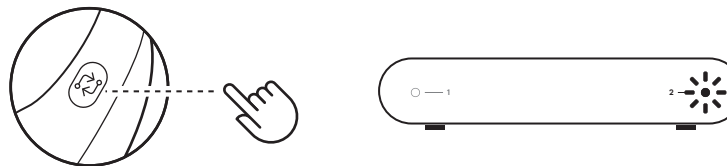 


PLAYSTATION / NINTENDO

 
1

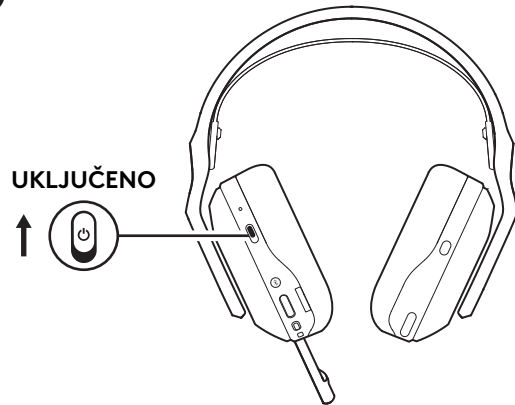


2

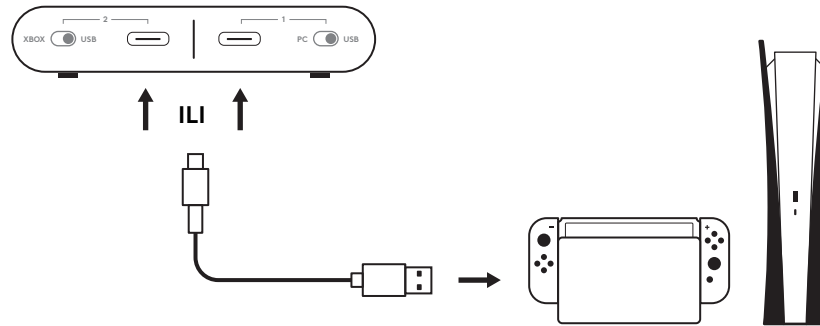 


3

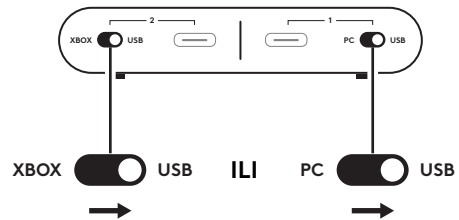 


4

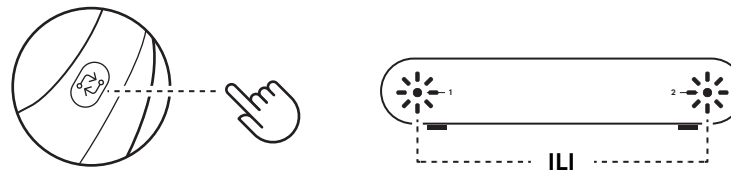 


1

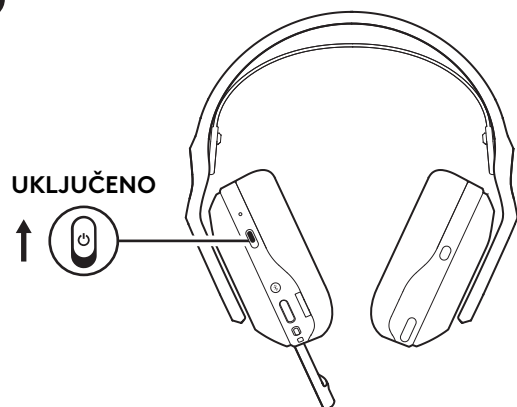 


2

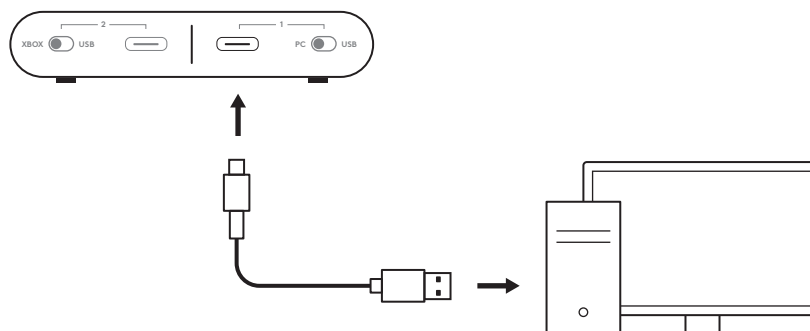 

3

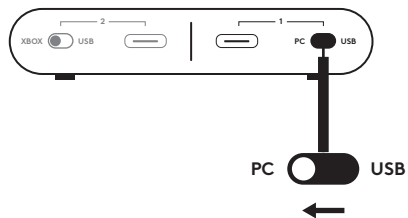 


4

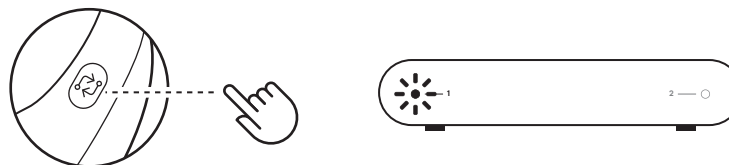 


Bluetooth®

 
1

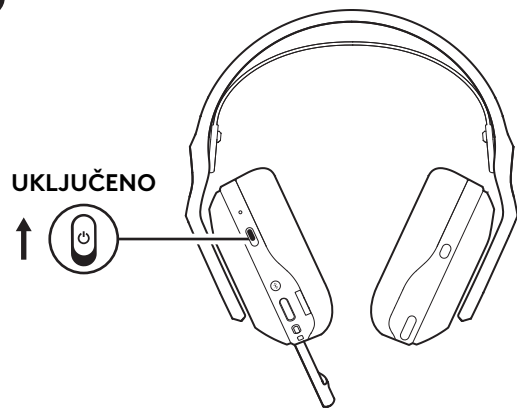

2

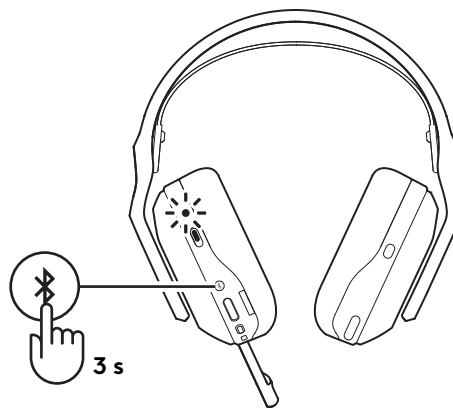 


3

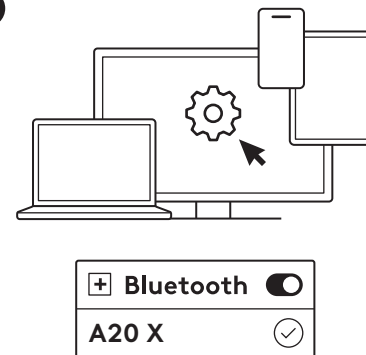 


USB

 1

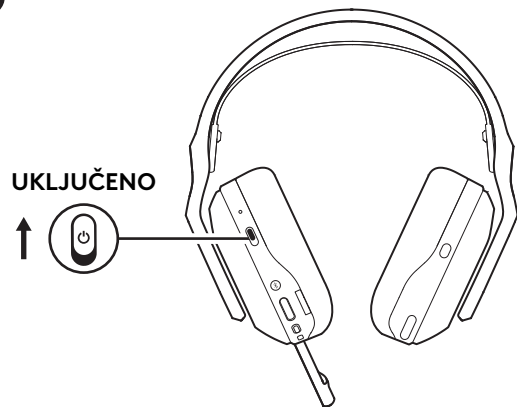


2

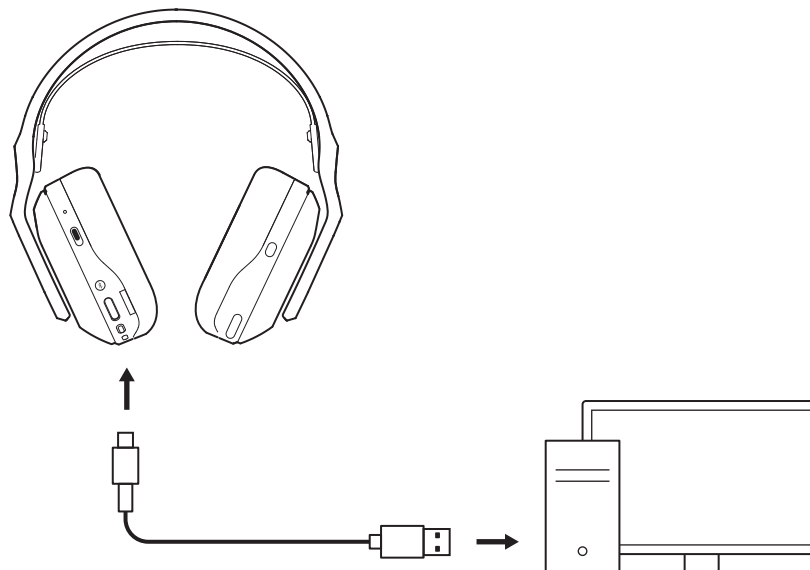 


XBOX SERIES X|S

 
1

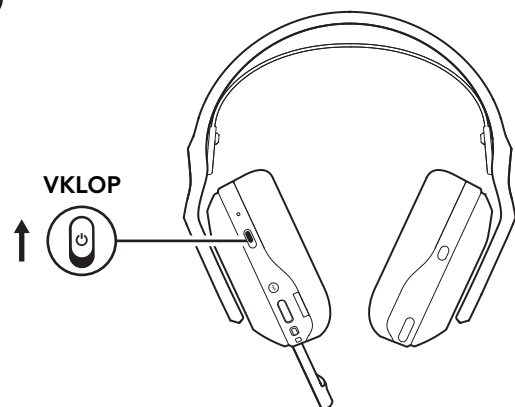


2

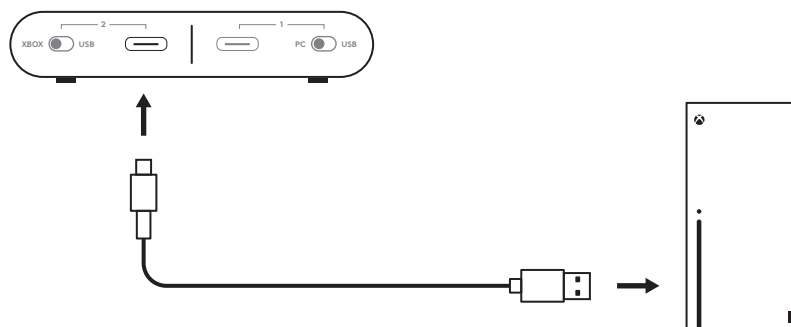 

3

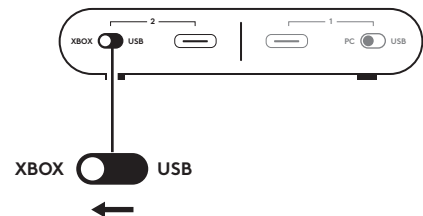 


4

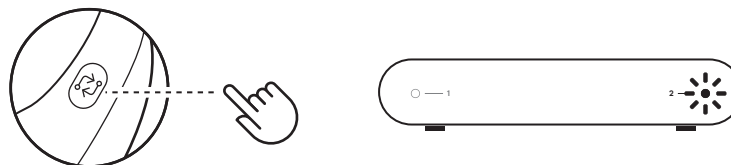 


PLAYSTATION/NINTENDO

 
1

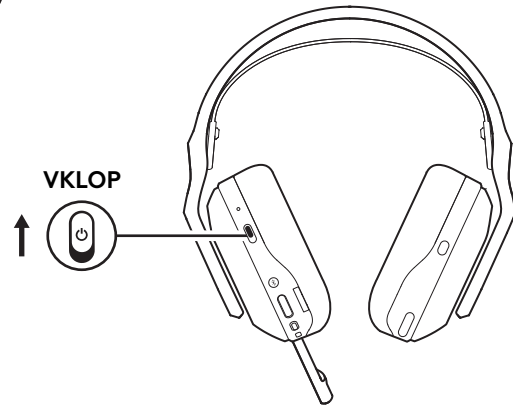


2

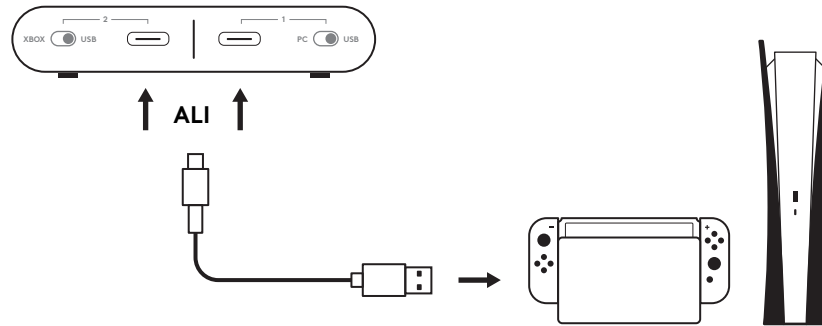 


3

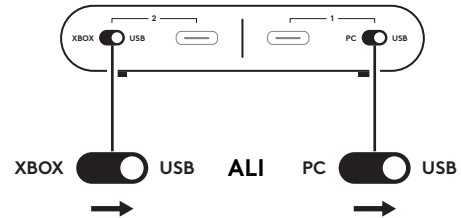 


4

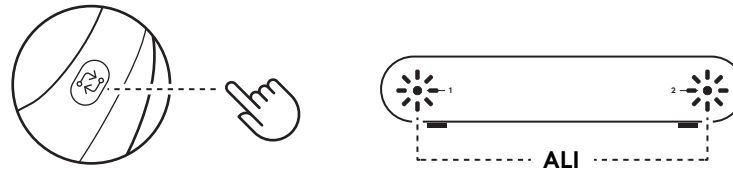 


1

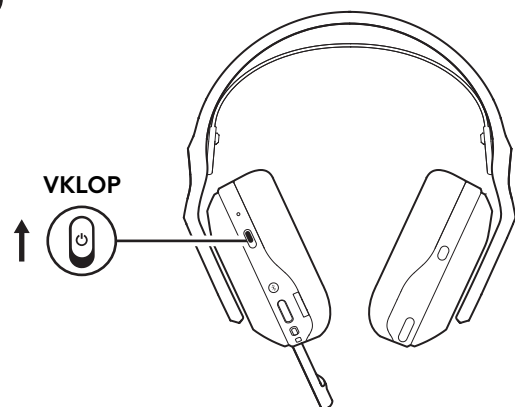 


2

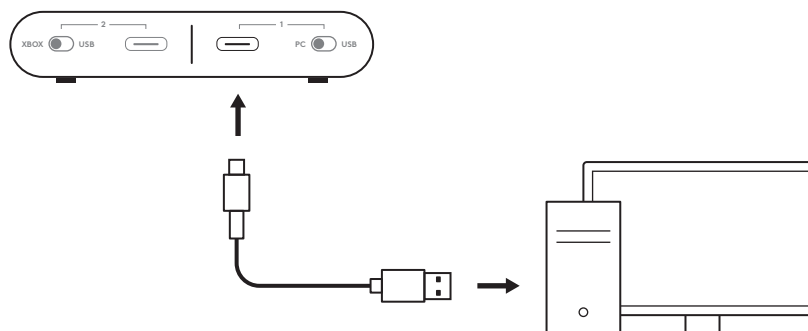 

3

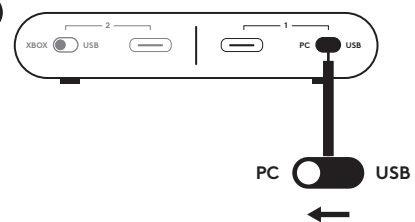 


4

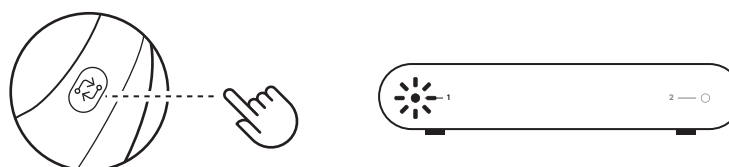 


Bluetooth®

 
1

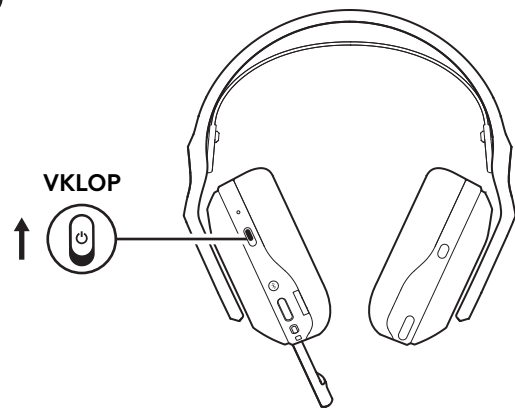

2

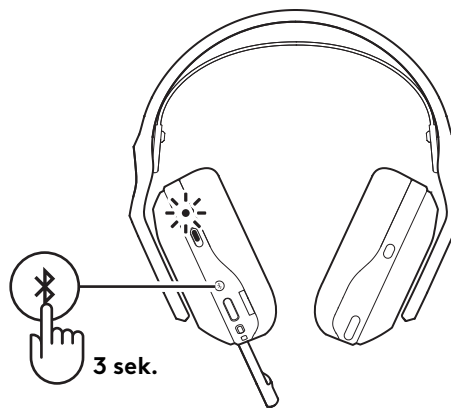 


3

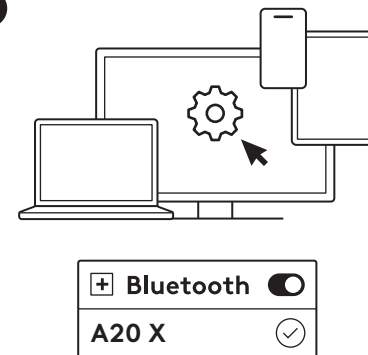 


USB

 1

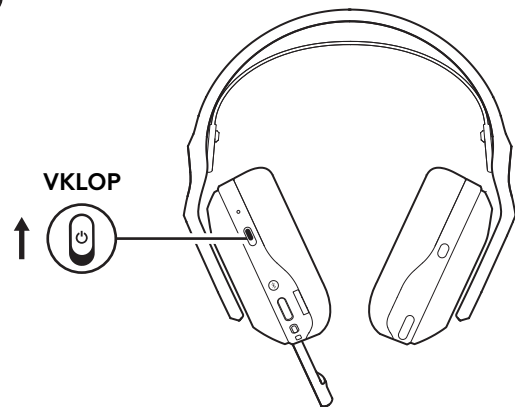


2

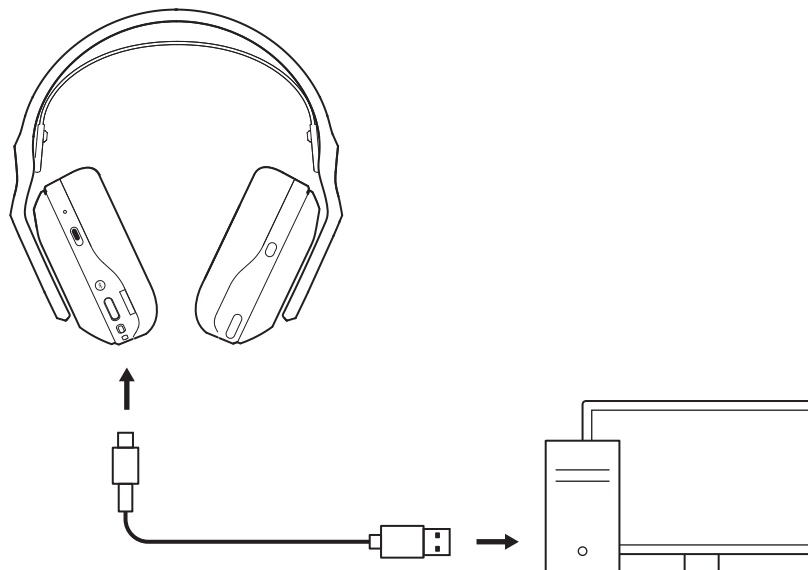 


XBOX SERIES X|S

 
1

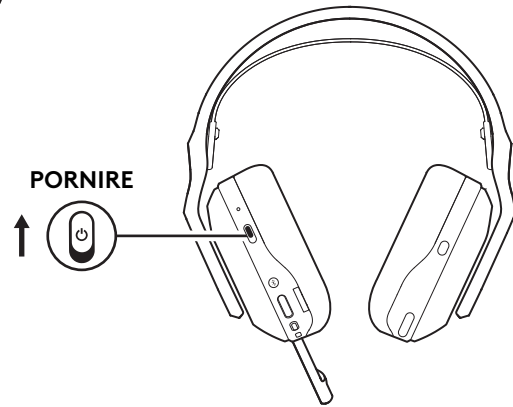


2

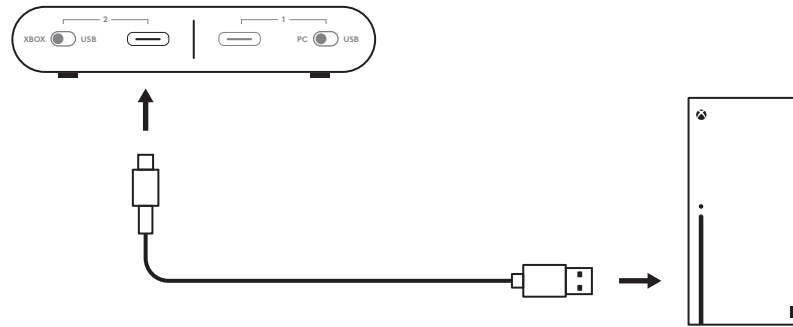 

3

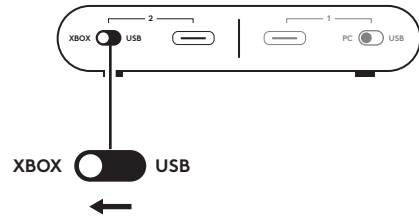 


4

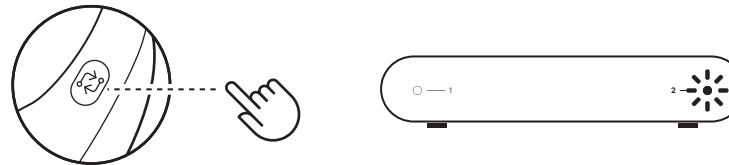 


PLAYSTATION/NINTENDO

 
1

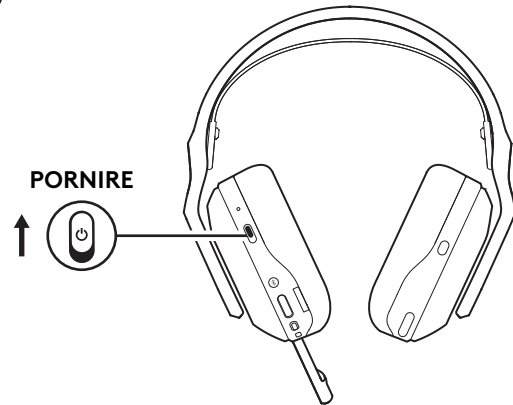


2

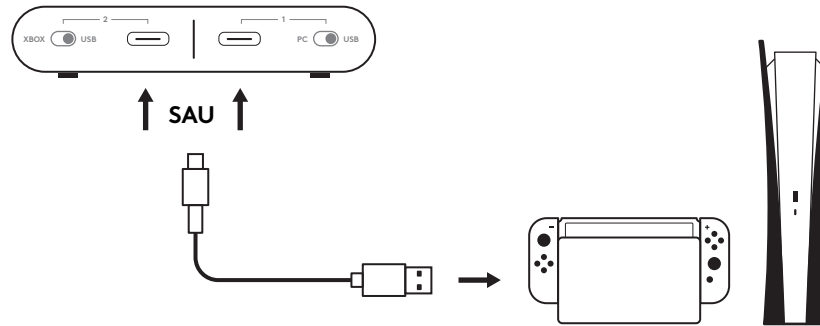 


3

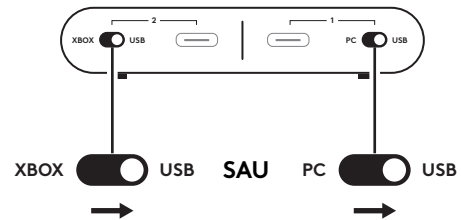 


4

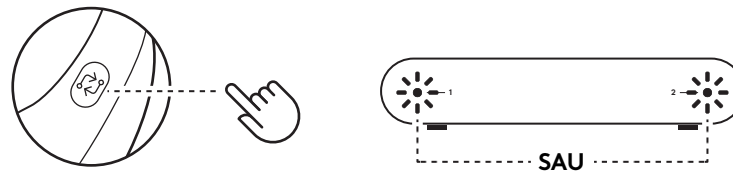 


1

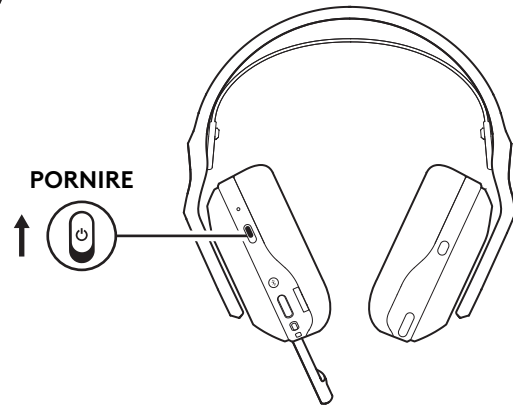 


2

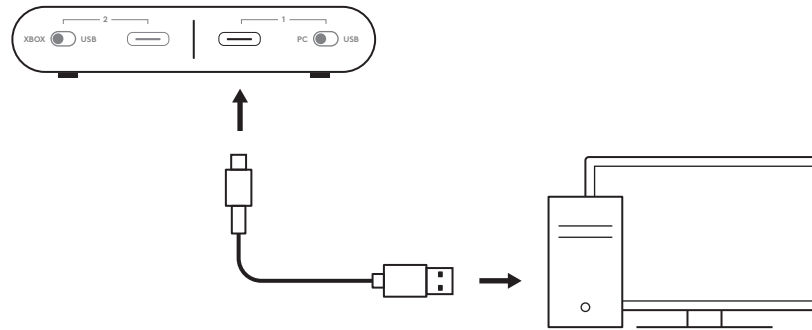 

3

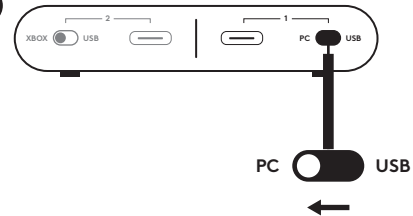 


4

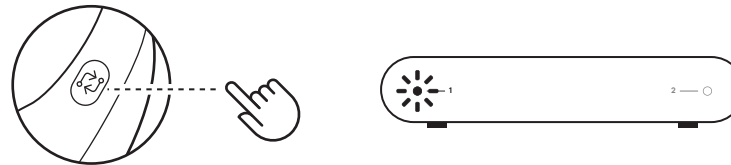 


Bluetooth®

 
1

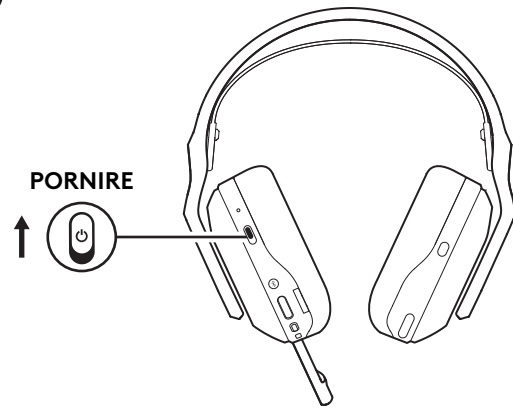

2

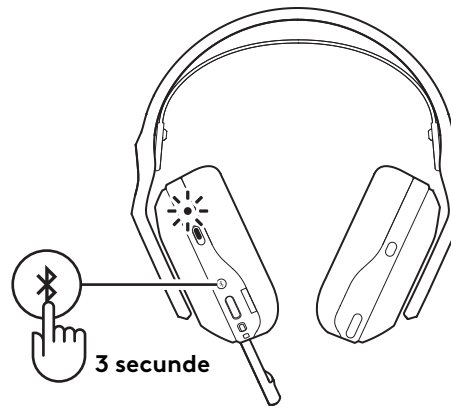 


3

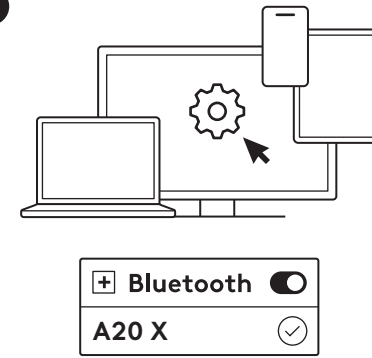 


USB

 1

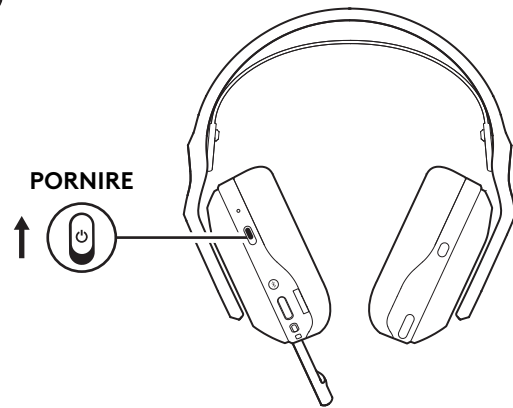


2

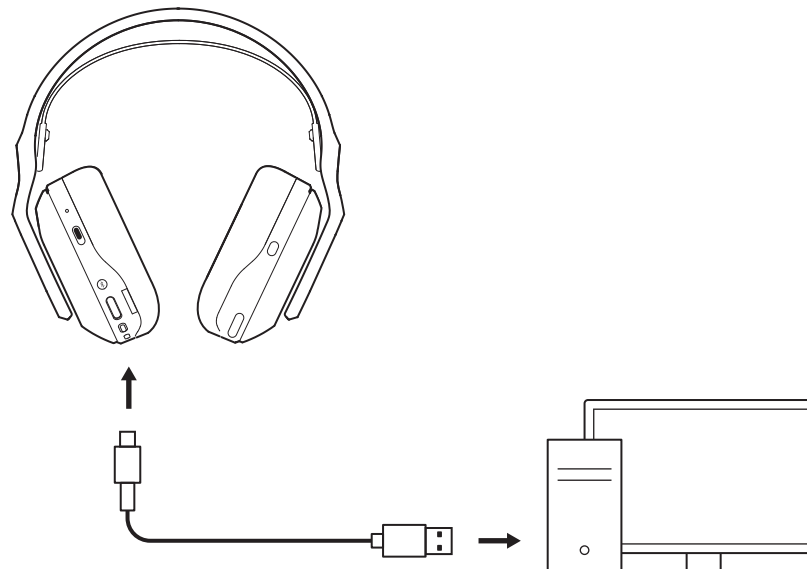 


XBOX SERIES X|S

 
1

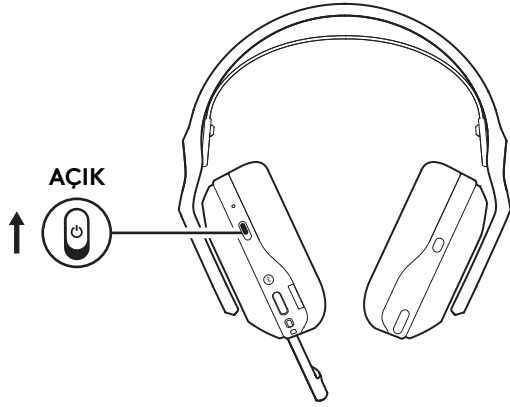


2

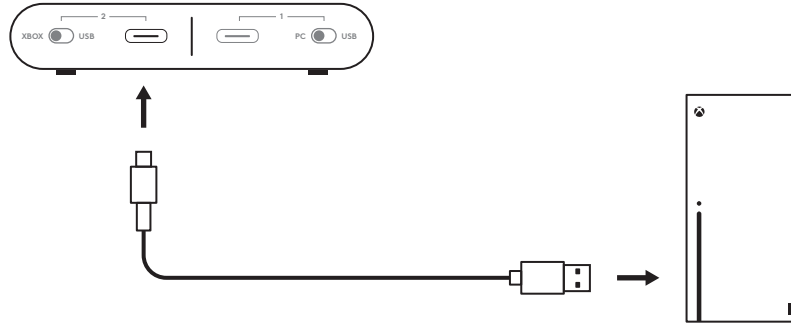 

3

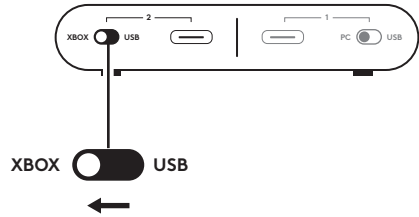 


4

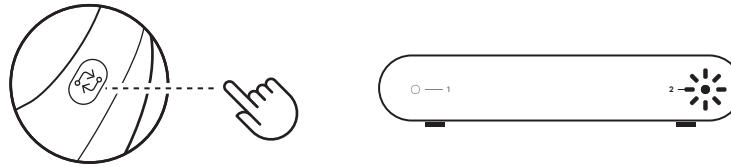 


PLAYSTATION / NINTENDO

 
1

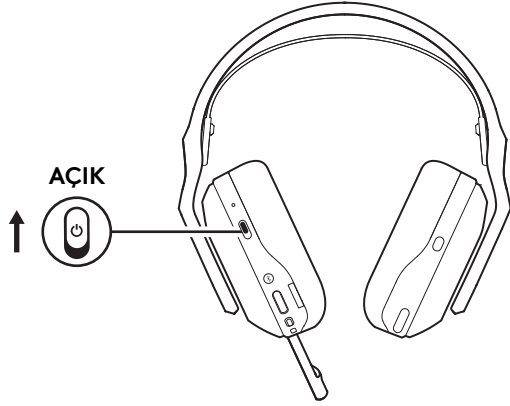


2

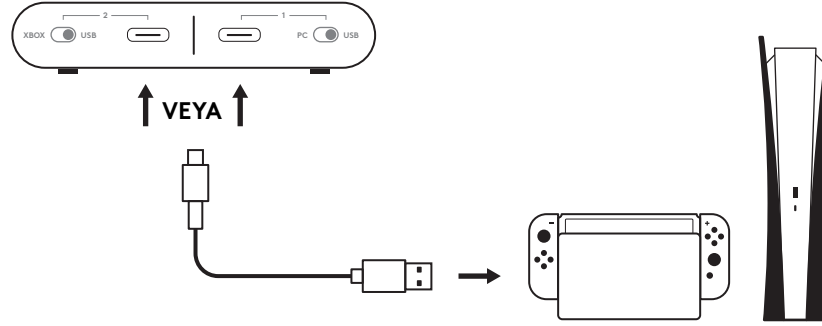 


3

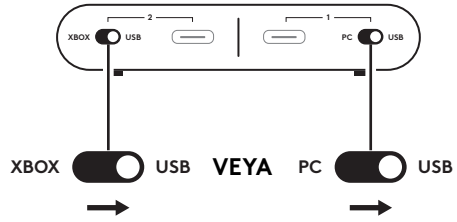 


4

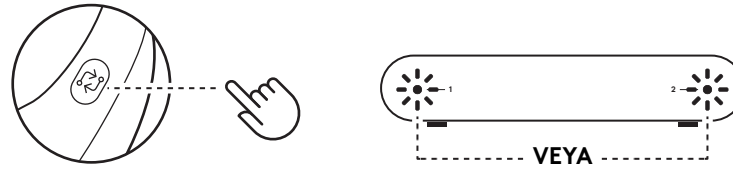 


1

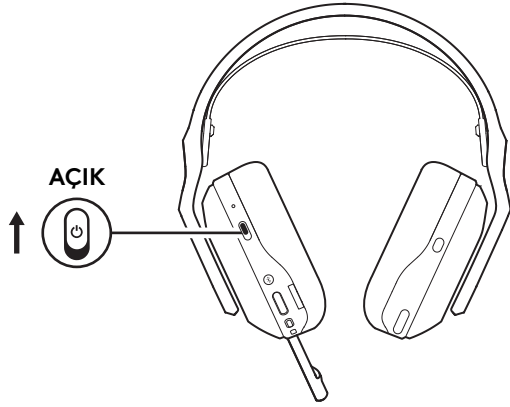 


2

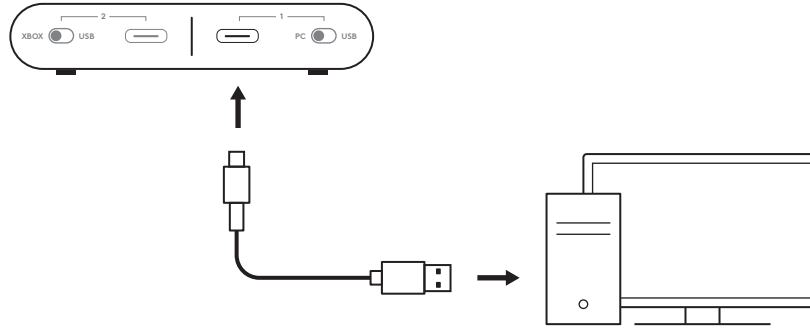 

3

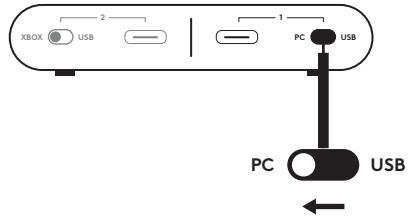 


4

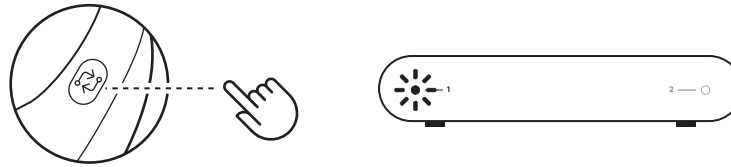 


Bluetooth®

 
1

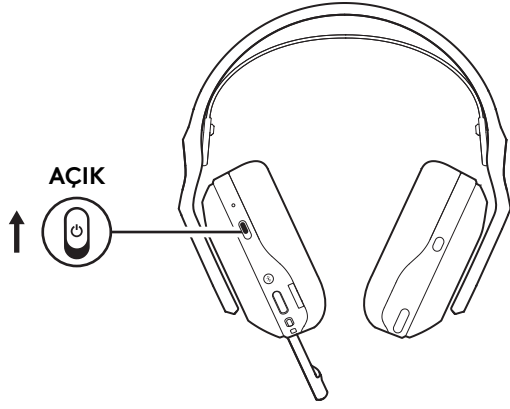

2

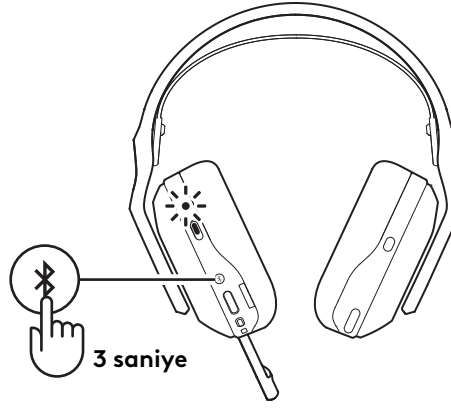 


3

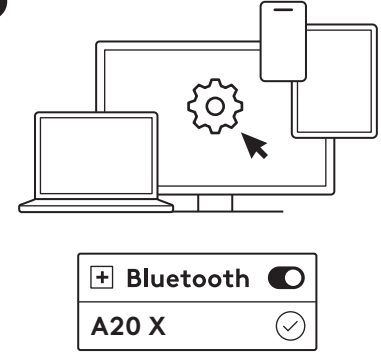 


USB

 1

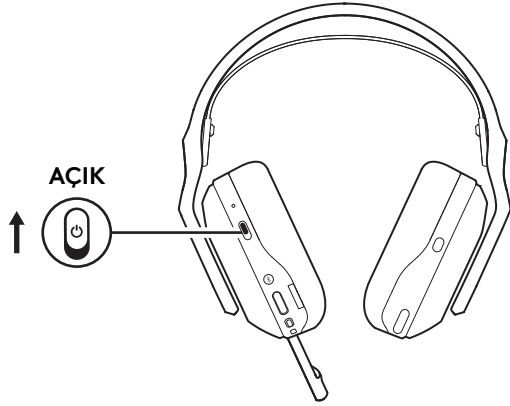


2

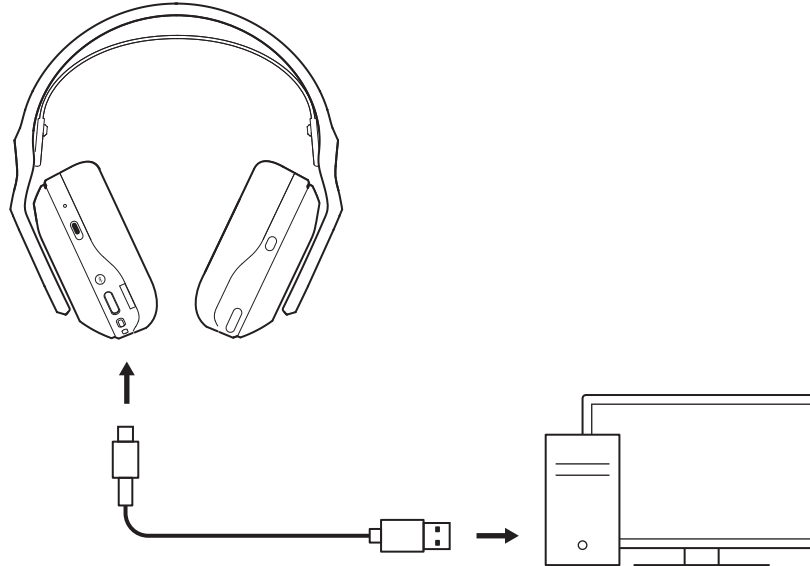 


XBOX SERIES X|S جهاز

 
1

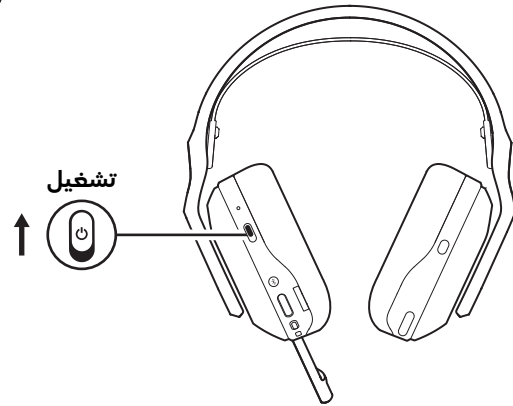


2

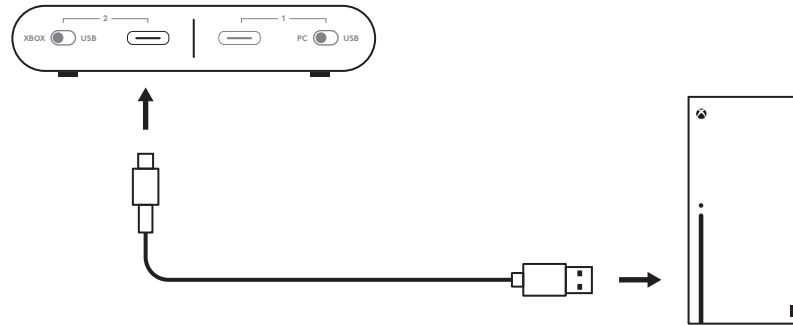 

3

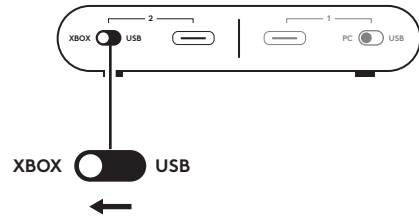 


4

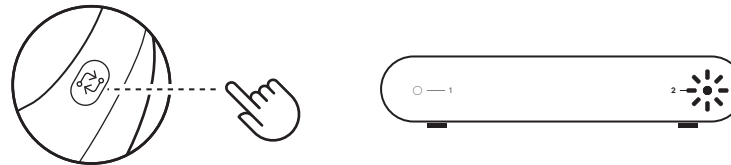 


PLAYSTATION / NINTENDO

 
1

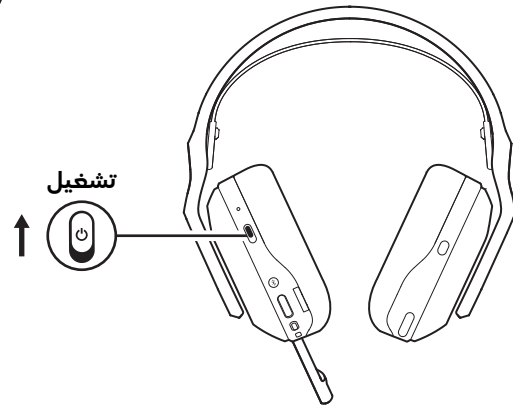


2

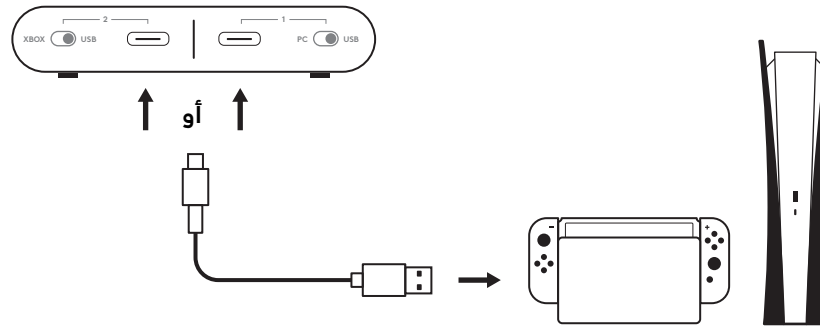 

3

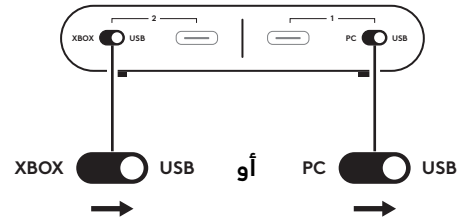 


4

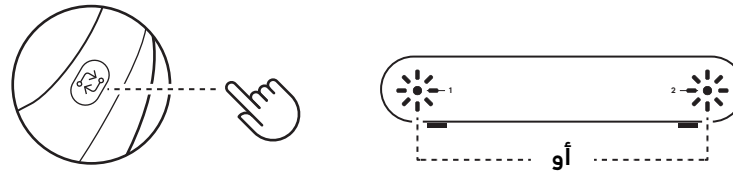 


كمبيوتر شخصي WINDOWS|MAC

 
1

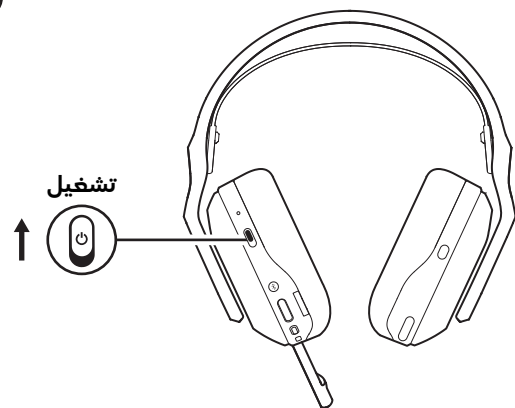


2

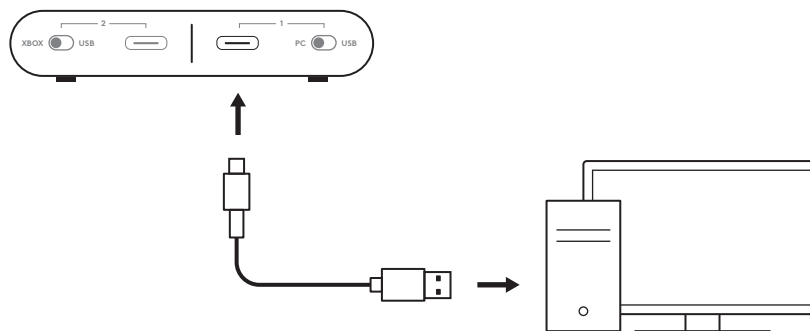 

3

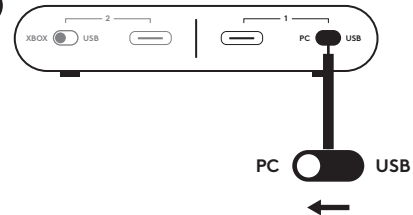 


4

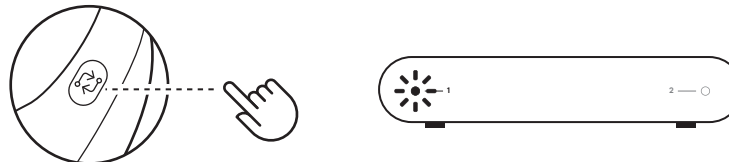 

Bluetooth®

 
1

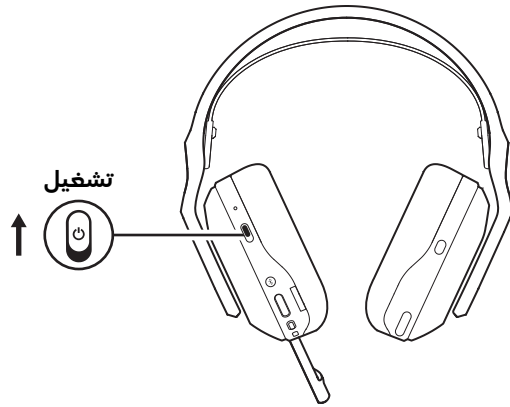

2




 3

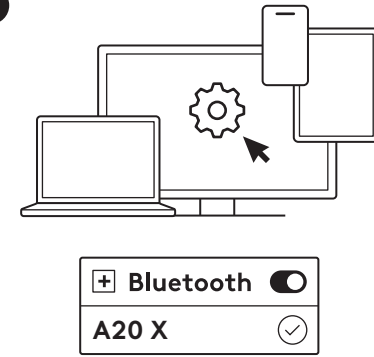


USB

 1

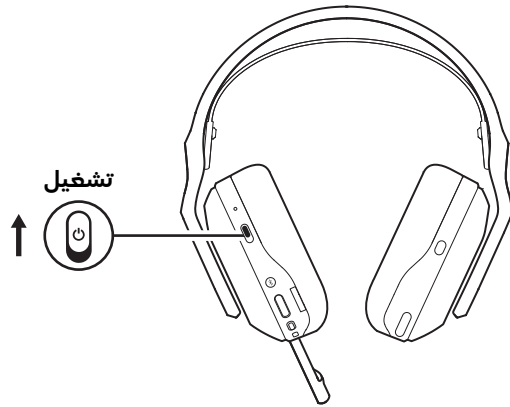


2

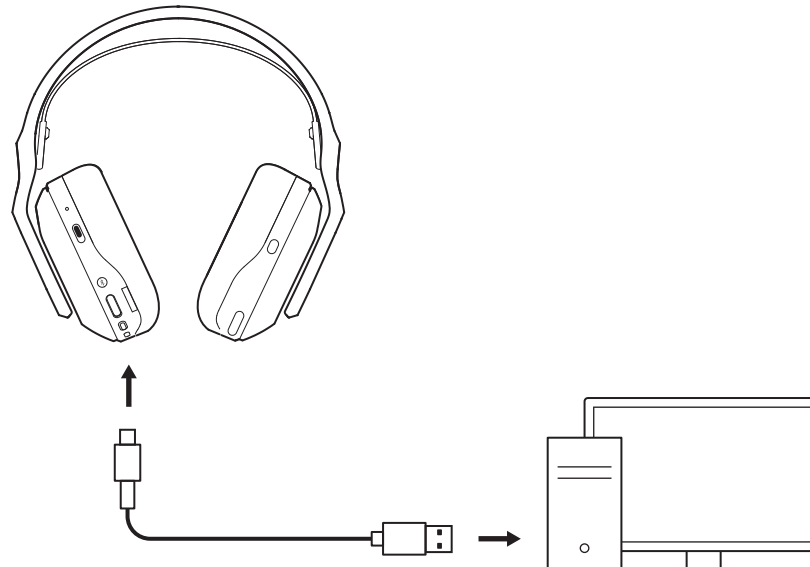 


XBOX SERIES X|S

 
1

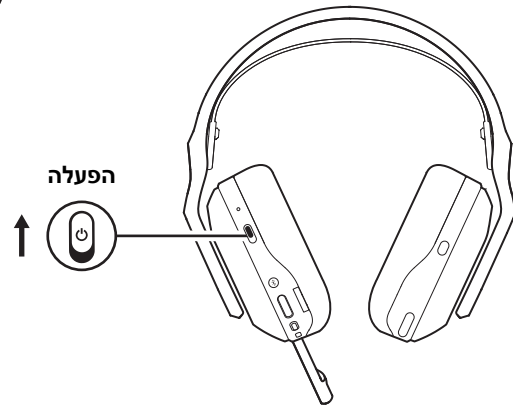


2

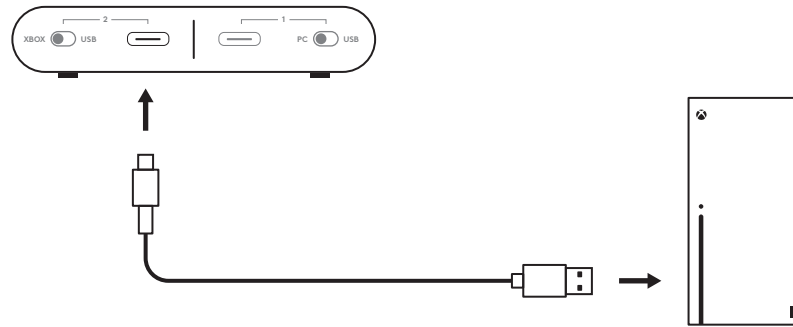 

3

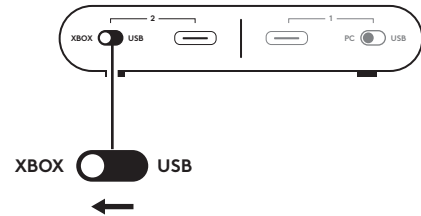 


4

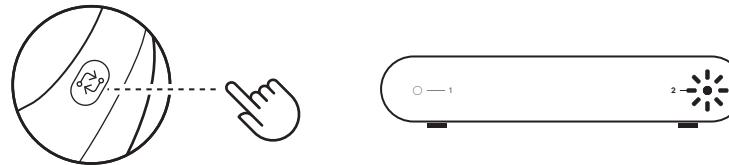 


PLAYSTATION / NINTENDO

 
1

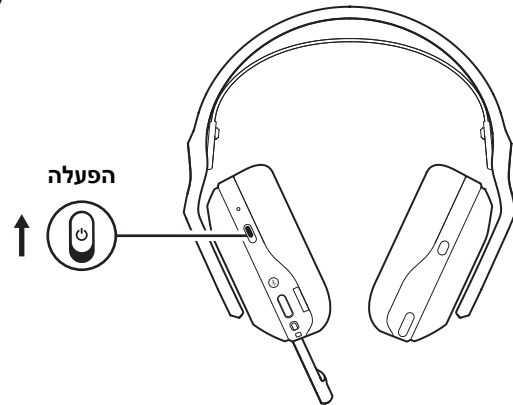


2

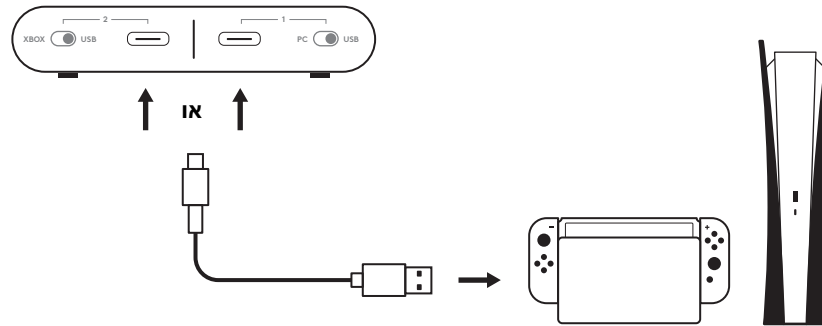 

3

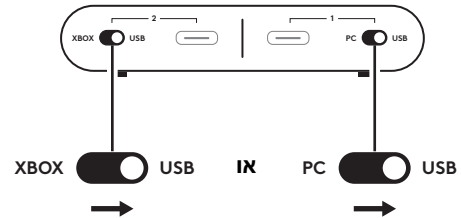 


4

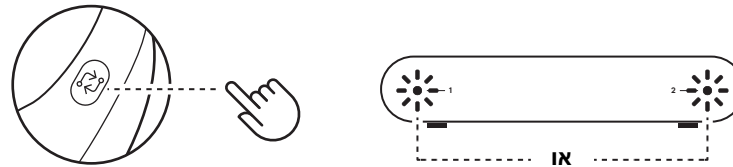 


PC WINDOWS | MAC

 
1

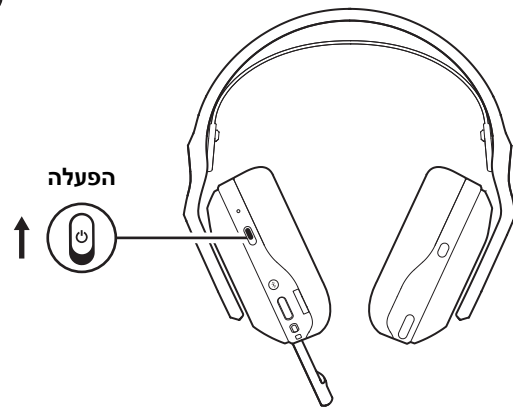


2

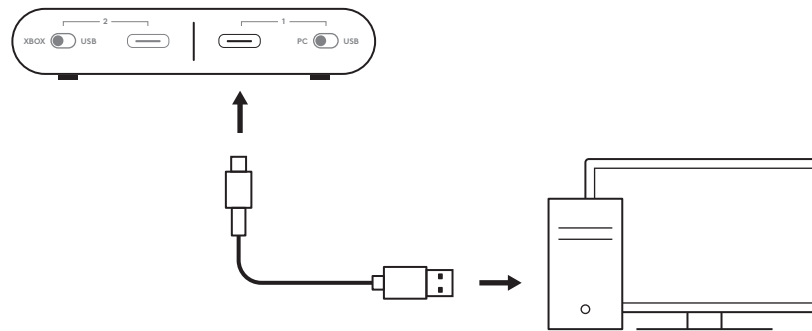 

3

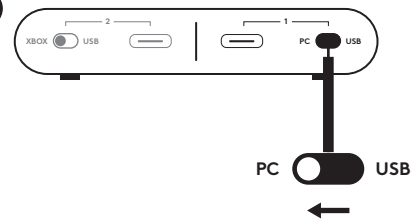 


4

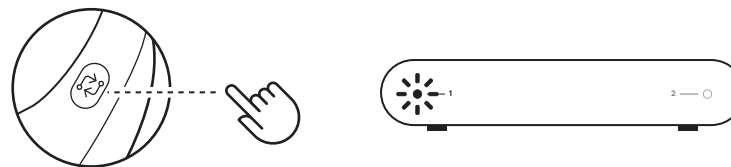 


Bluetooth®

 
1

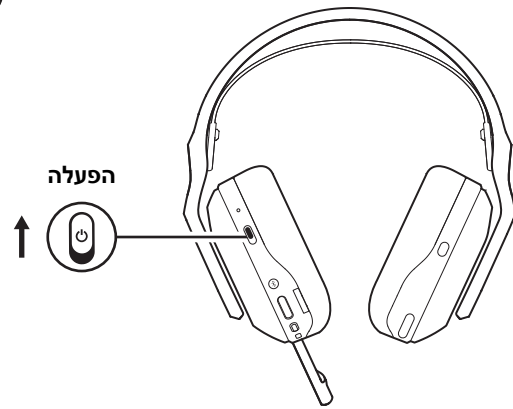

2

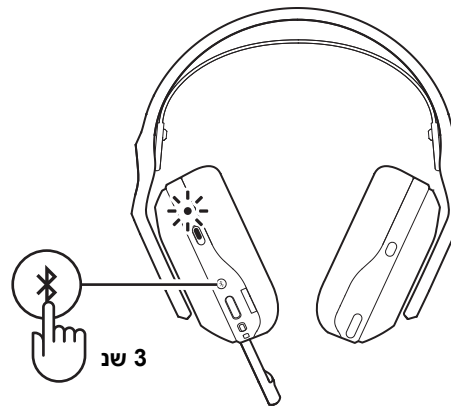 


3

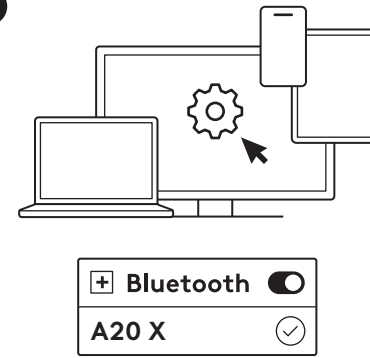 


USB

 1

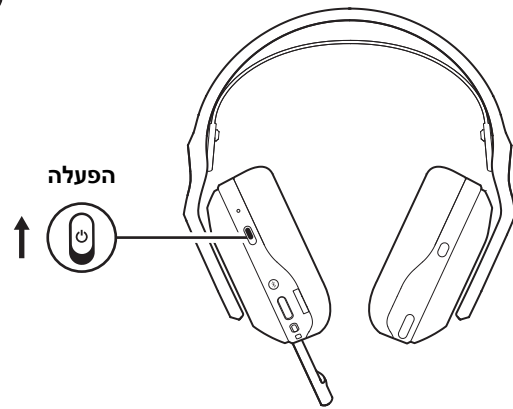

2

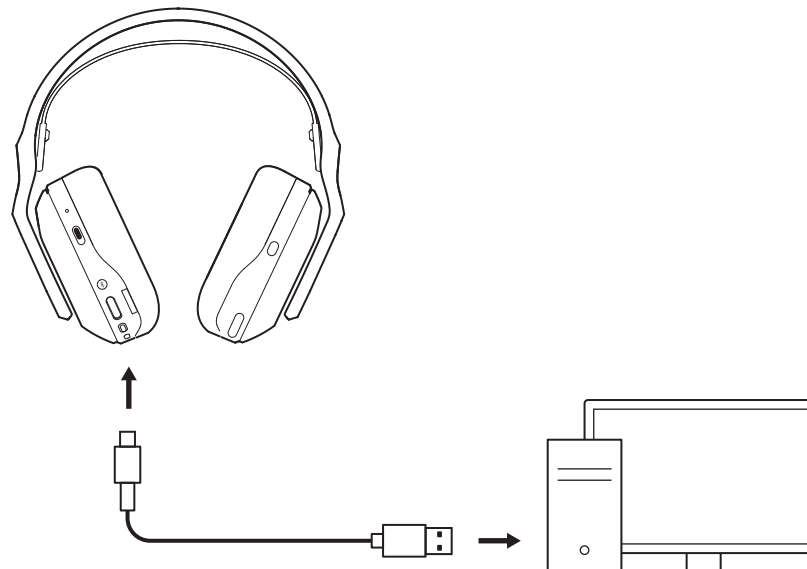 



© 2025 Logitech. Logitech, Logitech G, and their logos are trademarks or registered trademarks of Logitech Europe S.A. and/or its affiliates in the U.S. and other countries. Xbox and their logos, are trademarks of the Microsoft Corporation. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Logitech is under license. Nintendo Switch is a trademark of Nintendo of America, Inc. PlayStation is a trademark of Sony Interactive Entertainment Inc. USB-C and the USB logo are trademarks of USB Implementers Forum. All other trademarks are the property of their respective owners.

WEB-621-002677 002