



## MCHOSE

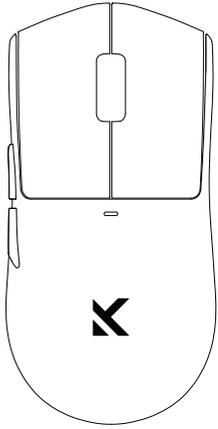

— K7 Ultra —  
Gaming Wireless Mouse

Kind Reminder: The images in this manual are for illustration purposes only. Please refer to the actual product.

### PRODUCT FUNCTION DESCRIPTION

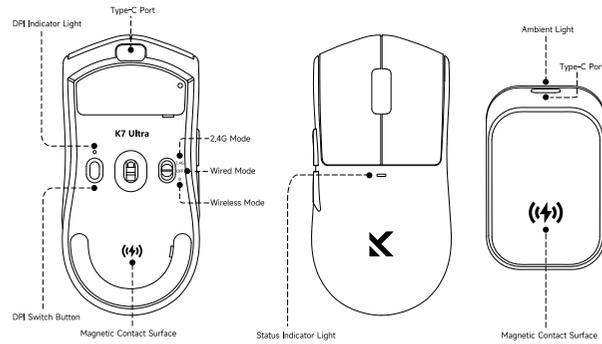


### CHARGING/WIRED CONNECTION




- Plug the standard USB cable into the computer's USB port, and the Type-C end into the mouse's corresponding port. The mouse will then switch to wired mode and begin charging.

### MAGNETIC WIRELESS CHARGING DOCK CHARGING

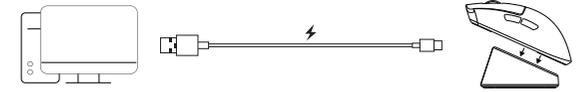


- Plug the standard USB cable into the computer's USB port, and the Type-C end into the magnetic wireless charging dock.
- Place the mouse properly on the magnetic wireless charging dock; the indicator light will stay solid red to indicate charging.
- Once fully charged, the indicator light will stay solid green.
- When both wired and wireless charging are connected, wired charging takes priority.

### 2.4G CONNECTION

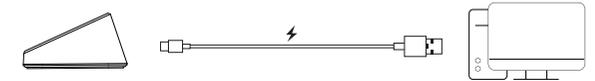

- Switch the power to [2.4G], then plug the standard USB cable into the computer's USB port and the Type-C end into the magnetic wireless charging dock.
- Manual pairing (default is pre-paired): Press and hold the mouse's [Left + Middle + Right] buttons for about 5 seconds until the green indicator flashes rapidly to enter pairing mode. Then, insert the standard USB cable's Type-C end into the magnetic wireless charging dock connected to the computer, and bring the mouse within 20cm of the dock. The indicator light will turn off once pairing is successful.
- When both the 1K and 8K receivers are connected to the computer, the mouse will pair with the one that was plugged in first.

### WIRELESS CONNECTION

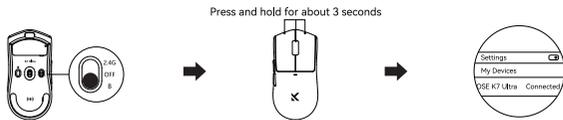

- Switch the power button to [B], search for the pairing name **MCHOSE K7 Ultra**, and click to connect. If the connection fails, press and hold [Left + Middle + Right] buttons for about 3 seconds until the indicator flashes rapidly to enter pairing mode again. When the connection is successful, the indicator light will turn off.

### DRIVER INTRODUCTION

#### Web Driver

<https://www.mchose.store/pages/firmware-2>


**Note:** Open the URL in a browser, click on [Open M HUB WEB] > [Initialize Device] > [Allow Browser Access], and then select the corresponding product model to connect.

#### Desktop App Driver

<https://www.mchose.store/pages/firmware-2>


Open the URL in a browser, click on **Download M HUB Driver** and then download and install it.  
**Note:** The MHUB desktop app driver currently supports only Windows 10 and above; Windows 7 and macOS are not supported at this time.

### DPI ADJUSTMENT

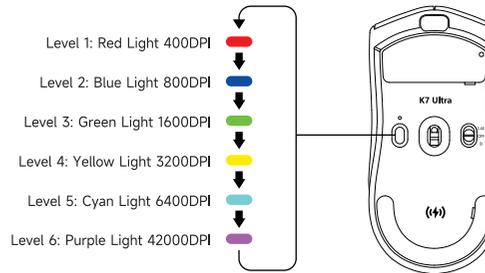

### BATTERY STATUS INDICATOR

- Indicator flashing red: Please charge in time
- Indicator solid red: Charging
- Indicator solid green: Fully charged

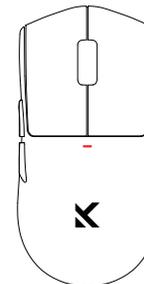

### NOTICE

This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This device generates, uses, and can radiate radio frequency energy, and if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this device does cause harmful interference to radio or television reception (which can be determined by turning the device on and off), we encourage the user to try one or more of the following measures to correct the interference:

- Reorient or relocate the receiving antenna.
  - Increase the distance between the device and receiver.
  - Connect the device to a different circuit from the one to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the responsible party could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.  
The operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### CHARGING INSTRUCTION

1. It is recommended to charge the mouse only via the computer's USB port.
2. Do not use low-quality, non-standard power adapters to charge the mouse.
3. Do not use over-voltage or over-current power adapters to charge the mouse.
4. Keep the mouse away from high-temperature devices during charging.
5. Turn off the power switch when the mouse is not in use for an extended period.

The above charging instructions also apply to other rechargeable devices (keyboard, mouse, headset, speakers, etc.).