

BioloMix

Milk Frother User Manual



Model No:BN11

220-240V	50/60Hz	500W
----------	---------	------

SAVE THESE INSTRUCTIONS

- a) A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- b) Extension cords are available and may be used if care is exercised in their use.
- c) If an extension cord is used:
 - 1) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord; and
 - 3) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

This appliance has a polarized plug (one blade is wider than the other), to reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug, if it still does not fit, contact a qualified electrician.

Do not attempt to modify the plug in any way.

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT

Read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

IMPORTANT SAFEGUARDS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING!To reduce the risk of fire ,electrical shock or injury to persons or property:


- Carefully read all instructions before operating your new product for the first time and save for future reference.

- Remove and safely discard any packaging material and promotional labels before using the Milk Frother for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the plug of this appliance.
- Ensure the Milk Frother is properly assembled before use. Follow the instructions provided in this manual.
- Do not place the Milk Frother near the edge of a bench or table during operation. Ensure the power cord does not hang over the edge of the bench or table. touch hot surfaces or become knotted.
- Do not place the Milk Frother on or near a hot gas or electric burner, or where it could touch a heated Oven.
- This Milk Frother is not intended to be operated by means of an external timer or separate remote control system.
- Do not operate on a sink or drain board or polished wood surfaces.
- Ensure the appliance is operated on a clean, dry and level surface.
- This Milk Frother has been designed to heat and froth dairy milk and other milk alternatives. It is not intended to thicken or heat other food substances like cream, custard, gravies, water etc.
- This appliance is not designed for commercial or industrial use.
- Use cautiously when pouring warmed milk from the Milk Frother as hot milk can scald.
- Do not operate the appliance without liquid. Always fill to at least the 'Min' mark and never fill past the 'Max' mark.
- This appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children.
- Children should be supervised to ensure they do not play with the appliance.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The installation of a residual current device(safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- This appliance contains no user serviceable parts. Any maintenance other than cleaning should be performed by a qualified person.
- To protect against fire, electrical shock and injury to persons, do not immerse the whole unit, power plug or power cord in water, or any other liquid.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- Do not leave the appliance unattended whilst it is on.
- Do not touch hot surfaces. Use handles or knobs.
- Unplug from outlet when not in use and before cleaning.Allow to cool before putting on or

taking off parts, and before cleaning the appliance.

- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or cause injuries.
- To disconnect, turn any control to “ off “, then remove plug from wall outlet.
- Scalding may occur if the lid is removed during the brewing cycles.


FEATURE:

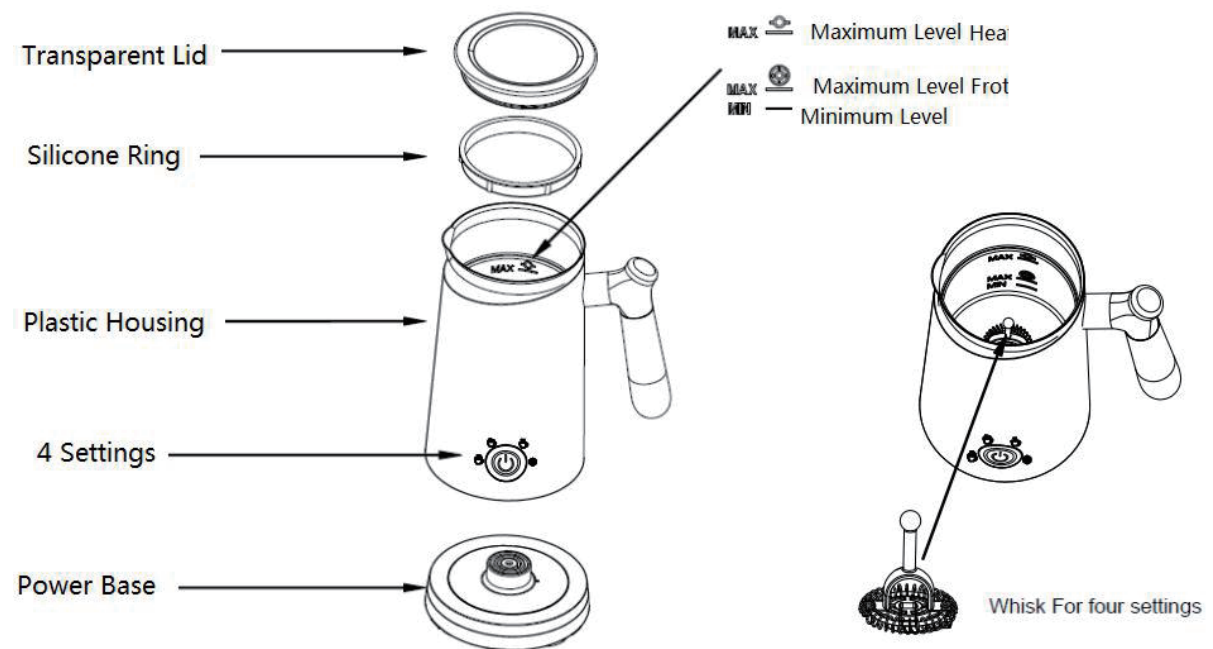






BEFORE FIRST USE

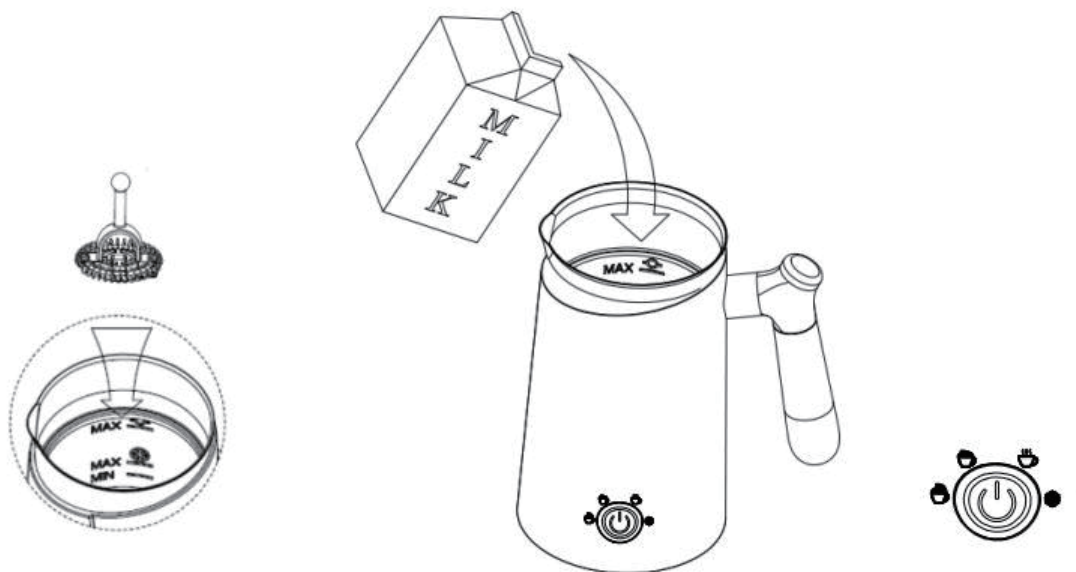- Carefully remove your Milk Frother from the box and remove any packaging materials.
- Clean the jug and accessories, as described in this manual, before first use.
- Fully unwind the power cord.

INSTRUCTIONS



1. Place the Milk Frother on a flat, level surface. Insert the whisk firmly onto the shaft at the base of the jug.
2. Pour the milk into the jug according to the max & min mark inside the jug. Max capacity chart is below for your reference.
3. Place the lid firmly onto the jug. then press the button to turn on.

Whisk	Functions	Icon of settings	Light color	Min capacity	Max. capacity
	Frothing Cold Milk		blue	100ml	130ml
	Frothing airy foam & Heating		red	100ml	130ml
	Frothing dense foam & Heating		red	100ml	130ml
	Heating (a small amount of froth)		red	100ml	300ml

Selecting setting: press the button to select the right setting, then wait for 3 seconds, the machine start to work with the selected setting.

HANDY HINTS:

- To protect the electric circuit, it has been set up that users need to wait for 3 seconds to turn on the appliance after the current is switched on.
- Always use the Milk Frother first to froth/heat your milk. While it is operating, prepare your coffee or hot chocolate.
- Use whole milk for best results-fat content>3.0%
- Milk heats to approximately 65° C (+/-5° C)based on the temperature of original milk is 5-8° C. This is the ideal temperature, as it ensures the flavour of the coffee is not impaired. and it also means you do not have to wait as long to drink your coffee.
- Keep the whisks in a safe place, because they are small they can be easily misplaced.
- After each froth/heat wait 2 minutes to allow the thermostat to rest. After 2 minutes the Milk Frother can be used again. To shorten this time, rinse with cold water and wipe dry after each use.
- This Milk Frother is designed to heat plain milk only.

RECIPES

Frothed Milk

Cappuccino

1/3 espresso

Add 2/3 frothed milk

Top with cocoa powder

Latte Macchiato

Pour frothed milk in a tall glass

Add espresso carefully

along the rim of the glass

Instant Frothy Coffee

Make an instant coffee

Add frothed milk

Hot Milk

Cafe Latte

1/3 espresso shot

Add 2/3 heated milk and stir

Hot Chocolate

Pour heated milk into a large

mug Add chocolate powder

and stir to mix

Instant Milky Coffee

Place instant coffee in a Cup/mug

Add hot milk and stir to mix

CLEANING

1. Do not remove the connector of whisk when cleaning the appliance, otherwise the milk foam will be not good enough.
2. Remove the jug from the power base.
3. Separate the lid and the silicon ring from the jug.
4. Flush and clean the jug with warm soapy water. This should be done immediately after each

use.

5. Rinse the lid and silicon ring in warm water. Wash in soapy water if necessary.
6. Clean the jug body with a soft damp cloth. NEVER use harsh cleaning agents or abrasive materials
7. Wash the whisks in warm soapy water and dry thoroughly. Store in a safe place.

NOTE: The Milk Frother or any of its accessories are **NOT** dishwasher safe.

TROUBLESHOOTING

Item	Issue	Reason	Solution
1	Indicator light doesn't work/jug doesn't work	Plug is not inserted properly	Re-insert plug
		Jug isn't connected to power base properly	Remove jug and replace correctly
		No power in the jack	Check the electric circuit
		Problem with components	Repair or replace
2	Jug doesn't work after operation	Jug temperature is too high	Rinse cold water inside the jug to reduce temperature
		Jug is damaged with immersion in water	Repair or replace
3	Motor doesn't work	Jug not cleaned in good time after use, milk locks the mechanism.	Clean and move the shaft sleeve of motor by hand to loosen it.
		Motor damaged	Repair or replace
4	No heating	Machine is damaged	Repair or replace
5	Charring	Dosage of milk either too little or too much	Ensure the milk is over the min mark, and not pass max mark
		Jug was reused without cleaning/rinsing	Always clean after each use
		Actual voltage is much lower than specified voltage	Ensure you use the appropriate voltage



DISPOSAL

Please dispose of the packaging according to your local waste regulations.

Cardboard and paper go to "recovered paper", foil goes to resource collection

(Potential recyclable). This product should never be disposed of in normal

household waste at the end of its service life. It must be delivered to a collection point for the recycling of electrical and electronic goods. This is indicated by the symbol (dustbin with cross) on the product, in the instruction manual or on the packaging. Ask your local disposal point about disposal. The materials are

reusable according to their labeling. In the reuse, material recycling or other forms of using old appliances, you are making an important contribution in protecting our environment. Please ask your local government for a suitable disposal point (old appliance collection point of municipal disposal point). This way you are disposing of your appliance ecologically.