



YEYIAN

AVANCE *SERIES 27" QHD FAST IPS*

27" GAMING MONITOR / MONITOR GAMING 27" (68.6 cm)

WELCOME TO YEYIAN

A NEW LEVEL IN THE WORLD OF GAMING

You're one of millions upon millions of gamers. You can be socially engaged, sporty, an explorer, a soldier, a builder or a strategist. All of these archetypes require supernatural reflexes, powerful machines, consistency and a strong tolerance to being defeated hundreds upon hundreds of times before the fun kicks in. Even so, there is something unique that each game will require of you, excitement and disruption; a moment where you control what happens next, that fleeting feeling of intimidation, the play that will set you apart from the rest. Every decision you take, your confidence, your passion and your determination to win will take you to a monumental Victory.

Choose big, don't conform, and always keep moving forward.

Be part of the game.

Thank you for choosing us and welcome to our family.

Register your products to receive exclusive news and participate in our contests and giveaways.

USA | MX | ES:
www.yeyiangaming.com

PRODUCT REGISTRATION



Information
and releases



Promotions
and updates



Giveaways
and gifts



CAUTION

Keep the monitor away from water sources or damp places, such as bathrooms, kitchens, basements and swimming pools.

Make to place the monitor on a flat surface. If the monitor falls down, it could lead to injury or damage to the device.

Store and use the monitor in a cool, dry and well-ventilated place, and keep it away from emission and heat sources.

Do not cover or block the vent hole in the rear casing, and do not use the product on a bed, sofa, blanket or similar surfaces.

The voltage range of the monitor's power supply is printed on the label on the rear casing. If you can't determine the voltage of your power outputs, please consult the distributor or local power company.

If the monitor will not be used for a long period, please cut off the power supply to avoid electric shock in rainy days or damage due to abnormal supply voltage.

Please use a plug with a reliable ground socket, do not overload the socket, or it may cause fire or electric shock.

Do not put foreign materials inside of the monitor, as they may cause short circuits which could result in a fire or electric shock.

Do not disassemble or repair this product yourself to avoid electric shock. If malfunctions occur, please contact the after-sales service directly.

Do not pull or twist the power cable with force.

There is a polarizer layer (not a protective film) on the surface of the screen. Do not peel it off, or the product may be damaged and the warranty will be void.



 
The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

PACKAGE CONTENTS

Please check that the package for the monitor contains every part. If any part is lost, please contact the distributor.

The color and shape of the parts may vary with models. Figures in this User Manual are for reference only.

Wires supplied may vary depending on the purchased products. Figures in this User Manual are for reference only.

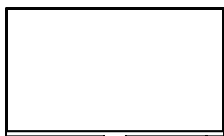


Monitor



Stand Base



 Stand Stem



Adaptor



DP Signal Cable



 
Power Cable



M4*16 Screws x 2



User Manual



Warranty Card

STAND INSTALLATION

Steps:

01. Put the base into the hole of the rear shell at a tilt along the arrow direction, as shown in Figure 1.
02. Insert the base into the support and lock two M4*16 screws, as shown in Figure 2.
03. Rotate the whole base clockwise downward and put it in, as shown in Figure 2 and 3.



Figure 1

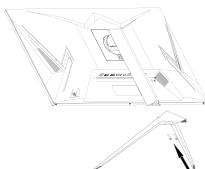 


Figure 2

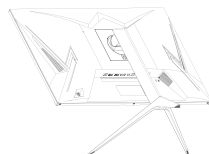 


Figure 3

To remove the entire base, perform the following steps.

01. Unscrew the two M4*16 screws on the base and pull it out in the arrow direction, as shown in Figure 4.
02. Push the slider near the VESA cover of the base upward, as shown in Figure 5.
03. Rotate the whole base counterclockwise upward, as shown in Figure 5.
04. Tilt the base along the arrow direction and take it out, as shown in Figure 6.

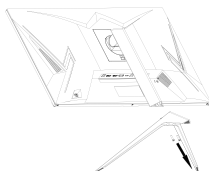 


Figure 4



Figure 5

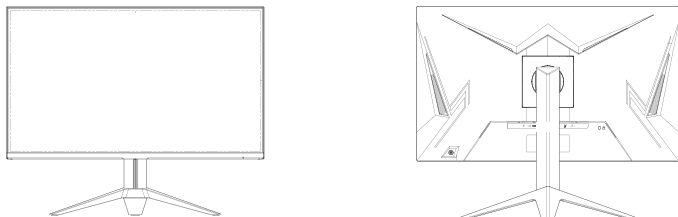 


Figure 6

Note:

Some of the contents in this manual may differ slightly from the final product, and the later shall be referred to.

Insert the stand plate onto the opening on the back of the monitor. It should click into place. Make sure the stand is securely attached to the back of the monitor before removing the monitor from the remaining foam and setting it up on a firm, level table or desk.

 


Note:


The stand can be easily detached from the monitor by pressing the button near the stand cover. Make sure the monitor is laid on a flat surface before removing the stem.

MOUNT INSTALLATION

1. Open the box, take the product out with the foam still attached, and gently place it on a desktop or table. Remove the extra parts and the foam covering the back of the monitor. If the monitor has a stand attached to it already, remove the stand.

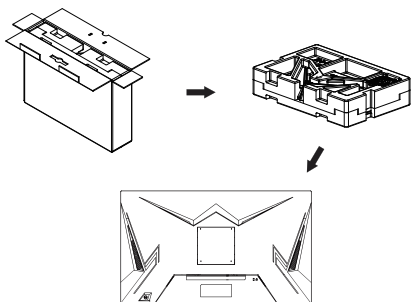

 
2. When hanging the product, do not press on the screen with your hand to avoid damaging the screen.

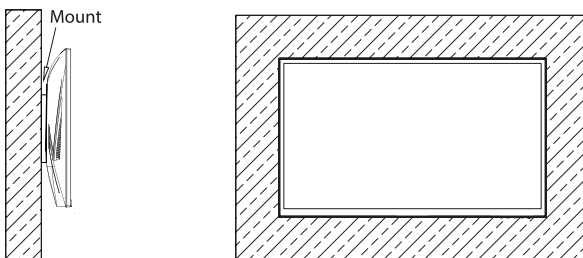

Notes:


- To prevent the monitor from failing, please install it firmly and in a safe place.
- Do not place or hang any object on the mount, and don't hang it at a height of over 2 meters.

 ADJUSTING THE MONITOR

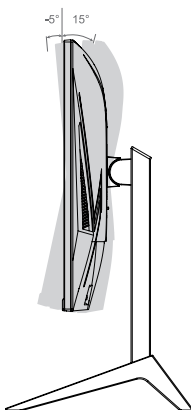

Tilting angle
 $-5^{\circ} (\pm 3^{\circ}) / +15^{\circ} (\pm 3^{\circ})$

 USAGE

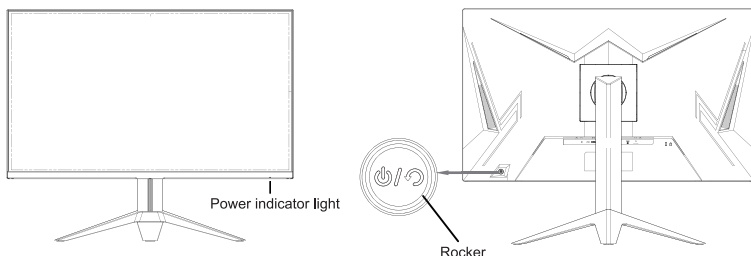

EXPLANATION OF INDICATORS

Indicator:

When the display is working normally, the blue indicator light is on;
When it is in the energy saving state, the indicator light blinks with red color;
When the signals are sent again in the energy saving state, the machine will return to normal work; After the display is turned off, the indicator light is off.
As the display is still powered under the shut down state, for the sake of safety, the power cord should be unplugged when the display is not used.

USING BOTTON

Initial state:

Rocker Up	Signal source input
Rocker Down	Volume adjustment Shortcut key
Rocker Left	Game Plus Shortcut key
Rocker Right	Preset Shortcut key
Press Rocker	Short press to turn on the machine/Open menu, press and hold for 3s to turn off the machine

On the OSD menu:

Rocker Up	Same menu single direction up move / Adjust value
Rocker Down	Same menu single direction down move / Adjust value
Rocker Left	Return to the previous menu
Rocker Right	Enter to the next menu
Press Rocker	Short press to Close menu /press and hold for 3s to turn off the machine

SAFETY PROTECTION:

When the video signals of PC exceeds the frequency range of the display, the horizontal and field synchronizing signals will be shut down to protect the display. Then, you have to set the PC output frequency to an acceptable range so as to make the display work normally.

TECHNICAL SPECIFICATIONS OF PRODUCT:

Pane size	27"
Optimal working resolution	2560*1440@180Hz
Power input	12V \approx 4.5A
Requirements for working environment	
Altitude	\leq 5000m
Working temperature and humidity	0 °C~40°C 20%~85%
Warehousing temperature and humidity	-10°C~60°C 10%~90%

POWER SUPPLY MANAGEMENT SYSTEM:


Mode	Power consumption
Normal working	\leq 54W
Standby	\leq 0.5W

SIGNAL LINE CONNECTION:

Connect the signal line to output interfaces signal of DP/HDMI signals of PC, and then connect the other end of the signal line to the corresponding signal input port of the display.

AUDIO OUTPUT:

 This machine supports earphone and external audio output.

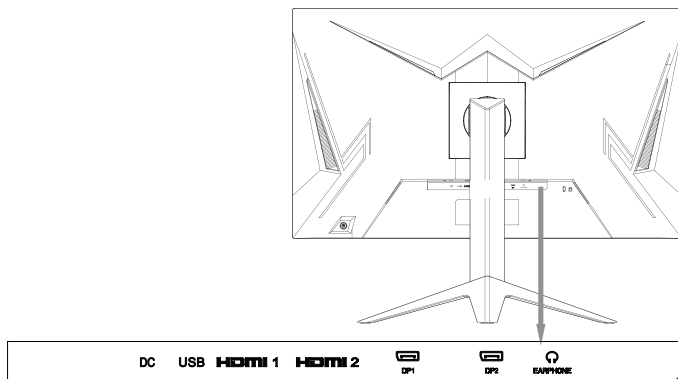

OSD MENU

 
Menu description

The color and shape of the OSD menu of the monitor may be slightly different from the ones depicted in the following figures. Settings in the OSD menu may change with functionality updates without prior notice.


The screen display (OSD) menu can be used to adjust the monitor's settings and is shown on the screen after the monitor is powered on and the button is pressed.

Access the function menu:

Short press the button to access the OSD menu.

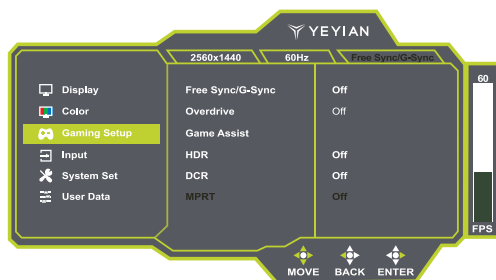

 Monitor settings vary by model, and the settings in this manual are for reference only.

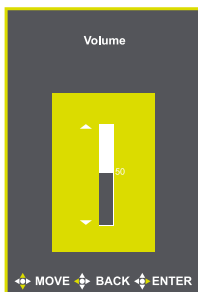

OSD menu description

Main Menu	2nd Sub-menu	3rd Sub-menu
Display	Brightness	0 - 100
	Contrast	0 - 100
	Black Equalize	0 - 100
	Preset	Standard/User/Movie/Photo/RTS/FPS1/ FPS2
	Aspect Ratio	Full/16:9/4:3
	Sharpness	0, 10, 20, 30, 40, 50, 60, 70, 80, 90, 100
Color	Color Temperature	Normal/Cool/Warm/sRGB/User
	Gamma	Off/1.8/2.0/2.2/2.4
	Hue	0 - 100
	Saturation	0 - 100
	Low Blue Light	0, 25, 50, 75, 100
Gaming Setup	Freesync/G-Sync	Off/On
	Overdrive	Off/Low/Middle/High
	Game Plus	Timer
		Crosshair
		FPS Counter
	DCR	Off/On
	MPRT	Off/On
Advanced Settings	HDR	Off/Auto

Input	Auto	
	DP2	
	DP1	
	HDMI 2	
	HDMI 1	
System	Language	English, Spanish, French, German, Italian, Portuguese, Polish
	OSD Setup	H Position
		V Position
		OSD Timeout
		Transparency
	Audio	Mute
		Volume
	USB Upgrade	Confirm/Cancel
Reset	Confirm/Cancel	



YEYIAN

Distributed by / Distribuido por:
Vadeto Group

USA

10065 Via de la Amistad A1,
San Diego, CA, US 92154
Tel. +1.(888).499.8103

MÉXICO

Calz. José Guadalupe Gallo #8490-A
Col. Agua Blanca Industrial, Zapopan,
Jalisco, México, C.P. 45235
Tel. +52.33.1078.3404

ESPAÑA

CL Manuel Tovar N° 16 ,
28034 Madrid, España
Tel. +34.911.764.633

www.yeyiangaming.com