



Instructions for use

HAIR DRYER

EN HAIR DRYER


page

1

TYPE S0701

IMETEC

ILLUSTRATIVE GUIDE

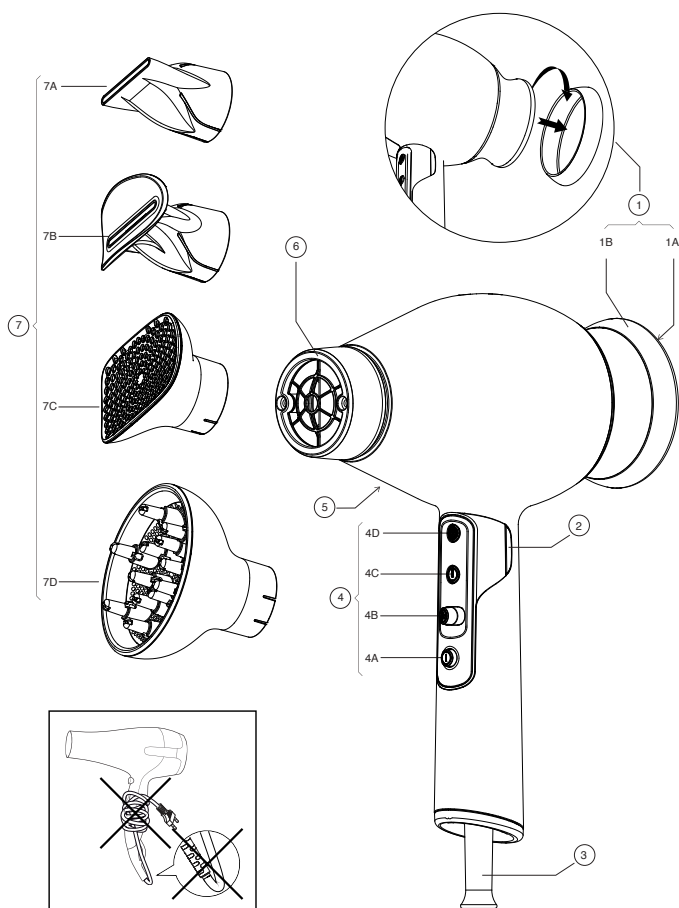

TECHNICAL DATA (5)

IMETEC UK CA   

TYPE S0701 220-240 V 50/60 Hz 1520-1800 W

IMETEC UK LTD, 7 VERITY COURT
MIDDLEWICH, CHESHIRE, CW10 0GW UK



INTRODUCTION

EN

Dear customer, thank you for choosing our product. We feel certain you will appreciate its quality and reliability as it was designed and manufactured with customer satisfaction in mind. These instructions for use are compliant with the European Standard EN 82079.



WARNING! Instructions and warnings for safe use.

Before using this appliance, carefully read the instructions for use and in particular the safety notes and warnings, which must be complied with. Keep this manual together with its illustrative guide for future consultation. Should you transfer the appliance to another user, make sure you hand over this documentation as well.

ⓘ NOTE: should any part of this manual be difficult to understand or any doubt arise, contact the company at the address indicated on the last page before using the appliance.

ⓘ NOTE: persons with impaired vision may consult these instructions for use in digital format at the website www.tenactagroup.com

INDEX

Introduction	1
Safety notes	2
Symbols	5
Description of the appliance and its accessories	5
Use of accessories	5
Use	6
Maintenance and cleaning.....	7
Storage	8
Disposal	8
Assistance and warranty	9
Illustrative guide	1
Technical data	1

SAFETY NOTES

- EN • After unpacking, make sure the appliance is intact, complete with all its parts as shown in the illustrative guide and with no sign of damage. If in any doubt, do not use the appliance and contact an authorised service centre.



CAUTION! Remove any communication material such as labels, tags etc. from the appliance before use.



WARNING! Risk of suffocation.
Children shall not play with the packaging.
Keep the plastic bag out of the reach of children.

- This appliance must only be used for the purpose for which it was designed, namely as a hairdryer for home use. Any other use is considered not compliant to the intended use and therefore dangerous.
- Before connecting the appliance to the mains supply, make sure that the voltage and frequency indicated on the technical data of the appliance correspond to those of the mains supply. The rating is on the appliance or on the power supply unit, if any (see illustrative guide).
- This appliance can work automatically at a frequency of 50 Hz or 60 Hz.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ⚠ DO NOT use the appliance with wet hands, damp feet or barefoot.

- **⊘ DO NOT pull the supply cord or the appliance itself to remove the plug from the socket.**
- **⊘ DO NOT pull or lift the appliance by the supply cord.**
- **⊘ DO NOT expose the appliance to humidity, to the effects of weather (rain, sun, etc.) or to extreme temperatures.**
- **⊘ DO NOT leave the appliance unattended while in operation.**
- **⊘ DO NOT leave the appliance unattended while it is connected to the power supply.**
- **Always disconnect the appliance from the mains supply before cleaning or performing maintenance and when the appliance is not in use.**
- **If the appliance is faulty or malfunctions, switch it off and do not tamper with it. Contact an authorised technical service centre for any repairs.**
- **If the supply cord is damaged it must be replaced by an authorised technical service centre, so as to prevent all risks.**
- **When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.**
- **For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA (ideal 10 mA) is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.**

WARNING! DO NOT use this appliance near bathtubs, showers, basins or other vessels containing water.

- **This appliance shall not come into contact with water, other liquids, sprays, steam. For any cleaning and maintenance operation refer to the instructions in the relevant chapter.**
- **This appliance must only be used on human hair. DO NOT use the appliance on animals or on wigs and hair pieces made of synthetic material.**

- **⊘ DO NOT obstruct the intake filter and always keep it free from dust and hair.**
- **See the external packaging for the characteristics of the appliance.**
- **Use the appliance only with the supplied accessories that are an essential part of the appliance.**

ADDITIONAL SAFETY NOTES

ⓘ NOTE: Currently the fitting in a bathroom of an electrical socket for, or capable of, operating the appliance, is not permitted in the UK (see BS7671).

Nevertheless, E.C Standard EC60335-2-23 requires us to advise you the following:

- **When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the straighteners are switched off.**
- **For an additional protection, the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Your electrician will advise you of this.**

CONNECTION TO THE MAINS SUPPLY

Please check that the voltage stated on the appliance corresponds to the voltage of your power supply. This appliance is fitted with a 13 A plug complying to BS 1363. If this plug does not fit to your socket or needs to be replaced please note the following:

Your appliance is fitted with a two core mains lead and as it is double insulated, it does not require an earthing.

NON RE-WIREABLE MAINS PLUG









If your appliance is supplied with a non re-wireable plug fitted to the power cord, it is equipped with a fuse. The value of the fuse is indicated on the case of the plug or in the fuse carrier. If the fuse has to be replaced, only use an ASTA approved one that meets BS1362.

If the fuse cover is lost, the plug must not be used

until a replacement is obtained from an electrical supplier.

If you need to remove the plug, cut it from the mains lead and immediately dispose of it. Never attempt to re-use the plug or insert it into a socket outlet as there is a high risk of an electric shock.

SYMBOLS

	<i>Warning</i>		<i>Prohibited</i>
	<i>Air flow</i>		<i>Air temperature</i>
	<i>On/off</i>		<i>Cool air</i>
	<i>Class II equipment</i>		<i>Note</i>



Not suitable for use in the bath, shower or water-filled reservoir

DESCRIPTION OF THE APPLIANCE AND ITS ACCESSORIES

Refer to page I of the Illustrative Guide to check the contents of the package. All the figures are found on the inside pages of the cover.

- | | |
|------------------------------|---------------------------------------|
| 1. Intake filter | 4D Cool air |
| 1A Filter | 5. Technical data |
| 1B Filter cap | 6. Front grille |
| 2. Ioniser LED | 7. Accessories |
| 3. Power cable | 7A. Smooth styling nozzle |
| 4. Adjustment buttons | 7B. Wavy styling nozzle |
| 4A On/Off | 7C. Flat diffuser for delicate drying |
| 4B Air flow selection | 7D. Diffuser |
| 4C Air temperature selection | |

For the appliance features, refer to the external packaging. Use the supplied accessories only.

USE OF ACCESSORIES

The hair dryer is provided with the accessories described above. The accessory is mounted on the appliance by pressing it onto the front part of the hair dryer (6) until it is inserted. Make sure the accessory is properly attached.

After use, remove it by detaching it from the front part (6).

Smooth styling nozzle (7A)

Starting from the nape of your neck, divide your hair into sections and work one lock at a time, with a round brush. Holding the brush horizontally, position the base of the lock of hair (near the roots) in

the middle of it. Bring the nozzle close to the brush - just 1 or 2 cm away. Work the lock of hair from the roots to the tips. Repeat until that section of hair is completely dry.

Wavy styling nozzle (7B)

Starting from the nape of your neck, divide your hair into sections and work one lock at a time, with a round brush. To obtain a soft effect, keep the brush tilted and position the base of the lock of hair (near the roots) in the middle of it. The nozzle should adhere perfectly to the brush. Work the lock of hair from the roots to the tips. Repeat until that section of hair is completely dry.

To give more movement, wind the section of hair around the brush from the tips to the roots. Keep it like this to dry the hair, making sure the nozzle adheres perfectly to the brush. Release the lock of hair.

Flat diffuser for delicate drying (7C)

For natural, delicate drying: keep the diffuser 5 - 10 cm from your hair and move the hair-dryer slowly so as to dry without tousling.

For anti-frizz drying that keeps your hair under control: use a flat detangling brush and make sure the accessory adheres perfectly to the brush. Brush from the roots to the tips, until your hair is completely dry.

Diffuser (7D)

Only use the diffuser with damp hair, to obtain a naturally combed or naturally dried effect:

- Take a lock of hair in your hand and wind it into the diffuser. Make sure all OF the hair is inserted, right up to the ends.
- Switch on the hair dryer at the medium speed and maximum temperature to dry the lock of hair.

For greater volume:

- Switch the hair dryer on at minimum speed and temperature.
- Place the diffuser directly on your hair and move it from the bottom upwards, as though you wanted to lightly massage your scalp.

IMPORTANT: use only the original accessories of the appliance.

USE



WARNING! This appliance is not to be used if it has been dropped or if there are visible signs of damage.



WARNING! DO NOT use this appliance near bathtubs, showers, basins or other vessels containing water. Never place the appliance into water.



WARNING! Risk of fire. DO NOT use flammable products on hair or on the appliance.

Refer to the figure in the illustrative guide of the instructions for use.

Device with separate buttons for:

- on/off (4 A)
- air flow selection (4B)
- air temperature selection (4C)
- cool air flow (4D)

On/Off button (4A)

Press this button to switch the appliance on.

ⓘ NOTE: this hair dryer has a memory function. After using it the first time, the next time it will then automatically set the last temperature selected.

Air flow selection button (4B)

○ = medium air flow

○○ = strong air flow

Air temperature selection button (4C)

Press the air temperature selection button (4C) to select the required air temperature.

The red LEDs indicate the setting being used.

1 LED = low temperature

2 LEDs = medium temperature

3 LEDs = high temperature

Cool air flow button (4D)

The blue LEDs indicate that the function is active.

This appliance uses ion technology to keep your hair hydrated while it is being dried. This function is activated automatically when the appliance is switched on.



WARNING! If the appliance suddenly stops working while you are using it, check the suction filter (1) on the back to make sure it isn't clogged with dust or hair. If it is, switch the appliance off for a few minutes and clean the filter (1) following the instructions, then switch it back on.

MAINTENANCE AND CLEANING



WARNING! Always disconnect the appliance from the mains before cleaning or performing maintenance.



WARNING! Make sure all cleaned parts are completely dry before reusing the appliance.

Cleaning the appliance and accessories

Clean the appliance and the accessories (diffuser, nozzle) with a damp cloth when needed. Do not use solvents or other aggressive or abrasive detergents. Otherwise, the surface could be damaged. Check the intake opening of the appliance regularly and remove all hair and dust.

Cleaning the intake filter (1)

If the appliance is provided with an intake filter, clean it as follows:

- Open the filter cap (1B) as shown in the figure.
- Wipe the front and rear of the retina (1A) and the filter cap (1B) with a damp cloth.
- Let the parts dry well and put them back on in inverse order.

ⓘ NOTE: the more dust is present in the place where the hair dryer is used, the more often the filter must be cleaned.

STORAGE



WARNING! Risk of fire. Wait for the appliance to cool completely before storing it.



WARNING! DO NOT wrap the supply cord around the appliance.



WARNING! Store the appliance so that no object may accidentally go into and damage it.

DISPOSAL



The packaging of the appliance is made of recyclable materials. Dispose of it in accordance with the environmental protection regulations.



Pursuant to Regulation on waste electrical and electronic equipment (WEEE), the crossed bin symbol on the appliance or its packaging indicates that the appliance must be disposed of separately from other waste at the end of its useful life. The user must therefore take the appliance to an appropriate recycling centre for electrical and electronic equipment. Alternatively, instead of handling the disposal, the user can hand over the appliance to the retailer when a new, equivalent one is purchased. The user can hand over electronic products measuring less than 25 cm to retailers of electronic products having a sales area of at least 400 m² free of charge and with no obligation to buy. Appropriate separate collection for the subsequent procedure for the decommissioned appliance for recycling, which includes treatment and environmentally friendly disposal helps prevent adverse effects on the environment and health and promotes reusing and/or recycling materials that the appliance consists of.

ASSISTANCE AND WARRANTY

EN

The appliance is guaranteed for a period of two years from the date of delivery. Evidence shall be taken as the date indicated on the receipt/invoice (provided it is legible), unless the buyer can prove that the delivery occurred later.

In the event of a defect in the product which existed prior to the date of delivery, appliance repair or replacement is guaranteed free of charge, unless one of the two solutions is disproportionate to the other. The buyer has the obligation to notify an authorised Service Centre of the non-conformity within two months from discovering the defect.

The warranty does not cover any part that may be defective due to:

- a. transport damage or accidental drops,
- b. incorrect installation or an inadequate electrical system,
- c. repairs or alterations made by unauthorised personnel,
- d. poor or incorrect maintenance and cleaning,
- e. product and/or product parts subject to wear and/or consumables, including the reduction in battery usage time due to the use or time, if present,
- f. failure to comply with the operating instructions and/or negligent or careless use.
- g. Twisted or bent power cord due to negligence or pulled,
- h. Presence of hair in the fan,
- i. Failure to clean the cold air inlet filter causing the motor to overheat,
- j. Accidental falling during use,
- k. Obstruction at the cold air inlet and hot air outlet (front and rear grid),
- l. Use of non-original maintenance components or accessories,
- m. Use of chemical products to clean the appliance,
- n. Use of hairspray or other sprays during use.

The list above is purely indicative and not exhaustive and in any case, this warranty shall not cover all circumstances that cannot be attributed to manufacturing defects of the appliance. In addition, the warranty does not cover any case of improper use of the appliance and professional use. All liability is disclaimed for any damage that may directly or indirectly be caused to persons, property and pets as a result of failure to comply with all the instructions provided in the "Instructions and Warnings Booklet" regarding appliance installation, use and maintenance.

This is without prejudice to any contractual warranty claims against the seller.

Methods of support

Appliance repairs must be carried out by an authorised Service Centre. If the faulty appliance is under warranty, it must be sent to the Service Centre together with a fiscal document that can confirm the date of sale or delivery.

CONTACT DETAILS

IMETEC UK LTD, 7 VERITY COURT,
MIDDLEWICH, CHESHIRE, CW10 0GW UK

Bellissima@imetec.co.uk

IMETEC

Imetec UK Ltd, 7 Verity Court, Middlewich, Cheshire CW10 0GW UK

M1004035
171 121