




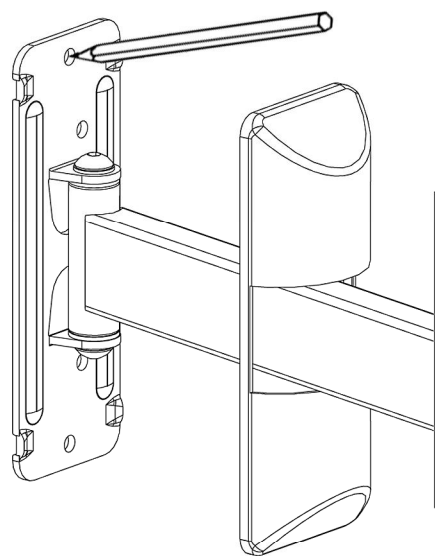

Level the mount and mark.

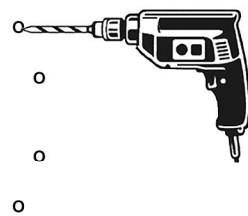


Drill the mounting holes.

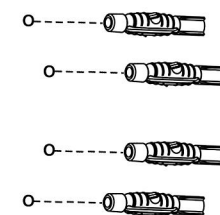


Insert the wall anchors* to the wall and tap them flush with a hammer.


* Never use wall anchors on drywall

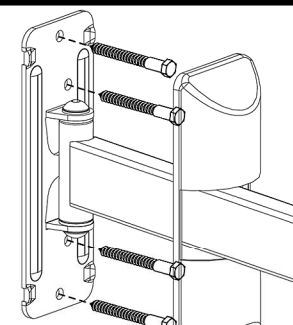


Fix the plate to the wall.

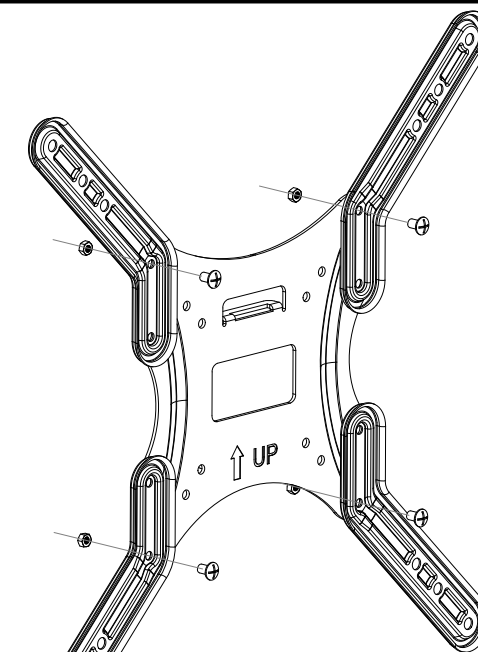


Attach the extensions to the base if needed.

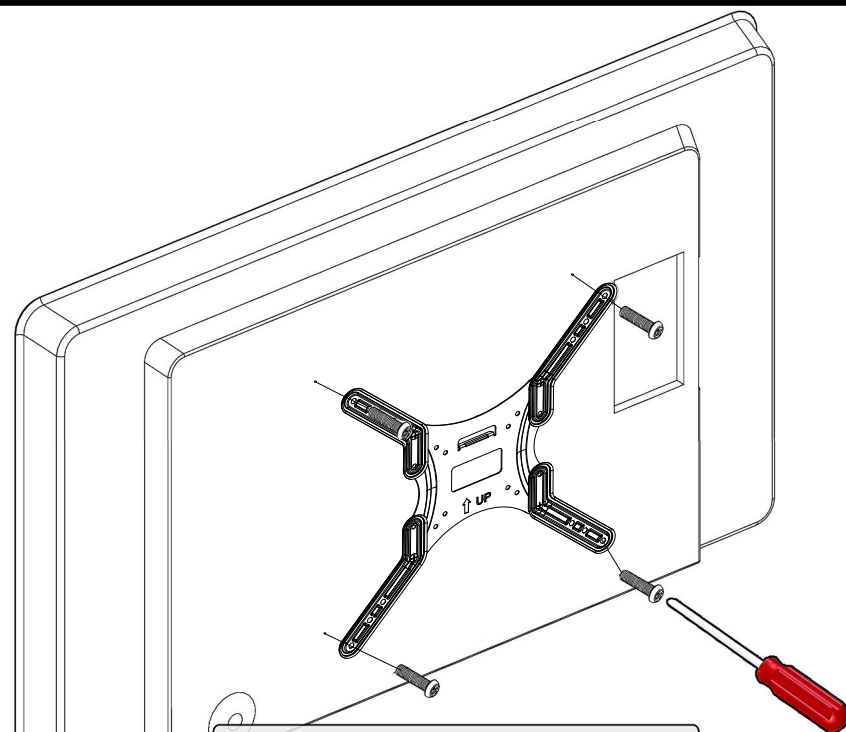


Attach the mount to the screen.

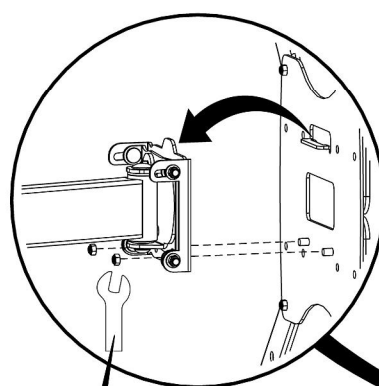

Secure the safety lock.

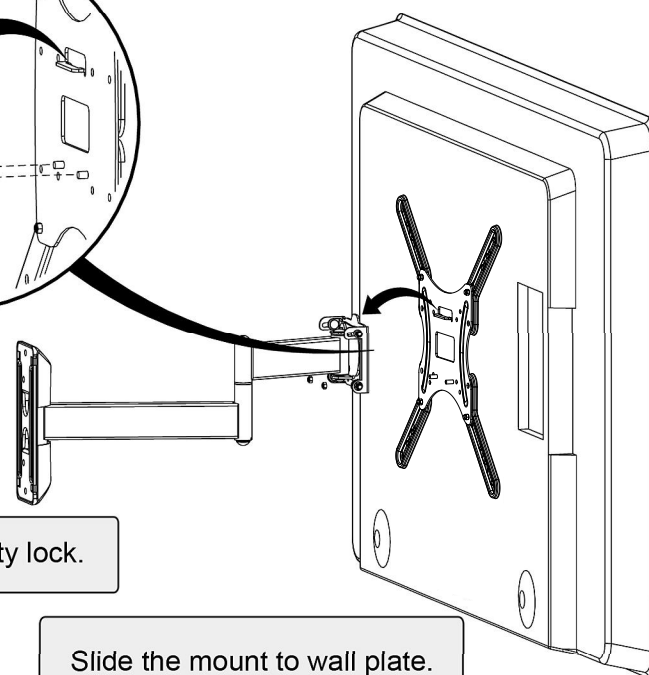

Slide the mount to wall plate.

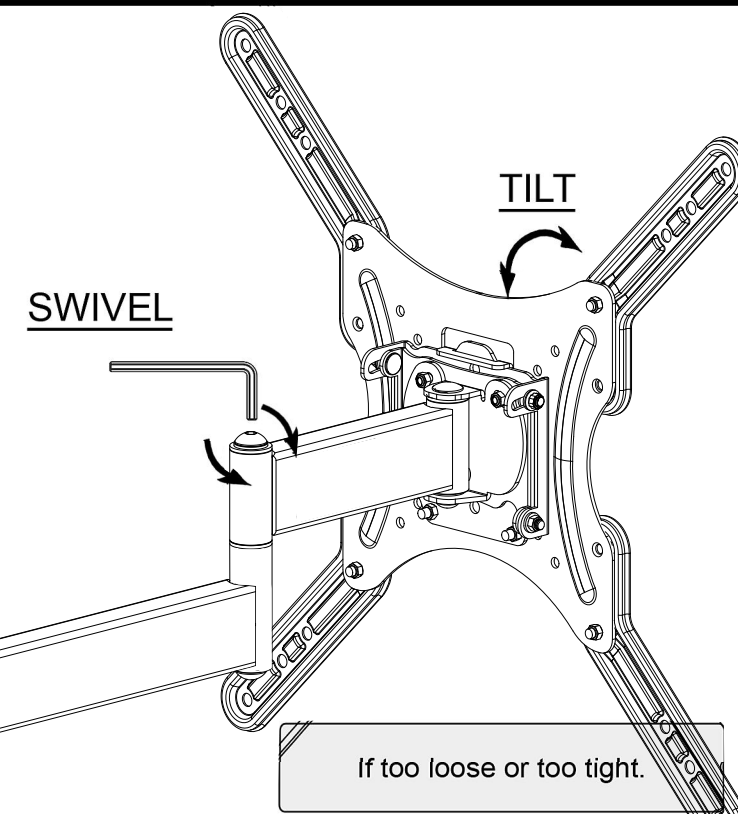

SWIVEL

 
TILT

If too loose or too tight.

HARDWARE KIT




x4




x4



 
x4



x4

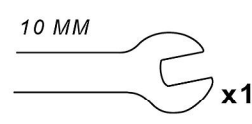

x1

 

x4



x4




x4




x4



x1

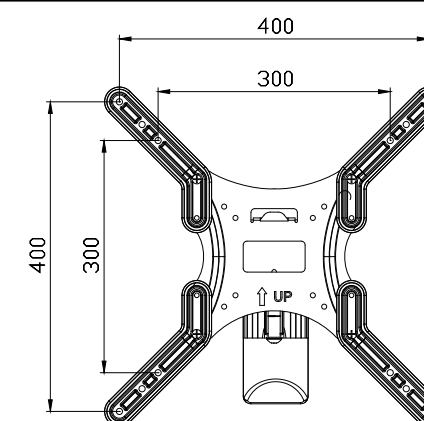

Adjustable adapter installation

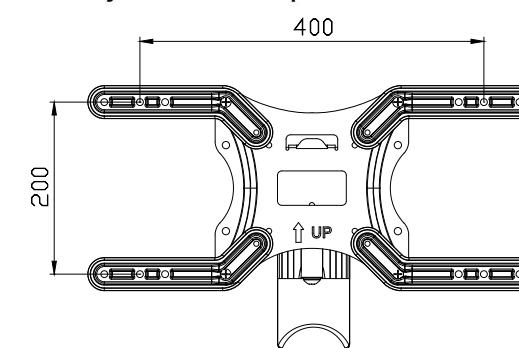

REV NO: 11/09.04.2013