

 
**ONE  
FOR ALL**

# Essence TV Universal Remote Control URC1212

ENGLISH  
DEUTSCH  
FRANÇAIS  
ESPAÑOL  
ITALIANO  
PORTUGUÊS  
NEDERLANDS  
DANSK  
NORSK  
SVERIGE  
SUOMI  
ΕΛΛΗΝΙΚΑ  
РУССКИЙ  
TÜRKÇE  
POLSKI  
ČESKY  
MAGYAR  
БЪЛГАРСКИ  
ROMÂNĂ  
SLOVENSKY  
HRVATSKI




4  
7  
10  
13  
16

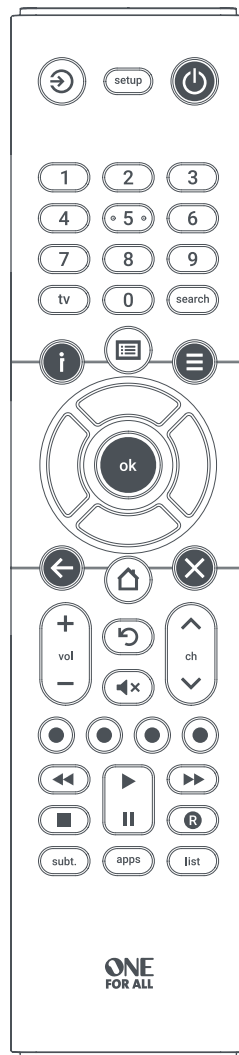


26

## CODELIST

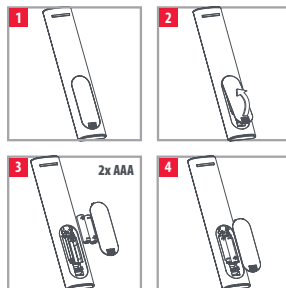 

## BATTERIES

 Your remote requires **2 x AAA / LR03** batteries. Please insert them as shown below. Alkaline batteries are recommended.

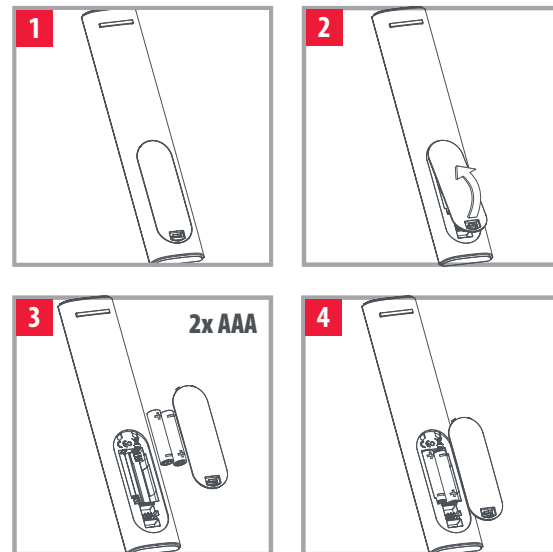

**CAUTION:** Risk of explosion if battery is replaced by an incorrect type. Use quality Alkaline batteries.

**VORSICHT:** Wenn die Batterie durch eine Batterie eines anderen Typs ausgetauscht wird, besteht Explosionsgefahr. Verwenden Sie hochwertige Alkalibatterien.

**ATTENTION:** il existe des risques d'explosion si les piles ne sont pas remplacées par le type approprié. Utilisez des piles alcalines de qualité.

**PRECAUCIÓN:** Existe un riesgo de explosión si se sustituyen las pilas por otras que no sean del tipo adecuado. Utilice pilas alcalinas de calidad.

**ATTENZIONE:** sussiste il rischio di esplosione se la batteria viene sostituita con una di tipo non corretto. Utilizzare batterie alcaline di qualità.



Connect with us



facebook.com/  
oneforallworldwide



@oneforall.worldwide



linkedin.com/  
company/one-for-all-worldwide/




youtube.com/  
user/oneforallproducts



Universal Electronics BV –  
Europe & International  
P.O. Box 3332, 7500 DH Enschede  
The Netherlands

713434  
RDN1080523

## KEY DESCRIPTIONS

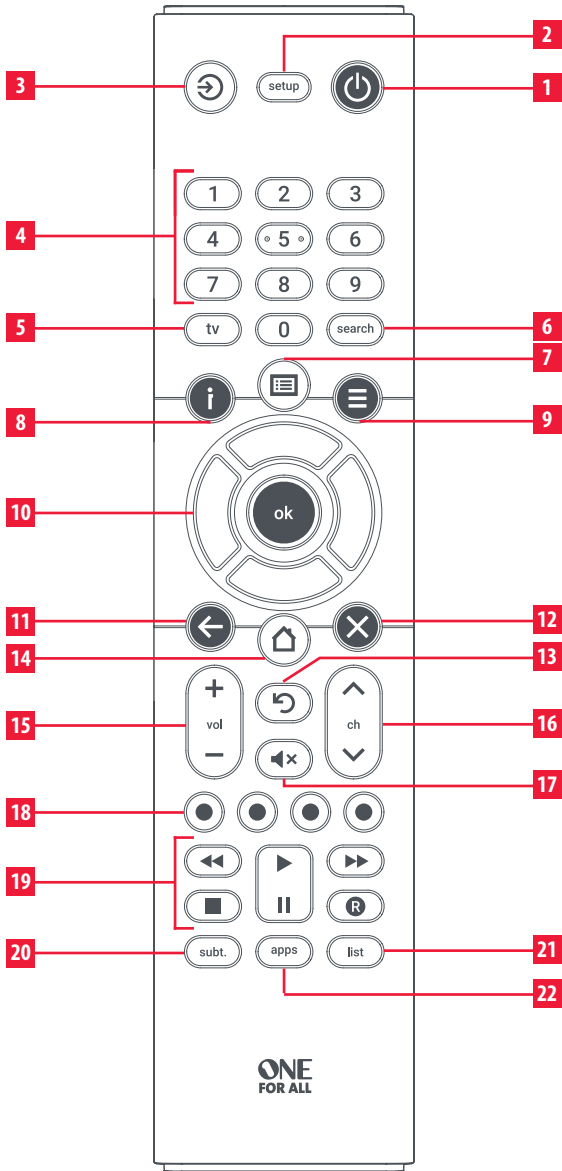 

## KEY DESCRIPTIONS

- 1 Power** Switches your devices on and off.
- 2 Setup** This key is used to set up the Essence remote.
- 3 Input** Used to select Input on devices.
- 4 Digits** Select channels on the current device.
- 5 TV** Return to live TV.
- 6 Search** Search for media.
- 7 Guide** TV Guide.
- 8 Info** Displays information about the current programmes or channel.
- 9 Menu** Access the installation menu of the current device.
- 10 Menu Directions and OK** Control the menu of the current device.
- 11 Back** Back one step in the Menu.
- 12 Exit** Exits the menu.
- 13 Last Channel** Changes to the last channel viewed.
- 14 Home** Displays the Home Menu.
- 15 Volume Up and Down** Control the volume of the current device.
- 16 Channel Up & Down** Change channels on the current device.
- 17 Mute** Mutes the volume of the current device.
- 18 RGYB keys** Quick access buttons for the menu of the current device.
- 19 Playback Keys** Control the playback of movies, music and TV.
- 20 Subt.** Display subtitles.
- 21 List** Displays a list of recorded programmes.
- 22 Apps** Brings up the Applications menu on Smart Devices such as Smart TVs.

## TV

Westline	3719, 2676	Xoceco	2461
Westwood	1585	Xomax	3067, 3515
Wharfedale	1983, 2676, 0556	Xoro	3067
Wilson	0556	Xpeer	2051
Windsor	2676, 3719, 3983, 1585	Yamaha	1576
		Yuntu	3611
Windy Sam	0556	Zanussi	3434, 3528
Wintel	0714	Zenith	1423
XCanvas	1840	Zephir	3611
XD	3719	Zepto	1585
Xenius	1585, 2676	Ziggo	1818
Xiahua	2461		
Xiron	1983		