


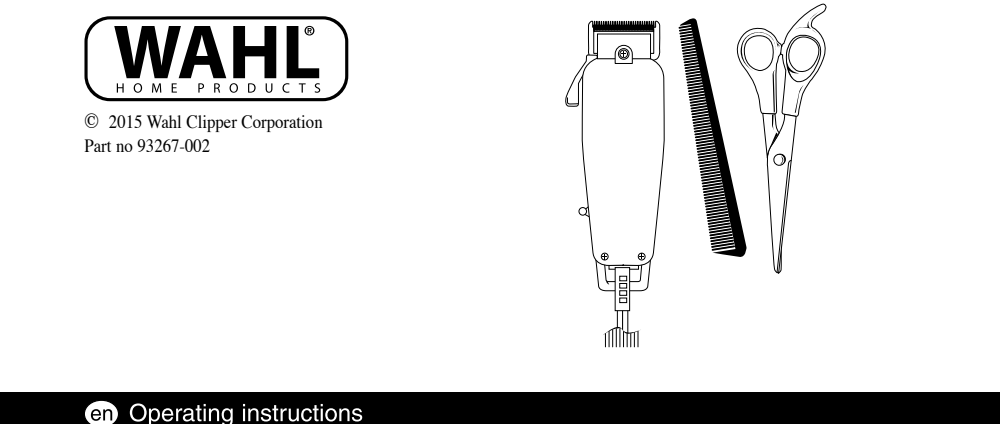

Operating instructions

IMPORTANT SAFEGUARDS
When using an electrical appliance, basic precautions should always be followed, including the points listed below. Read all instructions and safeguards before using.

To reduce the risk of injury or death by electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug immediately from the outlet.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place it in drop in water or other liquid.
4. Never touch the appliance from the electrical outlet immediately after using.
5. Always unplug this appliance before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Warning: Keep the Product Dry. It is essential to PREVENT electrical equipment from coming into contact with water or other liquids.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- If the power cord is damaged, it must be replaced by the manufacturer or authorized agent or similarly qualified person in order to avoid risks.
- Keep the cord away from heated surfaces.
- Do not use outdoors or operate where aerosol (spray) cans are being used or where oxygen is being administered.
- Do not use this appliance with a damaged or broken power cord with frills missing from the blades, as injury may occur.

UK appliance: If a 13 amp (BS 1363) plug is used, a 3 amp fuse must be fitted, or if any other type of plug is used, a 5 amp fuse must be fitted either in the plug or at the distribution board. Replacement fuses should be ASTA approved to BS 1362. Fuse cover must be fitted when changing the fuse. If fuse cover is lost, the plug must not be used until a replacement is obtained. Information for obtaining the correct fuse carrier is marked on the carrier itself and in the bottom of the fuse cavity on the plug. These may be obtained from Wahl UK. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

SAVE THESE INSTRUCTIONS

This clipper has been designed for household use.

- A- Bottom blade
- D- Switch
- B- Blade side (on Multi-cut (MC) clipper only)
- E- Top blade
- C- Taper lever (on Multi-cut (MC) clipper only)
- F- Power screw

CLIPPER MAINTENANCE

Your Wahl clipper blades must be aligned and cleaned before leaving our factory; however, it is possible for blades to get bumped out of alignment. Blades must be realigned if they have been removed for cleaning or replacement. To determine if realignment is necessary, compare your clipper blades with diagram G.

- 1 If your clipper has a taper lever, position the taper lever in the close cut position. (H)
- 2 End of top blade teeth should be approximately 1/32" (1.6 mm) back from bottom blade. This is important so that the clipper does not cut too close or allow the moving cutter to touch the skin.
- 3 Extreme left-hand tooth of top blade must be covering or to the left of the first small tooth of bottom blade.
- 4 Extreme right-hand tooth of top blade must be touching the big tooth on the bottom blade.

If blade alignment is incorrect, add a few drops of Wahl Clipper Oil to the blades, turn clipper "On" for a few moments, turn "Off" and unplug. Loosen screws slightly and adjust (steps 2-4 listed above). Tighten screws after blades are aligned. Other than blades this clipper has no user serviceable parts. (diagram I)

OIL

The blades of your new clipper should be oiled every few haircuts. Simply place a few drops of Wahl Clipper Oil on the teeth of the blades. Use only the Wahl Clipper Oil included in the pack. Due to the high speed of your Wahl clipper, the correct type of oil must be used. Do not use hair oil, grease or any oil mixed with kerosene or any solvent, as the solvent will evaporate and leave the thick oil, slowing down the blades. Wahl Clipper Oil is a very thin, natural oil which will not evaporate and will not slow down the blades.

POWER SCREW (Not found on all models of Wahl Clippers)

If your clipper has a power screw, it has been adjusted for peak efficiency before leaving the factory. However, if voltage in your home is low, you may need to readjust it. To adjust power, use the plastic brush, a screwdriver or a thin coin to turn power screw in a clockwise direction until the arm strikes the coil, making a noise. Then, slowly turn power screw out (counterclockwise), just until noise stops. This is the maximum power setting. (K)

CORD

The cord should not be used to pull the clipper. Since freedom of movement needs to be maintained, care should be used to keep the cord untwisted and unobstructed. When stored, the cord should be coiled and the unit placed in its carrying case (if provided).

If your clipper has a polarized plug: To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug fits in a polarized outlet only one way. In the event the plug does not fit in the outlet, reverse the plug. In the event it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

TAPER LEVER (Not found on all models of Wahl Clippers)

If your clipper has an adjustable taper lever, it is conveniently located near your thumb (if you're right-handed), so it can easily be adjusted while the clipper is in your hand.

The taper lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut without a guide comb. When the lever is in the uppermost position, the blades will give you the closest cut and leave the hair very short. (diagram H) Pushing the lever downward gradually increases the cutting length. In its lowest position, the taper lever will leave the hair approximately the same length as the 1/8" guide comb. (diagram I)

The taper lever will also bend the use of your blades since the different cutting edge is used in each setting. In addition, if extremely heavy haircutting has jammed the blades, it will help you remove hair that has become wedged between the two blades without removing the blades. While the clipper is running, rapidly move the lever from "close cut" to "longer cut" a couple of times. Doing this each time you've finished using your clipper will help keep the blades cool. Do not change the plug in any way, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

WAHL'S GUIDE TO FOOLPROOF HOME HAIRCUTTING

Before you cut your hair

- 1 Your clipper should be clean, oiled and in perfect working condition.
- 2 If your kit includes a plastic cape, place it around the neck, tying the straps and overlapping the cape portion to prevent hair from falling down inside the collar. If no cape is provided, a towel will do nicely.
- 3 Position the person whose hair is to be cut on a stool or chair so that the top of his head is about even with your eyes.
- 4 After combing the hair to remove any tangles, hold the clipper in a relaxed, comfortable grip, with the randleme under the palm near your index finger. This grip will help you maintain comfortable, accurate cutting control.

NOTE: To attach guide combs, hold comb with the teeth up. Snap guide comb attachment firmly to the bottom of your guide comb.

Depending on the kit you purchased your kit may include one of the following:

Adjustable Guide Combs - allowing multiple cutting lengths in the convenience of a single comb.

Individual Black Guide Combs - providing predetermined lengths indicated on each guide comb.

Individual Color Guide Combs - providing predetermined lengths indicated on each guide comb. Combs are also color coded for quick cutting length reference.

Using adjustable guide combs

The small adjustable guide comb has five settings from 1/8" to 5/8" (3mm to 16mm) in 1/8" (3mm) increments. (M)
The large adjustable guide comb has five settings from 3/4" to 1-1/4" (19mm to 32mm) (3mm) increments. (N)

Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have color coding and indicators that show slow number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:

Both adjustable guide combs have five settings from 3/4" to 1-1/4" (19mm to 32mm) (3mm) increments. (N)
Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have color coding and indicators that show slow number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:

Both adjustable guide combs have five settings from 3/4" to 1-1/4" (19mm to 32mm) (3mm) increments. (N)
Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have color coding and indicators that show slow number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:

Both adjustable guide combs have five settings from 3/4" to 1-1/4" (19mm to 32mm) (3mm) increments. (N)
Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have color coding and indicators that show slow number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:

Both adjustable guide combs have five settings from 3/4" to 1-1/4" (19mm to 32mm) (3mm) increments. (N)
Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have color coding and indicators that show slow number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:

Both adjustable guide combs have five settings from 3/4" to 1-1/4" (19mm to 32mm) (3mm) increments. (N)
Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have color coding and indicators that show slow number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:

Both adjustable guide combs have five settings from 3/4" to 1-1/4" (19mm to 32mm) (3mm) increments. (N)
Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have color coding and indicators that show slow number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:

Both adjustable guide combs have five settings from 3/4" to 1-1/4" (19mm to 32mm) (3mm) increments. (N)
Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have color coding and indicators that show slow number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:

Both adjustable guide combs have five settings from 3/4" to 1-1/4" (19mm to 32mm) (3mm) increments. (N)
Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have color coding and indicators that show slow number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:

Both adjustable guide combs have five settings from 3/4" to 1-1/4" (19mm to 32mm) (3mm) increments. (N)
Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have color coding and indicators that show slow number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:

Both adjustable guide combs have five settings from 3/4" to 1-1/4" (19mm to 32mm) (3mm) increments. (N)
Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have color coding and indicators that show slow number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:

Both adjustable guide combs have five settings from 3/4" to 1-1/4" (19mm to 32mm) (3mm) increments. (N)
Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have color coding and indicators that show slow number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:

Both adjustable guide combs have five settings from 3/4" to 1-1/4" (19mm to 32mm) (3mm) increments. (N)
Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have color coding and indicators that show slow number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:

Both adjustable guide combs have five settings from 3/4" to 1-1/4" (19mm to 32mm) (3mm) increments. (N)
Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have color coding and indicators that show slow number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:

Both adjustable guide combs have five settings from 3/4" to 1-1/4" (19mm to 32mm) (3mm) increments. (N)
Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have color coding and indicators that show slow number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:


Both adjustable guide combs have five settings from 3/4" to 1-1/4" (19mm to 32mm) (3mm) increments. (N)
Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have color coding and indicators that show slow number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:

Both adjustable guide combs have five settings from 3/4" to 1-1/4" (19mm to 32mm) (3mm) increments. (N)
Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have color coding and indicators that show slow number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

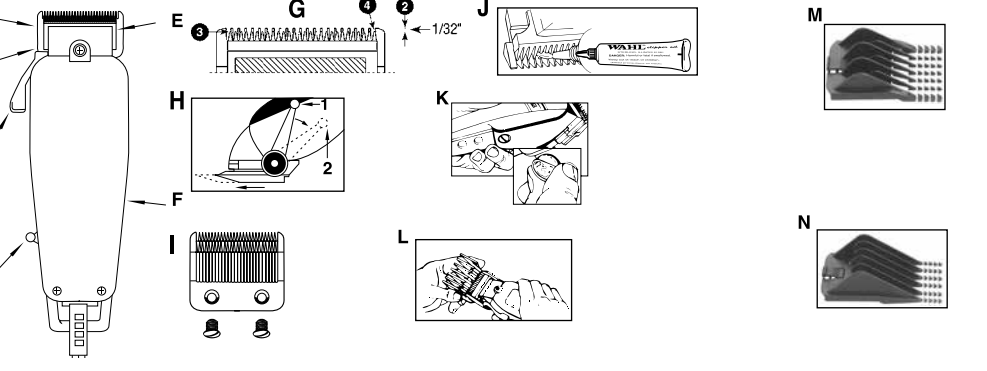

Gebrauchsanweisung

WICHTIGE SICHERHEITSHINWEISE

Beim Gebrauch eines Elektrogerätes sollten immer grundlegende Vorsichtsmaßnahmen beachtet werden, insbesondere in den folgenden aufgeführten. Lesen Sie vor Gebrauch alle Anweisungen und Sicherheitshinweise sorgfältig durch.

GEFÄHR

- Reduzieren Sie das Risiko einer Verletzung oder des Todes durch einen elektrischen Schlag.
- Greifen Sie nicht nach einem ins Wasser Gefallenen Gerät. Ziehen Sie sofort den Stecker aus der Steckdose.
- Verwenden Sie das Gerät nicht in der Badewanne oder unter der Dusche.
- Placieren Sie das Gerät nicht an einer Quelle von heißem Öl, von dem es in ein Wasserschüssel oder eine Wanne fallen oder gezogen werden könnte. Tauchen Sie das Gerät nicht in Wasser oder andere Flüssigkeiten und lassen Sie es nicht dort hängen fallen.
- Ziehen Sie, außer wenn Sie das Gerät aufladen, nach jedem Gebrauch sofort den Stecker des Gerätes aus der Steckdose.
- Ziehen Sie vor dem Reinigen des Gerätes immer den Stecker aus der Steckdose.

WARNUNG

Zur Reduzierung des Risikos von Verletzungen, Bränden, Stromschlag und Weiterleitung:

- Dieses Gerät kann von Jugendlichen ab 8 Jahren und Personen mit eingeschränkter physischer, sensorischer oder geistiger Fähigkeiten oder Personen mit mangelnder Erfahrung und Wissen verwendet werden, solange dies unter Beaufsichtigung erfolgt oder sie die notwendige Anleitung zum sicheren Umgang mit diesem Gerät erhalten haben und über die damit verbundenen Gefahren aufgeklärt wurden. Das Gerät darf von Kindern nicht als Spielzeug verwendet werden. Reinigung und Wartung dürfen von Kindern nur unter angemessener Aufsicht durchgeführt werden.
- Warnung: Halten Sie das Gerät trocken. Es ist äußerst wichtig zu VERHINDERN, dass Elektrogeräte in Kontakt mit Wasser oder anderen Flüssigkeiten kommen.
- Verwenden Sie dieses Gerät ausschließlich zum vorgesehenen und in dieser Gebrauchsanweisung beschriebenen Zweck. Verwenden Sie ausschließlich vom Hersteller empfohlenes Zubehör.

Schließen Sie ausschließlich das Kabel des Ladegerätes in die entsprechende Buchse des Gerätes an.

Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Sauerstoff verwendet werden.

Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an. Um das Gerät vom Stromnetz zu trennen, schalten Sie es zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

HEBEN SIE DIESSE ANLEITUNG SORGFÄLTIG AUF

Diese Gebrauchsanweisung ist für den privaten Gebrauch bestimmt.

- A- Untere Klinge
- D- Schalter
- C- Klingenschieberrichtung (nur bei Multi-Cut-Haarschneidemaschinen (MC))
- E- Obere Klinge
- C- Schnittlängengrader (nur bei Multi-Cut-Haarschneidemaschinen (MC))
- F- Schraube für Leistungswahl

WARTUNG DER HAARSCHNEIDEMASCHINE

Die Klängen der Haarschneidemaschine von Wahl sind werkseitig geölt und ausgerichtet worden. Dennoch kann es vorkommen, dass die Ausrichtung der Klängen nicht mehr stimmt und eine Neuausrichtung erforderlich wird. Klängen müssen neu ausgerichtet werden, wenn sie für Reinigungs- oder Austauschschneide entfernt worden sind. Um festzustellen, ob eine Neuausrichtung erforderlich ist, vergleichen Sie die Klängen Ihrer Haarschneidemaschine mit der Zeichnung (G).

1 Wenn die Haarschneidemaschine mit einem Schnittlängengrader ausgerüstet ist, stellen Sie diesen Schnittlängengrader auf die richtige Stellung ein.

2 Das Ende der Zähne der oberen Klinge sollte etwa 0,64 mm (1/20") hinter der unteren Klinge zurückstecken. Dies ist wichtig, damit die Haarschneidemaschine zu kurz schneiden und damit der Schneideschritt bei der Bewegung nicht die Haut berührt.

3 Der äußerste linke Zahn der oberen Klinge muss den ersten kleinen Zahn der unteren Klinge abdecken oder die Zähne neben diesem abdecken.

4 Der äußerste rechte Zahn der oberen Klinge muss den letzten kleinen Zahn der unteren Klinge berühren. Wenn die Klängen falsch ausgerichtet sind, gehen Sie einige Tropfen Wahl Clipper Öl auf die Klängen, stellen Sie die Klängen richtig ein, und ziehen Sie das Kabel aus der Steckdose aus. Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

5 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

6 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

7 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

8 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

9 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

10 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

11 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

12 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

13 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

14 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

15 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

16 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

17 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

18 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

19 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

20 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

21 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

22 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

23 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

24 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

25 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

26 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

27 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

28 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

29 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

30 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

31 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

32 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

33 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

34 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

35 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

36 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

37 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

38 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (anhand der typischen Haarschneidemaschine) fest oder mit einer Feile oder Leinwand (mit einem Feiler) an.

39 Wenn Sie die Klängen richtig einstellen, wird das Gerät aus der Steckdose lösen. Sie die Schrauben locken, und nehmen Sie die Einstellung (

