


FR

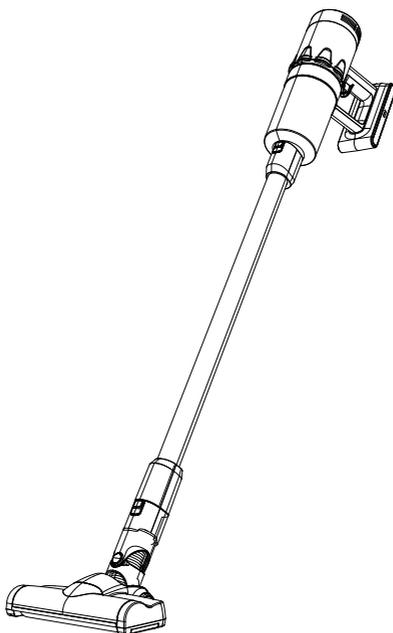

Aspirateur balais

Modèle: FG1412

MANUEL D'INSTRUCTIONS

Lire le manuel attentivement avant l'utilisation et le conserver pour références futures

INTRODUCTION

Ce produit est alimenté par une batterie lithium.

INSTRUCTIONS DE SÉCURITÉ

Cet aspirateur est un appareil électrique, il doit donc être utilisé dans des conditions normales. Il ne doit pas être utilisé sans surveillance.

1. Il y a un risque d'incendie et de dégâts si l'aspirateur aspire les éléments suivants:

- Sources de chaleur: Feu de charbon de bois, mégots de cigarettes
- Morceaux pointus: Morceau de verre brisé
- Liquides: Articles dangereux (solvant, corrosifs), agent acide, nettoyant et eau
- Marchandises inflammables et explosives: Essence et produits alcoolisés
- Déchets de construction et le ciment

2. Enlevez le chargeur lors du nettoyage de l'aspirateur, sa maintenance et lorsqu'il n'est pas utilisé pendant un certain temps.

3. L'appareil doit être utilisé uniquement avec l'alimentation fournie avec l'appareil. Vérifiez si la tension de l'appareil et du chargeur est en conformité avec votre installation électrique.

4. Ne plongez pas le corps de l'appareil dans l'eau.

5. Les enfants ne doivent pas jouer ni utiliser l'aspirateur.

6. N'utilisez pas l'aspirateur dans de telles circonstances:

- S'il est tombé et s'il présente des dommages ou une panne

- Si le chargeur est endommagé

7. Ne faites pas fonctionner l'appareil pendant une longue période lorsque l'entrée d'aspiration est bloquée, car cela pourrait endommager le moteur ou déformer l'appareil.

8. Cet appareil peut être utilisé par des enfants âgés d'au moins 8 ans et par des personnes ayant des capacités physiques, sensorielles ou mentales réduites ou dénuées d'expérience ou de connaissance, s'ils (si elles) sont correctement surveillé(e)s ou si des instructions relatives à l'utilisation de l'appareil en toute sécurité leur ont été données et si les risques encourus ont été appréhendés. Les enfants ne doivent pas jouer avec l'appareil. Le nettoyage et l'entretien par l'utilisateur ne doivent pas être effectués par des enfants sans surveillance.

9. MISE EN GARDE: Pour le rechargement de la batterie, utiliser uniquement l'unité d'alimentation amovible fournie avec l'appareil. CZH015265050EUWH


10. L'adaptateur doit être retiré de la prise de courant avant de nettoyer, d'entretenir l'appareil ou de retirer la batterie.

11. Cet appareil contient des batteries qui ne peuvent pas être remplacées.

DESCRIPTION



1

- | | | |
|---------------|------------------------|---------------|
| 1. Aspirateur | 2. Brosse télescopique | 3. Brosse sol |
| 4. Chargeur | 5. Notice | 6. Tube |

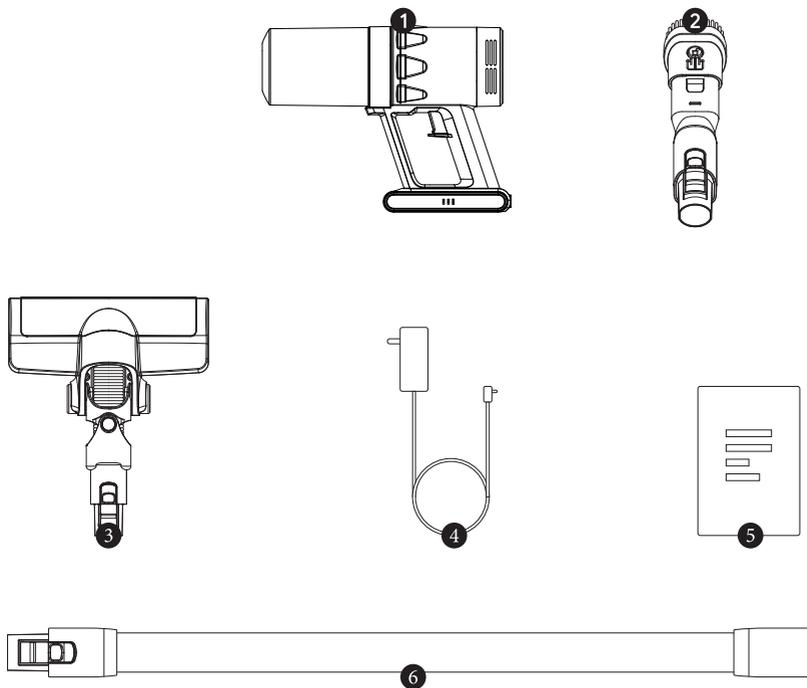

Configuration actuelle de l'appareil

Nom	Nettoyage	Modèle	W11-6
Tension	22.2V \equiv	Capacité	650ml
Aspirateur	≥ 11 kPa	Adaptateur	Sortie 26.5V \equiv 500mA
Taille	309*106*233mm		

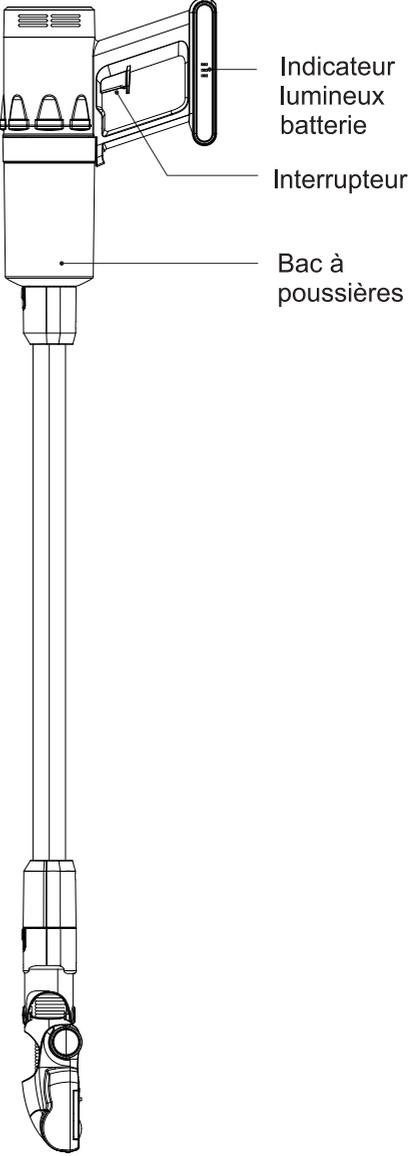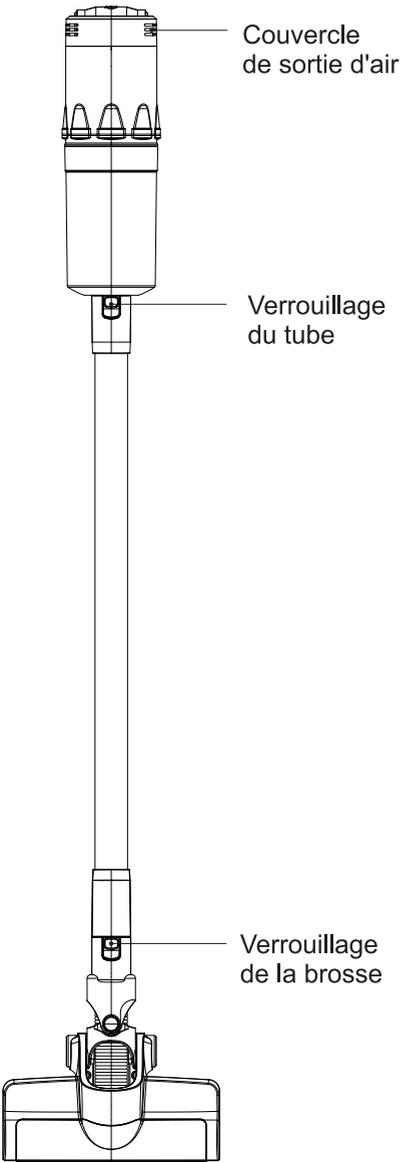


Opération

Remarque : l'entrée d'air ne doit pas être obstruée et aucun corps étranger ne doit être bloqué, sinon la surchauffe du moteur provoquera un accident.

Fonctionnement : appuyez sur l'interrupteur pour démarrer l'appareil, qui sera en mode faible aspiration. Appuyez encore une fois pour changer le mode. Pour éteindre l'appareil, appuyez encore une fois sur l'interrupteur.

État de fonctionnement : mode faible → mode élevé → arrêt

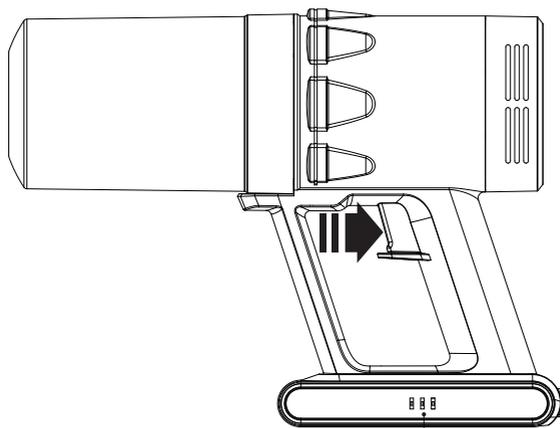

Indicateur batterie

Note


Il n'est pas utile de maintenir le bouton de régulation de vitesse lors d'une utilisation prolongée. Après l'utilisation, l'écran d'affichage de la batterie affichera la puissance, et le voyant lumineux s'éteindra progressivement avec la diminution de la puissance. L'aspirateur cessera de fonctionner et devra être rechargé.

Charge

Le port de charge se trouve de l'arrière de l'appareil. L'aspirateur doit être éteint. Branchez le chargeur à l'appareil puis à une prise de courant. Les indicateurs lumineux clignotent en bleu. L'appareil est chargé lorsque les indicateurs lumineux arrêtent de clignoter. Débranchez l'appareil de la prise de courant.


Remarque : utilisez seulement le chargeur fourni.

Avertissement : Ne chargez pas l'appareil en position verticale ; chargez-le lorsqu'il est couché.

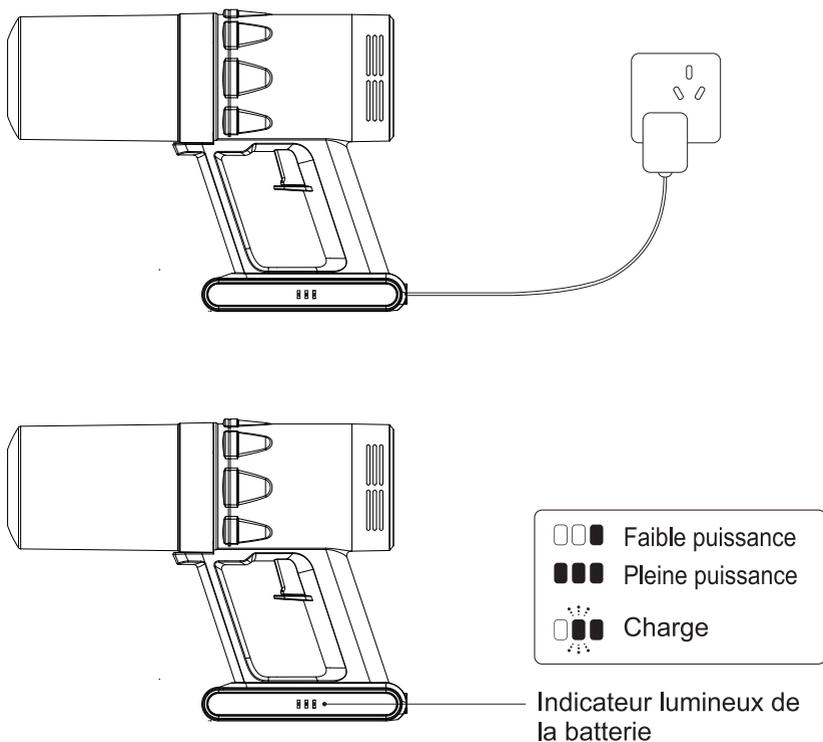

Comment installer les accessoires:

1. Insérez fermement le tube dans la buse de l'aspirateur (la buse se trouve au milieu du bac à poussières). Veuillez-vous assurer que le tube soit fermement inséré avant d'utiliser l'aspirateur.
2. Connectez la brosse sol au tube. Insérez fermement le tube dans la brosse pour sol.
3. La brosse / suceur plat peut être utilisée directement avec l'aspirateur vertical ou avec le tube.

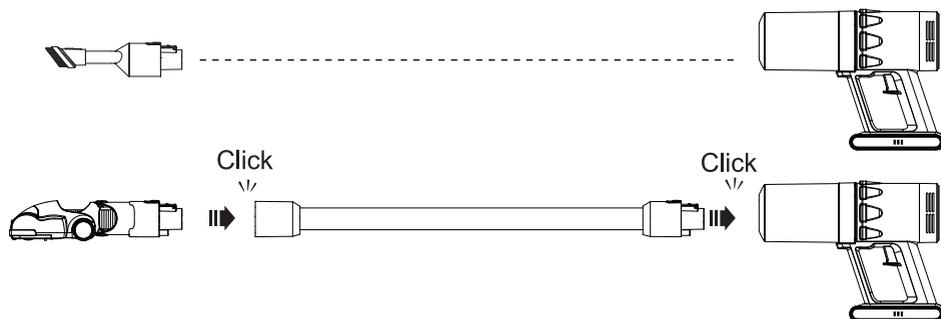


Nettoyage du bac à poussières

Note


Nettoyez régulièrement le filtre, car les acariens adsorbés risquent de ne pas être tués et continueront à se reproduire. Afin d'éviter une pollution secondaire, les composants du filtre doivent être nettoyés après le nettoyage ou remplacés par un nouveau filtre.

1. Eteindre
2. Comme indiqué sur la figure ci-dessous, saisissez la poignée de la machine avec la main gauche et tournez le réservoir à poussière dans le sens antihoraire avec l'autre main. Tirez le bac à poussières vers l'extérieur pour l'enlever.

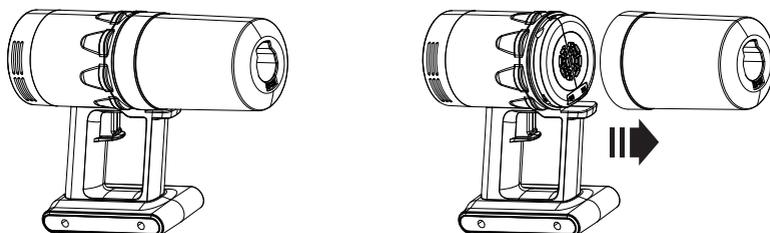


3. Tenez le bac à poussières et appuyez sur la flèche pour retirer le filtre.

Nettoyage du bac

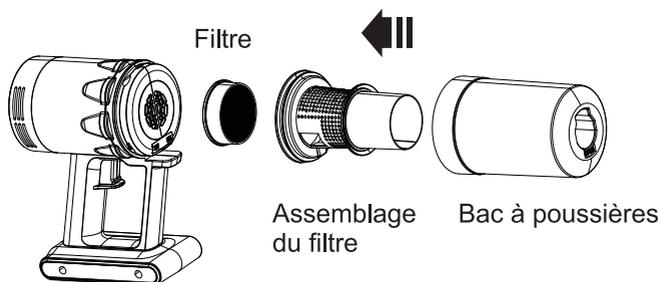



Nettoyage du bac à poussières

4. Videz la poussière, lavez le bac et le filtre avec de l'eau et séchez-les.

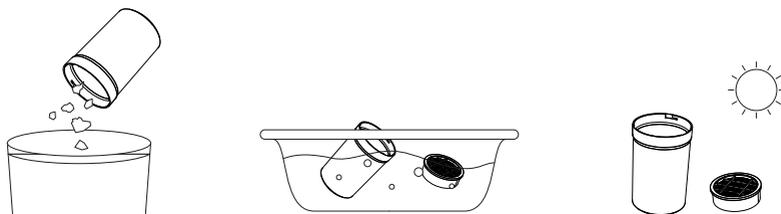


Réinstaller le bac

A. Placez l'élément filtrant dans l'ensemble de filtre, puis poussez l'ensemble de filtre dans le bac à poussières. Vérifiez que l'ensemble soit bien installé.

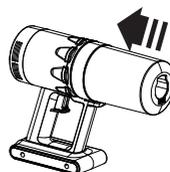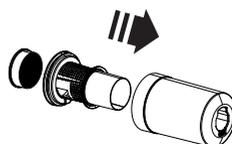

B. Tenez l'appareil et appuyez sur le bouton bac de démontage. Alignez le point de référence du bac à poussières avec celui de l'appareil.

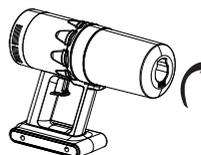


Nettoyage de l'éponge

Nettoyage de l'éponge

Comme indiqué sur la figure ci-dessous, saisissez la poignée de la machine avec la main gauche et tournez le couvercle dans le sens des aiguilles d'une montre avec l'autre main.

Tirez le couvercle vers l'extérieur. Rincez le couvercle et l'éponge avec de l'eau.

Sécher Avant utilisation.

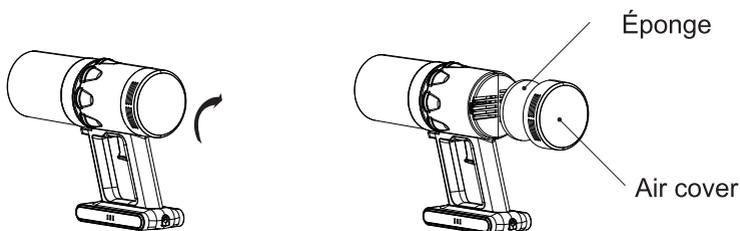

Retournez le couvercle

Après avoir inséré l'éponge dans la plaque, saisissez l'appareil avec la main gauche et tenez le couvercle de l'autre main. Placez le couvercle vers le bas et faites pivoter la plaque dans la direction opposée.

Maintenance et rangement

1. Tous les travaux d'entretien et de maintenance quotidiens doivent être effectués après la mise hors tension de l'aspirateur.
2. Nettoyez fréquemment les déchets du bac à poussières pour éviter la panne de l'aspirateur.
3. La surface de l'aspirateur ne doit pas être nettoyée avec un produit huileux ; utilisez un chiffon doux ou un détergent doux. Faites ensuite sécher. Ne laissez pas de l'eau s'infiltrer à l'intérieur de l'appareil.
4. Rangez l'appareil dans un endroit sec.
5. Ne placez pas d'objets lourds sur l'appareil.

En cas de problèmes avec l'appareil, veuillez-vous référer au tableau ci-dessous. Éteignez l'appareil avant toute intervention sur l'appareil.

Problème	Raison	Solutions
L'appareil ne s'allume pas	L'appareil n'est pas chargé	Rechargez l'appareil
	L'interrupteur n'est pas appuyé	Appuyez sur l'interrupteur
	La batterie n'est pas dans l'appareil	Remettez la batterie
	L'appareil est endommagé	Changez d'aspirateur
Bruits	Le bac à poussières est plein ou est obstrué	Retirez et nettoyez le bac à poussières
L'aspiration est réduite	Le bac à poussières est plein	Retirez et nettoyez le filtre
	la batterie est faible	Rechargez l'appareil
la poussière sort pendant l'utilisation	Le filtre HEPA est cassé	Éteignez l'appareil et changez le HEPA
	Le filtre HEPA n'est pas installé	Remettez le filtre HEPA
La recharge ne fonctionne pas	L'adaptateur est débranché	Branchez l'adaptateur
	l'adaptateur n'a pas connecté à l'aspirateur	Connectez l'adaptateur
	L'adaptateur est endommagé	Changez l'adaptateur
	L'appareil est endommagé	Changez l'aspirateur

COLLECTE SÉLECTIVE DES DÉCHETS ÉLECTRIQUES ET ÉLECTRONIQUES.



Les produits électriques ne doivent pas être mis au rebut avec les produits ménagers. Selon la Directive Européenne 2012/19/UE pour le rebut des matériaux électriques et électroniques et de son exécution dans le droit national, les produits électriques usagés doivent être collectés séparément et disposés dans des

points de collecte prévus à cet effet. Adressez-vous auprès des autorités locales ou de votre revendeur pour obtenir des conseils sur le recyclage.

Danger

Ne tentez jamais d'utiliser votre appareil s'il présente des signes de dommages ou si le cordon d'alimentation ou la fiche est endommagé. Si le cordon d'alimentation est défectueux, il est important de le remplacer par le service après-vente pour éliminer tout danger.

Seules les personnes qualifiées et autorisées sont autorisées à effectuer des réparations à votre appareil. Toute réparation non conforme aux normes pourrait considérablement augmenter le niveau de risque pour l'utilisateur !

Les défauts résultant d'une mauvaise manipulation, d'une dégradation ou d'une tentative de réparation par des tiers annulent la garantie du produit. Cela s'applique également en cas d'usure et d'accessoires normaux de l'appareil.

Important !

Nous vous recommandons de conserver l'emballage de votre appareil au moins pendant toute la durée de la garantie. La garantie ne s'applique pas sans l'emballage d'origine.

Garantie

Votre appareil dispose de deux ans de garantie. Les accessoires et pièces détachées sont disponibles seulement durant les 2 ans de la garantie du produit. Batterie garantie 6 mois. La garantie ne couvre pas l'usure et la rupture en cas de mauvaise utilisation du produit. Le client est responsable de tous les retours. Vous êtes responsable des coûts et des risques liés à l'expédition du produit ; Il est donc recommandé d'expédier le produit avec un accusé de réception et une assurance transport en cas de valeur significative du produit.


GARDER HORS DE LA PORTÉE DES ENFANTS

Les enfants devront être surveillés pour s'assurer qu'ils ne jouent pas avec l'appareil.

Service E-mail :

relations.clients@euromenage.com

EN

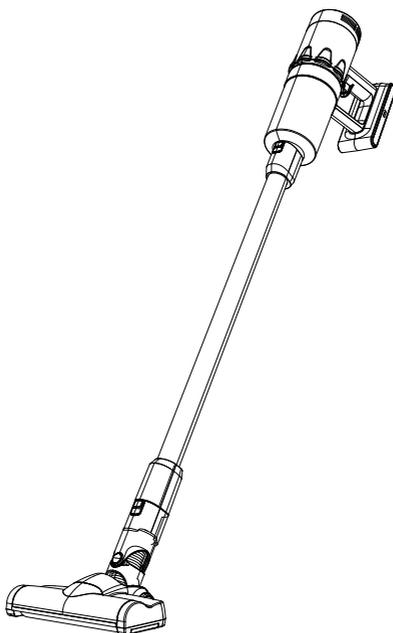

Cordless vacuum cleaner

Model: FG1412

INSTRUCTION MANUAL

Read this manual thoroughly before using and save it for future reference

PRODUCT INTRODUCTION

This product uses lithium-ion battery for power. It's very convenient for using.

OPERATION SAFETY AND NOTICE

The W11 vacuum cleaner is electrical appliance, so it must be used under normal conditions. It should not be operated without supervision.

1. It may cause fire and damaging people if the cleaner vacuum the following items:

- Heat source: Charcoal fire, cigarette ends
- Large sharp fragment: broken glass piece
- Liquid: hazardous article (solvent, corrodent), acid agent, cleanser and water.
- Inflammable and explosive goods: gasoline and alcohol products
- Construction waste and cement

2. Cut off the power when cleaning, maintenance and not using in a while.

3. The appliance is only to be used with the power supply unit provided with the appliance. Check the voltage of the machine and the charger for compliance with your electrical installation.

4. Do not immerse the body of the unit into water

5. The children should not play or operate the vacuum cleaner in case any accident happens.

6. Do not operate cleaner under such circumstance:

- Falling down with apparent damage or out of order
- Damage charger

7. Do not operate for a long period of time when the suction inlet was blocked, in case the motor was damaged or machine was deformed.

8. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.


9. **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.
CZH015265050EUWH

10. The adapter must be removed from the socket-outlet before cleaning or maintaining the appliance or removing the battery.

11. This appliance contains batteries that are non-replaceable.


PRODUCT PARTS NAME AND DIAGRAM

- 1. Vacuum cleaner
- 2. Telescopic brush
- 3. Floor brush
- 4. Charger
- 5. Manual
- 6. Tube

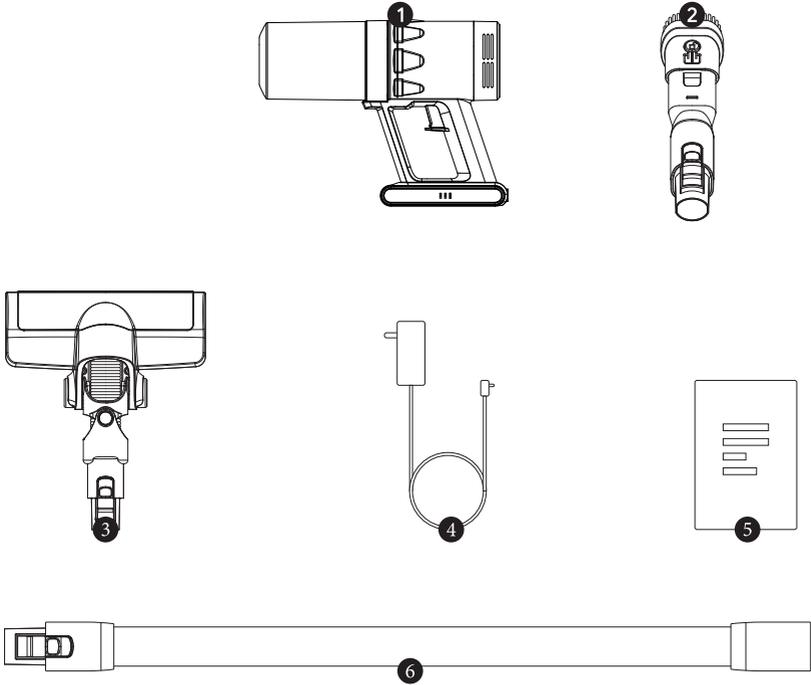

Accessory is subject to the actual configuration

Name	Vacuum cleaner	Model No.	W11-6
Voltage	22.2V $\overline{=}$	Dust capacity	650ml
Vacuum	$\geq 11\text{kPa}$	Power Adapter	Output 26.5V $\overline{=}$ 500mA
Size	309*106*233mm		

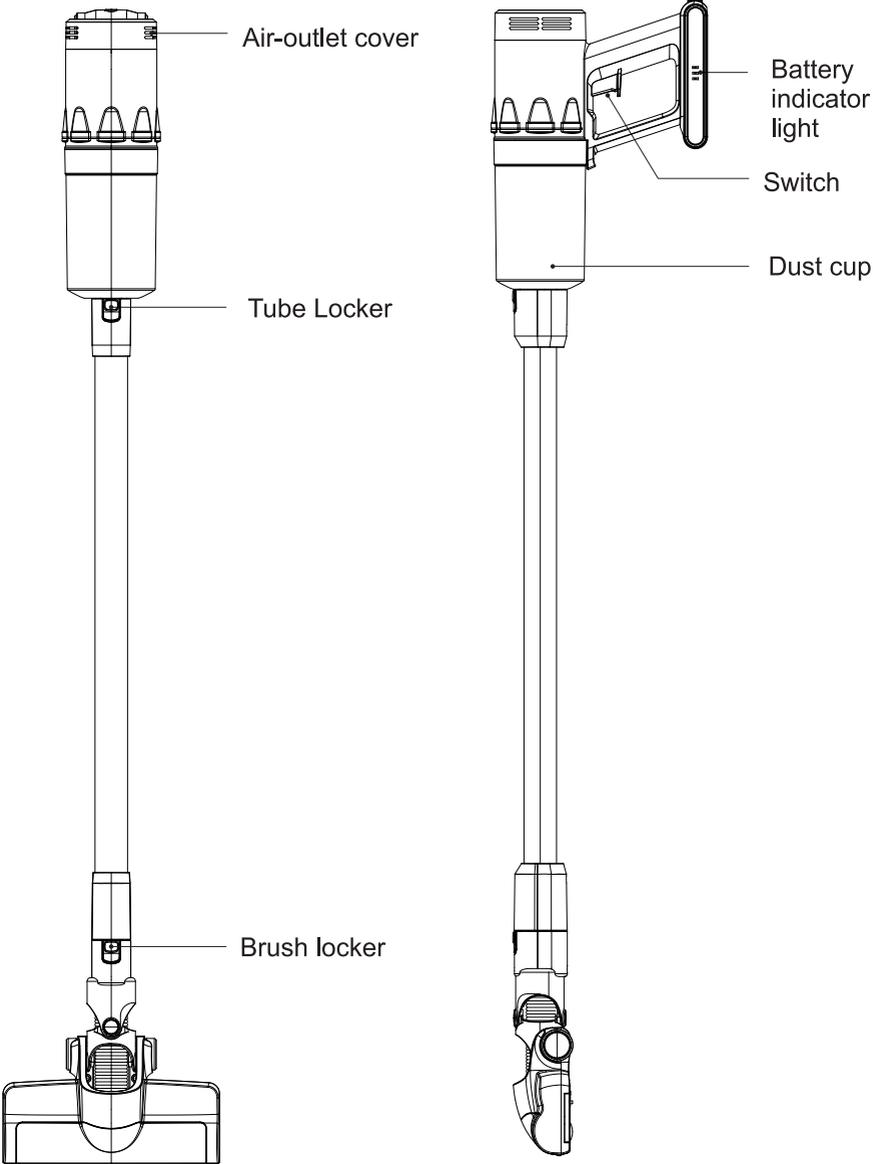


Operation

Note: Air-inlet must be kept unobstructed, and there are no foreign bodies locked, otherwise will cause the motor overheating causes the accident .

Operation: press the handle on the power switch, the machine open, belongs to low mode, work to push the button once again, when need to turn it off, continue to press the switch button, the vacuum cleaner stops working.

Working state: low mode → high mode → shutdown

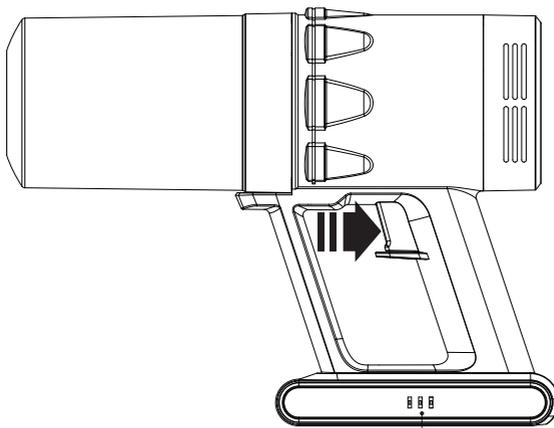

Battery indicator


Note

Note that the speed regulation button does not need to be pressed for a long time in the work. After the work of the machine, the display window of the battery pack will display the power, and the indicator light will gradually go out with the decrease of the power. Until it's all out. The machine has stopped working and needs recharging.

Charging


The charging port of the machine is at the tail of the machine. Remains closed to vacuum cleaner, put cleaner configuration power adapter plug one end into the power supply, the region round plug end insert the charging jack on the vacuum cleaner battery pack, when connected to the upper part of the vacuum cleaner will become blue lights flashing, when light into three blue lights all, don't blink after said vacuum cleaner battery has been charged, can pull out the power adapter plug, the vacuum cleaner can be used again. Note: the power adapter must use the adapter configured by this machine. After the power adapter is charged, it should be connected to the power supply line in time

Warning: Do not charge with unit upright, only charge when the unit lying down.

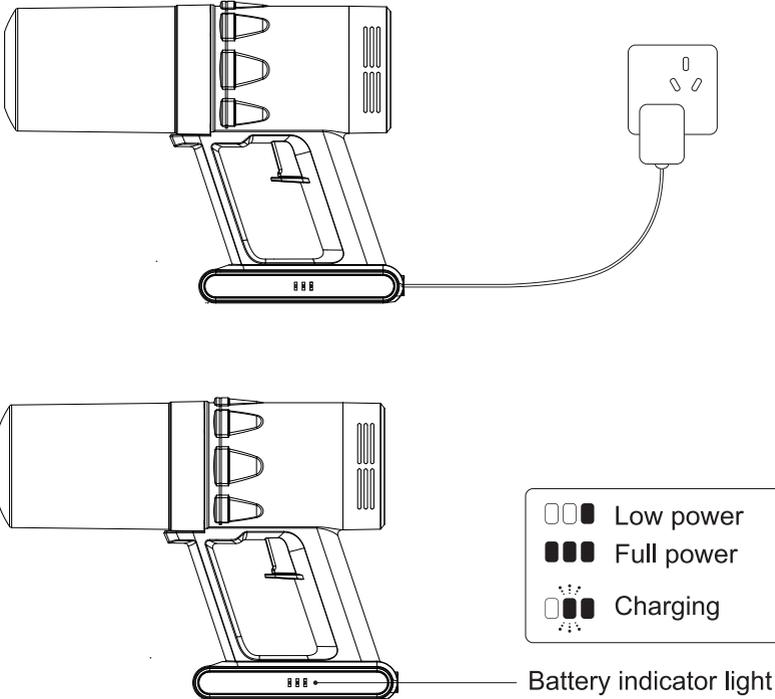

How to Install Accessories

- 1. Insert the tube into the nozzle of the handheld vacuum cleaner firmly(in the middle of the dustbin). Please make sure that the tube is inserted firmly before use the upright vacuum cleaner.
- 2. Connect the floor brush with the tube. Insert the tube into the floor brush firmly.
- 3. The brush/crevice tool can be used directly with the upright vacuum cleaner or with tube.

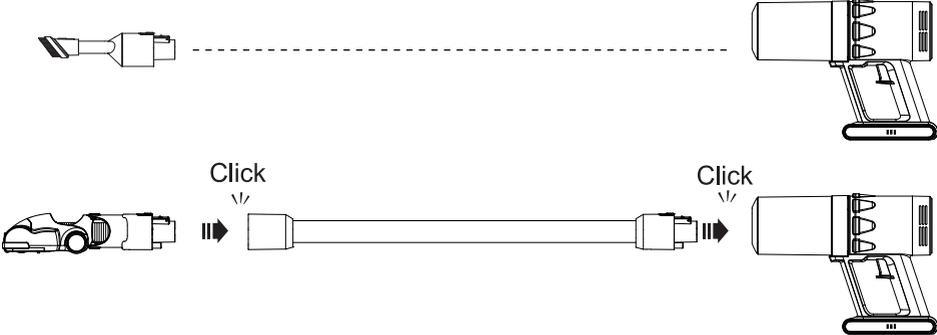


Cleaning the dust cup


 **Note**

Clean the filter components regularly, because the mites in the adsorbed cotton wool may not be killed, and will continue to breed. In order to avoid secondary pollution, the filter components should be cleaned after cleaning, or replace with new filter components.

- 1. Turn off
- 2. As shown in the figure, grasp the handle of the machine with the left hand and rotate the dust cup counterclockwise with the other hand. After drawing the reference point, pull out the dust cup outwards.

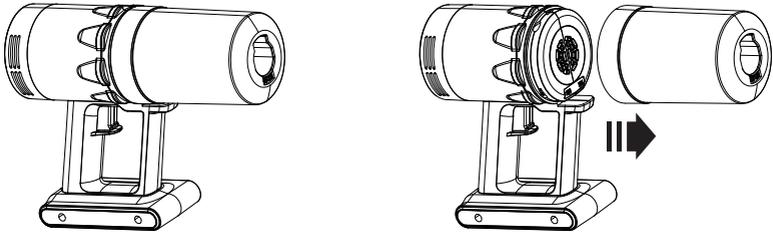


- 3. Hold the dust cup and press the arrow to take out the filter assembly. Clean up the dust.

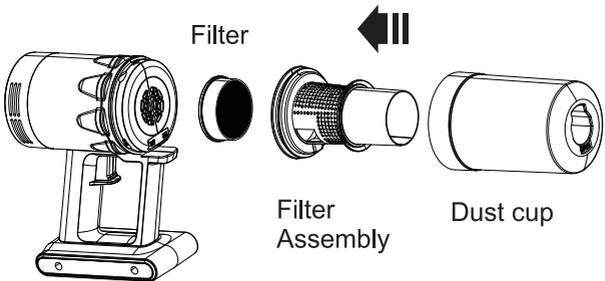


Cleaning the dust cup

4. Clean up the dust, wash the filter assembly and filter with water, and dry them.

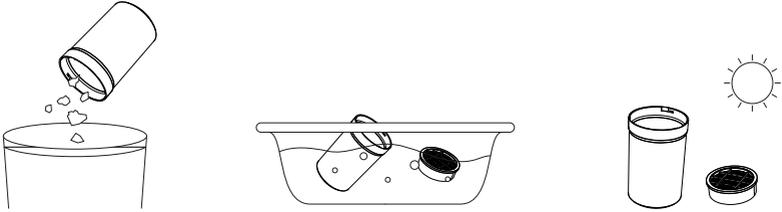


Dust cup Reset

A. Put the filter element into the filter assembly, align the positioning shape of the inlet on the filter assembly with the positioning shape of the dust cup inlet, and then push the filter assembly into the dust cup. When the filter unit is flat and cannot be moved down, the unit is placed in place.

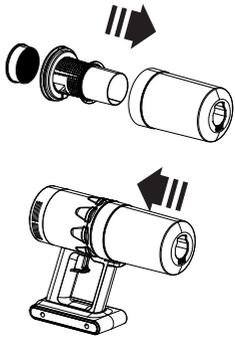

B. Hold the host and press the disassembly dust cup component in the opposite direction. Align the reference point of unlocking dust cup on the dust cup with the reference point of the host.

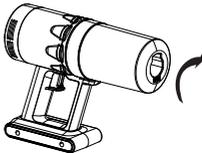


Air sponge cleaning

Air sponge cleaning As shown in the figure, grasp the handle of the machine with the left hand and rotate the outlet cover plate clockwise with the other hand.

Pull out the cover plate outwards. Rinse out the cover plate and the sponge with water.

Dry before use.

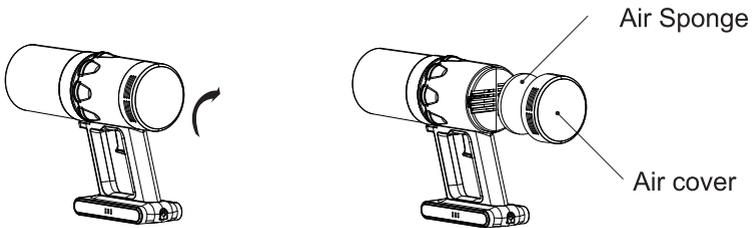

Return the outlet cover plate

After loading the air sponge into the air cover plate, grasp the machine with the left hand and hold the air cover plate with the other hand. Parallel load the air cover plate inward to the bottom and rotate the air cover plate in the opposite direction.

Maintenance and storage

1. All daily maintenance and maintenance work must be carried out after the vacuum cleaner has turned off the power.
2. Frequently clean up the garbage in the dust bucket to avoid the failure of the vacuum cleaner.
3. Vacuum cleaner surface cannot be swabbed with gasoline-like or oily appearance, apply soft cloth or neuter dishwashing essence is swabbed, scrub cloth when swabbing must twist dry, cannot infiltrate water inside vacuum cleaner electric appliance element.
4. Keep the storage area dry.
5. Heavy objects should not be piled above the machine.

When encountering the following general problems, users can conduct their own investigation: Note: when the following problems are found, please turn off the switch immediately to prevent damage to the machine and other hazards.

Problem	Reason	Solutions
could not turn on	power off	recharge
	did not switch the button	turn on the switch
	without battery pack	put back the battery pack
	spare parts damage	change the vacuum cleaner
Noise	dustbin is full or the vent is blocked	remove and clean the dustbin
the suction has reduced	dustbin is full	remove and clean the fliter
	battery is low	recharge
dust come out during using	HEPA is broken	turn off the machine and change the HEPA
	forgetting put back the HEPA	stop using ,put back the HEPA
could not recharge	the adaptor unplugged	plug the adaptor
	the adaptor did not connect the vacuum	connect the adaptor
	the adaptor damaged	change the adaptor
	spare parts in vacuum cleaner damaged	change the vacuum cleaner

REMOVAL OF APPLIANCES USED



Directive 2012/19/EU on waste electrical and electronic Equipment (WEEE) requires that the appliance uses are not disposed of using the normal municipal waste. Old appliances must be collected separately in order to optimize the recovery and recycling of materials they contain and reduce the impact on human health and the environment.

The symbol of the dustbin is used on all products to remind the obligations for separate collection. Consumers should contact their local authorities or dealer regarding the steps to follow for the removal of their old appliance. If you proceed with the scrapping of old equipment, be sure to render useless what could be dangerous: disconnect the power cable flush with the device.

Danger:

Never attempt to use your appliance, if it shows signs of damage or the power cord or plug is damaged. If the power cord is defective it is important to have it replaced with the after sales service to eliminate any danger.

Only qualified and authorized persons are authorized to carry out repairs to your appliance. Any repairs not in accordance with standards could significantly increase the level of risk for the user!

Defect resulting from improper handling, degradation or attempted repairs by third parties voids the warranty on the product. This also applies in case of normal wear and accessories from the appliance.

Important!

We recommend that you keep the packaging of your device at least for the duration of the warranty. The guarantee does not apply without the original packaging.

Warranty:

Your device has two years warranty. Accessories and spare parts are only available during the 2 years of the product warranty. Battery has 6 months warranty. The warranty does not cover wear and breakage following a wrong use of the product. The customer is responsible for all returns. You remain responsible for the costs and risks associated with the product shipment; it is therefore recommended to ship the product with an acknowledgement of receipt and transport insurance in case of significant value of the product.

KEEP OUT OF REACH OF CHILDREN

Children should be supervised to ensure that they do not play with the appliance.

Service E-mail :

relations.clients@euromenage.com



EUROMENAGE

20/22 Rue de la ferme saint ladre

95470 SAINT WITZ FRANCE

