


SCHNEIDER

Réfrigérateur top Table top refrigerator

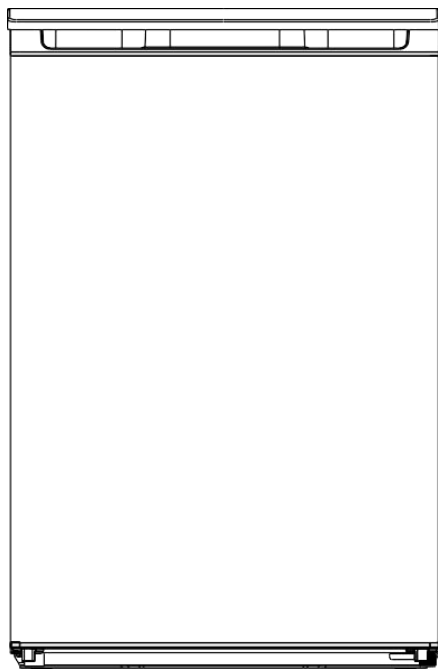

SCTTL131-WD



Manuel d'instructions

Instruction manual

Veuillez lire attentivement les instructions suivantes avant d'utiliser cet appareil.
Veuillez conserver ces instructions pour toute future référence.

Please read the following instructions carefully before using this device. Please keep these instructions for future reference.

Sommaire

Consignes de sécurité importantes	2
Protection de l'environnement	5
Installation	6
Inversion du sens de d'ouverture de la porte	7
Mise à niveau (pieds réglables)	12
Éclairage	12
Déplacement de l'appareil	12
Conseils pour économiser de l'énergie	12
Présentation du produit	13
Description de l'appareil	13
Instructions d'utilisation	14
Utilisation et fonction	14
Stockage des aliments	15
Entretien et nettoyage	16
Dépannage	18
Annexe	19
Spécifications liée's à la nouvelle norme européenne	19

Avant de mettre l'appareil en service, lisez attentivement ces consignes.

- > Cet appareil est destiné à un usage domestique et à des usages similaires : cuisines du personnel (magasins, bureaux), maisons d'hôtes, hôtels/motels, environnements résidentiels, etc.
- > Cet appareil n'est pas destiné à être utilisé par des personnes (y compris des enfants) dont les capacités physiques, sensorielles ou mentales sont réduites, ou manquant d'expérience et de connaissances, sauf si elles sont surveillées ou formées par une personne responsable de leur sécurité.

Explication des termes et des symboles

	DANGER Risque vital lié à la présence de gaz extrêmement inflammable.
	AVERTISSEMENT Danger pouvant entraîner des blessures graves ou la mort.
	PRÉCAUTION Danger pouvant entraîner des blessures légères à modérées.
	ATTENTION Information importante (ex. risque de dommage matériel).

IMPORTANT : Soyez particulièrement attentif(ve) aux messages contenant **DANGER**, **AVERTISSEMENT** ou **PRÉCAUTION**.

ATTENTION : Cette notice peut couvrir des fonctions optionnelles. Certaines fonctions peuvent ne pas s'appliquer à votre modèle.

CONSIGNES IMPORTANTES DE SÉCURITÉ

LISEZ ET CONSERVEZ CES INSTRUCTIONS !



DANGER : Risque d'incendie / matériau

inflammable Le fluide frigorigène et le matériau de moussage (cyclopentane) utilisés dans l'appareil sont inflammables. Lors de la mise au rebut, tenez l'appareil éloigné de toute source de flamme et confiez-le à une filière de traitement agréée (ne pas incinérer).



AVERTISSEMENT

Sécurité générale

- > Surveillez les enfants afin qu'ils ne jouent pas avec l'appareil.
- > Si le cordon d'alimentation est endommagé, il doit être remplacé par le fabricant, son SAV ou une personne qualifiée.
- > Ne stockez pas de substances explosives (ex. bombes aérosol avec gaz inflammable) dans l'appareil.
- > Débranchez l'appareil après usage et avant toute opération d'entretien par l'utilisateur.
- > Gardez les ouvertures de ventilation dégagées.
- > N'utilisez aucun dispositif mécanique ou autre moyen pour accélérer le dégivrage, sauf ceux recommandés par le fabricant.
- > Ne détériorez pas le circuit frigorifique.
- > N'utilisez pas d'appareils électriques à l'intérieur des compartiments de stockage, sauf s'ils sont recommandés par le fabricant.
- > Lors de l'installation, veillez à ne pas pincer ni endommager le cordon d'alimentation.
- > Ne placez pas de multiprises ou d'alimentations portables derrière l'appareil.
- > N'utilisez pas de rallonge ni d'adaptateur non relié à la terre (prise 2 broches).
- > Pour éviter tout risque d'instabilité, installez l'appareil conformément aux instructions.
- > Avant d'installer un accessoire, débranchez l'appareil. Veillez à ce que le cordon ne soit pas coincé et ne marchez pas dessus.
- > Appareil en pose libre : cet appareil n'est pas conçu pour être encastré.



PRÉCAUTION

Usage quotidien

- > Ne tirez jamais sur le cordon d'alimentation pour débrancher le réfrigérateur. Saisissez toujours fermement la fiche et retirez-la directement de la prise murale.
- > N'utilisez pas le cordon s'il est usé, endommagé ou écrasé.
- > Utilisez une prise dédiée. Ne partagez pas la prise avec d'autres appareils.
- > Assurez-vous que la fiche est correctement enfoncée.
- > Vérifiez que la prise est correctement reliée à la terre.
- > En cas de fuite de gaz, fermez la vanne et aérez. N'actionnez pas d'interrupteur et ne débranchez pas l'appareil (risque d'étincelle).
- > Attention au pincement : les espaces entre porte(s) et caisson sont réduits. Fermez la porte doucement.
- > N'utilisez pas d'appareils électriques sur le dessus de l'appareil, sauf s'ils sont du type recommandé par le fabricant.
- > Les espaces entre les portes du réfrigérateur et entre les portes et le corps de l'appareil sont étroits.
- > Ne placez pas vos mains dans ces zones afin d'éviter tout risque de pincement des doigts.
- > Ne touchez pas les aliments ni les récipients avec les mains mouillées dans le compartiment congélateur lorsque l'appareil fonctionne, en particulier les récipients métalliques, afin d'éviter tout risque de brûlure par le froid (gelure).

- > Ne laissez pas un enfant entrer dans l'appareil ou s'y accrocher.
- > Ne placez pas d'objets lourds sur l'appareil.
- > Ne stockez pas de produits inflammables, explosifs, volatils ou fortement corrosifs dans l'appareil.
- > Do not place flammable items near the refrigerator to avoid fires.
- > L'appareil est destiné au stockage d'aliments. Ne l'utilisez pas pour d'autres usages (sang, médicaments, produits biologiques, etc.)
- > Ne stockez pas de bière, boissons ou autres liquides en bouteilles ou dans des récipients fermés dans le compartiment congélateur. En gelant, les bouteilles/récipients peuvent se fissurer ou éclater et provoquer des dommages.



AVERTISSEMENT

- > Raccordez l'appareil uniquement à une alimentation en eau potable. (Convient aux modèles équipés d'un fabricant de glaçons) (*)
- > Pour éviter tout risque d'enfermement d'un enfant, gardez les clés hors de portée des enfants et ne les laissez pas à proximité du congélateur coffre (ou du réfrigérateur) (pour les modèles équipés d'une serrure). (*)

(*) : Selon le modèle acheté, certaines fonctions peuvent varier / ne pas être disponibles.

AVERTISSEMENT

Conformément aux exigences européennes :

Cet appareil peut être utilisé par des enfants à partir de 8 ans ainsi que par des personnes dont les capacités physiques, sensorielles ou mentales sont réduites, ou par des personnes manquant d'expérience et de connaissances, à condition qu'elles soient surveillées ou qu'elles aient reçu des instructions concernant l'utilisation de l'appareil en toute sécurité et qu'elles comprennent les risques encourus. Les enfants ne doivent pas jouer avec l'appareil. Le nettoyage et l'entretien utilisateur ne doivent pas être effectués par des enfants sans surveillance.

Pour éviter toute contamination des aliments, respectez les consignes suivantes :

- > L'ouverture prolongée de la porte peut entraîner une augmentation significative de la température dans les compartiments de l'appareil.
- > Nettoyez régulièrement les surfaces pouvant être en contact avec les aliments ainsi que les systèmes d'évacuation accessibles.
- > Nettoyez les réservoirs d'eau s'ils n'ont pas été utilisés pendant 48 h ; rincez/purgez le système d'eau raccordé à une arrivée d'eau si aucune eau n'a été prélevée pendant 5 jours. (Note 1)(*)
- > Stockez viandes crues et poissons dans des récipients adaptés afin d'éviter tout contact/écoulement sur d'autres aliments.
- > Les compartiments 2 étoiles conviennent pour stocker des aliments déjà congelés et faire des glaçons (si applicable). (Note 2)(*)
- > Les compartiments 1/2/3 étoiles ne conviennent pas à la congélation d'aliments frais (si applicable). (note 3)(*)
- > Pour les appareils sans compartiment 4 étoiles : cet appareil de réfrigération ne

convient pas à la congélation de denrées alimentaires. (note 4)(*)

Si l'appareil reste vide pendant une longue période : éteignez-le, dégivrez-le, nettoyez-le, séchez-le, puis laissez la porte ouverte afin d'éviter la formation de moisissures à l'intérieur de l'appareil.

Note 1,2,3,4 : veuillez confirmer si ces points s'appliquent à votre appareil, en fonction du type de compartiment dont il est équipé. (*) : Cette fonction / configuration peut varier selon le modèle acheté.

 4 étoiles : -18 °C ou moins, capacité de congélation rapide.

 3 étoiles : -18 °C ou moins

 2 étoiles : -12 °C ou moins.

 1 étoile : -6 °C.

PRÉCAUTION

1. **Ce produit n'est pas recommandé avec des prises ou interrupteurs différentiels de type AFCI/GFCI, car cela peut provoquer des déclenchements intempestifs.**
2. **Si les déclenchements persistent, utilisez une prise/interrupteur sans fonction AFCI/GFCI.**

AVERTISSEMENT

Risque d'enfermement d'enfant : Avant de vous débarrasser d'un ancien réfrigérateur : retirez la/les porte(s) et laissez les clayettes en place.

Protection de l'environnement

Mise au rebut des appareils électriques



Le symbole de la poubelle sur roues barrée indique que les déchets d'équipements électriques et électroniques (DEEE) doivent être jetés séparément des ordures ménagères.

Les anciens appareils électriques peuvent contenir des substances dangereuses. Une élimination correcte de votre ancien appareil permet d'éviter d'éventuelles conséquences négatives pour l'environnement et la santé humaine. Votre appareil peut également contenir des pièces réutilisables (pouvant servir à réparer d'autres produits) ainsi que d'autres matériaux de valeur pouvant être recyclés, afin de préserver les ressources naturelles.

Informations sur l'emballage



Les matériaux d'emballage de ce produit sont fabriqués à partir de matériaux recyclables, conformément à la réglementation nationale en vigueur en matière d'environnement. Ne jetez pas les matériaux d'emballage avec les ordures ménagères ou autres déchets. Déposez-les dans les points de collecte des emballages désignés par les autorités locales.



PRÉCAUTION

Le fluide frigorigène et le matériau moussant au cyclopentane utilisés dans ce réfrigérateur sont inflammables.

Par conséquent, lors de la mise au rebut de l'appareil, tenez-le éloigné de toute source de chaleur ou de flamme et faites-le récupérer par une entreprise spécialisée et agréée.

Ne le détruisez pas par combustion, afin d'éviter toute pollution de l'environnement ou tout autre danger.

INSTALLATION

Avant la première utilisation

Retirez tous les emballages internes et externes.

Nettoyez l'extérieur avec un chiffon doux et sec, et l'intérieur avec un chiffon humide et tiède.

Évitez une niche trop étroite, la proximité d'une source de chaleur, le soleil direct ou l'humidité.


Assurez une bonne ventilation : 10 cm de chaque côté, 10 cm au-dessus et au maximum 7,5 cm à l'arrière.

L'appareil doit être mis à la terre. Le fabricant ne peut être tenu responsable des dommages pouvant survenir en cas d'utilisation sans mise à la terre.

Raccordement électrique


Vérifiez que la tension indiquée sur la plaque signalétique correspond à votre installation. Branchez l'appareil sur une prise dédiée, correctement reliée à la terre. Veillez à ne pas coincer le cordon d'alimentation.

ATTENTION Après installation, laissez l'appareil au repos au moins 2 heures avant de le mettre sous tension.

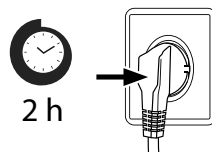

Laissez ensuite l'appareil fonctionner à vide pendant 24 heures.

Schéma des dégagements nécessaires

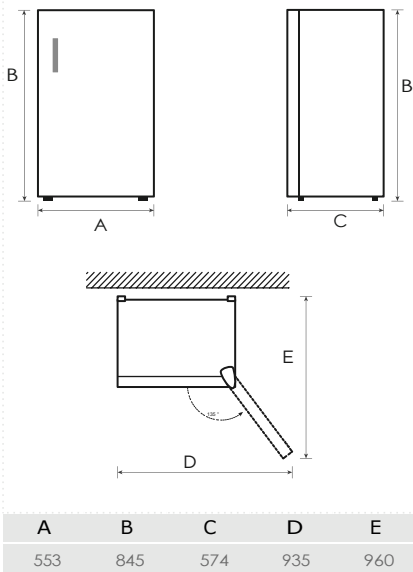

Température ambiante


Plages de fonctionnement selon la classe climatique (étiquette produit) :

Classe climatique	Température ambiante
SN	+10 °C to +32 °C
N	+16 °C to +32 °C
ST	+16 °C to +38 °C
T	+16 °C to +43 °C


Les performances et la consommation dépendent notamment de la température ambiante et de la fréquence d'ouverture de porte. Ajustez le réglage si nécessaire.

Inversion du sens d'ouverture de la porte

Outils nécessaires




Tournevis cruciforme



Tournevis plat (lame fine)

Pièces déjà montées sur le réfrigérateur (à la livraison):

charnière
supérieurecharnière
inférieure

pied réglable



cache



douille d'axe




joint de porte




ATTENTION

Au remontage, engagez toutes les vis à mi-course avant de les serrer définitivement pour faciliter l'alignement des charnières.


1. Débranchez l'appareil et retirez les aliments et accessoires amovibles.
2. Porte fermée : retirez les 2 vis à l'arrière du capot supérieur. Soulevez l'arrière du capot et faites-le glisser vers l'avant pour le retirer.

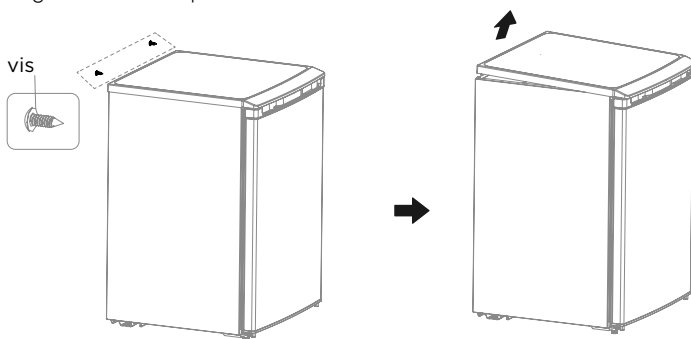


3. Retirez la vis de la charnière supérieure droite, puis retirez la charnière et le joint. Maintenez la porte verticale.

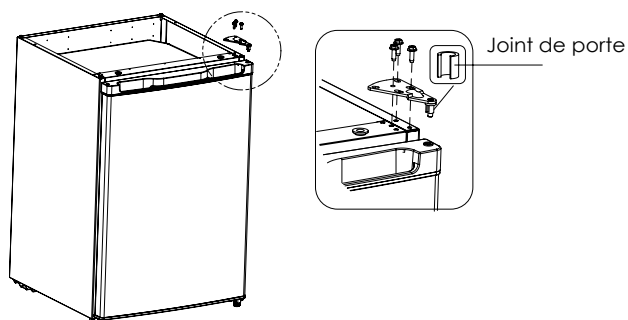


4. Ouvrez la porte, soulevez-la pour la dégager de l'axe inférieur, puis mettez-la de côté.

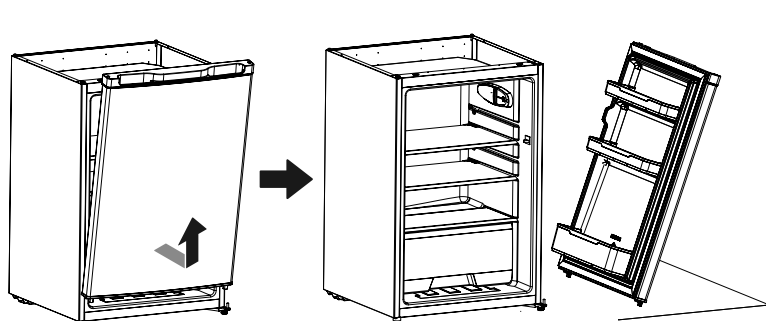


5. Couché sur le dos : retirez la charnière inférieure droite. Retirez aussi le pied réglable gauche et sa vis latérale.

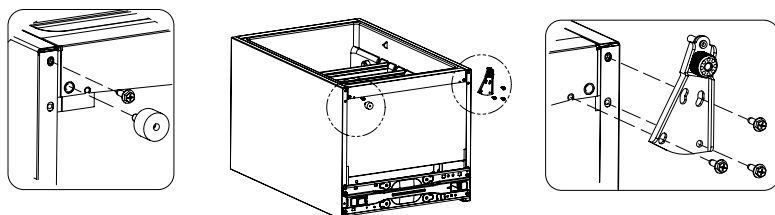


6. Montez la charnière inférieure sur le côté gauche. Montez le pied réglable et sa vis sur le côté droit.

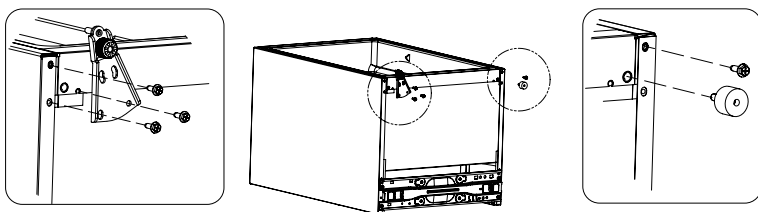


7. Redressez l'appareil. Vérifiez l'alignement du trou inférieur gauche de la porte avec l'axe de la charnière inférieure gauche.

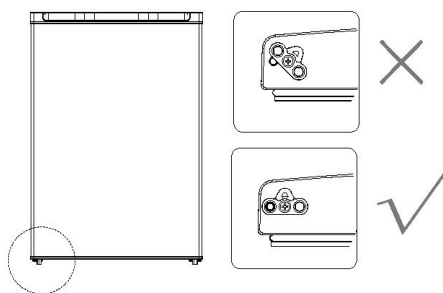


8. Positionnez la porte sur l'axe inférieur gauche.

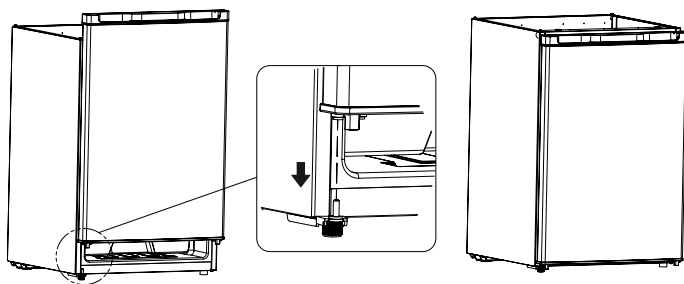


9. Déclipsez la bague/douille d'axe située à droite de la porte et montez-la à gauche.

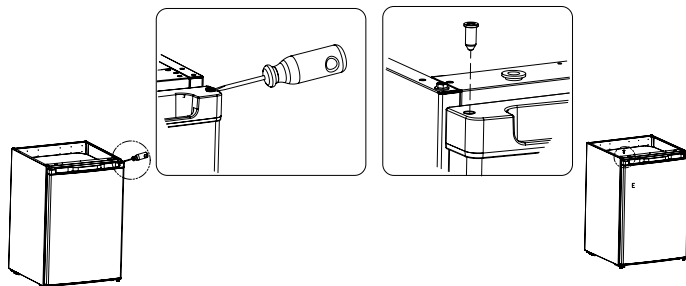


10. Déplacez la vis latérale : retirez une vis côté gauche et revissez-la côté droit.

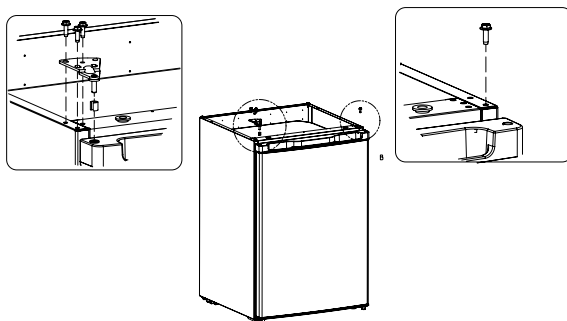

11. Montez la charnière supérieure et le joint côté gauche, puis serrez.

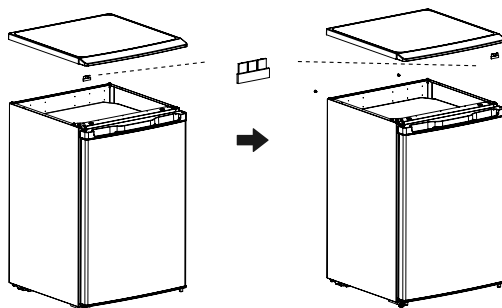

12. Fixez d'abord la partie avant du capot supérieur (le clip demi-circulaire à l'intérieur doit s'emboîter sur le plot de fixation du réfrigérateur). Poussez ensuite le capot supérieur vers l'arrière jusqu'à ce qu'il soit bien en place, sans jeu. Comme indiqué sur le schéma, serrez les deux vis à l'arrière. Une fois ces opérations terminées, l'inversion du sens d'ouverture de la porte (droite/gauche) est effectuée.

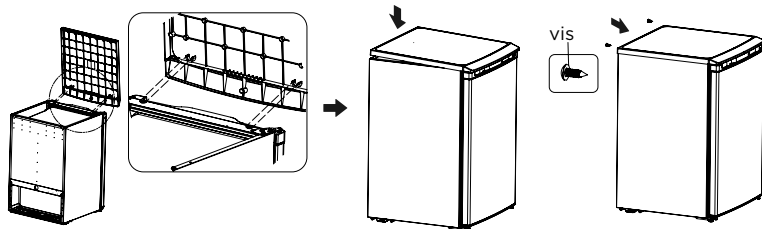**ATTENTION**

Différences : En raison d'évolutions techniques et de variantes selon les modèles, certaines illustrations de cette notice peuvent différer de votre appareil.

Mise à niveau (pieds réglables)

Pour éviter les vibrations, l'appareil doit être de niveau.

La partie avant doit être légèrement plus haute que l'arrière pour faciliter la fermeture.



Tournez les pieds : sens antihoraire pour monter, sens horaire pour descendre.



Éclairage

Le remplacement/maintenance des LED doit être réalisé par le fabricant, son SAV ou une personne qualifiée.

Après mise sous tension, attendez 2 à 3 heures avant de charger des aliments

Déplacement de l'appareil

1. Retirez tous les aliments et accessoires.
2. Débranchez et fixez la fiche sur le crochet prévu à l'arrière (ou sur le dessus selon modèle).
3. Fixez clayettes et porte pour éviter les mouvements pendant le transport.
4. Déplacez l'appareil à deux personnes minimum. Pour un transport longue distance, gardez l'appareil vertical.

Conseils pour économiser l'énergie

Ne placez pas l'appareil à proximité de cuisinières, radiateurs ou autres sources de chaleur. Si la température ambiante est élevée, le compresseur fonctionne plus souvent et plus longtemps, ce qui augmente la consommation d'énergie.

Assurez une ventilation suffisante au niveau de la base, des côtés et de l'arrière de l'appareil. Respectez également les distances indiquées dans le chapitre « Installation ».

La disposition des tiroirs, clayettes et bacs telle que présentée dans la vue d'ensemble permet une utilisation optimale de l'énergie. Conservez-la autant que possible.

Pour obtenir un volume de rangement plus important (par exemple pour des aliments volumineux), vous pouvez retirer les clayettes et tiroirs centraux. Retirez en dernier recours les tiroirs/clayettes du haut et du bas.

Un compartiment réfrigérateur/congélateur rempli de façon homogène contribue à une consommation optimisée.

Laissez les aliments chauds refroidir avant de les placer dans le réfrigérateur/congélateur.

Décongelez les aliments surgelés dans le compartiment réfrigérateur : le froid restitué réduit la consommation d'énergie du réfrigérateur.


Ouvrez la porte le moins longtemps possible afin de limiter les pertes de froid. Une ouverture brève et une fermeture correcte réduisent la consommation.

Régalez la température sans la mettre plus froide que nécessaire : cela contribue à une utilisation optimale de l'énergie.

Vérifiez que les joints de porte sont en parfait état : des joints endommagés empêchent une bonne fermeture et augmentent inutilement la consommation d'énergie.

Présentation du produit

Description de l'appareil

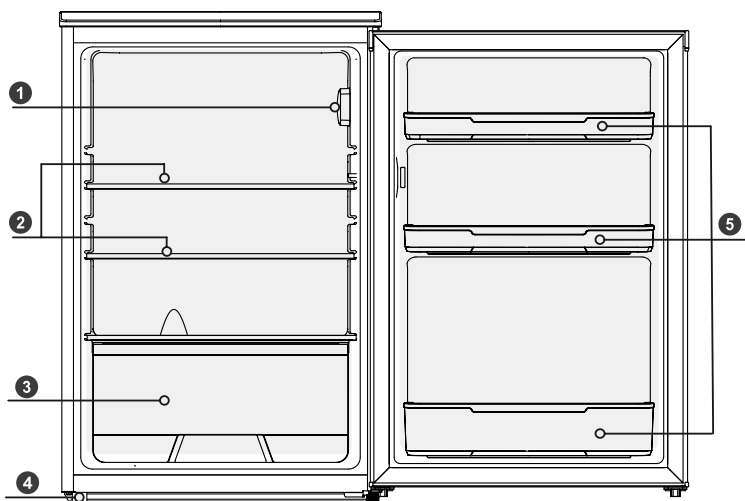

- 1 Panneau de commande de température
- 2 Clayette(s) en verre
- 3 Bac fruits et légumes

- 4 Pieds réglables
- 5 Balconnets de porte




ATTENTION

Différences: En raison d'évolutions techniques et de variantes selon les modèles, certaines illustrations de cette notice peuvent différer de votre appareil.

Instructions d'utilisation

Utilisation et fonctions

Panneau de commande

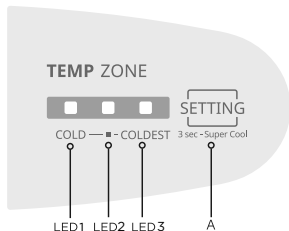

Display

- 1 LED1: FROID
- 2 LED2: ■
- 3 LED3: TRÈS FROID

Button

- A Réglage de la température

Affichage

À la mise sous tension : les 3 voyants s'allument 3 secondes, puis LED2 reste allumée (réglage par défaut).

En cas de défaut : le voyant correspondant clignote

Voyant	Description
LED2	Défaut capteur de dégivrage du compartiment réfrigérateur



ATTENTION

Le panneau de commande réel peut varier selon le modèle.

Réglage de température

Chaque pression sur le bouton de réglage de température « A » fait passer au niveau de température suivant.

Une fois le réglage effectué, le réfrigérateur fonctionne selon la valeur sélectionnée après 15 secondes. The shift regulation is:



Mode Super Cool

Maintenez le bouton de réglage de température « A » enfoncé pendant 3 secondes : l'appareil passe en mode Super refroidissement après 15 secondes. Les voyants LED1 et LED2 s'allument simultanément.

Le mode Super refroidissement s'arrête automatiquement après 6 heures, ou dès qu'une pression est effectuée sur le bouton de réglage. L'appareil revient alors au réglage précédent.

Stockage des aliments

Compartiment réfrigérateur

Pour limiter l'humidité et la formation de givre, ne placez jamais de liquides dans le compartiment réfrigérateur dans des récipients non fermés. Un liquide non couvert augmente la formation de givre et nécessite un dégivrage plus fréquent.

Ne placez jamais d'aliments chauds dans le réfrigérateur. Laissez-les d'abord refroidir à température ambiante, puis rangez-les en veillant à une bonne circulation de l'air.

Les aliments ou récipients ne doivent pas toucher la paroi arrière : ils pourraient y geler. Évitez également d'ouvrir la porte trop souvent.

La viande et le poisson nettoyé (emballés ou dans un film plastique) peuvent être conservés dans le compartiment réfrigérateur et consommés sous 1 à 2 jours.

Les fruits et légumes non emballés peuvent être placés dans le bac prévu pour les fruits et légumes frais.

Entretien et nettoyage



PRÉCAUTION

Débranchez l'appareil avant toute opération d'entretien. Attendez au moins 5 minutes avant de le remettre en marche : des redémarrages trop fréquents peuvent endommager le compresseur.

N'utilisez pas de dispositifs mécaniques ni d'autres moyens pour accélérer le dégivrage, sauf ceux recommandés par le fabricant.

Ne tentez pas de réparer, démonter ou modifier l'appareil vous-même. En cas de réparation, contactez le service après-vente.

Dépoussiérez l'arrière de l'appareil au moins une fois par an afin de réduire le risque d'incendie et d'éviter une surconsommation d'énergie.

Vérifiez régulièrement les joints de porte (absence de saletés). Nettoyez-les avec un chiffon doux légèrement humide et de l'eau savonneuse (ou un détergent dilué).

Nettoyez régulièrement l'intérieur de l'appareil pour éviter les mauvaises odeurs.

Pour nettoyer l'intérieur : utilisez un chiffon doux ou une éponge avec 2 cuillères à soupe de bicarbonate de soude dans 1 litre d'eau tiède, puis rincez à l'eau claire et essuyez.

Après le nettoyage, laissez la porte ouverte afin que l'intérieur sèche naturellement avant de rebrancher l'appareil.

Pour les zones difficiles d'accès (fentes, interstices, angles), nettoyez régulièrement avec un chiffon doux, une brosse souple, etc. Utilisez si besoin des outils d'appoint (par exemple une tige fine) pour éviter toute accumulation d'impuretés ou de bactéries.

Nettoyez l'extérieur avec un chiffon doux humide et de l'eau savonneuse (ou un détergent), puis essuyez.

N'utilisez pas : brosses dures, éponges métalliques, brosses en fil métallique, produits abrasifs (ex. dentifrice), solvants organiques (ex. alcool, acétone, etc.), eau bouillante, produits acides ou alcalins : ils peuvent endommager les surfaces internes et externes. L'eau bouillante et certains solvants (ex. benzène) peuvent déformer ou abîmer les pièces en plastique.



Ne rincez pas l'appareil directement à l'eau ou avec d'autres liquides lors du nettoyage, afin d'éviter tout risque de court-circuit ou d'altération de l'isolation électrique.

Dégivrage

Pendant le fonctionnement de l'appareil, des gouttelettes de condensation ou du givre peuvent apparaître sur la paroi arrière du compartiment réfrigérateur. Ceci est normal. Il n'est pas nécessaire d'essuyer la condensation ni le givre.

La paroi arrière dégivre automatiquement. La condensation s'écoule dans le canal d'évacuation et est dirigée vers l'unité de réfrigération, où elle s'évapore.

Remarque : maintenez le canal d'évacuation et l'orifice de drainage propres afin de permettre l'écoulement de la condensation.




ATTENTION

Évitez les arrêts/redémarrages fréquents : l'appareil est conçu pour fonctionner de manière continue.

Nettoyage du balconnet de porte


En suivant la flèche indiquée sur le schéma, pressez le balconnet avec les deux mains, puis soulevez-le vers le haut pour le retirer.

Après l'avoir lavé, vous pouvez le remettre en place en ajustant sa hauteur d'installation selon vos besoins.

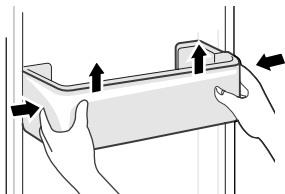

Nettoyage des clayettes en verre


Les clayettes sont bloquées à l'arrière par une butée. Pour les retirer, soulevez d'abord la clayette vers le haut, puis tirez-la vers vous.

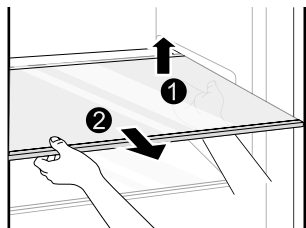

Vous pouvez ensuite la nettoyer ou ajuster sa position selon vos besoins.

Nettoyage du bac à légumes

1. Retirez le contenu du bac. Saisissez la poignée du bac à légumes et tirez-le entièrement vers vous jusqu'en butée.
2. Soulevez ensuite le bac à légumes vers le haut pour le retirer.

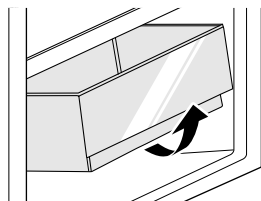

Dépannage

Si le problème persiste après vérification, contactez le service après-vente.

Problème	Causes possibles	Solutions
L'appareil ne fonctionne pas	Alimentation non activée / fiche mal branchée. Baisse de tension, coupure, disjoncteur.	Enfoncez la fiche. Vérifiez l'alimentation électrique.
Le compresseur fonctionne longtemps	Température ambiante élevée. Trop d'aliments. Aliments chauds. Porte ouverte souvent. Givre trop épais.	Normal par temps chaud. Ajoutez moins d'aliments. Laissez refroidir. Limitez les ouvertures. Dégivrez si besoin.
La porte ferme mal	Obstacle. Trop d'aliments. Joint déformé. Appareil non stable.	Retirez l'obstacle. Réorganisez. Réchauffez le joint puis laissez refroidir. Mettez de niveau.
Odeurs	Aliments avariés/odorants. Intérieur sale.	Nettoyez et retirez les aliments. Emballez hermétiquement.
Condensation extérieure	Humidité ambiante élevée.	Essuyez avec un chiffon sec.
Porte difficile à ouvrir	Différence de pression interne/externe.	Attendez quelques instants puis ouvrez lentement.
L'appareil ne fonctionne pas	Alimentation non activée / fiche mal branchée. Baisse de tension, coupure, disjoncteur.	Enfoncez la fiche. Vérifiez l'alimentation électrique.

Pendant l'utilisation, certains bruits peuvent être entendus. Ils sont normaux et n'affectent pas le bon fonctionnement de l'appareil.

Bruits pouvant être facilement évités :

- > Bruit dû à un appareil non stable : mettez l'appareil à niveau à l'aide des pieds avant réglables. Vous pouvez aussi placer des patins souples sous les roulettes arrière, surtout sur un sol carrelé.
- > Contact avec un meuble adjacent : éloignez légèrement le réfrigérateur.
- > Grincement des tiroirs ou des clayettes : retirez puis remettez le tiroir ou la clayette en place.
- > Claquements de bouteilles : espacez les bouteilles.

Bruits normaux de fonctionnement :

Ils proviennent principalement du compresseur (mise en marche/arrêt) et du circuit de refroidissement (dilatation et contraction des éléments sous l'effet des variations de température, circulation du fluide frigorigène).

APPENDIX

Spécifications liées à la nouvelle norme européenne

Les pièces listées dans le tableau ci-dessous peuvent être obtenues auprès du service après-vente (réseau de prestataires agréés).

Pièce	Fournie par	Délai minimum de mise à disposition
Thermostats	Personnel d'entretien professionnel	Au moins 7 ans après le lancement du dernier modèle sur le marché
Capteurs de température	Personnel d'entretien professionnel	Au moins 7 ans après le lancement du dernier modèle sur le marché
Cartes électroniques	Personnel d'entretien professionnel	Au moins 7 ans après le lancement du dernier modèle sur le marché
Sources lumineuses	Personnel d'entretien professionnel	Au moins 7 ans après le lancement du dernier modèle sur le marché
Poignées	Réparateurs professionnels et utilisateurs	Au moins 7 ans après le lancement du dernier modèle sur le marché
Charnières	Réparateurs professionnels et utilisateurs	Au moins 7 ans après le lancement du dernier modèle sur le marché
Bacs / balconnets	Réparateurs professionnels et utilisateurs	Au moins 7 ans après le lancement du dernier modèle sur le marché
Paniers	Réparateurs professionnels et utilisateurs	Au moins 7 ans après le lancement du dernier modèle sur le marché
Joint de porte	Réparateurs professionnels et utilisateurs	Au moins 10 ans après le lancement du dernier modèle sur le marché

Cher client,

1. Si vous souhaitez retourner ou remplacer le produit, veuillez contacter le magasin où vous l'avez acheté. (N'oubliez pas d'apporter la facture d'achat.)
2. Si votre produit tombe en panne et doit être réparé, veuillez contacter le service après-vente.



ATTENTION

Les informations sur le modèle dans la base de données du produit, ainsi que l'identifiant du modèle, peuvent être obtenus via un lien Web scanné par un code QR, le cas échéant, sur l'étiquette d'efficacité énergétique du produit. Pour plus d'informations sur l'efficacité énergétique de l'appareil, visitez <https://ec.europa.eu> et effectuez une recherche à l'aide du nom du modèle.

Le nom du modèle se trouve sur la plaque signalétique de l'appareil.

LA FICHE D'INFORMATION SUR LE PRODUIT SELON LE REGLEMENT UEN°2019/ 2016

L'étiquetage énergétique des appareils frigorifiques se trouve sous le code QR indiqué sur l'étiquette énergétique

Garantie du produit et pièces de rechange disponibles selon les termes de la garantie du fabricant applicable au lieu, l'utilisation du Service à la clientèle est gratuite. La durée minimale de la garantie (garantie du fabricant pour les consommateurs privés) dans l'Espace Economique Européen est de 2 ans selon les termes de garantie applicable au lieu. Les conditions de garantie n'affectent pas les autres droits ou réclamations détenus par vous-même en vertu de la législation locale. Des informations détaillées sur la période de garantie et les conditions de garantie dans votre pays sont disponibles auprès du service à la clientèle, de votre revendeur ou de notre site Web. Les pièces de rechange d'origine fonctionnelles selon la directive écoconception correspondante peuvent être obtenues auprès du service à la clientèle pendant une période d'au moins 4 ans à compter de la date de mise sur le marché de votre appareil dans l'Espace économique européen.

Service après-vente

Pour une intervention technique en raison d'un dysfonctionnement, veuillez appeler le 04 88 78 59 99.

GARANTIE

La garantie ne couvre pas les pièces d'usure du produit, ni les problèmes ou les dommages résultant de:

- (1) détériorations superficielles dues à l'usure normale du produit ;
- (2) défauts ou détériorations dus au contact du produit avec des liquides et dus à la corrosion provoquée par la rouille ou de présence d'insectes ;
- (3) tout incident, abus, utilisation impropre, modification, démontage
ou réparation non autorisés ;
- (4) toute opération impropre d'entretien, utilisation non conforme aux instructions concernant le produit ou le branchement à une tension incorrecte ;
- (5) toute utilisation d'accessoires non fournis ou non approuvés par le fabricant.



La garantie sera annulée en cas d'élimination de la plaque signalétique et/ou du numéro de série du produit.

MISE AU REBUT :



La directive Européenne 2012/19/UE sur les Déchets des Équipements Électriques et Électroniques (DEEE), exige que les appareils ménagers usagés ne soient pas jetés dans le flux normal des déchets municipaux. Les appareils usagés doivent être collectés séparément afin d'optimiser le taux de récupération et le recyclage des matériaux qui les composent et réduire l'impact sur la santé humaine et l'environnement.

Le symbole de la poubelle barrée est apposé sur tous les produits pour rappeler les obligations de la collecte séparée. Les consommateurs devront contacter les autorités locales ou leur revendeur concernant la démarche à suivre pour l'enlèvement de leur appareil.

Informations sur la signification du marquage de conformité



Le marquage CE indique que le produit répond aux principales exigences des Directives Européenne 2014/35/UE (Basse Tension, 2014/30/UE) (Compatibilité Électromagnétique), 2011/65/UE (Réduction de l'emploi de certaines substances dangereuses dans les équipements électriques et électroniques – RoHS), telle que modifiée.

Contents

Important safety instructions	2
Environmental protection.....	5
Install Instruction.....	6
Doors reversal.....	7
Leveling feet.....	12
Changing the light	12
Moving the appliance	12
Tips for energy saving.....	12
Product overview	13
Parts and functions	13
Operation Instructions	14
Use and functions	14
Storing food.....	15
Maintenance and cleaning.....	16
Troubleshooting.....	18
Appendix	19
Special for new European standard	19

Before switching on the appliance for the first time read the following safety hints!

- > This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.
- > This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Explanation of terms/symbols

	DANGER This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.
	WARNING The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.
	CAUTION The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.
	ATTENTION The signal word indicates important information (e.g. damage to property), but not danger.

IMPORTANT: Pay particular attention to messages that contain the words **DANGER**, **WARNING** or **CAUTION**. These words are used to alert you to a potential hazard that can seriously injure you and others.

The instructions will tell you how to reduce the chance of injury and let you know what can happen if the instructions are not followed.

ATTENTION: These operating instructions are general. This means that certain functions apply to your refrigerator/freezer, while others do not.

We are constantly working on the further development and improvement of our appliance types and models. Therefore, we reserve the right to make changes to the design, equipment and accessories of all types and models without prior notice.

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS!



WARNING: Risk of fire / flammable material

Refrigerant and cyclopentane foaming material used for the appliance are flammable. Therefore, when the appliance is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm



WARNING

General Safety

- > Children should be supervised to ensure that they do not play with the appliance.
- > If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- > Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- > The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.
- > **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- > **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- > **WARNING:** Do not damage the refrigerant circuit.
- > **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- > **WARNING:** Please abandon the refrigerator according to local regulators for its use flammable blowing gas and refrigerant.
- > **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- > **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- > Do not use extension cords or ungrounded (two prong) adapters.
- > To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- > The refrigerator must be disconnected from the source of electrical supply before attempting the installation of accessory. Ensure that the power cable is not trapped by the refrigerator. Do not step on the power cable.
- > For a freestanding appliance: this refrigerating appliance is not intended to be used as a built-in appliance.



CAUTION

Daily use

- > Do not pull the power cord when pulling the power plug of the refrigerator. Please firmly grasp the plug and pull out it from the socket directly.
- > To ensure safe use, do not damage the power cord or use the power cord when it is damaged or worn.
- > Please use a dedicated power socket and the power socket shall not be shared with other electrical appliances.
- > The power plug should be firmly contacted with the socket or else fires might be caused.
- > Please ensure that the grounding electrode of the power socket is equipped with a reliable grounding line.
- > Please turn off the valve of the leaking gas and then open the doors and windows in case of leakage of gas and other flammable gases.
- > Do not unplug the refrigerator and other electrical appliances considering that spark may cause a fire.
- > Do not use electrical appliances on the top of the appliance, unless they are of the type recommended by the manufacturer.
- > The gaps between refrigerator doors and between doors and refrigerator body are small, be noted not to put your hand in these areas to prevent from squeezing the finger. Please be gentle when close the refrigerator door to avoid falling articles.
- > Do not pick foods or containers with wet hands in the freezing chamber when the refrigerator is running, especially metal containers in order to avoid frostbite.
- > Do not allow any child to get into or climb the refrigerator; otherwise suffocation or falling injury of the child may be caused.
- > Do not place heavy objects on the top of the refrigerator considering that objectives may fall when close or open the door, and accidental injuries might be caused.
- > Do not put flammable, explosive, volatile and highly corrosive items in the refrigerator to prevent damages to the product or fire accidents.
- > Do not place flammable items near the refrigerator to avoid fires.
- > The refrigerator is intended for household use, such as storage of foods; it shall not be used for other purposes, such as storage of blood, drugs or biological products, etc.
- > Do not store beer, beverage or other fluid contained in bottles or enclosed containers in the freezing chamber of the refrigerator; or otherwise the bottles or enclosed containers may crack due to freezing to cause damages.



WARNING

- > Connect to potable water supply only. (Suitable for ice cube maker) (*)
- > To prevent children from being entrapped, the keys must be kept out of reach of children and not in the vicinity of chest freezer (or refrigerator) (suitable for products with locks).(*)

(*) : This feature varies depending on the model purchased.



WARNING

For EU standard:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48h; flush the water system connected to a water supply if water has not been drawn for 5 days. **(Note 1)(*)**
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes. **(Note 2)(*)**
- 1 star, 2 star and 3 star compartments are not suitable for the freezing of fresh food. **(note 3)(*)**
- For appliances without a 4-star compartment: this refrigerating appliance is not suitable for freezing foodstuffs. **(note 4)(*)**
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

Note 1,2,3,4: Please confirm whether it is applicable according to your product compartment type.

(*): This feature varies depending on the model purchased.



"4 star" symbol: Freezer at -18 °C or colder, and it has the ability of quick freezing a certain amount of food



"3 star" symbol: Freezer compartment at -18 °C or colder



"2 star" symbol: Freezer compartment at -12 °C or colder



"1 star" symbol: Freezer compartment with a target temperature and storage conditions of -6 °C



CAUTION

This product is not recommended for use with sockets or main switch with the AFCI/GFCI function, otherwise it may cause false tripping.

1. It's not pose a safety risk when tripped.
2. If tripping persists, it is recommended to replace the sockets or main switch without AFCI/GFCI function.



WARNING

Risk of child entrapment. Before you throw away your old refrigerator or freezer:

- > Take off the doors.
- > Leave the shelves in place so that children may not easily climb inside.

ENVIRONMENTAL PROTECTION

Disposing of old electrical devices in an environmentally-friendly manner



This crossed-out wheeled bin symbol indicates that waste electrical and electronic products (WEEE) should be disposed of separately from the municipal waste stream.

Old electrical products can contain hazardous substances so correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. Your old appliance may contain reusable parts that could be used to repair other products, and other valuable materials that can be recycled to conserve limited resources.

Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

CAUTION

Refrigerant and cyclopentane foaming material used for the refrigerator are flammable. Therefore, when the refrigerator is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm.

INSTALL INSTRUCTION

Before first use

Remove the exterior and interior packing, wipe the outside thoroughly with a soft dry cloth and the inside with a wet, lukewarm cloth.


Avoid placing the cabinet in a narrow recess or near any heat source, direct sunlight, or moisture.

Keep the air circulation free around the cabinet. When installing the unit, ensure 10cm of free space at both sides, 10cm at the top of the unit, and not more than 7.5cm at the rear of the unit.

Before connecting your refrigerator to the power supply, check that the voltage stated on the rating label of your appliance corresponds to the voltage in your home. A different voltage could damage the appliance.

The appliance must be grounded. The manufacturer is not responsible for damages that may occur as a result of usage without grounding.


Space requirement diagram

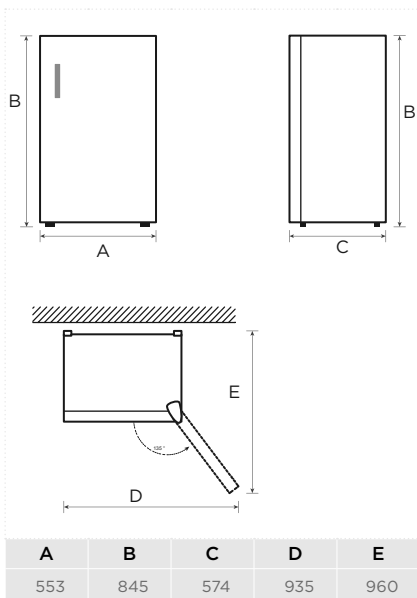

Notice: All dimensions in mm

Connecting the appliance

After installing the product, please let it stay for more than 2 hours before turning on the power, otherwise it will lead to a decrease in cooling capacity or a damage to the product.

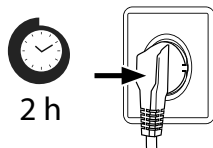

Allow the appliance to run empty for 24 hours so the compartment can cool to the appropriate temperature.

⚠ CAUTION

The refrigerator should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate. When positioning the appliance, ensure the supply cord is not trapped or damaged.

Ambient Temperature

Depending on the climate class, this refrigerator is intended to be used at an ambient temperature range as specified in the following table.

The product may not operate properly at temperatures outside of the specific range.

You can find the climate class on the product label.

Climate Class	Ambient Temperature
SN	+10 °C to +32 °C
N	+16 °C to +32 °C
ST	+16 °C to +38 °C
T	+16 °C to +43 °C

If you have any doubts regarding installation, please turn to the vendor, to our customer service or to the nearest Authorised Service Centre.

💡 ATTENTION


The cooling performance and power consumption of the refrigerator may be affected by the ambient temperature, the door-opening frequency, and the location of the refrigerator. We recommend adjusting the temperature settings as appropriate.

Doors reversal

List of tools to be provided by the user



Cross screwdriver




Thin-blade screwdriver

Parts already mounted on the refrigerator (as shipped):



upper hinge



bottom hinge



adjustable foot



cover blade



shaft sleeve




gasket




ATTENTION

Warning: When installing screws at the hinge, please align the holes of each screw and fix each screw halfway before tightening them together. This is to prevent screws from being twisted and difficult to adjust during the process.


1. Power off the refrigerator, and remove all objects from the refrigerator.
2. With the door closed, use a cross screwdriver to remove the two screws on the top left and right of the back of the refrigerator. Lift the back of the upper cover and move it forward a certain distance until the upper cover can be removed. Place the upper cover aside.

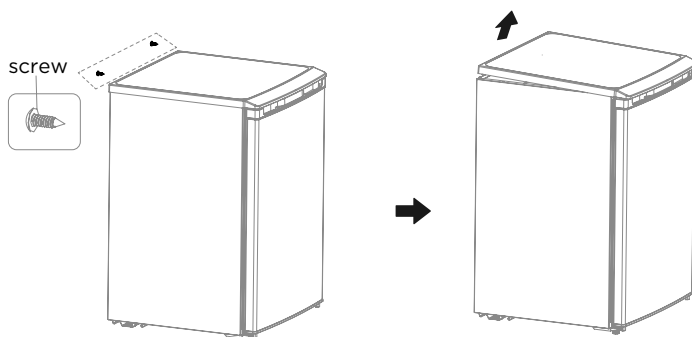


3. Remove the screw from the upper right hinge, then remove the upper right hinge and the gasket. Please keep the door vertical throughout the process to prevent it from falling.

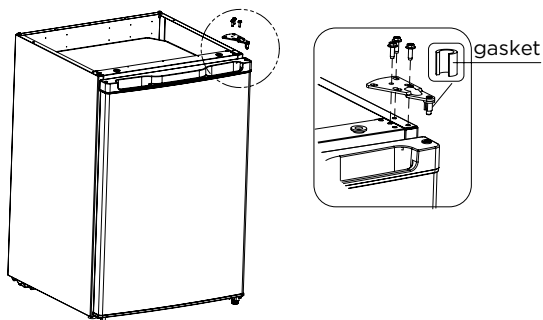


4. Open the door at an angle, lift it upwards until the door box separates, and place the door aside for later use.

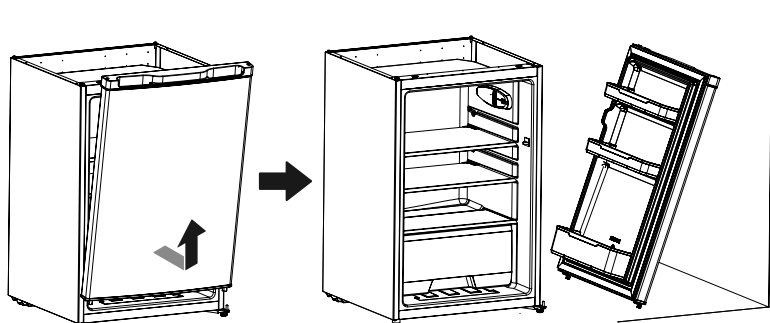


5. Place the refrigerator on its back and remove the right bottom hinge screw, then remove the right hinge. Remove the left adjustable foot and its single screw on the side.

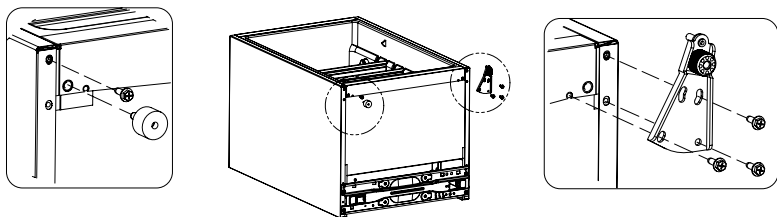


6. Install the hinge removed in step 5 on the left side, and install the adjustable foot and single screw removed in step 5 on the right side (the components in step 5 are swapped left and right).

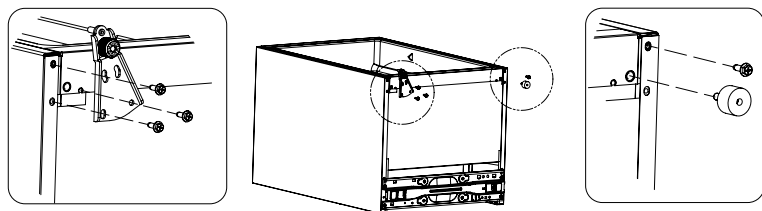


7. Align the refrigerator and check if the lower left hole of the door is aligned.

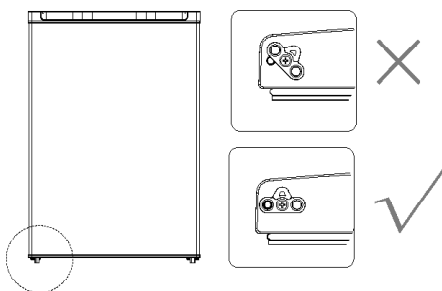


8. Align the hole on the lower left side of the door with the screw column on the lower left hinge after alignment.

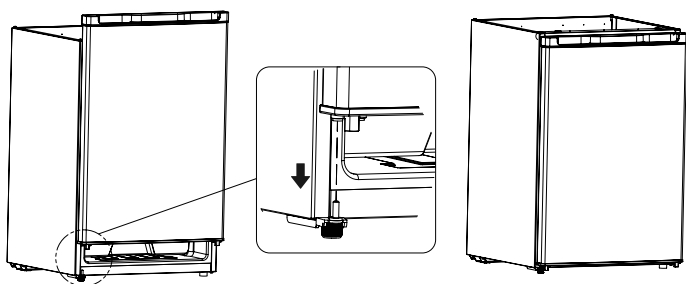


9. Use a thin-blade screwdriver to pry off the shaft sleeve on the right side of the door, then install it in the small hole on the left side of the door.

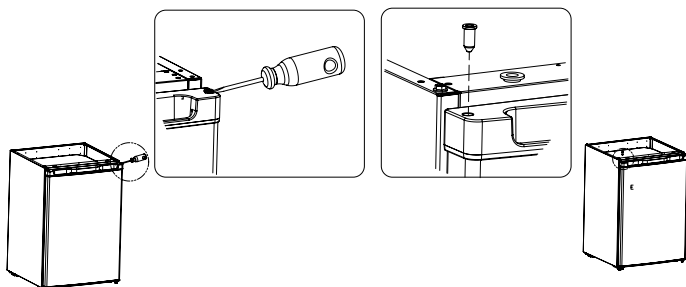


10. Remove a screw on the left side of the refrigerator and install it on the right side of the refrigerator. Then install the hinge and the gasket removed in step 3 on the upper left and secure it with hinge screws.

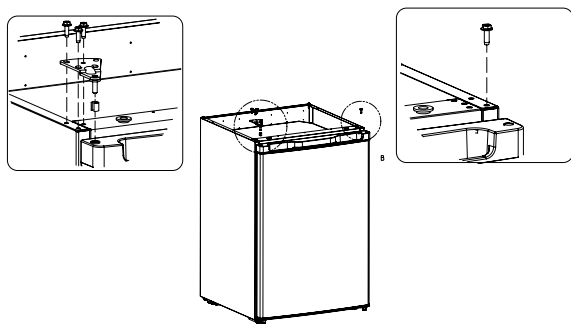

11. Change the cover blade on the upper cover from the left to the right.

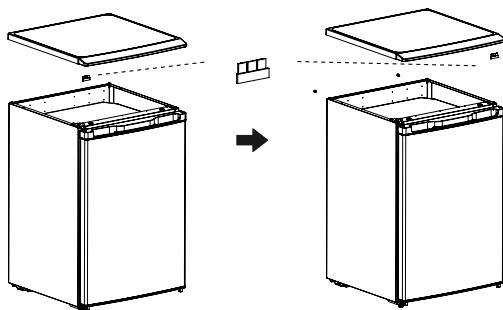

12. Fix the front side of the upper cover first (the semi circular buckle inside can be felt to closely match with the fixing column on the box), and push the upper cover backwards until there is no obvious shaking -as shown in the figure, fix the two screws on the back. After all operations are completed, the door right-left change operation is completed.

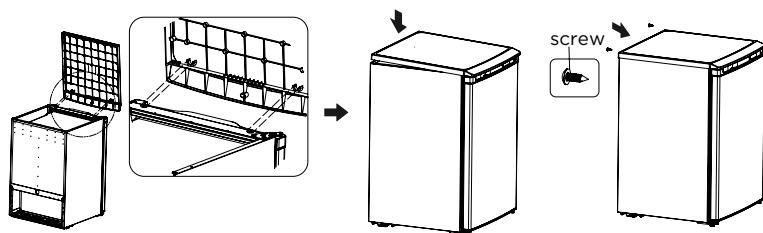

● ATTENTION

Differences: Due to technical changes and different models, some of the illustrations in this manual may differ from your model.

Leveling feet

To avoid vibration, the appliance must be leveled.

If required, adjust the leveling feet to compensate for the uneven floor.

The front should be slightly higher than the rear to aid in door closing.

Leveling feet can be turned easily by tipping the cabinet slightly.

Turn the leveling feet counter clockwise  to raise the unit, clockwise  to lower it.

Changing the light

Any replacement or maintenance of the LED lamps is intended to be made by the manufacturer, its service agent or similar qualified person.

After connecting the power supply cord (or plug) to the outlet, wait 2 or 3 hours before you put food into the appliance. If you add food before the appliance has cooled completely, your food may spoil.

Moving the appliance

1. Remove all items from the appliance.
2. Pull the power plug out, insert and fix it into the power plug hook at the rear or on top of the appliance.
3. Tape parts such as shelves and the door to prevent from falling off while moving the appliance.
4. Move the appliance with more than two people carefully. When transporting the appliance over a long distance, keep the appliance upright.

Tips for energy saving

Do not place the appliance near cookers, radiators or other heat sources. If the ambient temperature is high, the compressor will run more frequently and for longer, resulting in increased energy consumption.

Ensure that there is sufficient ventilation at the base of the appliance, on the sides of the appliance and at the back of the appliance.

Please also observe the spacing dimensions in the chapter "Installation".

The arrangement of drawers, shelves and trays as shown in the product overview offers the most efficient use of energy and should be retained as far as possible.

To obtain a larger storage space (e.g. for large refrigerated/frozen goods), the middle drawers and shelves can be removed. The top and bottom drawers and shelves should be removed last if necessary.

An evenly filled refrigerator/freezer compartment contributes to optimal energy use.

Allow warm food to cool before placing it in the refrigerator/freezer compartment. Food that has already cooled down increases energy efficiency.

Allow frozen food to defrost in the refrigeration compartment. The coldness of the frozen food reduces the energy consumption in the refrigerator compartment and thus increases the energy efficiency.


Open the door only as briefly as necessary to minimise cold loss. Opening the door briefly and closing it properly reduces energy consumption.

Setting the temperature no colder than necessary contributes to optimal energy use.

The door gaskets of your appliance must be perfectly intact so that the doors close properly and energy consumption is not increased unnecessarily.

PRODUCT OVERVIEW

Parts and functions

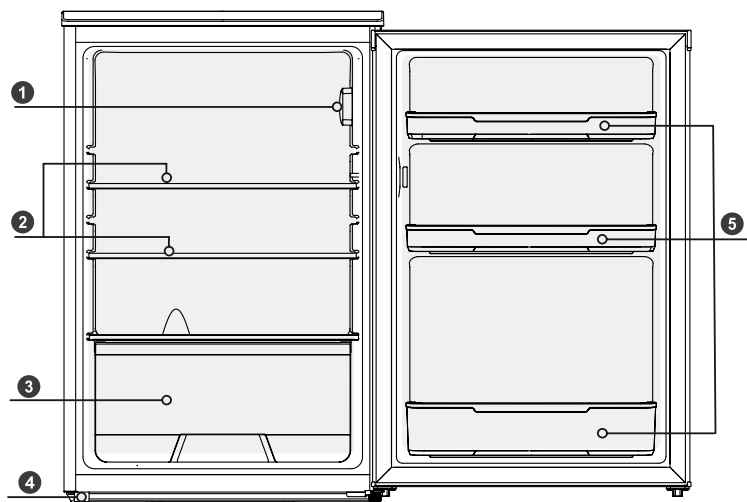

- | | | | |
|---|---------------------------|---|-----------------|
| 1 | Temperature control panel | 4 | Adjustable foot |
| 2 | Glass shelf | 5 | Door tray |
| 3 | Fruits and vegetables box | | |


ATTENTION

Differences: Due to technical changes and different models, some of the illustrations in this manual may differ from your model.

OPERATION INSTRUCTIONS

Use and functions

Control panel

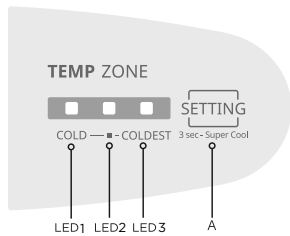

Display

- 1 LED1: COLD
- 2 LED2: ■
- 3 LED3: COLDEST

Button

- A Temperature setting

Display

Once initially powered on,all LED lights turn on for 3 seconds, and then the refrigerator runs at the default setting (LED2 light is on).

In case of a failure, the corresponding LED blinks.

In case of no failures, it shows the actual temperature setting of refrigerator.

Fault Code	Fault Description
LED2	Refrigerating chamber Defrost sensor fault

ATTENTION

The actual control panel may differ from model to model.

Temperature setting

Each time the temperature setting button “A” is pressed once,the temperature setting changes one time. After the temperature setting has been completed,the refrigerator will run according to the set value after 15s.

The shift regulation is:



Super cool mode

Long press temperature setting button “A” for 3s, it will enter Super cool mode after 15s,and LED1 and LED2 turn on at the same time.

After running for 6 hours at Super cool mode or the setting button is pressed, it will quit the Super cool mode,then go back to the previous setting.

Storing food

Cooling compartment

To reduce moisture and subsequent ice build-up, never put liquid into the fridge compartment in unsealed containers. Frost tends to concentrate in the coolest parts of the evaporator. Storing uncovered liquids results in a more frequent need for defrosting.

Never put warm foods in the fridge compartment. These should first cool down at room temperature and then be placed so as to ensure adequate air circulation in the fridge compartment.

Foods or food containers should not touch the back wall of the fridge because they could freeze to the wall. Do not keep regularly opening the door of the refrigerator.

Meat and clean fish (packed in a package or plastic foil) can be placed in the fridge compartment, which can be used in 1-2 days.

Fruit and vegetables without packaging can be placed in the part designated for fresh fruit and vegetables.

MAINTENANCE AND CLEANING



CAUTION

Disconnect the appliance from the electrical supply before undertaking any routine maintenance. Allow at least 5 minutes before restarting the appliance, as frequent starting may damage the compressor.

Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

Do not try to repair, disassemble or modify the appliance by yourself. In case of repair please contact our customer service.

Eliminate the dust on the back of the unit at least once in the year to avoid hazard by fire, as well as increased energy consumption.

Check the door gasket regularly to make sure there are no debris. Clean the door gasket with a soft cloth dampened with soapy water or diluted detergent.

The interior of the product should be cleaned regularly to avoid odor.

Use a soft cloth or sponge to clean the inside of the product, with two tablespoons of baking soda and a quart of warm water. Then rinse with water and wipe clean. After cleaning, open the door and let it dry naturally before turning on the power.

For areas that are difficult to clean in the product (such as narrow sandwiches, gaps or corners), it is recommended to wipe them regularly with a soft rag, soft brush, etc. and when necessary, combined with some auxiliary tools (such as thin sticks) to ensure no contaminants or bacteria accumulation in these areas.

Wipe the outer surface of the product with a soft cloth dampened with soapy water, detergent, etc., and then wipe dry.

Do not use hard brushes, clean steel balls, wire brushes, abrasives (such as toothpastes), organic solvents (such as alcohol, acetone, isoamyl acetate, etc.), boiling water, acid or alkaline items, which may damage the fridge surface and interior. Boiling water and organic solvents such as benzene may deform or damage plastic parts.



Do not rinse directly with water or other liquids during cleaning to avoid short circuits or affect electrical insulation after immersion.

● ATTENTION

The appliance shall run continuously once it is started. Generally, the operation of the appliance shall not be interrupted; otherwise the service life may be impaired

Defrosting


While the refrigerating unit is running, beads of condensation or hoarfrost from at the back of the refrigerator compartment. This is normal. It is not necessary to wipe off the condensation or frost. The rear panel defrosts automatically. The condensation runs into the condensation channel and is conveyed to the refrigerating unit where it evaporates.

Note: Keep the condensation channel and drainage hole clean, so that the condensation can run out.

Cleaning of door tray


According to the direction arrow in the figure below, use both hands to squeeze the tray, and push it upward, then you can take it out.

After washing the tray having been taken out, you can adjust its installing height in accordance with your requirement.

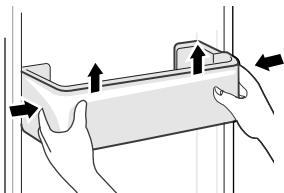

Cleaning the vegetable drawer


1. Remove the contents of the drawer. Hold the handle of the vegetable drawer and pull it out completely until it stops.
2. Lift the vegetable drawer up and remove it by pulling it out.

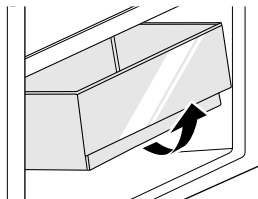

Cleaning of glass shelf

As the innermost part of the refrigerator liner where contacting the shelves has a backstop, you shall raise the shelves upward, then you can be able to take it out.

Adjust or clean the shelves according to your requirement.

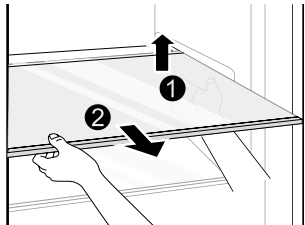

TROUBLESHOOTING

The following simple issues can be handled by the user. Please call the after-sale service department if the issues are not solved.

Problem	Possible Causes	Solution
Not operate	- The power supply is not turned on and the plug is not firmly inserted. - Low voltage, power failure or part of the circuit tripped.	- Insert the power cord plug firmly. - Check the power supply at home.
Compressor working for a long time	- High ambient temperature causing long working time. - Putting too much food in at one time. - Food is put in before it has cooled down. - Opening the door too often. - The frost layer inside is too thick.	- This is normal. - Do not put too much food in at one time. - Wait until the food has cooled down before putting it in. - Do not open the door too often. - Need to defrost.
Door does not close properly	- Door is stuck with objects. - Too much food in. - Door gasket deformed.	- Do not put in too much food. - Place the appliance stably. - Heat the door gasket, then cool it for restoration (with an electrical drier or hot water for heating).
Outer wall is hot	- When the appliance is operating, heat is dissipated to the outside through the metal tubes inside the cabinet. - Higher ambient temperatures in the summer cause the temperature of the outer wall to rise.	- Higher temperature on the outer wall is normal. - Increase the heat dissipation space, or put the appliance in a ventilated and cool place.
Odors	- Spoiled food - Food with strong odors - The interior compartment is dirty.	- Clean and remove any spoiled food. - Make sure strong smelling food is wrapped airtight. - Clean the interior compartment.
Condensation forms on the outside	Condensation may form when the humidity in the room is high.	This is normal. Wipe off the condensation using a dry cloth.
Hard to open the door	The difference in air pressure between the inside and outside of the compartment may sometimes make it hard to open the freezer door.	Wait a few moments, and then try to open the door slowly.

Certain sounds can be heard during normal use of the refrigerator, which do not affect its correct operation.

Sounds, which can be easily prevented:

- > Noise caused by the appliance which is not level - adjust the position with the adjustable turn-in front feet. Alternatively, place pads made of soft material under the rear rollers, especially when the appliance is placed on tiles.
- > Touching the adjacent piece of furniture - move the refrigerator away.
- > Creaking of the drawers or shelves - take out and put back the drawer or shelf.
- > Sounds of clinking bottles - move bottles apart.

Sounds heard during normal use are mainly due to operation of the compressor (switching on) and cooling, system (thermal expansion and contraction of the radiator caused by flow of the cooling agent).

APPENDIX

Special for new European standard

The ordered parts in the following table can be acquired from Service provider channel

Ordered part	Provided by	Minimum time required for Provision
Thermostats	Professional maintenance personnel	At least 7 years after the last model is launched on the market
Temperature sensors	Professional maintenance personnel	At least 7 years after the last model is launched on the market
Printed circuit boards	Professional maintenance personnel	At least 7 years after the last model is launched on the market
Light sources	Professional maintenance personnel	At least 7 years after the last model is launched on the market
Door handles	Professional repairers and final users	At least 7 years after the last model is launched on the market
Door hinges	Professional repairers and final users	At least 7 years after the last model is launched on the market
Trays	Professional repairers and final users	At least 7 years after the last model is launched on the market
Baskets	Professional repairers and final users	At least 7 years after the last model is launched on the market
Door gaskets	Professional repairers and final users	At least 10 years after the last model is launched on the market

Dear customer

1. If you want to return or replace the product, please contact the store where you buy.
(Remember to bring the purchase invoice)
2. If your product breaks down which needs to repair, please contact after-sales service provider.



ATTENTION

The model information in the product database, as well as the model identifier, can be obtained through a weblink scanned by a QR code, if any, on the energy efficiency label of the product.
For more information about the energy efficiency of the appliance, visit <https://ec.europa.eu> and search using the model name.
The model name can be found on the rating label of the appliance.

THE PRODUCT INFORMATION SHEET ACCORDING TO EU REGULATION NO.2019/2016

The energy label for refrigerating appliances can be found under the QR code on the energy label

Product warranty and spare parts are available in accordance with the manufacturer's warranty terms applicable in your country; use of Customer Service is free of charge. The minimum warranty period (manufacturer's warranty for private consumers) in the European Economic Area is 2 years, in accordance with the warranty terms applicable in your country. The warranty conditions do not affect any other rights or claims you may have under local law. Detailed information on the warranty period and warranty terms in your country is available from Customer Service, your retailer, or our website. Functional original spare parts in accordance with the relevant Ecodesign Directive can be obtained from Customer Service for a period of at least 4 years from the date your appliance is placed on the market in the European Economic Area.

After-sales service

For technical assistance due to a malfunction, please call +33 4 88 78 59 99.

WARRANTY

The warranty does not cover wear parts of the product, nor problems or damage resulting from:

- (1) superficial deterioration due to normal wear and tear;
- (2) defects or deterioration caused by contact with liquids and corrosion caused by rust or the presence of insects;
- (3) any incident, misuse, improper use, modification, disassembly, or unauthorized repair;
- (4) improper maintenance operations, use not in accordance with the product instructions, or connection to an incorrect voltage;
- (5) use of accessories not supplied or not approved by the manufacturer.



The warranty will be void if the rating plate and/or the product serial number is removed.

DISPOSAL:



European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE) requires that used household appliances must not be disposed of with unsorted municipal waste. Used appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and to reduce the impact on human health and the environment.

The crossed-out wheeled bin symbol is affixed to all products to remind users of the separate collection obligation. Consumers should contact their local authorities or their retailer regarding the procedure to follow for the take-back and disposal of their appliance.

Information on the meaning of the conformity marking



The CE marking indicates that the product meets the main requirements of the applicable European Directives: 2014/35/EU (Low Voltage), 2014/30/EU (Electromagnetic Compatibility), and 2011/65/EU (Restriction of the use of certain hazardous substances in electrical and electronic equipment – RoHS), as amended.

SCHNEIDER