



powered by **BRAUN**



Charger Type 3757
Handle Type 3710



91181634

English 3

Français 8

Internet:

www.oralb.com








www.braun.com

www.service.braun.com

www.oralb.ca

Manufactured by/Fabriqué par:
Braun GmbH
Frankfurter Strasse 145
61476 Kronberg
Germany/Allemagne

Charger type 3757
Type de chargeur 3757
Handle type 3710
Type de manche 3710

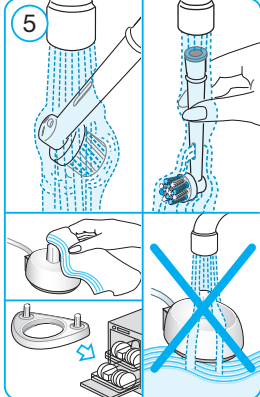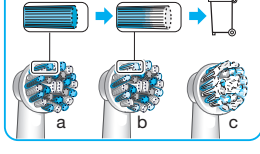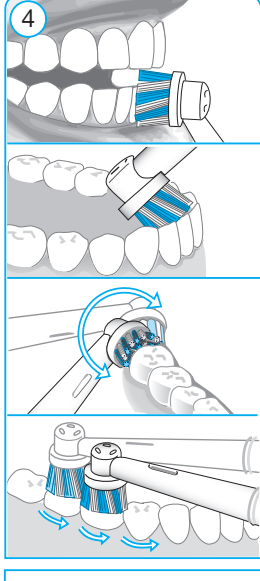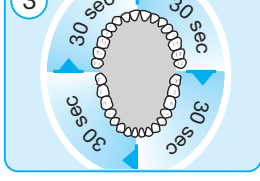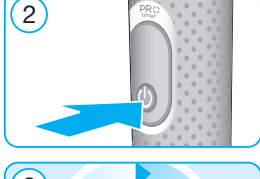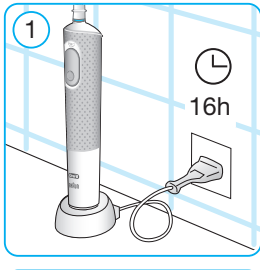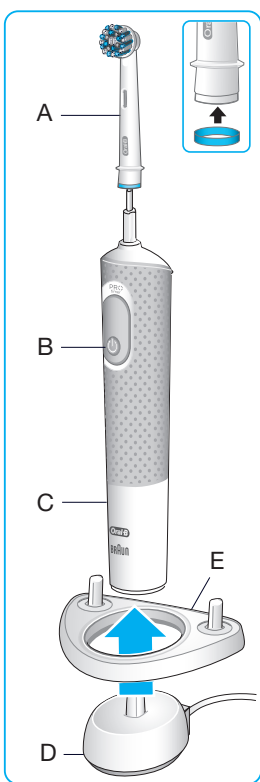

IMPORTANT SAFEGUARDS

Your **Oral-B®** toothbrush has been carefully designed to offer you and your family a unique brushing experience that is both safe and effective. When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

Read all instructions before using.

DANGER

In order to reduce the risk of electrocution:

1. Do not place or store the charger where it can fall or be pulled into a tub or sink.
2. Do not place the charger in water or other liquid.
3. Do not reach for a charger that has fallen into water. Unplug immediately.
4. Do not use while bathing.

WARNING

To reduce the risk of burns, electrocution, fire or injury:

1. Close supervision is necessary when this product is used by, on, or near children or persons with disabilities.
2. Use this product only for its intended use as described in this manual.
Do not use attachments not recommended by the manufacturer.
Only use charger provided with your appliance.
3. Keep cord away from heated surfaces.
4. Never drop the appliance or insert any object into any opening of the appliance.
5. Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged or if it has been dropped into water. If any of these occur, please contact a service center and return the product for examination and repair.

IMPORTANT

1. Periodically check the entire product/cord for damage. A damaged or non-functioning unit should no longer be used. If product/cord is damaged, take it to an Oral-B Service Center.
2. Do not touch the power plug with wet hands. This can cause an electric shock.
3. When unplugging, always hold the power plug instead of the cord.
4. Do not modify or repair the product. This may cause fire, electric shock or injury. Consult your dealer for repairs or contact an Oral-B Service Center.
5. The appliance has no user serviceable parts. Do not open and disassemble device except when disposing of the battery. Follow handling and disposal instructions of the battery/device described in this manual.
6. Do not use on children under age 3.
7. This toothbrush is a personal care device and is not intended for use on multiple patients in a dental practice or institution.
8. For tooth brushing only. Do not chew or bite on brush. Do not use as a toy or without adult supervision.
9. Follow correct instructions when applying stickers on handle.
Ensure valve on back of the handle is not covered.
10. To avoid brush head breakage which way generate a small parts choking hazard or damage teeth:
 - Prior to each use, ensure the brush head fits well. Discontinue use of the toothbrush, if brush head no longer fits properly.
Never use without a brush head.
 - If the toothbrush handle is dropped, the brush head should be replaced before the next use even if no damage is visible.
 - Replace brush head every 3 months or sooner if brush head becomes worn.
 - Clean brush head properly after each use (see «Cleaning» paragraph). Proper cleaning ensures the safe use and functional life of the toothbrush.

CAUTION

If you are undergoing treatment for any oral care condition, consult your dental professional prior to use.

SAVE THESE INSTRUCTIONS

Description

- A Brush head
- B On/off button
- C Handle
- D Charging unit

Accessories (depending on model):

- E Brush head holder (depending on model)

Note: Content may vary based on the model purchased.

Specifications

For voltage specifications please refer to the bottom of the charging unit.

Noise level: ≤ 65 dB (A)

Charging and Operating

- Plug the charging unit (D) into an electrical outlet and place the toothbrush handle (C) on the charging unit. A full charge takes about 16 hours and enables up to 8 days of regular brushing (twice a day, 2 minutes) (1).
- For everyday use, the toothbrush handle can be stored on the plugged-in charging unit to maintain it at full power. Overcharging is impossible.
- To maintain the maximum capacity of the rechargeable battery, unplug the charging unit and fully discharge the handle with regular use at least every 6 months.

Using the toothbrush

- Wet brush head and apply any kind of toothpaste. To avoid splashing, guide the brush head to your teeth before switching the appliance on (B) (2).
- When brushing your teeth with one of the Oral-B **oscillating-rotating brush heads** guide the brush head slowly from tooth to tooth, spending a few seconds on each tooth surface.
- When using the Oral-B **«Deep Sweep» brush head** place the toothbrush bristles against the teeth at a slight angle towards the gumline. Apply light pressure and start brushing in back and forth motions, just like you would do with a manual toothbrush.
- With any brush head start brushing the outsides, then the insides and finally the chewing surfaces. Brush all four quadrants of your mouth equally. Do not press too hard, simply let the brush do all the work. Brush at least 2 minutes to thoroughly remove plaque. You may also consult your dentist or dental hygienist about the right technique for you (4).
- Turn off the handle by pressing the on/off switch.

Brushing modes (depending on model)

1-Mode	2-Modes	Brushing modes
	✓	Sensitive – Gentle, yet thorough cleaning for sensitive areas
✓	✓	Daily Clean – Standard for daily mouth cleaning

How to switch between modes:

The toothbrush automatically starts in the «Sensitive» mode. To switch to other mode, press the on/off button (B). Switch off the toothbrush by holding the on/off button until the motor stops.

Timer (depending on model)

An incorporated timer memorizes the elapsed brushing time (depending on model).

«2-Minute» timer: A short stuttering sound indicates the end of the professionally recommended 2-minute brushing time.

«Professional» timer: A short stuttering sound at 30-second intervals reminds you to brush equally all four quadrants of your mouth. A long stuttering sound indicates the end of the professionally recommended 2-minute brushing time (3).

Individual brush heads

Oral-B offers you a variety of different Oral-B brush heads that fit your Oral-B toothbrush handle.

Our **oscillating-rotating brush heads** can be used for tooth-by-tooth precision cleaning.

Oral-B CrossAction brush head



Our most advanced brush head. Angled bristles for a precise clean. Lifts and powers away plaque.

Oral-B Floss Action brush head



The Oral-B Floss Action brush head is recommended for everyday cleaning. It features micropulse bristles that get in hard-to-reach areas between your teeth, gently removing hidden plaque.

Oral-B Precision Clean brush head



The Oral-B Precision Clean brush head provides effective and gentle cleaning action for both teeth and gums. The brush head cups each tooth with longer and denser bristles and reaches deep between teeth at the same time.

Oral-B Sensitive brush head



The Oral-B Sensitive brush head provides thorough cleaning for sensitive teeth and gums. It has an extra soft bristle texture that is gentle on teeth and gums.

Oral-B 3D White brush head



For occasional or everyday polishing, please use the Oral-B 3D White brush head. It features a dentist-inspired polishing cup to remove surface stains from coffee, tea and tobacco for effective brightening. We do not recommend using the Oral-B 3D White brush head with braces.

Oral-B Pro GumCare brush head



features a combination of regular bristles to clean teeth surfaces and ultrathin bristles for a gentle brushing experience on the gumline.

The **dynamic «Deep Sweep»** brush head can be used with all common brushing techniques.

Oral-B Deep Sweep brush head



features triple zone cleaning action for outstanding plaque removal, even in between teeth.

Most Oral-B brush heads feature INDICATOR® bristles to help you monitor brush head replacement need. With thorough brushing, twice a day for two minutes, the color will fade halfway down approximately in a 3-month period (4.b). If the bristles splay before the color recedes (4.c), you are exerting too much pressure on teeth and gums.

We do not recommend using the Oral-B «Floss Action» or Oral-B «3D White» brush head with braces. You may use the Oral-B «Ortho» brush head, specifically designed to clean around braces and wires.

In the first few days of using any electric toothbrush, your gums may bleed slightly. In general bleeding should stop after a few days. Should it persist after 2 weeks, please consult your dentist or dental hygienist.

Cleaning

After brushing, rinse your brush head for several seconds under running water with the handle switched on. Switch off the handle and remove the brush head. Rinse both parts separately under running water then wipe them dry before reassembling the toothbrush. From time to time also clean the charging unit with a damp cloth; never place the charging unit in water. Brush head holder (E) is dishwasher-safe (5).


Environmental notice

Product contains batteries and/or recyclable electric waste. For environment protection do not dispose in household waste, but for recycling take to electric waste collection points provided in your country.



Battery removal at the end of the product's useful life

Open the handle as shown, remove the battery and dispose of it according to local environmental regulations.

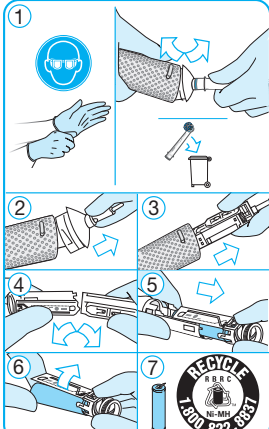

Caution! Opening the handle will destroy the appliance and invalidate the warranty.

Subject to change without notice.

Satisfaction Guaranteed or Your Money Back:

Try it with no risk for 60 days! If you are not 100% satisfied, call 1-877-593-4199 to receive a full refund. Return the product in its original packaging along with the original cash receipt postmarked within 60 days of purchase to receive a pre-paid card in the amount of purchase. Terms of prepaid card apply. Your Oral-B toothbrush must be returned in its original packaging and be postmarked no later than 60 days after the date of purchase. Please allow 6-8 weeks for handling. In the U.S., the shipment cost to return the product is the responsibility of the consumer. Sorry: No refunds will be made for any Oral-B product damaged by accident, neglect, unreasonable use or lost in the post. Terms and conditions apply. For further details please contact our customer service.

Warranty replacement brush heads

Oral-B warranty will be voided if electric rechargeable handle damage is found to be attributed to the use of non-Oral-B replacement brush heads.

Oral-B does not recommend the use of non-Oral-B replacement brush heads.

- Oral-B has no control over the quality of non-Oral-B replacement brush heads. Therefore, we cannot ensure the cleaning performance of non-Oral-B replacement brush heads, as communicated with the electric rechargeable handle at time of initial purchase.
- Oral-B cannot ensure a good fit of non-Oral-B replacement brush heads.
- Oral-B cannot predict the long-term effect of non-Oral-B replacement brush heads on handle wear.

All Oral-B replacement brush heads carry the Oral-B logo and meet Oral-B's high quality standards. Oral-B does not sell replacement brush heads or handle parts under any other brand name.

FOR USA ONLY

Limited 2-Year Warranty

Oral-B warrants this appliance to be free of defects in material and workmanship for a period of two years from the date of original purchase at retail.

If the appliance exhibits such a defect, Oral-B will, at its option, repair or replace it without cost for parts and labor. The product must be carried in or shipped, prepaid and insured (recommended), to an authorized Oral-B Service Center. Proof of date of original purchase is required.

The cost to ship the product to an authorized Service Center is the responsibility of the consumer, the cost to return the product to the consumer is the responsibility of Oral-B. This warranty does not cover finishes or normal wear, nor does it cover damage resulting from accident, misuse, dirt, water, tampering, unreasonable use, service performed or attempted by unauthorized service agencies, failure to provide reasonable and necessary maintenance, including recharging, or units that have been modified or used for commercial purposes.

ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE. IN NO EVENT WILL ORAL-B BE RESPONSIBLE FOR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may have other legal rights which vary from state to state.

How to obtain service in the USA

Should this product require service, please call 1-800-566-7252 to be referred to the authorized Oral-B Service Center closest to you.

To obtain service:

- A. Carry the product in to the authorized Oral-B Service Center of your choice or,
- B. Ship the product to the authorized Oral-B Service Center of your choice. Pack the product well. Ship the product prepaid and insured (recommended). Include a copy of your proof of purchase to verify warranty coverage, if applicable.

To obtain original Oral-B replacement parts and accessories:

Contact an authorized Oral-B Service Center.

Please call 1-800-566-7252 to be referred to the authorized Oral-B Service Center closest to you.

To order original Oral-B replacement parts and accessories (including replacement brush heads) by phone:

Please call 1-800-566-7252.

To speak to an Oral-B Consumer Service Representative:

Please call 1-800-566-7252.

FOR CANADA ONLY

Limited 2-Year Warranty

In the event this appliance fails to function within the specified warranty period because of defects in material or workmanship, and the consumer returns the unit to an authorized service center, Braun Canada will, at its option either repair or replace the unit without additional charge to the consumer. This warranty does not cover any product which has been damaged by dropping, tampering, servicing performed or attempted by unauthorized service agencies, misuse or abuse. This warranty excludes units which have been modified or used for commercial purposes.

To the extent allowed by law, Braun Canada shall not be responsible for loss of the product, loss of time, inconvenience, commercial loss, special or consequential damages. The provisions of this warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in applicable provincial legislation.

How to obtain service in Canada

Should this product require service, please call 1-800-566-7252 to be referred to the authorized Oral-B Service Center closest to you.

To obtain service:

- A. Carry the product in to the authorized Oral-B Service Center of your choice or,
- B. Ship the product to the authorized Oral-B Service Center of your choice. Pack the product well. Ship the product prepaid and insured (recommended). Include a copy of your proof of purchase to verify warranty coverage, if applicable.

To obtain original Oral-B replacement parts & accessories:

Contact an authorized Oral-B Service Center.

Please call 1-800-566-7252 to be referred to the authorized Oral-B Service Center closest to you.

To speak to an Oral-B Service Representative:

Please call 1-800-566-7252.

CONSIGNES DE SÉCURITÉ IMPORTANTES

Votre brosse à dents **Oral-B®** a été soigneusement conçue pour vous offrir à vous et à votre famille une expérience de brossage unique à la fois sécuritaire et efficace. Toujours suivre les consignes de sécurité suivantes lorsqu'un appareil électrique est utilisé, surtout en présence d'un enfant :

Lire toutes les instructions avant d'utiliser cet appareil.

DANGER

Pour réduire les risques d'électrocution :

1. Éviter de placer ou de ranger le chargeur à un endroit d'où il pourrait tomber ou être poussé dans la baignoire ou le lavabo.
2. Éviter d'immerger le chargeur dans l'eau ou dans tout autre liquide.
3. Ne pas toucher l'appareil s'il est tombé dans l'eau. Le débrancher immédiatement.
4. Ne pas utiliser dans le bain ou la douche.

MISE EN GARDE

Afin de réduire les risques de brûlure, d'électrocution, d'incendie ou de blessure :

1. L'utilisation de ce produit par un jeune enfant ou une personne handicapée, ou en présence de ces derniers, doit être faite sous étroite supervision.
2. Ce produit est conçu pour être utilisé conformément au mode d'emploi. Ne pas utiliser d'accessoires non recommandés par le fabricant. Utiliser seulement le chargeur fourni avec l'appareil.
3. Tenir le cordon loin des surfaces chaudes.
4. Ne jamais laisser tomber l'appareil ni introduire un objet dans un quelconque orifice de l'appareil.
5. Ne jamais utiliser ce produit si la prise ou le cordon sont endommagés, s'il ne fonctionne pas correctement, s'il est tombé, s'il a été endommagé ou s'il a été immergé dans l'eau. Si l'une de ces situations se produit, veuillez communiquer avec un centre de services et retourner le produit pour qu'il soit examiné et réparé.

IMPORTANT

1. Vérifier périodiquement que le produit/cordon ne sont pas endommagés. Ne pas utiliser un appareil électrique endommagé ou qui ne fonctionne plus. Si le produit/cordon est endommagé, l'apporter dans un centre de services Oral-B.
2. Ne pas toucher la prise d'alimentation avec les mains mouillées. Il y a risque d'électrocution.
3. Pour débrancher l'appareil, toujours tirer la prise, jamais le cordon d'alimentation.
4. Ne pas modifier le produit et ne pas tenter de le réparer. Cela pourrait causer un incendie, une électrocution ou une blessure. Communiquer avec le détaillant ou le centre de services Oral-B si des réparations sont nécessaires.
5. Cet appareil ne contient aucune pièce pouvant être réparée par l'utilisateur. Ne pas l'ouvrir ni le démonter, sauf pour en retirer la pile. Manipuler et jeter la pile/l'appareil conformément au mode d'emploi.
6. Ne convient pas aux enfants de moins de 3 ans.
7. Cette brosse à dents est un appareil de soins personnels et n'est pas conçue pour être utilisée sur de multiples patients dans une clinique dentaire ou tout autre établissement.
8. Pour le brossage des dents seulement. Ne pas mâcher ou mordre la brosse. Ne pas utiliser comme jouet ou sans la supervision d'un adulte.
9. Suivre les bonnes instructions lors de l'application des autocollants sur le manche. S'assurer que la valve à l'arrière du manche n'est pas couverte.
10. Pour éviter que la brossette ne se brise, ce qui pourrait générer de petites pièces qui représenteraient un risque d'étouffement ou endommager les dents :

- S'assurer que la brossette s'emboîte bien avant chaque utilisation. Cesser l'utilisation de la brosse à dents si la brossette ne s'emboîte plus correctement. Ne jamais utiliser la brosse sans brossette.
- Si l'appareil tombe, la brossette devrait être remplacée avant d'être utilisée et ce, même si aucun dommage n'est apparent.
- Remplacer la brossette tous les 3 mois, ou plus tôt si la brossette est usée.
- Bien nettoyer la brossette après chaque utilisation (voir le paragraphe sur l'« Entretien »). Un nettoyage approprié de la brosse permet de garantir son utilisation sécuritaire et sa durée de vie.

ATTENTION

Si vous suivez un traitement pour une affection buccale, consultez un professionnel des soins dentaires avant d'utiliser la brosse à dents.

CONSERVER CE MODE D'EMPLOI

Description

- A Brossette
- B Bouton marche/arrêt
- C Manche
- D Chargeur

Accessoires (selon le modèle) :

- E Support pour brossettes (selon le modèle)

Remarque : Le contenu peut varier selon le modèle.

Spécifications

Pour connaître les spécifications électriques, consulter les renseignements imprimés sous le chargeur.

Niveau de bruit : ≤ 65 dB (A)

Chargement et fonctionnement

- Brancher le chargeur (D) à une prise de courant et placer le manche de la brosse à dents (C) sur le chargeur. Il faut compter jusqu'à 16 heures pour charger l'appareil complètement, ce qui permet jusqu'à 8 jours d'utilisation normale (2 fois par jour, pendant 2 minutes) (1).
- Pour une utilisation quotidienne, le manche de la brosse à dents peut être rangé sur le chargeur branché afin qu'il conserve une charge maximale. Il n'y a aucun risque de surcharger la pile.
- Pour assurer le rendement optimal de la pile, débrancher le chargeur et laisser le manche se décharger complètement par une utilisation régulière, au moins une fois tous les 6 mois.

Brossage des dents

- Mouiller la brossette et appliquer n'importe quel dentifrice. Pour éviter les éclaboussures, placer la brossette sur les dents avant de la mettre en marche (B) (2).
- Lors du brossage des dents avec une des **brossettes oscillantes et rotatives de Oral-B**, déplacer lentement la brossette d'une dent à l'autre, en brossant la surface de chaque dent durant quelques secondes.
- Lors de l'utilisation d'une **brossette « Deep Sweep »** de Oral-B, placer les soies de la brosse sur les dents, en l'inclinant quelque peu vers la marge gingivale. Appliquer une légère pression et commencer à brosser en effectuant des mouvements de va-et-vient, comme avec une brosse à dents manuelle.
- Avec n'importe quelle brossette, brosser d'abord les surfaces extérieures des dents, puis les surfaces intérieures, et enfin les surfaces de mastication. Brosser les quadrants de la bouche de façon égale. Ne pas appuyer trop fort. Il suffit de laisser la brosse faire tout le travail. Brosser durant au moins 2 minutes pour éliminer entièrement la plaque. Il est également possible de consulter un dentiste ou un hygiéniste dentaire pour savoir quelle technique convient le mieux (4).
- Arrêter le manche en appuyant sur le bouton marche/arrêt.

POA Modes de brossage (selon le modèle)

1-Mode	2-Modes	Modes de brossage
	✓	Sensible – Pour un nettoyage en douceur mais complet des zones sensibles
✓	✓	Nettoyage quotidien – Mode standard pour le nettoyage quotidien de la bouche.

Pour passer d'un mode de brossage à un autre :

La brosse à dents démarre automatiquement avec le mode « Sensible ». Pour passer à l'autre mode, appuyer sur le bouton Marche/arrêt (B). Pour éteindre le manche, appuyer et maintenir enfoncé le bouton Marche/arrêt jusqu'à ce que le moteur s'arrête.

Minuteur (selon le modèle)

Un minuteur intégré mémorise le temps de brossage écoulé (selon le modèle).

Minuteur de 2 minutes : À la fin des 2 minutes de brossage recommandées par les dentistes, un court signal entrecoupé se fait entendre.


Minuteur professionnel : Un bref son saccadé toutes les 30 secondes rappelle de brosser tous les quadrants de la bouche de façon égale. Un long signal entrecoupé indique la fin du brossage de 2 minutes recommandé par les dentistes (3).

Brossettes individuelles

Oral-B offre une variété de brossettes qui conviennent au manche de brosse à dents Oral-B.

Nos **brossettes oscillantes et rotatives** peuvent être utilisées pour un nettoyage précis dent par dent.

Brossette Oral-B CrossAction



Notre brosse la plus avancée. Soies orientées pour un nettoyage précis. Soulève et déloge la plaque.

Brossette Oral-B Floss Action




La brosse Oral-B Floss Action est recommandée pour le nettoyage quotidien. Elle comporte des soies micropulse capables d'atteindre les zones difficiles d'accès entre les dents et d'éliminer en douceur la plaque invisible.

Brossette Oral-B Precision Clean




La brosse Oral-B Precision Clean procure une action nettoyante douce mais efficace pour les dents et les gencives. La brosse enveloppe chaque dent avec ses soies plus longues et plus denses tout en atteignant en profondeur entre les dents.

Brossette Oral-B Sensitive



La brosse Oral-B Sensitive nettoie en profondeur les dents et les gencives sensibles. Ses soies extra souples sont douces pour les dents et les gencives.

Brossette Oral-B 3D White



Pour blanchir les dents occasionnellement ou quotidiennement, utiliser la brosse Oral-B 3D White. Elle comporte une cupule de polissage inspirée des polisseuses utilisées par les dentistes qui élimine les taches de café, de thé et de tabac, pour un blanchiment efficace. Nous ne recommandons pas d'utiliser la brosse Oral-B 3D White avec un appareil orthodontique.


Brossette Oral-B Pro GumCare



Met en vedette un ensemble de soies régulières qui nettoient les surfaces des dents ainsi que des soies ultra-minces qui offrent une expérience de brossage en douceur sur les gencives.

La brosse « **Deep Sweep** » **dynamique** peut être utilisée avec toutes les techniques de brossage courantes.

Brossette Oral-B Deep Sweep



Met en vedette une action nettoyante triple zone pour déloger la plaque de façon remarquable même entre les dents.

La plupart des brossettes Oral-B se distinguent par leurs soies INDICATOR® qui aident à évaluer quand remplacer la brosse. Lorsque la brosse est utilisée correctement, c'est-à-dire deux fois par jour pendant deux minutes chaque fois, la couleur des soies s'estompe à mi-hauteur après environ 3 mois d'utilisation (4.b). Si les soies s'aplatissent avant que la couleur ne s'estompe (4.c), cela signifie qu'une pression trop forte est exercée sur les dents et les gencives pendant le brossage.

Nous ne recommandons pas d'utiliser la brosse Oral-B « Floss Action » ou Oral-B « 3D White » avec un appareil orthodontique. Il est possible d'utiliser la brosse Oral-B « Ortho » spécialement conçue pour nettoyer autour des boîtiers et des fils.

Durant les premiers jours d'utilisation d'une brosse à dents électrique, il est possible que les gencives saignent légèrement. En général, ces saignements devraient cesser au bout de quelques jours. S'ils persistent plus de deux semaines, consulter un dentiste ou un hygiéniste dentaire.

Entretien

Après le brossage, rincer la brosse à fond sous l'eau courante pendant quelques secondes en gardant le manche en marche. Éteindre le manche et retirer la brosse. Rincer les deux pièces sous l'eau courante, puis les essuyer avant d'assembler la brosse à nouveau. De temps à autre, nettoyer aussi le chargeur avec un linge humide; ne jamais mettre le chargeur dans l'eau. Le support pour brossettes (E) peut aller au lave-vaisselle (5).


Avis environnemental

Ce produit contient des piles et/ou des déchets électriques recyclables. Pour protéger l'environnement, ne pas jeter dans les ordures ménagères; déposer plutôt dans un point de collecte pour déchets électriques de votre région.



Retrait de la pile à la fin de la vie utile du produit

Ouvrir le compartiment à pile situé dans le manche tel qu'indiqué, retirer la pile et la jeter conformément aux règlements locaux.

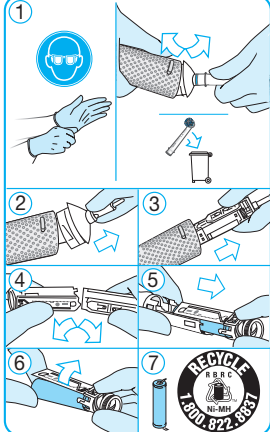

Attention! L'ouverture du manche rend l'appareil inutilisable et invalide la garantie.

Sous réserve de modifications sans préavis.

Satisfaction garantie ou argent remis :

Essayez-la sans risque pendant 60 jours! Si vous n'êtes pas entièrement satisfait de ce produit, composez le 1-877-593-4199 pour recevoir un remboursement complet. Vous n'avez qu'à retourner le produit dans son emballage original et le reçu de caisse original par la poste dans les 60 jours suivant l'achat pour recevoir une carte prépayée du même montant que votre achat. Les modalités de la carte prépayée s'appliquent. Votre brosse à dents Oral-B doit être retournée dans son emballage original et postée au plus tard 60 jours après la date d'achat. Veuillez prévoir de 6 à 8 semaines pour le traitement de votre demande. Aux É.-U., les frais d'expédition pour retourner le produit sont aux frais du consommateur. Nous sommes désolés, aucun remboursement ne sera effectué

POA

si le produit Oral-B a été endommagé par accident, par négligence ou par un usage abusif, ou qu'il a été perdu par la poste. Des modalités s'appliquent. Pour en savoir plus, veuillez communiquer avec notre service à la clientèle.

Garantie des brossettes de rechange

La garantie Oral-B sera annulée si les dommages causés au manche électrique rechargeable sont attribuables à l'utilisation de brossettes de rechange d'une marque autre que Oral-B.

Oral-B ne recommande pas l'utilisation de brossettes autres que Oral-B.

- Oral-B n'a aucun contrôle sur la qualité des brossettes autres que Oral-B. Par conséquent, nous ne pouvons pas garantir la performance de nettoyage de brossettes de rechange d'une marque autre que Oral-B, tel qu'annoncé au moment de l'achat initial.
- Oral-B ne peut garantir l'ajustement adéquat des brossettes de rechange d'une marque autre que Oral-B.
- Oral-B ne peut prédire les conséquences à long terme d'une brosse de rechange d'une marque autre que Oral-B sur l'usure du manche.

Toutes les brossettes de rechange Oral-B portent le logo Oral-B et répondent aux critères de haute qualité de Oral-B. Oral-B ne vend pas de brossettes ou de pièces détachées sous le nom d'une autre marque.

POUR LE CANADA SEULEMENT

Garantie limitée de 2 ans

Si l'appareil présente un défaut de fonctionnement, au cours de la période stipulée par la garantie, causé par un vice de matériau ou de fabrication et que le consommateur retourne l'appareil à un centre de services autorisé, Braun Canada, à sa discrétion, réparera ou remplacera l'appareil sans frais additionnels pour le consommateur. La présente garantie ne couvre pas tout produit endommagé par chute, altération, réparation ou tentative de réparation par une agence de services non autorisée, mauvais usage ou usage abusif. La présente garantie ne couvre pas les éléments qui auront été modifiés ou utilisés à des fins commerciales.

Dans la mesure permise par la loi, Braun Canada ne pourra être tenue responsable de la perte du produit, de la perte de temps, du désagrément, du préjudice commercial ou des dommages spéciaux ou indirects. Les dispositions de la présente garantie s'ajoutent aux garanties légales et autres droits et recours prévus par les lois provinciales applicables et ne modifient ou ne diminuent en rien ces garanties, droits et recours.

Comment obtenir des services au Canada

Si ce produit devait avoir besoin d'un service après-vente, composez le 1-800-566-7252 pour que l'on vous dirige vers le centre de services autorisé Oral-B le plus près de chez vous.

Pour obtenir des services :

- A. Apportez le produit au centre de services Oral-B autorisé de votre choix; ou
- B. Expédiez le produit au centre de services Oral-B autorisé de votre choix. Emballez le produit correctement. Envoyez le produit port payé et assuré (recommandé). Incluez une copie de votre preuve d'achat afin de nous permettre de vérifier la couverture de la garantie, s'il y a lieu.

Pour obtenir des pièces originales Oral-B et des accessoires :

Communiquez avec un centre de services autorisé Oral-B.

Pour connaître le centre de services autorisé Oral-B le plus près de chez vous, veuillez composer le 1-800-566-7252.

Pour joindre un représentant du service à la clientèle Oral-B :

Veuillez composer le 1-800-566-7252.