

151x125mm / 75.5x125mm ended one fold / PRINTED double-sided

6. Please keep the battery away from possible flames if it leaks or gives off a peculiar smell.

7. Electrolyte leakage may cause fire hazard.

Information on the disposal of waste electrical and electronic equipment.

This symbol on the product means that used electrical and electronic products should not be mixed with general household waste.


For proper treatment, recovery and recycling, please take this product to designated collection points, where it will be accepted free of charge. Alternatively, in some countries you may be able to return your products to your local retailer upon purchase of an equivalent product. Disposing of this product properly will save valuable resources and prevent any potential negative effects on human health and the environment that could otherwise result from improper waste handling. Please contact your local authority for details of the nearest collection point. Penalties may apply for improper disposal of this waste, in accordance with your national legislation.



 www.xtrememac.com

Made in PRC/ Fabriqué en PRC/ Designed in the EU/ XtremeMac SARL-2 rue D'Arlon,
L-8399, Windhof, Luxembourg. All brands or products names are or may be trademarks of their
owners. Pictures and specifications are not contractual. 2 years warranty.

Batterie de secours 10 000 mAh XWH-PB10-13

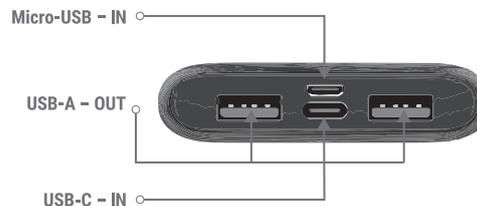

Manuel utilisateur

Specifications

10000mAh/37Wh Micro USB Input: 5V  2A USB-C
Input: 5V  2A
USB-1 Output: 5V  2.4A (Max). USB-2 Output: 5V
2.4A (Max) USB-1 + USB-2 output 5V  2.4A max.

Pour charger la batterie de secours: branchez le câble de charge dans le port de la batterie et l'autre extrémité dans un ordinateur ou un chargeur secteur.

Pour charger votre iPhone série 12,13 ou 14 :

Merci de charger entièrement votre batterie de secours au minimum une fois tous les 3 mois pour conserver les meilleures performances de la batterie.

ATTENTION

Veillez lire toutes les instructions et avertissements avant d'utiliser ce produit.

- 1. Ne pas mettre le produit dans l'eau ou le mouiller;**
- 2. Ne pas cogner, lancer ou exposer le produit à un choc mécanique.**
- 3. Ne pas décomposer la batterie dans le produit par quelque moyen que ce soit;**
- 4. Ne pas utiliser ou entreposer le produit près d'une source de chaleur (comme un feu ou des appareils de chauffage);**
- 5. Ne pas utiliser la batterie si elle est dans des conditions anormales telles que l'odeur particulière, chauffage, déformation, décoloration ou autres anomalies;**
- 6. Veuillez éloigner la batterie d'éventuelles flammes si elle fuit ou dégage une odeur particulière.**
- 7. La fuite d'électrolyte peut entraîner des risques d'incendie.**

Information sur l'élimination des déchets d'équipement électrique et électronique. Ce symbole sur le produit signifie que les produits électriques et électroniques usagés ne doivent pas être mélangés avec déchets ménagers généraux. Pour un traitement, une récupération et un recyclage appropriés, veuillez apporter ce produit aux points de collecte désignés, où il sera accepté gratuitement. Alternativement, dans certains pays, vous pouvez être en mesure de retourner votre produits à votre détaillant local à l'achat d'un produit équivalent. L'élimination de ce produit de façon appropriée permettra d'économiser des ressources précieuses et de prévenir tout effet négatif potentiel sur la santé humaine et sur l'environnement, qui pourrait autrement résulter d'une manipulation inappropriée des déchets. Veuillez contacter votre autorité locale pour plus de détails sur le point de collecte le plus

proche. Des sanctions peuvent s'appliquer en cas d'élimination incorrecte de ces déchets, conformément à votre législation nationale.

User manuel

Specifications

1000mAh/37Wh Micro USB Input: 5V  2A USB-C Input: 5V  2A
USB-1 Output: 5V  2.4A (Max). USB-2 Output: 5V 2.4A (Max) USB-1 + USB-2 output 5V  2.4A max.

To charge the power bank: Plug the charging cable into the battery port and the other end into a computer or AC charger.

To charge your iPhone 12,13 or 14 series:

Please fully charge your power bank at least once every 3 months to maintain the best battery performance.

WARNING

Please read all instructions and warnings before using this product.

- 1. Do not put the product in water or get it wet;**
- 2. Do not hit, throw or expose the product to mechanical shock.**
- 3. Do not decompose the battery in the product by any means;**
- 4. Do not use or store the product near a heat source (such as a fire or heaters);**
- 5. Do not use the battery if it is in abnormal conditions such as peculiar smell, heating, deformation, discoloration or other abnormalities;**