G7 PRO 8K

WIRELESS ESPORTS CONTROLLER FOR PC

Model No.: GameSir-G7 Pro 8K
Scan the code for more tutorials
https://gamesir.com/pages/support

COMPATIBILITY

•Windows 10 or above •Switch 1 & 2 •Android 11.0 or above

DEVICE LAYOUT

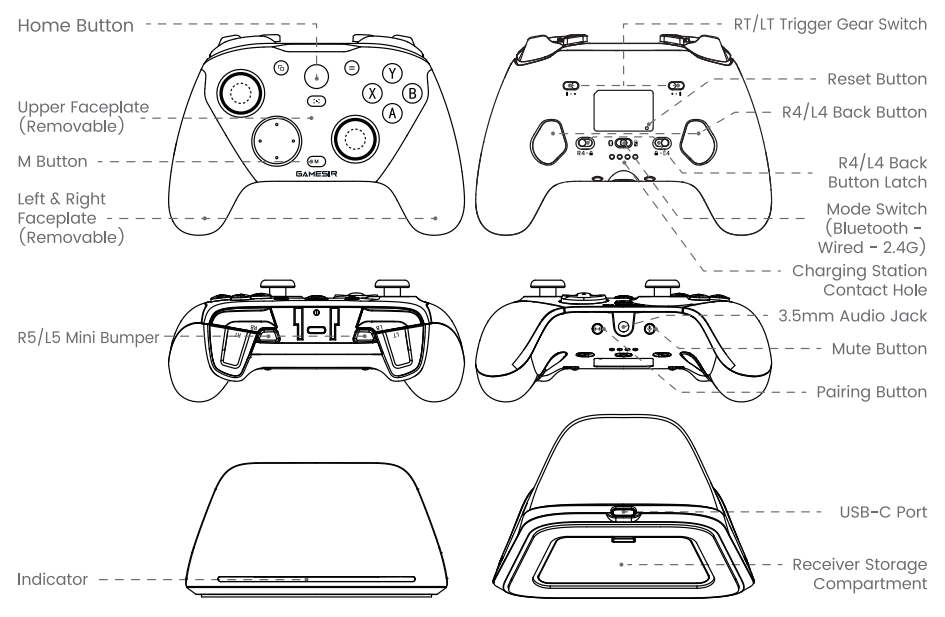
Home Button
Upper Faceplate (Removable)
M Button
Left & Right Faceplate (Removable)
R5/L5 Mini Bumper
Indicator
RT/LT Trigger Gear Switch
Reset Button
R4/L4 Back Button
R4/L4 Back Button Latch
Mode Switch (Bluetooth - Wired - 2.4G)
Charging Station Contact Hole
3.5mm Audio Jack
Mute Button
Pairing Button
USB-C Port
Receiver Storage Compartment

BASIC FUNCTION INTRODUCTION

BASIC OPERATIONS

Power On	Toggle the Mode Switch to the corresponding position and press the Home button.
Power Off	Toggle the Mode Switch to the Off position, or the device will automatically turn off after 10 minutes of inactivity.
Low Battery	When the battery is below 15%, the Home light will flash red.
Charging	You can charge the controller via the USB-C port or the charging station. When charging while the controller is off, the Home light will indicate the charging progress with a breathing light effect.

CONNECTION STATUS

Status	Home Light	Description
Connected	Solid	The device is successfully connected.
Pairing	Flash Rapidly	In pairing status, the controller can be discovered and connected by new devices.
Reconnecting	Breathe Slowly	In reconnecting status, the controller can automatically connect to the last successfully connected device. Press and hold the Pairing button to manually enter pairing mode.

PLATFORM AND MODE

WIRELESS CONNECTION

Platform	Mode Switch Position	Mode	Indicator Light Color	Switch Method
PC/Switch/Android	Receiver Mode	Receiver	Green	Toggle to Receiver mode.
PC/Android/AP	Bluetooth Mode	DS4	Blue	Toggle to Bluetooth mode, then Home button + for 2 seconds. Hold Hold
Switch/AP		Switch	Red	Toggle to Bluetooth mode, then Home button + for 2 seconds. Hold Hold
Android		Android	Yellow	Toggle to Bluetooth mode, then Home button + for 2 seconds. Hold Hold

WIRED/RECEIVER CONNECTION

Platform	Mode	Indicator Light Color	Switch Method
PC	Xinput Mode	Green	**Wired connection:** In any mode, connect the controller to the device using the USB-C cable. No additional steps needed. **Receiver connection:** Toggle the Mode Switch to Receiver mode. The controller automatically detects the mode by default. After a successful connection, press and hold + for 2 seconds to cycle through Xinput/Switch/DS4 modes.
Switch	Switch Mode	Red	
Android	DS4 Mode	Blue	

* After a successful connection, the current mode can be checked by pressing and holding the M button.

WINDOWS CONNECTION TUTORIAL

RECEIVER CONNECTION

1.Toggle the Mode Switch on the controller to Receiver mode and press the Home button to power on.
2.Insert the included receiver into the device's USB port and wait for the controller to connect.
3.A solid Home light indicates a successful connection.
**** If the connection fails, press the Pairing button on the receiver and hold the Pairing button on the controller to re-enter pairing mode.***

WIRED CONNECTION

Connect the controller to the computer using the USB-C cable.

BLUETOOTH CONNECTION

1.Toggle the Mode Switch on the controller to Bluetooth mode and press the Home button to power on.
2.Hold **Home button +** until the Home light flashes rapidly in blue. Find "Wireless Controller" in the device's Bluetooth list and click to connect.
3.A solid Home light indicates a successful connection.
**** If the connection fails, hold the Pairing button on the controller to re-enter pairing mode.***

SWITCH 1 & 2 CONNECTION TUTORIAL

1.On the Switch main menu, go to "Controllers"-"Change Grip/Order".
2.Toggle the Mode Switch on the controller to Bluetooth mode and press the Home button to power on.
3.Hold **Home button +** until the Home light flashes rapidly in red and wait for the connection.
4.A solid Home light indicates a successful connection.
**** If the connection fails, hold the Pairing button on the controller to re-enter pairing mode.***

SWITCH 2 WAKE-UP TUTORIAL

1.Detach both sides of the Joy-Con 2 from the Switch 2.
2.On the Switch 2 main menu, tap the controller icon and select [Change Grip/Order] to enter pairing mode.
3.After the controller is successfully connected to the Switch 2, it cannot be operated yet. On [Change Grip/Order] screen, tap [Search] at the bottom, then tap the icon of any Joy-Con 2. When the controller vibrates, the wake-up function has been successfully activated.
**** This process is only required for the first-time setup.***

ANDROID CONNECTION TUTORIAL

1.Toggle the Mode Switch on the controller to Bluetooth mode and press the Home button to power on.
2.Hold **Home button +** until the Home light flashes rapidly in yellow. Find "GameSir-G7 Pro 8K" in the device's Bluetooth list and click to connect.
3.A solid Home light indicates a successful connection.
**** If the connection fails, hold the Pairing button on the controller to re-enter pairing mode.***

G-TOUCH MODE (ANDROID MAPPING FUNCTION) CONNECTION TUTORIAL

1.Toggle the Mode Switch on the controller to Bluetooth mode and press the Home button to power on.
2.Hold **Home button + RB** until the Home light flashes rapidly in cyan. Find "GameSir-G7 Pro 8K_G" in the device's Bluetooth list and click to connect.
3.A solid Home light indicates a successful connection.
**** If the connection fails, hold the Pairing button on the controller to re-enter pairing mode.***

AP CONNECTION TUTORIAL

1.Toggle the Mode Switch on the controller to Bluetooth mode and press the Home button to power on.
2.Hold **Home button +** until the Home light flashes rapidly in blue. Find "DuolShok 4 Wireless Controller" in the device's Bluetooth list and click to connect.
3.A solid Home light indicates a successful connection.
**** If the connection fails, hold the Pairing button on the controller to re-enter pairing mode.***

ADVANCED TUTORIAL

Function	Button Combination	Description
Manually Switch Mode	+ for 2 seconds Hold Hold	Press and hold the View and Menu buttons simultaneously for 2 seconds to cycle through XInput/Switch/DS4 modes. * Only available in receiver and wired connection modes.
Macro Button Settings	M + L4/R4/L5/R5 Hold Press	Press and hold the M and L4/R4/L5/R5 simultaneously until the Home light starts flashing slowly in white. Press the button to be programmed. Then, press L4/R4/L5/R5 again to save and exit. * You can record up to 32 steps. * If you exit the setting process without pressing any button, the current assignment for that macro button will be cleared.
Configuration Switch	M + R Hold Toggle	Configuration 1: M + toggle the right stick upward Configuration 2: M + toggle the right stick to the left Configuration 3: M + toggle the right stick to the right Configuration 4: M + toggle the right stick downward
Dead Zone Toggle	M + LS/RS for 2 seconds Hold Hold	Hold the M button and press down the left/right stick for 2 seconds to toggle the corresponding stick's dead zone on or off.
Turbo	M + corresponding buttons Hold Press	While holding the M button, press A/B/X/Y/LB/RB/LT/RT to activate the Turbo function for that button. Repeat this operation to cycle through Turbo Off - Turbo Level 1 - Turbo Level 2 - Turbo Level 3. * Double-click the M button to clear all Turbo settings.
Hair Trigger Mode	M + LT/RT for 2 seconds Hold Hold	With the trigger in long-travel mode, press and hold M and LT/RT for 2 seconds to toggle the hair trigger mode on or off. * The trigger must be in long-travel mode.
Vibration Adjustment	M + / Hold Press	While holding the M button, press View / Menu button to decrease/increase the vibration intensity level.
Layout Switch	M + for 2 seconds Hold Hold	Press and hold the M and A buttons for 2 seconds to swap the button values of A-B and X-Y.

CALIBRATION

STICKS & TRIGGERS

Set the triggers to long-travel mode. Hold + + **Home button** for 2 seconds to enter calibration mode. The Home light will flash slowly in white during this process.
Ensure the triggers and sticks are not being touched. Press once.
Rotate both sticks in full circles 2-3 times. Fully press both triggers three times. Finally, press to exit. The Home light will return to its original light effect.

Gyroscope

Place the controller on a stable, flat surface. Hold M + for 2 seconds to start calibration. During the process, the Home light will flash red and blue alternately. When the light returns to its original effect, calibration is complete.

CONTROLLER RESET

If you encounter unresponsive controller buttons, you can use a small object similar to the size of a paperclip to press the Reset button inside the circular hole on the back of the controller. This will force the controller to power off.

PLEASE READ THIS PRECAUTIONS CAREFULLY

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

WASTE ELECTRICAL & ELECTRICAL EQUIPMENT INFORMATION

CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRICAL EQUIPMENT)
Applicable in the European Union and other European countries with separate collection systems.

This mark on the product or accompanying documents means that it should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points where it will be accepted free of charge. Alternatively, in some countries you may be able to return your products to your local retailer upon purchase of an equivalent new product. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier for further information. If you do so, you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling, thereby preventing negative potential effects on the environment and human health.

DECLARATION OF CONFORMITY

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radioTV technician for help.
RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

IC CAUTION

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

STATEMENT OF COMPLIANCE WITH EU DIRECTIVE

Hereby, Guangzhou Chicken Run Network Technology Co., Ltd. declares that this GameSir G7 Pro 8K Controller is in compliance with Directive 2014/30/EU, 2014/53/EU & 2011/65/EU and its amendment (EU) 2015/863.

1-5 W

The power provided by the charger is between the minimum 1W required by the radio device and the maximum 5W to achieve the maximum charging speed.

WARNINGS AND SAFETY INFORMATION

All information regarding the use of the products can be found in the attached user manual.
Before using the product, please read the manual carefully and follow the manufacturer's recommendations.
Also, please review the following safety information and warnings before use:

USAGE WARNINGS

RISK OF DEVICE DAMAGE:

- Controllers should be used exclusively for their intended purpose—video games. Do not use the device for any purpose other than those recommended by the manufacturer.
- If the device comes into contact with liquid, immediately disconnect it and dry it according to the manufacturer's instructions.
- Avoid applying excessive force when pressing buttons or operating the controller to prevent damage to the mechanisms.

ENGLISH

RISK TO THE USER:

- During extended use, take regular breaks to avoid fatigue in your hands, wrists, and shoulders.
- Ensure the controller is placed securely to prevent it from slipping or tipping over during use.
- Controllers with force feedback systems may generate sudden movements—always hold them with both hands while playing.

POWER AND CONNECTION RISKS:

- Do not use damaged power cables or USB cables. Always use the original accessories provided by the manufacturer.
- Ensure that USB ports and power sockets are clean and free of debris to ensure a proper connection.
- For wireless devices, regularly charge the batteries or replace them with new ones to ensure continuous operation.

PROPER USAGE INFORMATION

PREPARATION AND SETUP:

- Before first use, install any software or drivers provided by the manufacturer if required.
- Place the controller on a stable surface, such as a desk, to ensure comfort and precision during use.
- Make sure all cables are properly connected and secured to prevent accidental disconnections.

SAFE USAGE:

- Adjust the device settings in games (e.g., sensitivity, vibrations) according to your preferences to ensure comfort and avoid strain on your hands or shoulders.
- Regularly check the condition of buttons, joysticks, and other components to ensure they are functioning properly.
- For controllers with force feedback, ensure the feedback settings are not too strong.

ADDITIONAL PRECAUTIONS:

- Cleaning and Maintenance: Regularly remove dust from the controller using a dry, soft cloth. Avoid using harsh chemicals that may damage the surface of the device.
- Storage: After use, disconnect the controller from the console or PC and store it in a dry, dust-free place.
- Cable Management: For wired controllers, ensure cables are organized to prevent tangling or damage.

COMPLIANCE DECLARATION

Controllers are designed in accordance with the safety requirements outlined in Regulation (EU) 2023/988. They meet the requirements for electromagnetic compatibility (EMC), durability, and user safety.
This manual is a translation of the original user manual created by the manufacturer.
Detailed information regarding the distributor/manufacturer warranty conditions is available on the website: www.gamesir.com
The product must be regularly maintained (cleaned) by the user or through specialized service points at the user's cost and responsibility. If the user manual does not provide information about necessary periodic or service maintenance actions, the physical condition of the product should be assessed regularly (at least once a week) to detect any deviation from the condition of a new product. If any deviation is detected or identified, immediate maintenance (cleaning) or servicing actions should be taken. Failure to perform proper maintenance (cleaning) and respond to identified issues may result in permanent damage to the product. The warranty provider is not responsible for damages resulting from neglect.
EU Company: TOP PLUS SOLUTION LTD
Address: 14 Avenue du General de Gaulle,94160 ST MANDE,VAL DE MARNE,FR(France)
Producer: Guangzhou Chicken Run Network Technology Co., Ltd.
Address: Room 1001&1003, No. 19, Yard 2, Yuancun West Street, Tianhe District, Guangzhou, China
GameSir and the GameSir logo are registered trademarks of Guangzhou Chicken Run Network Technology Co., Ltd. All other trademarks are the property of their respective owners.

LI-ION BATTERY

The device is equipped with a LI-ION (lithium-ion) battery, which, due to its physical and chemical structure, ages over time and with usage. The manufacturer specifies the maximum operating time of the device under laboratory conditions (new battery, fully charged). Actual usage time may differ from the declared value and this is not considered a defect of the device. To maintain the maximum lifespan of the battery, it is not recommended to discharge it below 3.18V or 15% of its total capacity. Lower values, such as 2.5V for the cell, permanently damage the battery and are not covered by the warranty. If the battery or the entire device is not used for more than one month, the battery should be charged to 50%, and the charge level should be checked regularly every two months. Store the battery and device in a dry place, away from direct sunlight and negative temperatures.

LI-PO BATTERY

The device is equipped with a LI-PO (lithium-polymer) battery, which, due to its physical and chemical structure, ages over time and with usage. The manufacturer specifies the maximum operating time of the device under laboratory conditions (new battery, fully charged). Actual usage time may differ from the declared value and this is not considered a defect of the device. To maintain the maximum lifespan of the battery, it is not recommended to discharge it below 3.5V or 5% of its total capacity. Lower values, such as 3.2V for the cell, permanently damage the battery and are not covered by the warranty. If the battery or the entire device is not used for more than one month, the battery should be charged to 50%, and the charge level should be checked regularly every two months. Store the battery and device in a dry place, away from direct sunlight and negative temperatures.

Battery Information	
Type: Polymer lithium ion battery pack	Battery Model: PL103040
Battery Category: Rechargeable battery	Battery Capacity: 1200mAh, 4.44Wh
Battery Net Weight: 20.073g	Nominal Voltage: 3.7V
Manufacturer: Shenzhen Ultra-Power Technology Co., Ltd Address: Room 201, building 3, No. 5, Chuangye 4th Road, Zhangbei community, Longcheng street, Longgang District, Shenzhen Made in China	
Precautions: Do not disassemble, crush, puncture, or expose the battery to fire or high temperatures. If the battery swells or deforms, stop using the product immediately. Do not use the battery if it has been exposed to water or other liquids. Avoid dropping or striking the battery to prevent damage.	

Just in Game

https://gamesir.com/pages/we-are-gamesir-global

Ver: G7 Pro 8K-202601-V2

GAMESIR

POLSKI

G7 PRO 8K

WIRELESS ESPORTS CONTROLLER FOR PC

Nazwa modelu: GameSir-G7 Pro 8K
Zeskanuj kod,
aby uzyskać więcej samouczków ➡
https://gamesir.com/pages/support

ZGODNOŚĆ

•Windows 10 lub nowszy •Switch 1 & 2 •Android wersja 11.0 lub nowsza

UKŁAD URZĄDZENIA

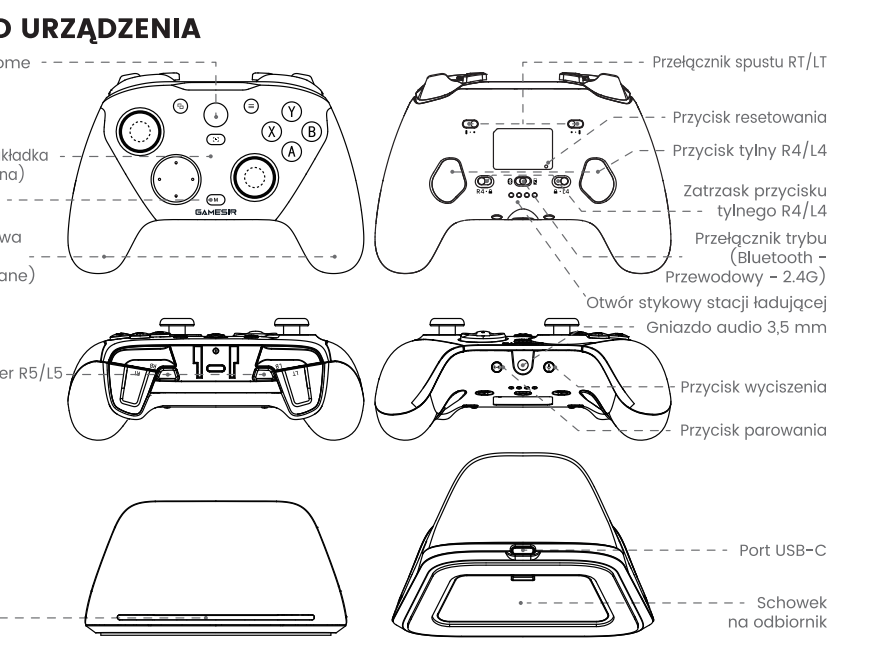

WPROWADZENIE DO PODSTAWOWYCH FUNKCJI

PODSTAWOWE DZIAŁANIA

Uruchomienie	Ustawić przełącznik trybu w odpowiedniej pozycji i nacisnąć przycisk Home .
Wyłączenie	Ustawić przełącznik trybu w pozycji Off (Wył.) lub urządzenie wyłączy się po 10 minutach bezczynności.
Niski poziom naładowania	Gdy poziom naładowania baterii spadnie poniżej 15%, kontrolka Home będzie migać na czerwono.
Ładowanie	Kontroler można ładować za pośrednictwem portu USB-C lub stacji ładującej. Gdy kontroler jest wyłączony, podczas ładowania kontrolka Home będzie pokazywała postęp ładowania za pomocą „pulsującego” efektu świetlnego.

STAN POŁĄCZENIA

Stan	Kontrolka Home	Opis
Połączono	Zapalony na stałe	Urządzenie zostało pomyślnie podłączone.
Parowanie	Miga szybko	W stanie parowania kontroler może być wykrywany i łączony przez nowe urządzenia.
Ponowne łączenie	Powolne miganie	W stanie ponownego łączenia kontroler może automatycznie połączyć się z ostatnim pomyślnie połączonym urządzeniem. Naciśnij i przytrzymaj przycisk parowania, aby ręcznie przejść do trybu parowania.

SYSTEM I TRYB

POŁĄCZENIE BEZPRZEWODOWE

System	Pozycja przełącznika trybu	Tryb	Kolor wskaźnika	Metoda przełączenia
PC/Switch/Android	Tryb odbiornika	Odbiornik	Zielony	Przełączyć w tryb odbiornika.
PC/Android/AP	Tryb Bluetooth	DS4	Niebieski	Przełączyć w tryb Bluetooth, a następnie **Przycisk Home** + ⁘ przez 2 sekundy. przytrzymać przytrzymać
Switch/AP		Switch	Czerwony	Przełączyć w tryb Bluetooth, a następnie **Przycisk Home** + ⁘ przez 2 sekundy. przytrzymać przytrzymać
Android		Android	Żółty	Przełączyć w tryb Bluetooth, a następnie **Przycisk Home** + ⁘ przez 2 sekundy. przytrzymać przytrzymać

POŁĄCZENIE PRZEWODOWE/ODBIORNIKA

System	Tryb	Kolor wskaźnika	Metoda przełączenia
PC	Tryb Xinput	Zielony	**Połączenie przewodowe:** W dowolnym trybie podłączyć kontroler do urządzenia za pomocą kabla USB-C. Nie są wymagane żadne dodatkowe czynności. **Podłączanie odbiornika:** Ustawić Mode Switch (Przełącznik trybu) w trybie odbiornika. Kontroler domyślnie wykrywa tryb automatycznie. Po pomyślnym połączeniu naciśnij i przytrzymaj przycisk ⧉ + ≡ przez 2 sekundy, aby przełączać się między trybami XInput/Switch/DS4.
Switch	Tryb Switch	Czerwony	
Android	Tryb DS4	Niebieski	

* Po pomyślnym nawiązaniu połączenia można sprawdzić aktualny tryb, naciskając i przytrzymując przycisk M.

INSTRUKCJA POŁĄCZENIA Z SYSTEMEM WINDOWS

PODŁĄCZANIE ODBIORNIKA

1.Ustawić Mode Switch (Przełącznik trybu) na kontrolerze w trybie Receiver (Odbiornik) i nacisnąć krótko przycisk Home, aby uruchomić urządzenie.
2.Podłącz dołączony odbiornik do portu USB urządzenia i poczekaj na połączenie kontrolera.
3.Kontrolka Home świecąca się przez cały czas wskazuje na udane połączenie.
**** Jeśli połączenie nie powiedzie się, nacisnąć przycisk parowania na odbiorniku i przytrzymać przycisk parowania na kontrolerze, aby ponownie wejść w Tryb parowania.***

POŁĄCZENIE PRZEWODOWE

Podłączyć kontroler do komputera za pomocą kabla USB-C.

POŁĄCZENIE BLUETOOTH

1.Ustawić Mode Switch (Przełącznik trybu) na kontrolerze w trybie Bluetooth i nacisnąć krótko przycisk Home, aby uruchomić urządzenie.
2.Przytrzymać przycisk **Przycisk Home** + ⁘ , aż wskaźnik Home zacznie szybko migać na niebiesko. Znaleźć „Wireless Controller” na liście Bluetooth urządzenia i nacisnąć, aby nawiązać połączenie.
3.Kontrolka Home świecąca się przez cały czas wskazuje na udane połączenie.
**** Jeśli połączenie nie powiedzie się, przytrzymać przycisk parowania ((•)) na kontrolerze, aby ponownie wejść w tryb parowania.***

PORADNIK DOTYCZĄCY PODŁĄCZANIA SWITCH 1 I 2

1.W menu głównym Switch przejść do „Kontrolery” – „Zmień uchwyt/kolejność”.
2.Ustawić Mode Switch (Przełącznik trybu) na kontrolerze w trybie Bluetooth i nacisnąć krótko przycisk Home, aby uruchomić urządzenie.
3.Przytrzymać przycisk **Przycisk Home** + ⁘ , aż wskaźnik Home zacznie szybko migać na czerwono i poczekać na połączenie.
4.Kontrolka Home świecąca się przez cały czas wskazuje na udane połączenie.
**** Jeśli połączenie nie powiedzie się, przytrzymać przycisk parowania ((•)) na kontrolerze, aby ponownie wejść w tryb parowania.***

PORADNIK WYBUDZANIA DLA SWITCH 2

1.Odłączyć obie strony Joy-Con 2 od Switch 2.
2.W menu głównym Switch 2 dotknij ikony kontrolera i wybierz [Zmień uchwyt/kolejność], aby wejść w tryb parowania.
3.Po pomyślnym połączeniu kontrolera do Switch 2 nie można go jeszcze używać. Na ekranie [Zmień uchwyt/kolejność] dotknij [Wyszukaj] na dole, a następnie dotknij ikony dowolnego Joy-Con 2. Wibracja kontrolera oznacza, że funkcja wybudzania została pomyślnie aktywowana.
**** Proces ten jest wymagany tylko przy pierwszej konfiguracji.***

INSTRUKCJA POŁĄCZENIA Z SYSTEMEM ANDROID

1.Ustawić Mode Switch (Przełącznik trybu) na kontrolerze w trybie Bluetooth i nacisnąć krótko przycisk Home, aby uruchomić urządzenie.
2.Przytrzymać przycisk **Przycisk Home** + ⁘ , aż wskaźnik Home zacznie szybko migać na żółto. Znaleźć „GameSir-G7 Pro 8K” na liście Bluetooth urządzenia i nacisnąć, aby nawiązać połączenie.
3.Kontrolka Home świecąca się przez cały czas wskazuje na udane połączenie.
**** Jeśli połączenie nie powiedzie się, przytrzymać przycisk parowania ((•)) na kontrolerze, aby ponownie wejść w tryb parowania.***

G-PORADNIK DOTYCZĄCY PODŁĄCZANIA TRYBU TOUCH (DOTYK) (FUNKCJA MAPOWANIA W SYSTEMIE ANDROID)

1.Ustawić Mode Switch (Przełącznik trybu) na kontrolerze w trybie Bluetooth i nacisnąć krótko przycisk Home, aby uruchomić urządzenie.
2.Przytrzymać przycisk **Przycisk Home** + RB , aż wskaźnik Home zacznie szybko migać w kolorze cyjanowym. Znaleźć „GameSir-G7 Pro 8K_G” na liście Bluetooth urządzenia i nacisnąć, aby nawiązać połączenie.
3.Kontrolka Home świecąca się przez cały czas wskazuje na udane połączenie.
**** Jeśli połączenie nie powiedzie się, przytrzymać przycisk parowania ((•)) na kontrolerze, aby ponownie wejść w tryb parowania.***

PORADNIK DOTYCZĄCY PODŁĄCZANIA AP

1.Ustawić Mode Switch (Przełącznik trybu) na kontrolerze w trybie Bluetooth i nacisnąć krótko przycisk Home, aby uruchomić urządzenie.
2.Przytrzymać przycisk **Przycisk Home** + ⁘ , aż wskaźnik Home zacznie szybko migać na niebiesko. Znaleźć „DuolShok 4 Wireless Controller” na liście Bluetooth urządzenia i nacisnąć, aby nawiązać połączenie.
3.Kontrolka Home świecąca się przez cały czas wskazuje na udane połączenie.
**** Jeśli połączenie nie powiedzie się, przytrzymać przycisk parowania ((•)) na kontrolerze, aby ponownie wejść w tryb parowania.***

INSTRUKCJE FUNKCJI ZAAWANSOWANYCH

Funkcja	Kombinacja przycisków	Opis
Ręczna zmiana trybu	⧉ + ≡ przez 2 sekundy Przytrzymaj Przytrzymaj	Nacisnąć i przytrzymać jednocześnie przyciski View (Widok) i Menu przez 2 sekundy, aby przełączyć kontroler między trybami XInput/Switch/DS4. * Dostępne tylko w trybach odbiornika i połączenia przewodowego.
Ustawienia przycisku Macro (Makro)	M + L4/R4/L5/R5 Przytrzymaj Naciśnij	Naciśnij i przytrzymaj jednocześnie przyciski M i L4/R4/L5/R5, aż kontrolka Home zacznie powoli migać na biało. Naciśnij przycisk, który chcesz zaprogramować. Następnie ponownie naciśnij przyciski L4/R4/L5/R5, aby zapisać i wyjść. * Można zapisać maksymalnie 32 kroki. * Jeśli wyjdziesz z procesu ustawiania bez naciśnięcia żadnego przycisku, bieżące przypisanie przycisku makra zostanie skasowane.
Przełącznik konfiguracji	M + R Przytrzymaj Obróć	Konfiguracja 1: M + obróć prawą gałkę w górę Konfiguracja 2: M + obróć prawą gałkę w lewo Konfiguracja 3: M + obróć prawą gałkę w prawo Konfiguracja 4: M + obróć prawą gałkę w dół
Przełączanie strefy martwej	M + LS/RS przez 2 sekundy Przytrzymaj Przytrzymaj	Przytrzymaj przycisk M i naciskaj lewą/prawą gałkę przez 2 sekundy, aby przełączyć odpowiednią strefę martwą gałki.
Turbo	M + odpowiednie przyciski Przytrzymaj Naciśnij	Przytrzymując przycisk M, nacisnąć przycisk A/B/X/Y/LB/RB/LT/RT, aby włączyć funkcję Turbo dla tego przycisku. Powtórz to działanie, aby przełączać się między trybami Turbo wył. – Turbo poziom 1 – Turbo poziom 2 – Turbo poziom 3. * Dwukrotnie nacisnąć przycisk M, aby wyczyścić wszystkie ustawienia Turbo.
Tryb przyśpiesznika	M + LT/RT przez 2 sekundy Przytrzymaj Przytrzymaj	Po ustawieniu spustu w trybie długiego skoku nacisnąć przyciski M i LT/RT oraz przytrzymać je przez 2 sekundy, aby włączyć lub wyłączyć tryb przyspiesznika. * Przełącznik musi być w trybie długiego skoku.
Regulacja wibracji	M + ⧉/≡ Przytrzymaj Naciśnij	Przytrzymując przycisk M, nacisnąć przycisk View (Widok) / Menu, aby zwiększyć/zmniejszyć poziom intensywności wibracji.
Przełączenie układu	M + ⁘ przez 2 sekundy Przytrzymaj Przytrzymaj	Naciśnij i przytrzymaj przyciski M i A przez 2 sekundy, aby zamienić wartości przycisków A-B i X-Y.

KALIBRACJA

GAŁKI I SPUSTY

Ustaw spusty w trybie długiego skoku. Przytrzymaj ⧉ + ≡ + **Przycisk Home** przez 2 sekundy, aby wejść w tryb kalibracji. W trakcie tego procesu kontrolka Home będzie powoli migać na biało. Należy pamiętać, aby nie dotykać spustów oraz gałek. Naciśnij przycisk ⁘ jeden raz. Obróć obie gałki o pełne obroty 2–3 razy. Trzykrotnie naciśnij oba spusty. Nacisnąć ⁘ , aby wyjść. Kontrolka Home powróci do pierwotnego efektu podświetlenia.

ŻYROSKOP

Umieścić kontroler na stabilnej, płaskiej powierzchni. Przytrzymaj M + ⊡ przez 2 sekundy, aby rozpocząć kalibrację.
Podczas tego procesu kontrolka Home będzie migać na przemian na czerwono i niebiesko. Gdy wskaźnik powróci do pierwotnego stanu, kalibracja jest zakończona.

RESETOWANIE KONTROLERA

W przypadku braku reakcji przycisków kontrolera można użyć małego przedmiotu wielkości spinacza do papieru, aby nacisnąć przycisk resetowania wewnątrz okrągłego otworu z tyłu kontrolera. Spowoduje to wymuszenie wyłączenia zasilania kontrolera.

⚠ ŚRODKI OSTROŻNOŚCI

- ZAWIERA MAŁE CZĘŚCI. Przechowywać w miejscu niedostępnym dla dzieci w wieku poniżej 3 lat. W razie połknięcia należy natychmiast skontaktować się z lekarzem.
- NIE używaj produktu w pobliżu ognia.
- NIE należy wystawiać produktu na bezpośrednie działanie promieni słonecznych lub wysokich temperatur.
- NIE należy pozostawiać produktu w wilgotnym lub zakurzonym środowisku.
- NIE należy uderzać w produkt ani powodować jego upadku w wyniku silnego uderzenia.
- NIE należy dotykać portu USB bezpośrednio, gdyż może to spowodować nieprawidłowe działanie.
- NIE należy mocno zginać lub ciągnąć za części kabla.
- Podczas czyszczenia należy używać miękkiej, suchej ściereczki.
- NIE należy używać środków chemicznych, takich jak benzyna lub rozcieńczalnik do czyszczenia produktu.
- NIE należy demontować, naprawiać ani modyfikować urządzenia we własnym zakresie.
- NIE należy używać produktu do celów innych niż jego pierwotne przeznaczenie. Producent nie ponosi odpowiedzialności za wypadki lub uszkodzenia spowodowane niewłaściwym użytkowaniem produktu.
- NIE WOLNO patrzeć bezpośrednio na światło optyczne. Może to spowodować uszkodzenie oczu.
- W przypadku jakichkolwiek wątpliwości lub sugestii dotyczących jakości, prosimy o kontakt z Gamesir lub lokalnym dystrybutorem.

OŚWIADCZENIE CE O ZGODNOŚCI Z DYREKTYWĄ UE

Niniejszym Guangzhou Chicken Run Network Technology Co. Ltd. oświadcza, że niniejszy kontroler Gamesir G7 Pro 8K jest zgodny z Dyrektywą 2014/30/UE, 2014/53/UE i 2011/65/UE oraz jej poprawką (UE) 2015/863.

UPROSZCZONA DEKLARACJA ZGODNOŚCI

Producent:Guangzhou Chicken Run Network Technology Co. Ltd
Adres: Pokój 1001 i 1003, Nr 19, Dziedziniec Nr 2, Yuancun West Street, Dzielnica Tianhe, Guangzhou
Produkt:Kontroler bezprzewodowy
Model:G7 Pro 8K
Częstotliwość radiowa:2400MHz-2483.5MHz
Maks. moc częstotliwości radiowej:20dBm
Wyrób jest zgodny z dyrektywą Parlamentu Europejskiego i Rady 2014/53/UE z dnia 16 kwietnia 2014 r. w sprawie harmonizacji ustawodawstw państw członkowskich dotyczących udostępniania na rynku urządzeń radiowych i uchylającą dyrektywę 1999/5/WE.

1-5 W

Moc dostarczona przez ładowarkę musi wynosić od minimum 1 W wymaganego przez urządzenie radiowe do maksimum 5 W, aby osiągnąć maksymalną prędkość ładowania.

⚠ ŚRODKI OSTROŻNOŚCI

- Przed przystąpieniem do ładowania sprawdź, czy styki urządzenia są czyste.
- Nigdy nie pozostawiaj urządzenia podczas użytkowania i ładowania bez nadzoru.
- Zadbaj o to, aby w sytuacji awaryjnej móc szybko odłączyć urządzenie od źródła zasilania.
- Nigdy nie wystawiaj urządzenia na działanie wysokiej temperatury.
- Ładuj urządzenie w miejscu suchym i dobrze wentylowanym z dala od materia- łów łatwopalnych, zachowaj wolną przestrzeń min. 1m od innych obiektów.
- Nigdy nie zakrywaj urządzenia podczas ładowania.
- Nigdy nie używaj zasilacza, stacji ładowania, kabli itp. bez rekomendacji i atestu producenta.
- Zadbaj o swoje mienie, urządzenie wyposażone jest w ogniwa, które są trudne do ugaszenia, wyposaż się w płachtę gaśniczą.

OCHRONA ŚRODOWISKA

Zużyty sprzęt elektroniczny oznakowany zgodnie z dyrektywą Unii Europejskiej, nie może być umieszczany łącznie z innymi odpadami komunalnymi. Podlega on selektywnej zbiórce i recyklingowi w wyznaczonych punktach. Zapewniając jego prawidłowe usuwanie, zapobiegasz potencjalnym, negatywnym konsekwencjom dla środowiska naturalnego i zdrowia ludzkiego.
System zbierania zużytego sprzętu zgodny jest z lokalnie obowiązującymi przepisami ochrony środowiska dotyczącymi usuwania odpadów. Szczegółowe informacje na ten temat można uzyskać w urzędzie miejskim, zakładzie oczyszczania lub sklepie, w którym produkt został zakupiony.

CE DEKLARACJA ZGODNOŚCI Z DYREKTYWĄ UE

Produkt spełnia wymagania dyrektyw tzw. Nowego Podejścia Unii Europejskiej (UE), dotyczących zagadnień związanych z bezpieczeństwem użytkowania, ochroną zdrowia i ochroną środowiska, określających zagrożenia, które powinny zostać wykryte i wyeliminowane.

Niniejszy dokument jest tłumaczeniem oryginalnej instrukcji obsługi, stworzonej przez producenta.

Produkt należy regularnie konserwować (czyścić) we własnym zakresie lub przez wyspecjalizowane punkty serwisowe na koszt i w zakresie użytkownika. W przypadku braku informacji o koniecznych akcjach konserwacyjnych cyklicznych lub serwisowych w instrukcji obsługi, należy regularnie, minimum raz na tydzień oceniać odmienność stanu fizycznego produktu od fizycznie nowego produktu. W przypadku wykrycia lub stwierdzenia jakiejkolwiek odmienności należy pilnie podjąć kroki konserwacyjne (czyszczenie) lub serwisowe. Brak poprawnej konserwacji (czyszczenia) i reakcji w chwili wykrycia stanu odmienności może doprowadzić do trwałego uszkodzenia produktu. Gwarant nie ponosi odpowiedzialności za uszkodzenia wynikające z zaniedbania.

AKUMULATOR LI-ION

Urządzenie wyposażone jest w akumulator LI ION (litowo-jonowy), który z uwagi na swoją fizyczną i chemiczną budowę starzeje się z biegiem czasu i użytkowania. Producent określa maksymalny czas pracy urządzenia w warunkach laboratoryjnych, gdzie występują optymalne warunki pracy dla urządzenia, a sam akumulator jest nowy i w pełni naładowany. Czas pracy w rzeczywistości może się różnić od deklarowanego w ofercie i nie jest to wada urządzenia a cecha produktu. Aby zachować maksymalną żywotność akumulatora, nie zaleca się go rozładowywać do poziomu poniżej 3,18V lub 15% ogólnej pojemności. Niższe wartości, jak np. 2,5V dla ogniwa uszkadzają je trwale i nie jest to objęte gwarancją. W przypadku zaniechania używania akumulatora lub całego urządzenia przez czas dłuższy niż jeden miesiąc należy akumulator naładować do 50% i sprawdzać cyklicznie co dwa miesiące poziom jego naładowania. Przechowuj akumulator i urządzenie w miejscu suchym, z dala od słońca i ujemnych temperatur.

AKUMULATOR LI-PO

Urządzenie wyposażone jest w akumulator LI PO (litowo-polimerowy), który z uwagi na swoją fizyczną i chemiczną budowę starzeje się z biegiem czasu i użytkowania. Producent określa maksymalny czas pracy urządzenia w warunkach laboratoryjnych, gdzie występują optymalne warunki pracy dla urządzenia, a sam akumulator jest nowy i w pełni naładowany. Czas pracy w rzeczywistości może się różnić od deklarowanego w ofercie i nie jest to wada urządzenia a cecha produktu. Aby zachować maksymalną żywotność akumulatora, nie zaleca się go rozładowywać do poziomu poniżej 3,5V lub 5% ogólnej pojemności. Niższe wartości, jak np 3,2V dla ogniwa uszkadzają je trwale i nie jest to objęte gwarancją. W przypadku zaniechania używania akumulatora lub całego urządzenia przez czas dłuższy niż jeden miesiąc należy akumulator naładować do 50% i sprawdzać cyklicznie co dwa miesiące poziom jego naładowania. Przechowuj akumulator i urządzenie w miejscu suchym, z dala od słońca i ujemnych temperatur.