

Pour valider votre garantie et
bénéficier d'un accompagnement
personnalisé, **SCANNEZ** ce **QR Code**

To validate your warranty and
receive personalized support,
SCAN this **QR CODE**.



y-brush.com/register



Y BRUSH

MADE IN FRANCE



MANUEL D'UTILISATION / USER GUIDE

y-brush.com

SOMMAIRE / TABLE OF CONTENTS

FRANÇAIS

1. CONTENU DU PACK	3
2. CARACTÉRISTIQUES	3
3. DÉMARREZ AVEC NYLONSTART	4
4. DÉMARREZ AVEC NYLONBLACK	5
5. MANUEL D'UTILISATION	6
6. NOTICE LÉGALE	8

ENGLISH

1. LEGAL INFORMATION	11
2. THE PACK CONTAINS	15
3. SPECIFICATIONS	15
4. START WITH NYLONSTART	16
5. START WITH NYLONBLACK	17
6. INSTRUCTIONS FOR USE	18

1. CONTENU DU PACK

1 MANCHE / 1 TÊTE DE BROSE / 1 CÂBLE USB


et en option

- 1 SUPPORT DE RANGEMENT / 1 PLANCHE DE STICKERS
- 1 APPLICATEUR DE DENTIFRICE (*enfant ou adulte*) / 1 TROUSSE DE VOYAGE


2. CARACTÉRISTIQUES

Découvrez votre nouvelle brosse à dents aux vibrations soniques.

TÊTE DE BROSE

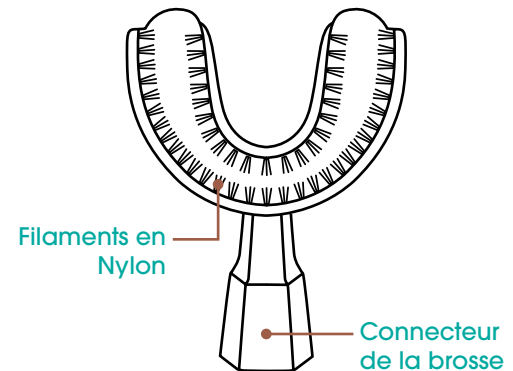

MANCHE

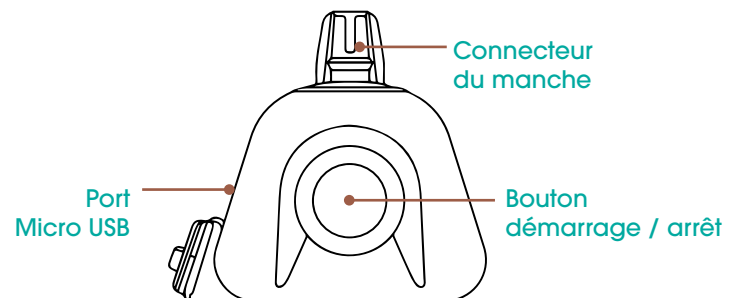

Manche résistant aux éclaboussures.
Voir p9



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

3. DÉMARREZ AVEC VOTRE BROSSE À DENTS NYLONSTART

La brosse à dents Y-Brush NylonStart vous permet d'adapter le temps de brossage selon votre besoin.



MODE



• Appuyez sur le bouton central pour lancer ou arrêter votre brossage.

4. DÉMARREZ AVEC VOTRE BROSSE À DENTS NYLONBLACK

Cette gamme vous propose 4 MODES : le mode **doux**, le mode **normal**, le mode **intensif** et le mode **illimité**.



4 MODES



- Faites un **APPUI COURT** sur le bouton central pour sélectionner votre mode.
- Faites un **APPUI LONG** sur le bouton central pour lancer ou arrêter votre brossage.

SEMAINE 1

Pour cette première semaine, prenez le temps de bien mordiller et de faire le nombre d'oscillations nécessaires pour avoir un brossage efficace. Votre temps de brossage n'excédera pas 30 secondes. Veuillez vous référer au **chapitre 5** pour le manuel d'utilisation.

SEMAINE 2

Une fois la gestuelle comprise et adoptée, nous vous invitons à **accélérer le mouvement**.

SEMAINE 3

Maintenant que vous êtes un expert, vous pouvez adopter une gestuelle **+** tonique. N'hésitez pas à jauger la vitesse des oscillations pour permettre d'avoir les dents bien lisses après chaque brossage.

SEMAINE 1

Commencez avec le **mode illimité**. Il vous permet de prendre le temps d'adopter la gestuelle, tout en garantissant un brossage efficace. Le processus reste le même : **5 MORDILLEMENTS ET 5 OSCILLATIONS** pour une mâchoire.

Soyez patient et vous verrez que les résultats suivront.

SEMAINE 2

Passer au mode **doux** qui dure **15 secondes**. N'hésitez pas à accélérer le geste.

SEMAINE 3

Vous pouvez dorénavant passer au mode **normal**, c'est-à-dire le mode **10 secondes**. Les oscillations devront être plus rapides. Votre brossage sera donc plus tonique et encore plus efficace.

VOUS ÊTES PRESSÉ ? La brosse à dents **NYLONBLACK** dispose d'un mode intensif de **5 secondes** à utiliser toujours en gardant le même nombre d'oscillations et de mordillements.

5. MANUEL D'UTILISATION


3 étapes vers un brossage efficace et rapide

5.1 APPLIQUEZ VOTRE DENTIFRICE

Si vous avez l'**APPLICATEUR DE DENTIFRICE** : insérez-le sur votre tube de dentifrice puis étalez un filet de dentifrice sur toute la longueur de la tête de brosse.

Au contraire, si vous n'en n'avez pas, déposez une noisette de dentifrice sur votre langue et répartissez-la sur toutes vos dents.

Après avoir appliqué le dentifrice, pensez à **MOUILLER ABONDAMMENT** la tête de brosse.

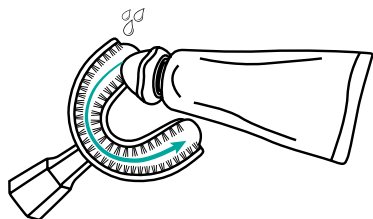

DENTIFRICE
À CROQUER



Croquez la pastille et
répartissez les morceaux
sur vos dents.

5.2 TROIS, DEUX, UN... BROSSEZ !

Dans notre guide, nous parlons d'**oscillations**. Une oscillation correspond à un **aller-retour** avec votre brosse à dents. Ce mouvement est à faire pendant votre brossage, en oscillant de gauche à droite, puis de droite à gauche, de façon répétée.

2 RÈGLES À RETENIR POUR UN CYCLE DE BROSSAGE:

5

OSCILLATIONS

&


10

MORDILLEMENTS

PAR OSCILLATION

- 1 SÉLECTIONNEZ VOTRE MODE (UNIQUEMENT POUR LA VERSION NYLONBLACK)
- 2 INSÉREZ LA BROSSÉ SUR L'UNE DE VOS MÂCHOIRES
- 3 APPUYEZ SUR LE BOUTON POUR LANCER LES VIBRATIONS*
- 4 MORDILLEZ ET OSCILLEZ LA BROSSÉ
- 5 RENOUVELEZ L'OPÉRATION POUR LA MÂCHOIRE OPPOSÉE

*SE RÉFÉRER AU CHAPITRE 4 OU 5 CORRESPONDANT À VOTRE PRODUIT

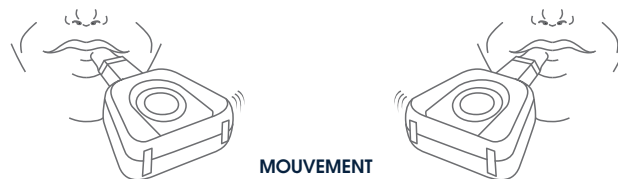

MOUVEMENT
VUE DU DESSUS


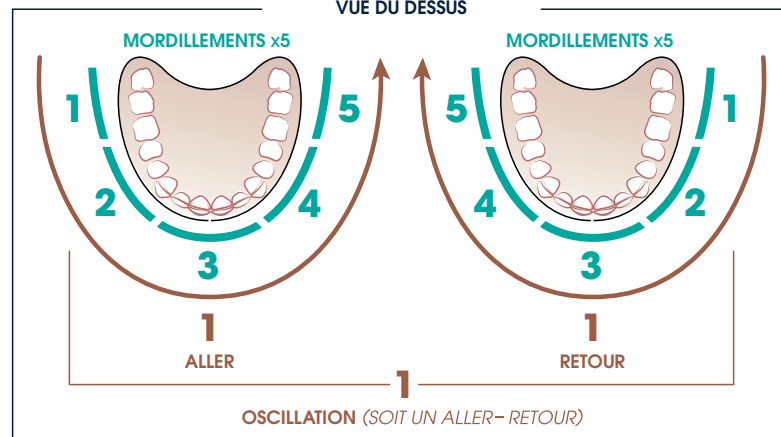


Schéma explicatif d'**une oscillation**, c'est à dire un aller-retour de gauche à droite puis de droite à gauche, accompagné de 10 mordillements.

5.3 NETTOYAGE ET RANGEMENT

Lorsque vous avez fini de brosser vos dents, pincez la base de la brosse pour la déverrouiller, puis **rincez-la à l'eau claire**. Passez un doigt dans la brosse pour bien retirer le dentifrice. Laissez sécher sur son **Support** (optionnel), ou la tête en bas au bord d'un verre.

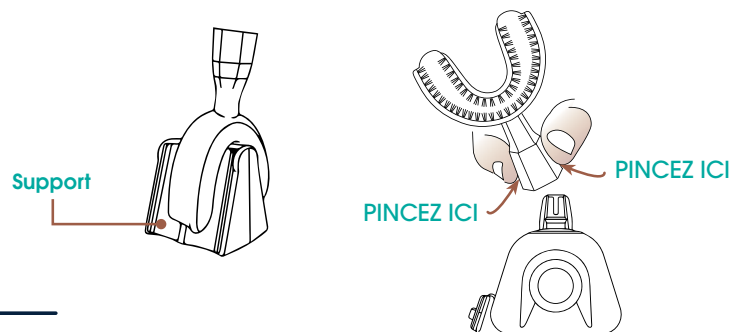

DES QUESTIONS?

Ecrivez-nous à :

customers@y-brush.com

Notre service client s'engage à vous répondre sous 24H ouvrées pour vous faire profiter de la meilleure expérience possible.

6. NOTICE LÉGALE

Instructions opératoires

Veillez lire attentivement le mode d'emploi avant d'utiliser l'appareil pour la première fois. Les brosses à dents peuvent être utilisées par des enfants et des personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou dont l'expérience ou les connaissances ne sont pas suffisantes, à condition qu'ils bénéficient d'une surveillance ou qu'ils aient reçu des instructions quant à l'utilisation de l'appareil en toute sécurité et en comprenant bien les dangers potentiels. Le nettoyage et l'entretien par l'utilisateur ne doivent pas être effectués par des enfants sans surveillance. L'appareil doit être utilisé uniquement avec l'alimentation fournie avec l'appareil (Chargeur secteur ou câble USB) et la brosse vendue par Y-Brush. Branchez le chargeur uniquement sur une prise de courant alternatif (100-240V). L'appareil doit être alimenté uniquement sous la très basse tension de sécurité correspondant au marquage de l'appareil (5V). Les enfants ne doivent pas jouer avec l'appareil.

INTRODUCTION

Y-Brush est un dispositif conçu et développé par des spécialistes de la santé bucco-dentaire dans le but de faciliter le brossage dentaire pour petits et grands. Il permet de se brosser les dents de façon simple, efficace, et en quelques secondes grâce à un système breveté.

Ce dispositif est composé d'une brosse souple qui épouse la mâchoire. Grâce aux fibres en nylon tapissant la brosse et aux vibrations du manche, les dents sont brossées simultanément, de manière efficace.

Rappelons que les préconisations en termes de santé bucco-dentaire sont de se brosser les dents au moins 2 fois par jour, le matin et le soir. Un brossage efficace permet de prévenir les conséquences liées à une mauvaise santé orale (maladies parodontales, cardio-vasculaires, etc.). Ce dispositif aide à retirer la plaque dentaire, mais n'est pas prévu pour retirer le dépôt de tartre. Il est recommandé de voir un chirurgien-dentiste tous les 6 à 12 mois.

MODE D'EMPLOI

+ CHARGEMENT DU DISPOSITIF

• Avant chaque utilisation du manche, vérifiez que celui-ci est bien chargé. En utilisation normale, les indicateurs lumineux du manche sont allumés en blanc. Ils s'allument en rouge quand le niveau de batterie est trop faible et en vert lorsque le manche est branché sur secteur.

• Si le niveau de batterie du manche est trop faible:

- Branchez le chargeur sur une prise secteur 110-220V.
- Branchez le câble de recharge au niveau de la partie prévue à cet effet sur le manche. Un halo lumineux autour du bouton marche/arrêt s'allume de manière circulaire et indique que le dispositif est en cours de chargement. Si le halo reste allumé en vert de façon continue, cela indique que le manche est pleinement chargé. Une durée de 8 heures est suffisante pour recharger intégralement le manche. Ce dernier aura alors une autonomie jusqu'à 3 mois à raison de 2 brossages par jour.

• Le manche est prêt pour être utilisé. Il faut impérativement fermer le cache qui protège le branchement du câble de recharge sur le côté gauche du manche pour garantir son étanchéité.

• Le manche ne peut pas être utilisé en cours de chargement.

• Remplacez la brosse et le manche après un choc important (même en l'absence de signe visible d'endommagement).

+ ALIMENTATION ET BRANCHEMENT

• Utilisez l'appareil à température ambiante (0-40°C). Évitez toute exposition prolongée du produit au soleil ou à toute autre source de chaleur. N'utilisez pas le chargeur à proximité de l'eau (baignoire, lavabo, etc.) ni en plein air. Ne jamais immerger ni rincer le chargeur.

• Ne touchez jamais le câble d'alimentation avec des objets pointus ou tranchants. Ne jamais toucher la fiche USB avec les mains humides, et ne jamais débrancher en tirant sur le câble. Contrôlez régulièrement que le câble ne présente pas de fissures ou dommages.

• Prenez soin de bien fermer le cache qui protège le branchement de la prise de chargement du manche afin que celui-ci reste étanche. Le manche est étanche seulement aux projections d'eau.

• Ne mettez pas au four à micro-ondes ni dans aucun autre appareil électroménager.

• Après utilisation, rincez abondamment la tête de la brosse, secouer pour retirer l'excès d'eau et la ranger sur le porte brosse, connecteur vers le haut.

• Ne pas utiliser l'appareil sous la douche ou dans son bain.

• Ne jetez pas le produit avec les ordures ménagères. Le manche possède des batteries et doit donc être déposé à un point de collecte de produits électroniques. Le chargeur doit également être déposé dans ce type de point de collecte. Ne tentez pas de retirer les batteries.

+ AUTRES INSTRUCTIONS IMPORTANTES

• **ATTENTION !** Ne convient pas à un enfant de moins de 4 ans. L'adaptateur de dentifrice, en version adulte et enfant, contient de petites pièces pouvant entraîner un risque d'étouffement. En conséquence, ils ne doivent pas être utilisés par un enfant sans la surveillance d'un adulte.

• Surveillez que l'utilisation du dispositif n'est pas désagréable et ne dégrade pas l'état de votre santé dentaire. En cas de doute, contactez un dentiste. Si vous avez des problèmes dentaires, que vous portez un appareil d'orthodontie, que vous avez des implants ou des couronnes dentaires, consultez votre dentiste ou médecin avant d'utiliser le produit.

• N'ouvrez pas le produit. Toute garantie est annulée si le produit est ouvert. Une réparation non conforme est dangereuse pour son utilisateur.

• N'utilisez jamais un produit qui a été ouvert ou endommagé.

• Ne pas laver le produit dans le lave-vaisselle.

• Les porteurs d'un stimulateur cardiaque ou de tout autre implant électronique sont appelés à consulter leur médecin au préalable.

• Le produit ne doit pas être utilisé pour des objectifs commerciaux.

• Tenir l'emballage hors de portée des enfants.

• Le fabricant décline toute responsabilité en cas de non-observance de la présente notice d'utilisation, de réparations qui n'auraient pas été effectuées dans les règles, ou en cas d'utilisation non conforme de l'appareil.

• En cas d'incident grave, veuillez contacter immédiatement le fabricant (contact ci-dessous).

• Séchez le manche avec une serviette si celui-ci est mouillé.

ATTENTION,

La garantie ne s'applique pas si de l'eau est retrouvée dans le manche ou si le manche n'a pas été utilisé selon ces instructions. Il faut donc bien refermer le cache connecteur, et ne pas laisser le manche à portée de chute d'un lavabo, d'une douche et d'un bain.

FasTeesH SAS

14-22 Avenue Barthélémy Thimonnier, 69 300 Caluire-et-Cuire

E-mail: customers@y-brush.com

Tel: +33783477158

Site: www.Y-Brush.com

1. LEGAL INFORMATION

Operating instructions

Please read the operating instructions carefully before using the device for the first time. Toothbrushes may be used by children and persons with reduced physical, sensory or mental abilities or insufficient experience or knowledge, provided that they are supervised or instructed in the safe use of the appliance and understand the potential hazards. Cleaning and maintenance by the user must not be performed by unsupervised children. The device should be used only with the power supply or USB charger provided with the product and the brush sold by Y-Brush. Connect the charger only to an AC outlet (100-240V). The product should only be operated with the safety extra-low voltage corresponding to the marking on the product. Children should not play with the product.

IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER- To reduce the risk of electrocution:

1. Do not use while bathing.
2. Do not place or store product where it can fall or be pulled into a tub or sink.
3. Do not place in or drop into water or other liquid.
4. Do not reach for a product that has fallen into water. Unplug immediately.

WARNING

To reduce the risk of burns, electrocution, fire, or injury to persons :

1. Close supervision is necessary when this product is used by, on, or near children or invalids.
2. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service center for examination and repair.
4. Keep the cord away from heated surfaces.
5. Never use while sleeping or drowsy.
6. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

INTRODUCTION

Y-Brush is a device designed and developed by oral health specialists to facilitate dental brushing for both children and adults. It allows you to brush your teeth in a simple, effective way, and in a few seconds thanks to a patented system.

This device is composed of a flexible brush that fits perfectly in the jaw. Thanks to the nylon fibers lining the brush and the vibrations of the handle, the teeth are brushed simultaneously and efficiently.

Remember that the recommendations in terms of oral health are to brush your teeth at least twice a day, in the morning and in the evening. An effective brushing helps to prevent the consequences related to a bad oral health. (periodontal, cardiovascular diseases, etc.) It helps to remove plaque, but is not intended to remove tartar deposits. It is recommended to see a dental surgeon every six months.

DIRECTION FOR USE

+ CHARGING DEVICE

- Before each use of the Y-Brush, make sure it is fully charged. In normal use, the indicator lights on the handle are lit in white. They will light in red when the battery level is too low and in green when the Y-Brush is plugged into the power supply.

- If the battery level of the handle is too low:

- ♦ Connect the charger to a 110-220V power outlet or use the USB charger

- ♦ Plug the charging cable into the part provided for this purpose on the handle. An illuminated halo around the on/off button lights up cyclically and indicates that the device is being charged. If the halo stays on green continuously, it indicates that the handle is fully charged. A period of 8 hours is sufficient to fully charge the handle. It will then have an autonomy of up to 3 months at a rate of 2 brushes per day.

- ♦ The handle is ready to be used. It is imperative to close the cover that protects the connection of the recharging cable on the handle side to guarantee its watertightness.

- ♦ The handle cannot be used during charging.

WARNING

THE BRUSH

- The appliance and its brush have the sole function of brushing teeth, they should not be used for anything else. Do not attempt to swallow all or part of the brush.

- The handle must not be inserted in the mouth without a brush.

- Make sure that the nylon fibers of the brush reach all areas of all teeth once in the mouth. If any area are not reached, brush them separately.

- Be aware of the risk of pinching when the brush is attached to the handle.

- The brushes are individual and have a maximum service life of 6 months under normal use. If there is any doubt as to whether the brush belongs to a third party and/or can be used by a third party, change the brush to avoid the risk of cross-contamination.

- Replace the brush after severe impact (even if there is no visible sign of damage).

+ POWER SUPPLY & CONNECTION

- Use the unit at room temperature (0-40°C). Avoid prolonged exposure of the product to sunlight or any other heat source. Do not use the charger near water (bathtub, washbasin, etc.) or outdoors. Never immerse or rinse the charger.

- Never touch the power cable with sharp or pointed objects. Never touch the plug with wet hands, and never unplug by pulling on the cable. Regularly check the cable for cracks or damage.

- Be sure to close the cover that protects the handle charging plug connection so that it remains watertight. The handle is only splash-proof.

- Do not place in a microwave oven or any other household appliance.

- After use, rinse the brush head thoroughly, shake off excess water and store it on the brush holder with the connector facing up.

- Do not dispose of the product in the household garbage. The handle has batteries and should therefore be taken to a collection point for electronic products. The charger must also be taken to such a collection point. Do not attempt to remove the batteries.

+ OTHER IMPORTANT INSTRUCTIONS

- CAUTION: Not suitable for children under 4 years old. The elements, in both the adult and child version, contains small parts that may cause a choking hazard. Therefore, they must not be used by a child without adult supervision.

- Make sure that the use of the device is not unpleasant and does not impair dental health. If in doubt, contact a dentist. If you have dental problems, wear braces, have dental implants or crowns, consult your dentist or physician before using the product.

- Do not open the product. Any warranty is void if the product is opened. Improper repair is dangerous for the user.

- Never use a product that has been opened or damaged.

- Do not wash the product in the dishwasher.

- People with pacemakers or other electronic implants should consult their physician beforehand.

- The product should not be used for commercial purposes.

- Keep the packaging out of the reach of children.

- The manufacturer is not liable for any failure to observe these operating instructions, for repairs that are not carried out in accordance with the state of the art, or for improper use of the device.

Attention,

Please note that the warranty does not apply if water is found in the handle or if the handle has not been used according to these instructions. It is therefore important to close the connector cover and not to leave the handle within reach of a sink, shower or bath.

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

• **Note:** This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interferences to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the interference-causing equipment standard entitled: "Digital Apparatus" ICES-003 of the Canadian Department of Communications.
- This device complies with Industry Canada License-exempt RSS standard(s).

Operation is subject to the following two conditions:

1. This device may not cause interference
2. This device must accept any interference, including interference that may cause undesired operation of the device.

FasTeesH SAS

14-22 Avenue Barthélémy Thimonnier, 69 300 Caluire-et-Cuire

E-mail: customers@y-brush.com

Tel: +33783477158

Site: www.Y-Brush.com

2.THE PACK CONTAINS:

1 HANDLE / 1 BRUSH HEAD / 1 CABLE

and optional

1 STORAGE STAND / 1 STICKERS BOARD


1 TOOTHPASTE APPLICATOR (*child or adult*) /

1 TRAVEL BAG


3.SPECIFICATIONS

Discover your new toothbrush
with sonic vibrations.

BRUSH HEAD

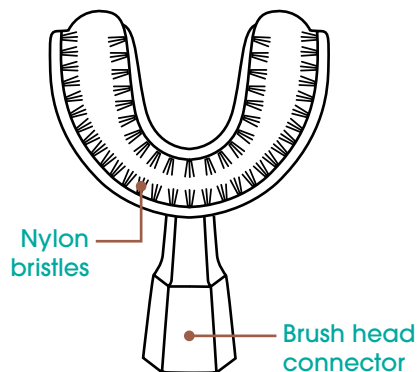

HANDLE

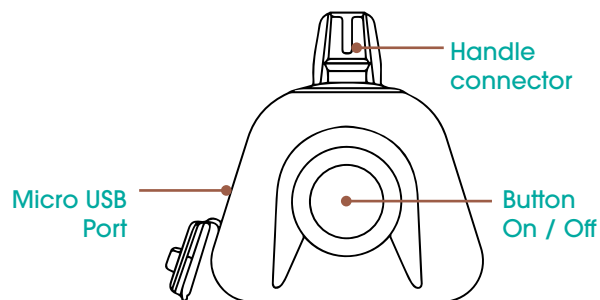

Splash-proof handle.
See p12

YOU WILL NEED AN ADAPTATION TIME OF 1 TO 2 WEEKS. FOLLOW THE GUIDE!

4. GET STARTED WITH YOUR NYLONSTART TOOTHBRUSH

The Y-Brush NylonStart toothbrush allows you to adjust the brushing time according to your needs.



MODE



• Press the center button to start or stop your brushing.

5. GET STARTED WITH YOUR NYLONBLACK TOOTHBRUSH

This range offers you 4 MODES: soft mode, normal mode, intensive mode and unlimited mode.



4 MODES



- **SHORT PRESS** the center button to select your mode.
- **LONG PRESS** the center button to start or stop your brushing.

WEEK 1

For this first week, **take the time** to chew well and to make the necessary number of oscillations to have an effective brushing. Your brushing time will not exceed 30 seconds. Please refer to **chapter 6** for the Instructions for use.

WEEK 2

Once you have understood and adopted the technique, you can **speed up the movement**.

WEEK 3

Now that you are an expert, you can adopt a more tonic gesture.

Don't hesitate to gauge the speed of the oscillations to ensure smooth teeth after each brushing.

WEEK 1

Start with the **unlimited mode**. It allows you to take the time to learn the right movements, while ensuring effective brushing.

The process remains the same : **5 BITES** and **5 OSCILLATIONS** for one jaw. Be patient and you'll see that the results will follow.

WEEK 2

Switch to **soft** mode, which lasts **15 seconds**. Do not hesitate to speed up the movement.

WEEK 3

You can now switch to the **normal** mode, which is the 10-second mode. The oscillations should be faster. Your brushing will be more tonic and even more efficient.

IN A HURRY? The **NYLONBLACK** toothbrush has a **5-second intensive mode** to be used with the same number of oscillations and bites.

+ = MODE INTENSITY

6. INSTRUCTIONS FOR USE


3 steps to a fast and effective brushing

6.1 APPLY YOUR TOOTHPASTE

With the **Y-BRUSH APPLICATOR**: place it on the toothpaste. Spread a dab of toothpaste along the entire length of the brush.

On the contrary, if you don't have any, put a dab of toothpaste on your tongue and spread it over all your teeth.

After applying the toothpaste, remember to **WET** the brush head.

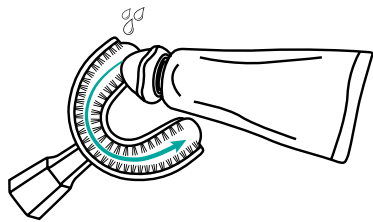

TOOTHPASTE
TABLET



Crunch the tablet and
spread the pieces over
your teeth.

6.2 THREE, TWO, ONE... BRUSH!

In our user guide, we talk about **OSCILLATIONS**. An oscillation is a **BACK AND FORTH MOVEMENT** with your toothbrush. This movement is to be done while brushing, oscillating from left to right, then from right to left, repeatedly.

2 RULES TO REMEMBER FOR A BRUSHING CYCLE

5

OSCILLATIONS

&

10

BITES


PER OSCILLATION

- 1 SELECT YOUR MODE (ONLY FOR THE NYLONBLACK VERSION)
- 2 PLACE THE BRUSH ON ONE OF YOUR JAWS
- 3 PRESS THE START BUTTON TO START THE VIBRATIONS*
- 4 BITE AND OSCILLATE THE BRUSH
- 5 DO THE SAME FOR THE OPPOSITE JAW

*REFER TO CHAPTER 4 OR 5 CORRESPONDING TO YOUR PRODUCT




MOVEMENT SEEN
FROM ABOVE

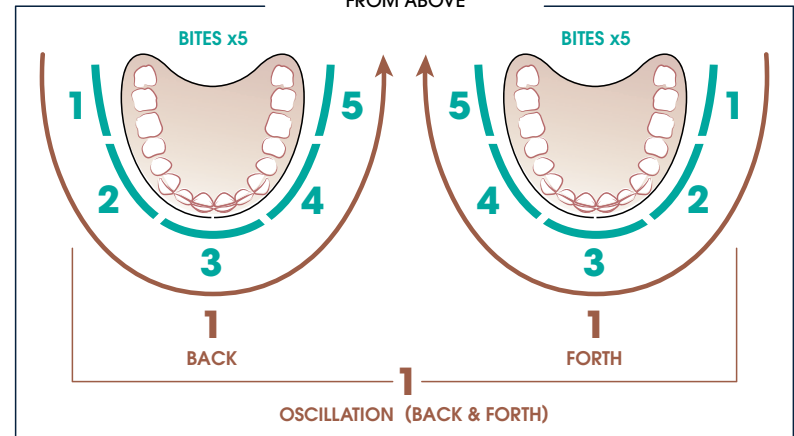


Explanatory scheme of **AN OSCILLATION**, that's to say a back and forth movement from left to right and then from right to left, accompanied by 10 bites.

6.3 CLEANING AND STORAGE

When you have finished brushing your teeth, pinch the base of the brush to unlock it, then **RINSE** it with clean water. Run a finger through the brush to remove the toothpaste. Let it dry on its **STAND** (optional), or upside down on the edge of a glass.

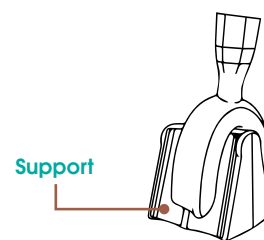

Support

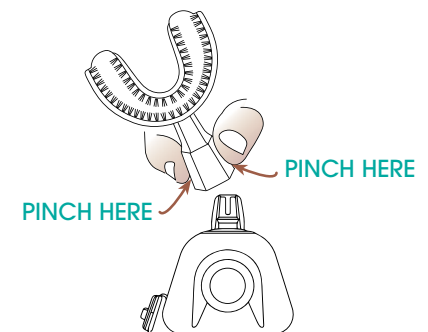

PINCH HERE

PINCH HERE

ANY QUESTIONS?

Write us at:

customers@y-brush.com

Our customer service is committed to respond within 24 hours to give you the best experience possible.



BESOIN D'AIDE ?
Do you need help ?



DÉCOUVREZ
nos tutoriels vidéo en scannant ce QR code,
ou sur y-brush.com/support

DISCOVER
our video tutorials by scanning this QR code,
or visit y-brush.com/support

DES QUESTIONS?

Ecrivez-nous à :
customers@y-brush.com

Notre service client s'engage à vous répondre sous 24H ouvrées pour vous faire profiter de la meilleure expérience possible.

ANY QUESTIONS?

Write us at:
customers@y-brush.com

Our customer service is committed to respond within 24 hours to give you the best experience possible.

y-brush.com