1

MAXIMIZE YOUR DEVICE WITH RAZER SYNAPSE

Access advanced options and granular control as you personalize device lighting with the unified hardware configuration tool.

razer.com/synapse

Internet connection required for software updates and modules
Registering for a Razer ID account is recommended to access full features, but not required

GET HELP WITH RAZER SUPPORT

We're here to assist you with your Razer device.
Find software downloads, register your product,
or contact us by phone, chat or email if you have any questions.

support.razer.com

2

WHAT'S INSIDE / WHAT'S NEEDED

WHAT'S INSIDE

- Razer Aether Smart Lamp Pro

- Power adapter with interchangeable plugs*



*May vary for specific regions

- Important Product Information Guide

A. Brightness button
B. Multi-function dial
C. Power button
D. Mode button
E. Lamp body powered by Razer Chroma™ RGB
F. Power port
G. Non-slip rubber footing

WHAT'S NEEDED

PRODUCT REQUIREMENTS:

- 2.4 GHz WiFi network (WPA / WPA2 encryption)
- WiFi-enabled PC / Laptop (Windows® 10 64-bit or higher) or iOS / Android device**

RAZER SMART HOME APP REQUIREMENTS:

- iOS 13 / Android 9.0Pie (or higher) devices with Bluetooth connectivity**
- Razer Synapse 3 (Windows® 10 64-bit)

RAZER SYNAPSE REQUIREMENTS:

- Windows® 10 64-bit (or higher)
- Internet connection for software installation

***Bluetooth connectivity required for initial setup only.*

LET'S GET YOU COVERED

You've got a great device in your hands, complete with a 1-year limited warranty coverage. Now maximize its potential and score exclusive Razer benefits by registering at **razerid.razer.com**.

Your product's serial number can be found here.

Got a question? Ask the Razer Support Team at **support.razer.com**

GETTING STARTED

SETTING IT UP

With the adapter AC plug for your region attached to the power adapter, connect it to the smart lamp's power port and plug it into a power outlet.

POWER OUTLET

3

CUSTOMIZING THE SMART LAMP

A. VIA MOBILE DEVICE USING THE RAZER SMART HOME APP (REQUIRED)

1. Download the Razer Smart Home app on your mobile device.
2. Press the power button to power on the smart lamp.
3. Launch the app and follow the onscreen instructions.

When prompted to select a WiFi network, select the same network used by your mobile device. Your mobile device must be connected to the same network whenever customizing the smart lamp.

You can now customize the Razer Aether Smart Lamp Pro using the Razer Smart Home app.

Razer Smart Home

GET IT ON Google Play
Download on the App Store
ダウンロードしてください RZR TO SMARTPHONE-DL (For China Only)

B. VIA PC / LAPTOP USING THE RAZER SYNAPSE APP

Before proceeding, make sure you've already set up the smart lamp on your network from the Razer Smart Home app, and you've added the smart lamp to the same network as the smart lamp.

1. Go to **razer.com/synapse** to download and launch Razer Synapse. For existing users, make sure to update Razer Synapse to its latest version.

Registering for a Razer ID account is recommended but optional. You may continue as a guest; however, you won't be able to store any of your settings on the cloud.

2. Press the power button to power on the smart lamp.
3. On Razer Synapse, click on **Add Smart Home Device**, and follow the onscreen instructions.
4. Update when prompted, and wait for Razer Synapse to set up the Razer Aether Smart Lamp Pro. The Razer Synapse Dashboard will now show the Razer Aether Smart Lamp Pro on the Devices list.

ADD SMART HOME DEVICE

You can now customize the Razer Smart Lamp Pro using Razer Synapse.

UNDERSTANDING PAIRING MODE

Pairing mode is required when setting up the smart lamp from the Razer Smart Home app. Pairing mode is activated when you power it on and deactivates when the smart lamp is left unpaired for 5 minutes. To reactivate pairing mode, switch off and on the smart lamp's power supply for power it on.

4

USING THE SMART LAMP

POWER ON/OFF

Press the power button to power on or off the smart lamp.

CHANGING THE LIGHT MODE

Press the mode button to cycle through the *White* light, *Static*, *Fire*, *Breathing*, and *Chroma* light modes. You can then use the multi-function dial to adjust the active light mode's setting.

Change light mode

Adjust setting

Light mode	Description	Dial function
White light	The smart lamp will be lit in white	Adjust how cool or warm the light of the lamp is.
Static	The smart lamp will be lit using the active color	
Fire	The lighting will mimic the motion of flames using the active color	Switch between the following colors: red, orange, yellow, green, cyan, blue, and purple.
Breathing	The light will fade in and out of the active color	
Chroma	The smart lamp will use the active Chroma effect. By default, this is set to *Upward wave*.	Rotate clockwise or counterclockwise to cycle through the following Chroma effects back and forth: *upward wave*, *downward wave*, *clockwise wave*, *counterclockwise wave*, and *spectrum cycling*

ADJUSTING BRIGHTNESS

On any mode, pressing the brightness button will allow you to use the multi-function dial to increase or decrease the brightness of the smart lamp's active light mode.

Enable brightness adjustment

Decrease brightness

Increase brightness

5

RESETTING TO FACTORY SETTINGS

Once connected, a reset is required to connect the smart lamp to a new device.

1. Switch off the smart lamp's power supply.

2. While holding the power and mode buttons, switch on the power supply and continue holding the power and mode buttons for 6 seconds.
   The smart lamp will briefly cycle through red, green, blue before displaying white when the reset is successful.

3. Use the Razer Smart Home app to connect the Razer Aether Smart Lamp Pro to a new mobile device.

SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Aether Smart Lamp Pro, we suggest that you adopt the following guidelines:

- Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to **support.razer.com** for assistance.
- Don't take apart the device and attempt to operate it under abnormal current loads. Doing so will void your warranty.
- Don't replace the light source of this device. This should only be replaced by the manufacturer, service agent, or a similarly qualified person.
- Only use the device indoors.
- Don't use or install the device near water, moisture, solvents, or other wet surfaces, nor expose it to high temperatures or direct sunlight.
- Don't use or install the device and its components near water, moisture, solvents, or other wet surfaces, nor expose the device to high temperatures or direct sunlight for an extended period of time. Doing so may lead to malfunction, deformation, or discoloration of the device and its components.
- Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and/or switch off the device in order to let the temperature stabilize to an optimal level.

MAINTENANCE AND USE

The Razer Aether Smart Lamp Pro requires minimum maintenance to keep it in optimum condition. Once a month we recommend you clean it using a soft cloth to prevent dirt buildup. Don't use soap or harsh cleaning agents.

7

FRANÇAIS

CE QUE VOUS ATTENDICE DONT VOUS AVEZ BESOIN

- Lampe intelligente pro Razer Aether
- Bloc d'alimentation
- Bouton de luminosité
- Bouton multifonction
- Bouton mode
- Corps de la lampe alimenté par Razer Chroma™ RGB
- Port d'alimentation
- Base en caoutchouc antidérapante

- Adaptateur secteur avec connecteurs interchangeables*
- Guide des informations importantes du produit

* Informations importantes sur le produit

CE DONT VOUS AVEZ BESOIN

EXIGENCES DU PRODUIT :

- Réseau Wi-Fi à 2,4 GHz (cryptage WPA/WPA2)
- PC/Ordinateur portable compatible Wi-Fi (Windows® 10 64 bits ou supérieur) ou appareil iOS/Android**

EXIGENCES DE L'APPLICATION RAZER HOME INTELLIGENTE

- iOS 13/Android 9.0Pie (ou version ultérieure) avec connectivité Bluetooth**
- Connexion Internet pour l'installation de l'application

EXIGENCES DE RAZER SYNAPSE :

- Windows® 10 64 bits (ou version ultérieure)
- Connexion Internet pour l'installation du logiciel

***Bluetooth requis pour la configuration initiale uniquement pour le premier configuration.**

VOUS SOUHAITEZ LE POUR VOUS

Vous avez entre les mains un appareil exceptionnel disposant d'une garantie limitée d'un an. Maximisez son potentiel et profitez d'avantages exclusifs Razer en vous enregistrant sur **razerid.razer.com**.

Vous avez une question ? Contactez l'équipe d'assistance Razer sur **support.razer.com** par téléphone, chat ou e-mail.

INSTALLATION

En utilisant la fiche CA appropriée à votre pays et fixée à l'adaptateur d'alimentation, connectez-la à l'adaptateur d'alimentation et branchez-la sur une prise de courant.

PERSONNALISATION DE LA LAMPE INTELLIGENTE

A. VIA MOBILE À L'AIDE DE L'APPLICATION RAZER MAISON INTELLIGENTE RAZER (RECOMMANDÉ)

1. Téléchargez l'application Maison intelligente Razer sur votre appareil mobile. Votre appareil mobile doit être connecté au même réseau Wi-Fi.
2. Lancez l'application et suivez les instructions à l'écran.

Lorsque vous êtes invité à sélectionner un réseau Wi-Fi, sélectionnez le même réseau que celui utilisé par votre appareil mobile. Votre appareil mobile doit être connecté au même réseau où se trouve la lampe intelligente.

Vous pouvez maintenant personnaliser la lampe intelligente pro Razer Aether via l'application Maison intelligente Razer.

B. VIA PC/ORDINATEUR PORTABLE EN UTILISANT L'APPLICATION RAZER SYNAPSE

1. Avant de continuer, assurez-vous d'avoir déjà configuré la lampe intelligente sur votre réseau à partir de l'application Maison intelligente Razer et avec votre PC ou ordinateur de même réseau que la lampe intelligente.
2. Rendez-vous sur razer.com/synapse pour télécharger et lancer Razer Synapse. Pour les utilisateurs existants, assurez-vous de mettre à jour Razer Synapse vers sa version la plus récente.

Il est conseillé d'un compte Razer ID est recommandé, mais facultatif. Vous pouvez continuer en tant qu'invité, mais vous ne serez pas en mesure de sauvegarder vos paramètres sur le cloud.

2. Appuyez sur le bouton d'alimentation pour allumer la lampe intelligente.
3. Dans Razer Synapse, cliquez sur **Ajouter un appareil domotique intelligent**, puis suivez les instructions à l'écran.
4. Mettez à jour lorsque vous y êtes invité et patientez pendant que Razer Synapse configure la lampe intelligente pro Razer Aether sur l'onglet de tableau de bord de Razer Synapse affiche maintenant la lampe intelligente pro Razer Aether sur la liste des appareils.

Vous pouvez maintenant personnaliser la lampe intelligente pro Razer Aether via Razer Synapse.

COMMENT FONCTIONNE LE MODE SYNCHRONISATION

Le mode synchronisation vous permet de synchroniser votre lampe intelligente Razer Aether avec d'autres appareils Razer compatibles. Vous pouvez synchroniser des appareils supplémentaires Razer Aether, ou même synchroniser des appareils Razer compatibles tels que Razer Synapse, Razer Chroma, Razer Fusion, Razer Stealth, Razer Blade, Razer Tomahawk, Razer Ornata, Razer Kraken, Razer Nommo, Razer Leviathan, Razer Seiren, Razer Mouse, Razer Keyboard, Razer Headset, Razer Speaker, Razer Mousepad, Razer Chroma Addressable Devices, Razer Chroma Addressable Devices, Razer Chroma Addressable Devices

Ipig Printing spec:
Printing Colour: 5C (CMYK & 369C) X 2C (K & 369C)
Open Size 840x280mm
Closed size: 140x140mm

13 14 15 16 17 **Cover Page**

IPIG Folding guideline

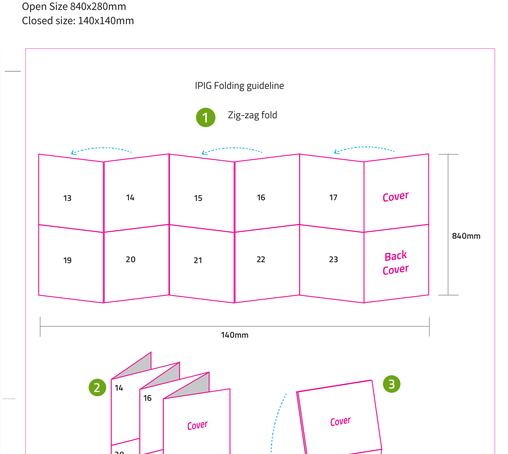

19 20 21 22 23 **Back Page**

RAZER

AETHER SMART LAMP PRO

RAZER.COM
© 2022 Razer Inc. and affiliated companies. All Rights Reserved.
IPIG-R253-0608-2205B-8F

#GoGreenwithRazer