

Table gaz ETG44i

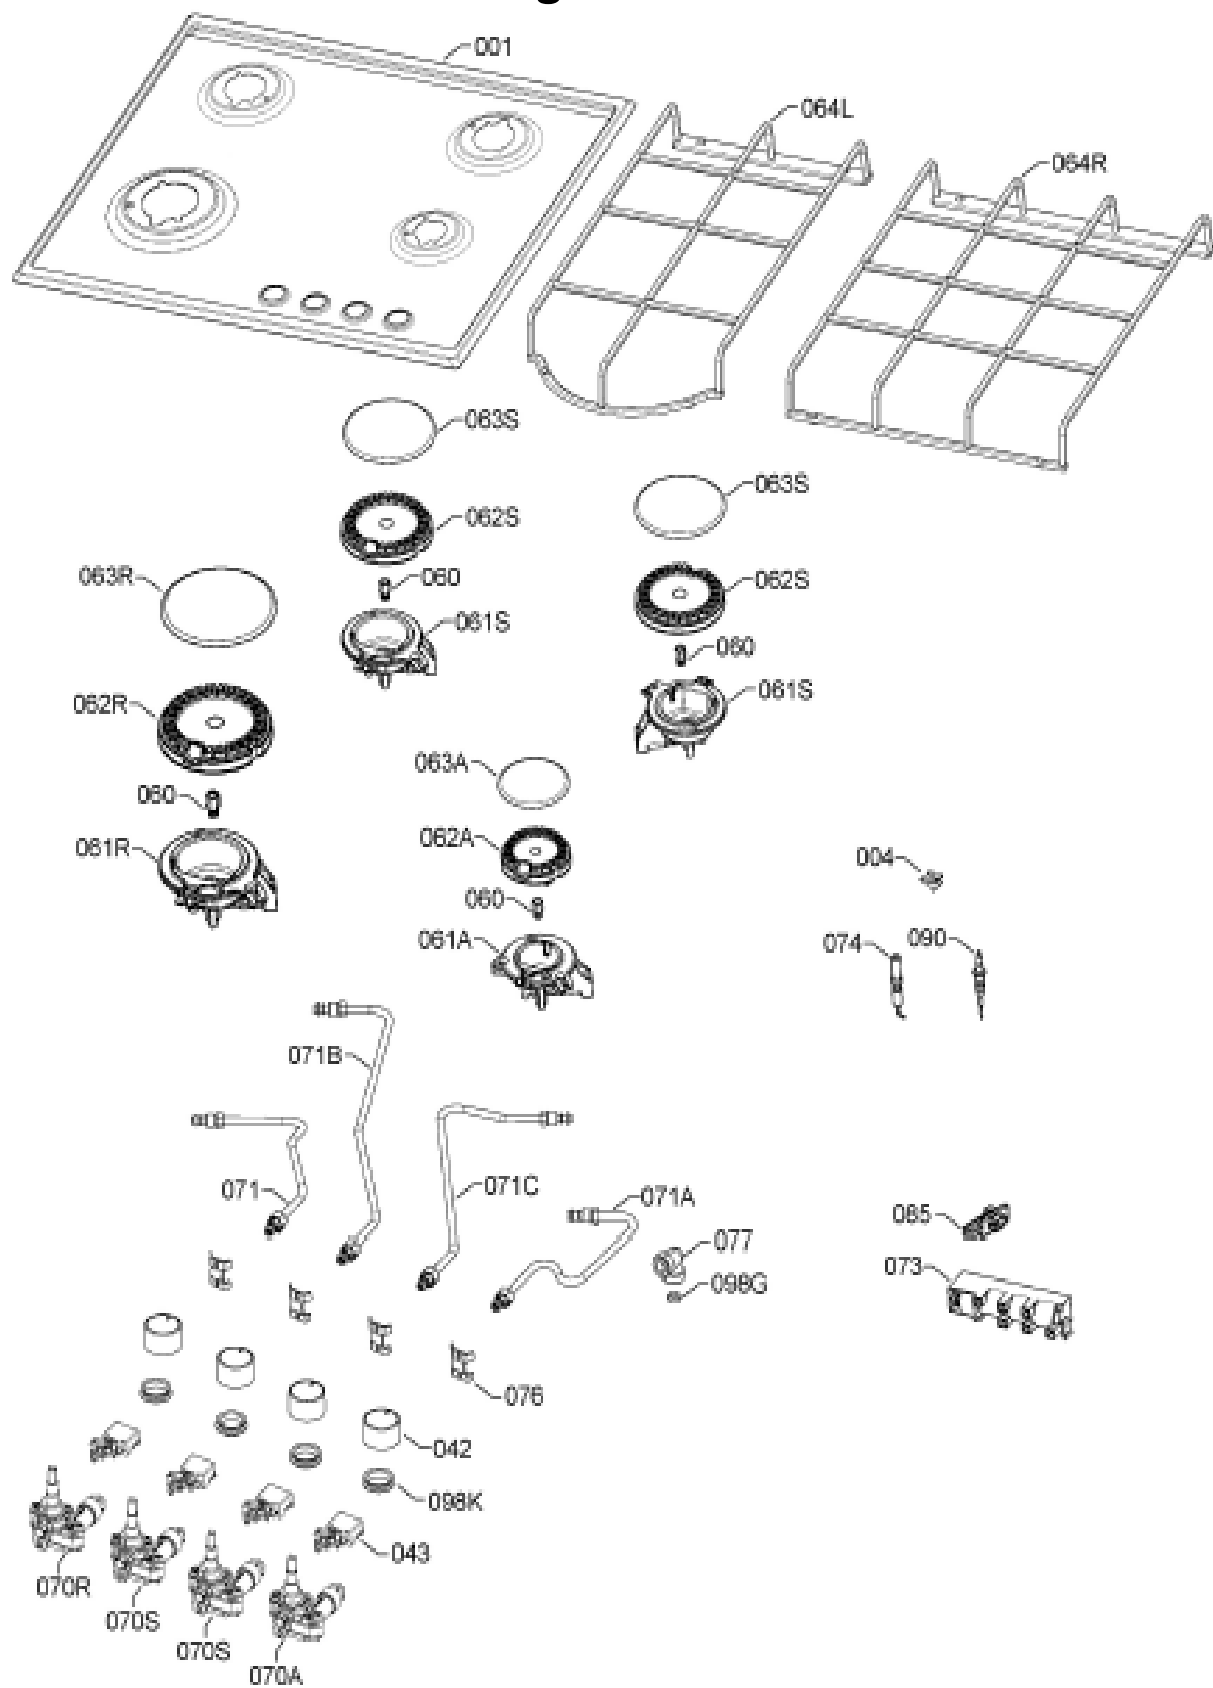




Table gaz ETG44i

Pcs	Part No.	Matrix	Description
001	140015091683	A	Work top, inox, Essentielb, 594x510mm
004	140033817010	A	Fixing spring, spark plug, thermocouple
042	3550196103	A	Knob, gas, inox
043	140054095033	A	Push button switch
060	4055171310	A	Nozzle set, GN, (G20-20mbar)
060	50273609003	A	Nozzle set, LPG, (G30-G31)
061A	140014838035	A	Burner body, auxiliary
061B	140014840031	A	Burner body, rapid
061S	140014839033	A	Burner body, semi-rapid
062A	3540138025	A	Crown, small burner
062B	3540136060	A	Crown, large burner
062S	3540137027	A	Crown, medium burner
063A	3540139064	A	Burner top, small, glossy black
063B	3540139049	A	Burner top, rapid, glossy black
063S	3540139056	A	Burner top, medium, glossy black
064L	8082689012	A	Grid, pan support, left
064R	8082691018	A	Grid, pan support, right
070A	3577306115	A	Gas tap, auxiliary, d=0.28 G20-20mbar
070B	3577306081	A	Gas tap, rapid, semi-rapid, d=0.42 G30-20mbar
070S	3577306107	A	Gas tap, semi-rapid, auxiliary, d=0.32 G20-20mbar
071	8082072011	A	Gas pipe, front, left
071A	80821115018	A	Gas pipe, front, right
071B	80821117014	A	Gas pipe, rear, left
071C	80821118012	A	Gas pipe, rear, right
073	3572079030	A	Impulse generator
074	140013306042	A	Spark plug, ignition, L=300
074	140013306075	A	Spark plug, ignition, L=500
076	3577334026	A	Sleeve, fixing, tap
077	3543249019	A	Pipe union, pipe elbow
085	3556230013	A	Cable grommet
090	3570563019	A	Thermocouple, CRKLI L=275mm
090	3570563068	A	Thermocouple, CRKLI L=450mm
098C	3565193012	A	Gasket, gas, elbow, 1/2"
098K	3556112013	A	Sealing, antioverflow gasket
999	3543294031	A	Bolt, gas tap, M4x17 T20
999	3548041049	A	Tie, fixing, work top, 6 pz.
999	3565189319	A	Mastic, seal, L=350
999	3570755706	A	Power cable
999	4055321154	A	Kit, Buffer, Grid, 12pcs.
999	50294267005	A	Screw pack, fixing, collar, 2, 8x13 - 24pz

Table gaz ETG44i

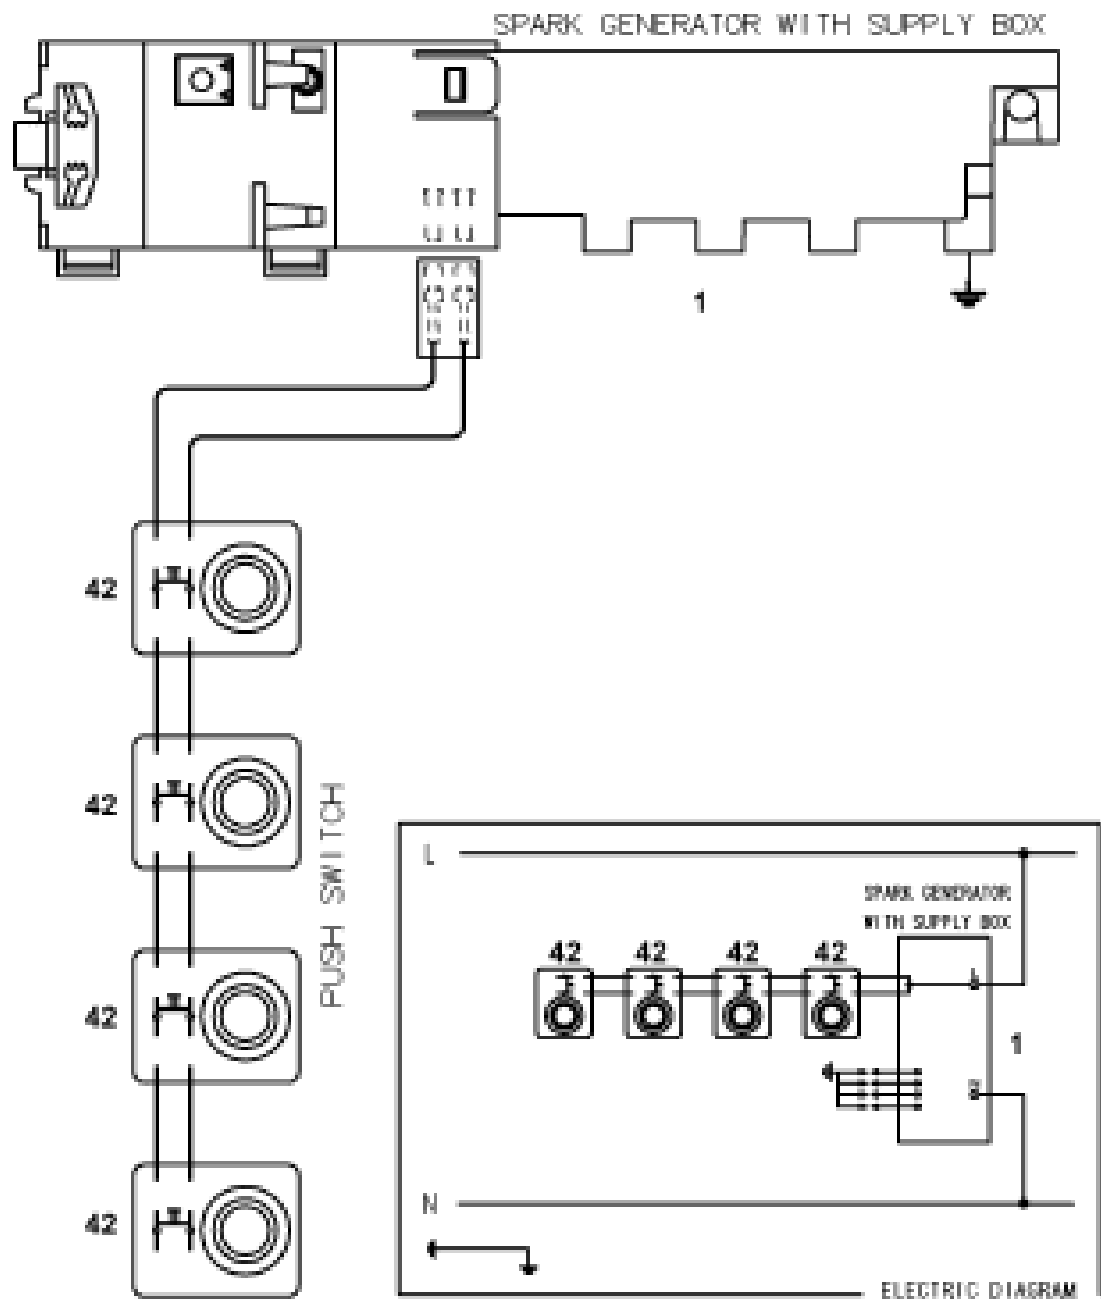


Table gaz ETG44i

1	Igniter	51
2	Ignitor supply	52
3	Hob supply	53
4	Meat grill	54
6	Electrical connection	55
5	Boiler	56
7	Rotary switch	57
8	Hot plates rotary switch	58
9	Connection	59
10	Probe connector	60
12	Anti-interference filter	61
11	HV-Capacitor	62
13	Diode	63
14	Anti-interference filter	64
15	Fuse	65
16	Main fuse	66
17	Door safety fuse	67
19	Switch	68
18	Microtherm-fuse	69
20	Oven lamp	70
21	Indicator lamp	71
22	Magnetron	72
23	Cover microswitch	73
24	Door microswitch	74
25	Convection micro-motor	75
26	Primary microswitch	76
27	Secondary microswitch	77
28	Monitor microswitch	78
29	Terminal board	79
30	Hot plate terminal block	80
31	Turnapit motor	81
32	Convection fan	82
33	Stirrer fan	83
34	Tangential cooling fan	84
35	Clock	85
36	Automatic hotplate	86
37	Normal hotplate	87
38	Quick plate	88
39	Socket for ignitor	89
40	Socket for probe	90
41	Programme selector	91
42	Pushbutton	92
43	Start pushbutton	93
44	Energy regulator double	94
45	Energy regulator	95
46	Quick energy regulator	96
47	Thermostat energy regulator	97
48	Steam regulator	98
49	Time relay, Thermo relay	99
50	Relay	100

Top element
Upper/grill heater
Circular element
Voltage drop
Grill heater
Lavin rock heater
Lower element
LED P.C.B.
Logic P.C.B.
Water level probe
Water level indicator
Connector for Residual Heat Indicator (Hotplates)
Grill pilot lamp
Mains on pilot lamp
Microwave pilot lamp
Hotplate pilot lamp
Thermostat pilot lamp
Steam pilot lamp
Steam release thermostat
Thermostat, Run of Cooling fan after use
Overheat protection thermostat
Thermostat, Baker (50°C - 300°C)
Boiler regeneration thermostat
Earth
Hob earth
Hot plate earth
Lampholder earth
Pipe earth
Transformer
H. V. transformer
Full tank indicator
Empty tank indicator
Cleaning cycle indicator
Power p.c.b.
Push button electr. module
Control P.C.B. (Display)
Oven temperature sensor
Control push buttons
Gas control device light
Electronic gas control device
Stroke magnet
Electrode
Burner block indicator pilot lamp
Energy quick regulator pilot lamp
Circuit board, microwave
Rotary selector
Logic microswitch
Radiant plate
Temperature limiter
Safety-switch

101	Power indicator
102	Grill cut-out microswitch
103	Ignition microswitch
104	Element for plate warmer
105	Keep warm pilot lamp
106	Thermostat-microswitch assembly
107	Door lock
108	Klixon, lock
109	Switch for Child Safety
110	Main switch
111	Hob pilot lamp
112	Oven pilot lamp
113	Program timer board
114	Touch-control board
115	Main valve
116	Burner valve
117	Burner
118	Thermocouple
119	Igniter plug
120	Motor earth
121	Heating element earth
122	Fan switch
123	Lamp switch

a	Orange
b	White
c	Blue
d	Light blue
e	Yellow/Green
f	Grey
g	Brown
h	Black
i	Pink
l	Red
m	Violet
o	Grey/Black
v	Green
y	Yellow

Conveyor heater	Conveyor heater
-----------------	-----------------