


BRAUN



90386425/VII-22

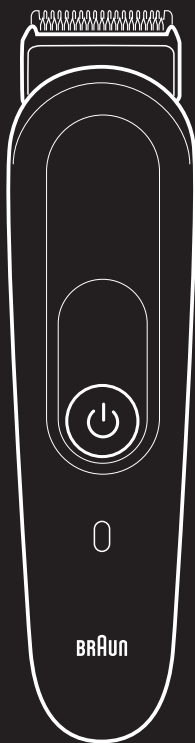

BRAUN

中文	12
English	16

Type 5544

产品型号: 5544


www.braun.com

www.service.braun.com

CN/EN

中文/英文

1a/1b 修剪器
刀头^{*}/^{**}

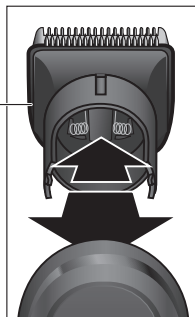

2 启动/关闭按钮

3 充电指示灯


○ 绿色: 充电中/满电

● 红色: 电池电量不足

4 电源线插孔



5 电源适配器^{**}

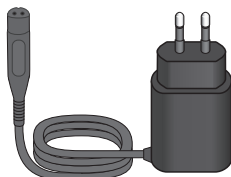

6 充电座^{*/**}



* 仅限部分销售型号


** 设计因销售型号而异



1a/1b 修剪器刀头**



1c/1d 精密修剪器刀头**

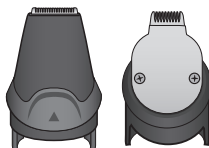

1e 迷你网膜剃须刀头*




1f 耳鼻毛修剪器刀头*



1g 美体修剪器刀头**



1h 美体刀头*

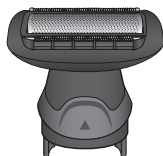

7 滑动短须
修剪梳**
(3-11毫米)



8 滑动长须
修剪梳**
(13-21毫米)



9 固定修剪梳
**
(1毫米)



10 固定修剪梳
**
(2毫米)



11 固定修剪梳
**
(3毫米)



12 眉毛修剪梳*



13 精密修剪梳*










14 灵敏修剪梳*




15 渐变短须修剪梳*
(1-5毫米/5-1毫米)







16 渐变长须修剪梳*
(5-9毫米/9-5毫米)

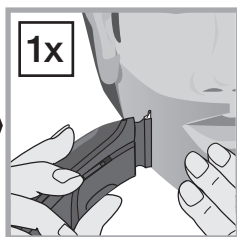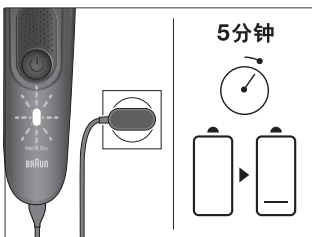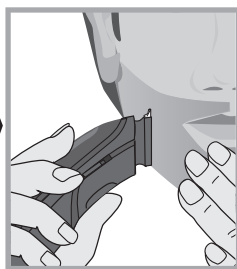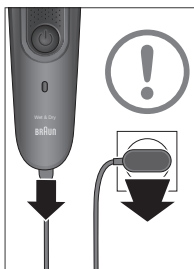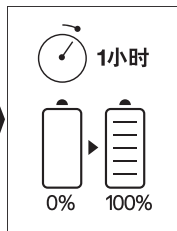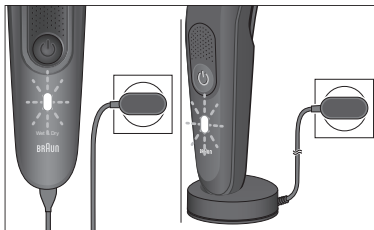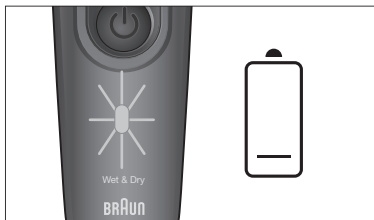


1a - 1h

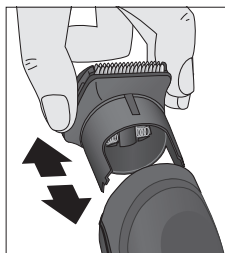


7/8

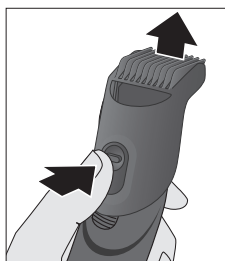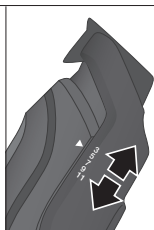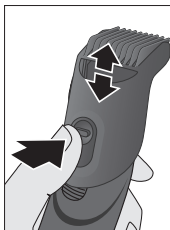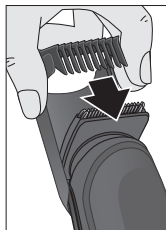


9 - 16

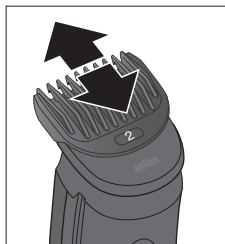



1a/1b

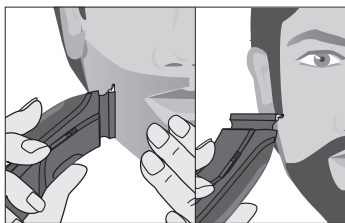


7/8

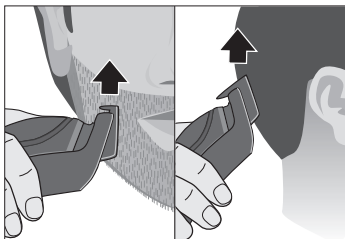



9/10/11

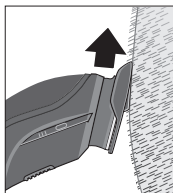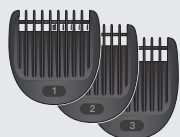


12

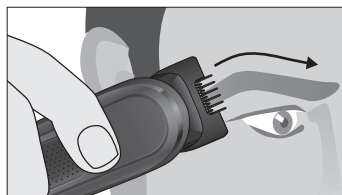

15

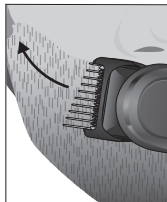
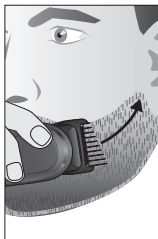


5 - 1 毫米

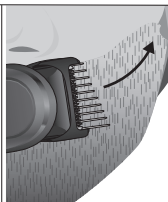


1 - 5 毫米

16

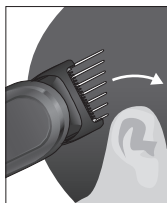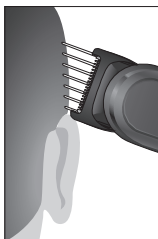


9 - 5 毫米


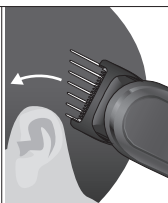


5 - 9 毫米



1c/1d/1e

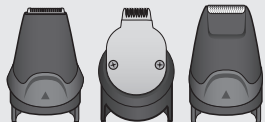


13+1a/1b

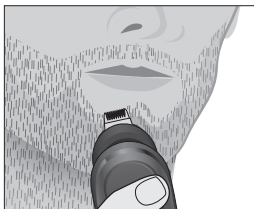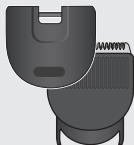

1f

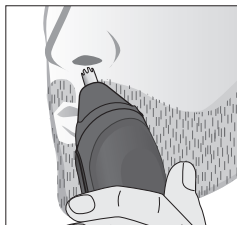

14 + 1a/1b

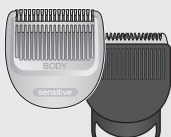



1g













14 + 1g



1h

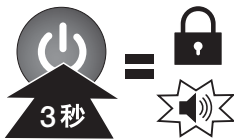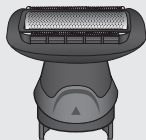

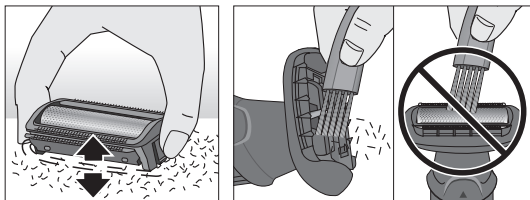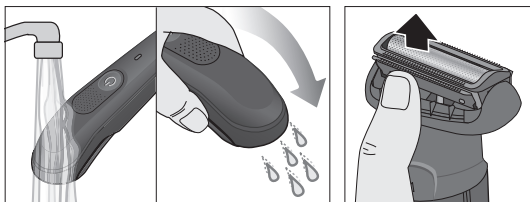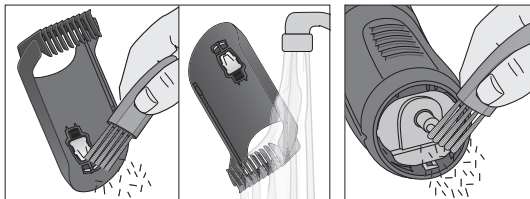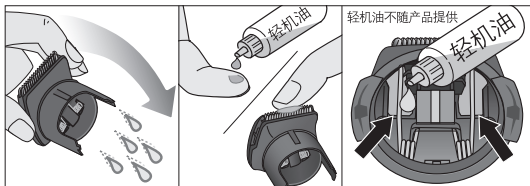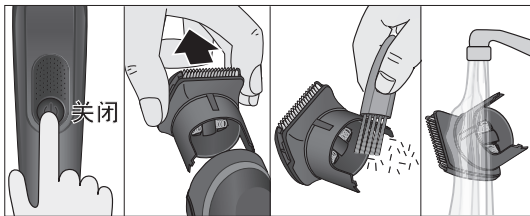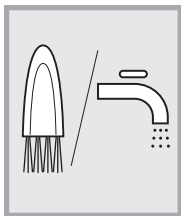

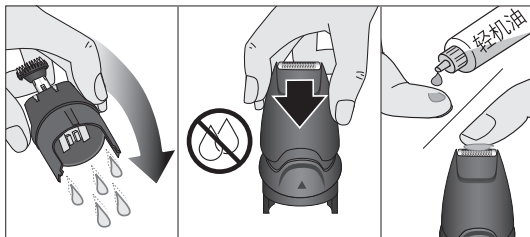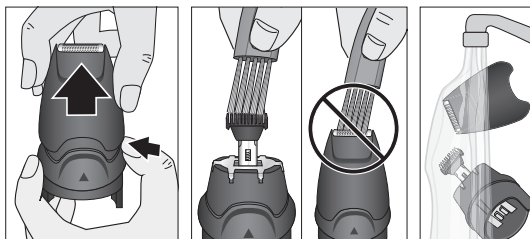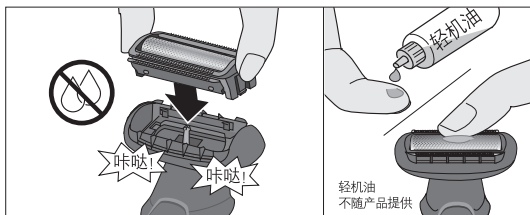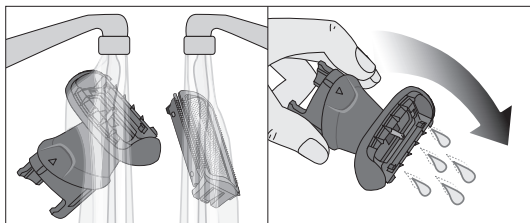

中文

使用产品前请仔细阅读使用说明书，说明书中含有安全使用信息。并请妥善保管，以备日后查阅。

警告



本产品可在洗澡或淋浴时使用。为安全起见，本产品只能在断开电源线后使用。

警告：将手持部分与电源适配器或电源软线分开后，才能在水中清洗手持部分。

本产品提供的专用电源线带有集成安全低电压适配器。

警告：请勿更改或改装电源适配器及电源线的任何部件，否则可能有触电危险。

警告：只能使用本器具提供的可拆卸供电单元对电池充电。

警告：如果产品标注  492 标志，则仅使用型号为 492-XXXX 的电源适配器。

警告：网膜刀头/修剪器/修剪梳/电源适配器/电源线损坏时，请勿使用本产品。

警告：保持器具干燥。

切勿擅自拆开本产品！

本产品所含电池不可更换。

年满8周岁或以上的儿童、以及行动不便、感官或心智障碍、缺乏经验和知识的人，应在监护人的看管下使用

或由监护人给予产品安全使用指导使其充分理解可能的伤害。

若本产品配有长须修剪器, 在无人看管情况下, 请勿让三岁以下的儿童使用该长须修剪器。

请勿让儿童将本产品当作玩具。请勿让儿童清洁和维护本产品, 除非他们有人看管。

仅限家庭使用。

警告: 如果有轻机油瓶, 请放置在儿童不能触及的地方, 切勿吞食, 切勿使其接触到眼睛。请妥善处理空瓶。

警告

警告: 保持电源适配器和充电座干燥。

请在敏感区域使用安装修剪梳的修剪器刀头/美体修剪器刀头。

请在干燥的皮肤上使用美体刀头。请勿在敏感区域使用。

请勿将耳鼻毛修剪器刀头伸入耳鼻5毫米以上。

重要须知

充电时的理想环境温度为5°C到35°C。

温度过高或者过低可能会导致无法正确充电或根本无法充电。修剪时的理想环境温度为15°C到35°C。请勿将多功能理容器长时间置于超过50°C以上的环境中。

为了保证附件正常使用, 可定期在修剪器或网膜上滴一些轻机油 (不随产品提供)。

组件说明

- 1a/1b 修剪器刀头*/**
- 1c/1d 精密修剪器刀头*/**
 - 1e 迷你网膜剃须刀头*
 - 1f 耳鼻毛修剪器刀头*
 - 1g 美体修剪器刀头*/**
 - 1h 美体刀头*
- 2 启动/关闭按钮
- 3 充电指示灯
 - 绿色: 充电中/满电
 - 红色: 电池电量不足
- 4 电源线插孔
- 5 电源适配器**
- 6 充电座*/**
- 7 滑动短须修剪梳 (3-11毫米) */**
- 8 滑动长须修剪梳 (13-21毫米) */**
- 9 固定修剪梳 (1毫米) */**
- 10 固定修剪梳 (2毫米) */**
- 11 固定修剪梳 (3毫米) */**
- 12 眉毛修剪梳*
- 13 精密修剪梳*
- 14 灵敏修剪梳*
- 15 渐变短须修剪梳 (1-5/5-1毫米) *
- 16 渐变长须修剪梳 (5-9/9-5毫米) *

* 仅限部分销售型号

**设计因销售型号而异

电气规格详见专用电源线标示。

环境说明


本产品内包含可充电电池和/或可回收电子部件。为了保护环境，弃置产品时请勿与生活垃圾一起丢弃。

当产品达到使用寿命后，弃置产品时请交至国家指定的回收站。



丢弃理容器时，请将电池取出，取出前请确认电池电量已完全耗尽。

请按图示步骤取出电池，如果您决定废弃理容器又不想自行分解机器取出电池，您也可以将理容器送到博朗服务中心，中心的员工会帮您取出电池并以环保的方式处理它。

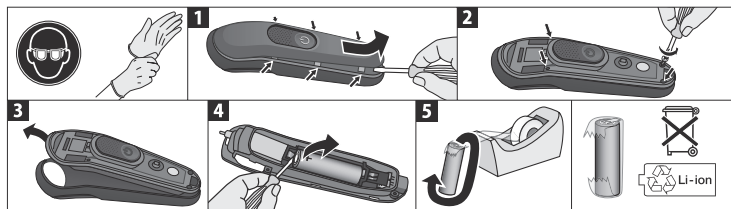

声功率级噪声为63dB(A)

请勿分解取出的充电电池，可能引起火灾、触电及受伤。

本说明可能会在不作事先通知的情况下作出修改。

English

Read these instructions completely, they contain safety information. Keep them for future reference.

WARNINGS



This appliance is suitable for use in a bathtub or shower. **For safety reasons this appliance can only be operated cordless.**

Detach the appliance from the power supply before using it with water.

The appliance is provided with a special cord set with integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it. Otherwise there is a risk of electric shock.

Only use the special cord set provided with your appliance.

If the appliance is marked  492, you can use it with any Braun power supply 492-XXXX.

Never use the appliance with any damaged accessory like trimmers, combs or special cord set.

Do not open the appliance!

This appliance contains batteries that are non-replaceable.

This appliance can be used by children aged from 8 years and persons with reduced physical, sensory or mental

capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

If the appliance is provided with a hair clipping attachment, it can be used for hair clipping purpose by children aged from 3 years under supervision.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

For household use only.

Caution

Keep power supply and charging stand dry.

The trimmer head / body trimmer head must only be used with comb attachment in delicate areas.

The body groomer head must only be used on dry skin and not in delicate areas.

Avoid introducing the ear & nose trimmer head more than 5 mm into nose or ear.

Important

Recommended ambient temperature for charging is 5 °C to 35 °C.

The battery may not charge properly or at all under extreme low or high temperatures. Recommended

ambient temperature for trimming is 15 °C to 35 °C. Do not expose the appliance to temperatures higher than 50 °C for extended periods of time.

To keep the attachments working properly, oil the trimmer and the foils with a drop of light machine oil (not included) regularly.

Description

- 1a/1b Trimmer head^{*/**}
- 1c/1d Detailed trimmer head^{*/**}
- 1e Minifoil shaver head^{*}
- 1f Ear & Nose trimmer head^{*}
- 1g Body trimmer head^{*/**}
- 1h Body groomer head^{*}
- 2 On/off button
- 3 Charging indicator
 - green: charging / battery charged
 - red: battery is running low
- 4 Power socket
- 5 Power supply^{**}
- 6 Charging stand^{*/**}
- 7 Sliding beard comb (3-11mm)^{*/**}
- 8 Sliding hair comb (13-21mm)^{*/**}
- 9 Fix comb (1mm)^{*/**}
- 10 Fix comb (2mm)^{*/**}
- 11 Fix comb (3mm)^{*/**}
- 12 Eyebrow comb^{*}

- 13 Detail comb*
- 14 Sensitive comb*
- 15 Fading beard combs (1-5 / 5-1 mm)*
- 16 Fading hair combs (5-9 / 9-5 mm)*

* not with all models

** design can differ

For electric specifications, see printing on the special cord set.

Environmental notice

Product contains batteries and/or recyclable electric waste. For environment protection do not dispose of in household waste, but for recycling take to electric waste collection points provided in your country.



Subject to change without notice.

Guarantee

We grant a 2-year guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate any defects in the appliance resulting from faults in materials or workmanship, free of charge either by repairing or replacing the complete appliance at our discretion.

Depending on availability replacement might result in a different color or an equivalent model.

This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor. This guarantee does not cover: damage due to improper use, normal wear and tear (e.g. shaver foil or cutter block) as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used. To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Customer Service Centre (address information available online at www.service.braun.com).

For UK only:

This guarantee in no way affects your rights under statutory law.

保修

本产品保修期为购买之日起两年。保修期内凡因生产过程导致的各种瑕疵本公司将视情况更换零件或整个产品。

根据现有库存, 更换的产品可能颜色不同或者为其他同等机型。

本保修条款适用于所有博朗公司或其他授权经销商销售本产品的国家。

上述保修承诺不适用于下述情形:

——使用不当造成的产品损坏 (包括但不限于使用错误的电流、电压、将产品插入不合适的插座及其他人为损坏)。

——网膜和刀头磨损。

——对正常使用影响不大的瑕疵。

一旦由未获授权人员修理、或换用非博朗原装零配件, 本保修立即终止。

保修期内提供的服务不影响保修期的终止。

保修期中替换的零件或整机的保修服务, 与本产品的保修期同时终止。

为了保证在保修期间获得服务, 请携带或者寄送完整设备和相应销售凭证至博朗授权的售后服务部

(地址信息可登录www.service.braun.com在线查询)。

多功能理容器

产品型号：5544

执行标准：GB 4706.1,GB 4706.9

输入：12V ===,0.4A

www.braun.com

广州宝洁有限公司

广州市经济技术开发区滨河路一号

邮编：510730

Braun是博朗有限两合公司(BRAUN GMBH)的注册商标。

热线：4008333010 / 微信：pgcrcare

电源适配器输入：100-240V~, 7W

BRAUN

产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴 二苯醚 (PBDE)
刀身	×	○	○	○	○	○
清洁中心 (如适用)	×	○	×	○	○	○
充电座 (如适用)	×	○	○	○	○	○
充电器 (如适用)	×	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。

○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

×：表示该有害物质至少在该部件的某一均质材料中的含量超出了GB/T 26572规定的限量要求。

BRUN 最新售后维修站地址

邮编	城市	公司名称	地址	联系电话
北区				
200085	上海	上海开呈家电维修服务有限公司	上海市黄浦区瑞金南路345弄1号楼6B01室	021-63566755/66329466
201100	上海	上海千捷家电有限公司	上海市闵行区雅致路31弄1号105室	021-64122533
100078	北京	北京盛侨家电维修服务中心	北京市丰台区方庄芳群园2区6号楼金芳公寓408室	010-67698025/67630617
300022	天津	天津市大东电器维修有限公司	天津市和平区河北路50号信德大厦908-2	022-27120168/27120170
110011	沈阳	沈阳市沈河区德明电器维修中心	沈阳市沈河区承德路36-1	024-24870309
150020	哈尔滨	哈尔滨完成晖家用电器有限公司	哈尔滨市道外区南勋街18号	0451-88940125
116021	大连	大连中服电子技术服务中心	辽宁省大连市沙河口区西南路800-2号	0411-86841988
130021	长春	长春圣炎电子产品有限公司	长春市朝阳区惠民路北胡同49号	0431-85676646
266071	青岛	市南区洪双嘉电子商行	青岛市市南区宁夏路249-2号	0532-85977910
050000	石家庄	河北安森钟表维修有限公司	石家庄市中山西路108号华润万象城C座2518室	0311-89891170
310016	杭州	杭州中侨家电维修服务有限公司	杭州市采荷路10号	0571-86047438
230001	合肥	合肥市包河区国升电器维修安装服务部	安徽省合肥市经开区青龙潭路与紫云路交叉口长安萨尔斯堡商辅9栋107	0551-63682143/688932143
450000	郑州	郑州百川电器技术有限公司	郑州市北下街79号	0371-66964036
210003	南京	南京博伊华电子电器经营部	南京市中山北路223号建达大厦409室	025-83420092
214031	无锡	无锡市松信环境科技有限公司	无锡市五爱北路27号	0510-82729805
400020	重庆	江北区中侨家电维修部	重庆市江北区建新南路18号城市领地A栋附2楼77号门市	15696126296/023-63527117
南区				
201112	上海	上海馨美电器有限公司	上海市闵行区浦锦路2049弄(万科VMO)39号301室	021-54475808/021-64606449/ 021-20916862
213001	常州	常州市金博家电经营部	常州市天宁区迎宾路江南佳园4-10	0519-88836628
226001	南通	崇川区明瑞电器维修服务部	南通市南川四通明花苑6幢106店面	0513-96889688/85105088
315040	宁波	宁波市江东明楼南城家电维修部	宁波市百丈东路882号万金大厦1306室	0574-87774444/87771344
325029	温州	温州市声像技术服务公司	温州市鹿城区宽带路14号-8	0577-88860706
510600	广州	广州市博健电器有限公司	广州市越秀区五羊新城春风路E12栋首层博朗	020-87396165/87396166
518028	深圳	深圳市顺电连锁股份有限公司	广东省深圳市罗湖区深南东路2102号振华大厦2楼维修部	0755-83286255或83286261
650051	昆明	昆明松凯科技有限公司	昆明市环城北路233号城市之光A1301	0871-63945557
430015	武汉	武汉市江岸区兆利达家电维修中心	武汉市江岸区唐家墩路203号附26号门面	027-85730517/85790611
610017	成都	成都翔驰泰达电子产品有限公司	四川省成都市青羊区大安东路57号附1-3号	028-86944135
350001	福州	福州福春电器维修服务有限公司	福州市晋安区岳峰镇桃花山巷94号	0591-87582122
361003	厦门	厦门市思明区新警声电子技术服务部	厦门后埭溪路248号之6、7、8号	0592-5170118
330003	南昌	南昌市西湖区海洋电器服务部	南昌市永叔路6号	0791-86215790/86263831
530001	南宁	南宁市南方家电维修中心	广西南宁市唐山路29号首层	0771-3118895/3907787

上述售后服务部地址确定于2022年5月,可能有不定期更新。
如有疑问,请咨询客户服务热线: 4008333010/ 微信: pgccare

BRAUN



www.service.braun.com