


PHILIPS
hue

Warnings
Always make sure the luminaire is detached from the mains socket.
Always make sure the DC cable is detached from the power supply.
Staring at the operating light source may cause eye injury.

#	Disassembly Instruction	Tools needed
a	Unscrew the Screws [1]. Pull the tube [2] out of the base [3] and unplug the flat wire from the light source.	Screwdriver T6
b	Pull the diffuser [4] out of the tube [2] and remove the light source* [5].	-
c	Unscrew the 3 screws [6] and remove the foot [7] from the base [3].	Screwdriver T20
d	Unscrew [10] the Hue Connect [8] and Control gear [9]. Loosen the wires from the Hue Connect.	Screwdriver T10 / Wago Tool #2065
e	Loosen the wires from the cordset [11] and the Control gear [9]. Pull the cordset out of the frame [12] and foot [7].	-

#	COMPONENT	QTY	SKU	Color	Country
1	Screws	2	915005987101	White	EU
2	Tube	1	915005987201	Black	EU
3	Base	1	915005987501	White	NAM
4	Diffuser	1	915005987601	Black	NAM
5	Light Source	1	915005987701	White	UK
6	Screws	3	915005987801	Black	UK
7	Foot	1	929003103601	Black	AUNZ
8	Hue Connect	1	929003479701	Oak	EU
9	Control gear	1	929003516101	Oak	UK
10	Screws	2	929003479901	Oak	NAM
11	Cordset	1			
12	Frame	1			

★
FOR LIGHT SOURCE-LED STRIP REMOVAL PLEASE SEE DOCUMENT
"200604 - Instruction LED Strip Removal Procedure"

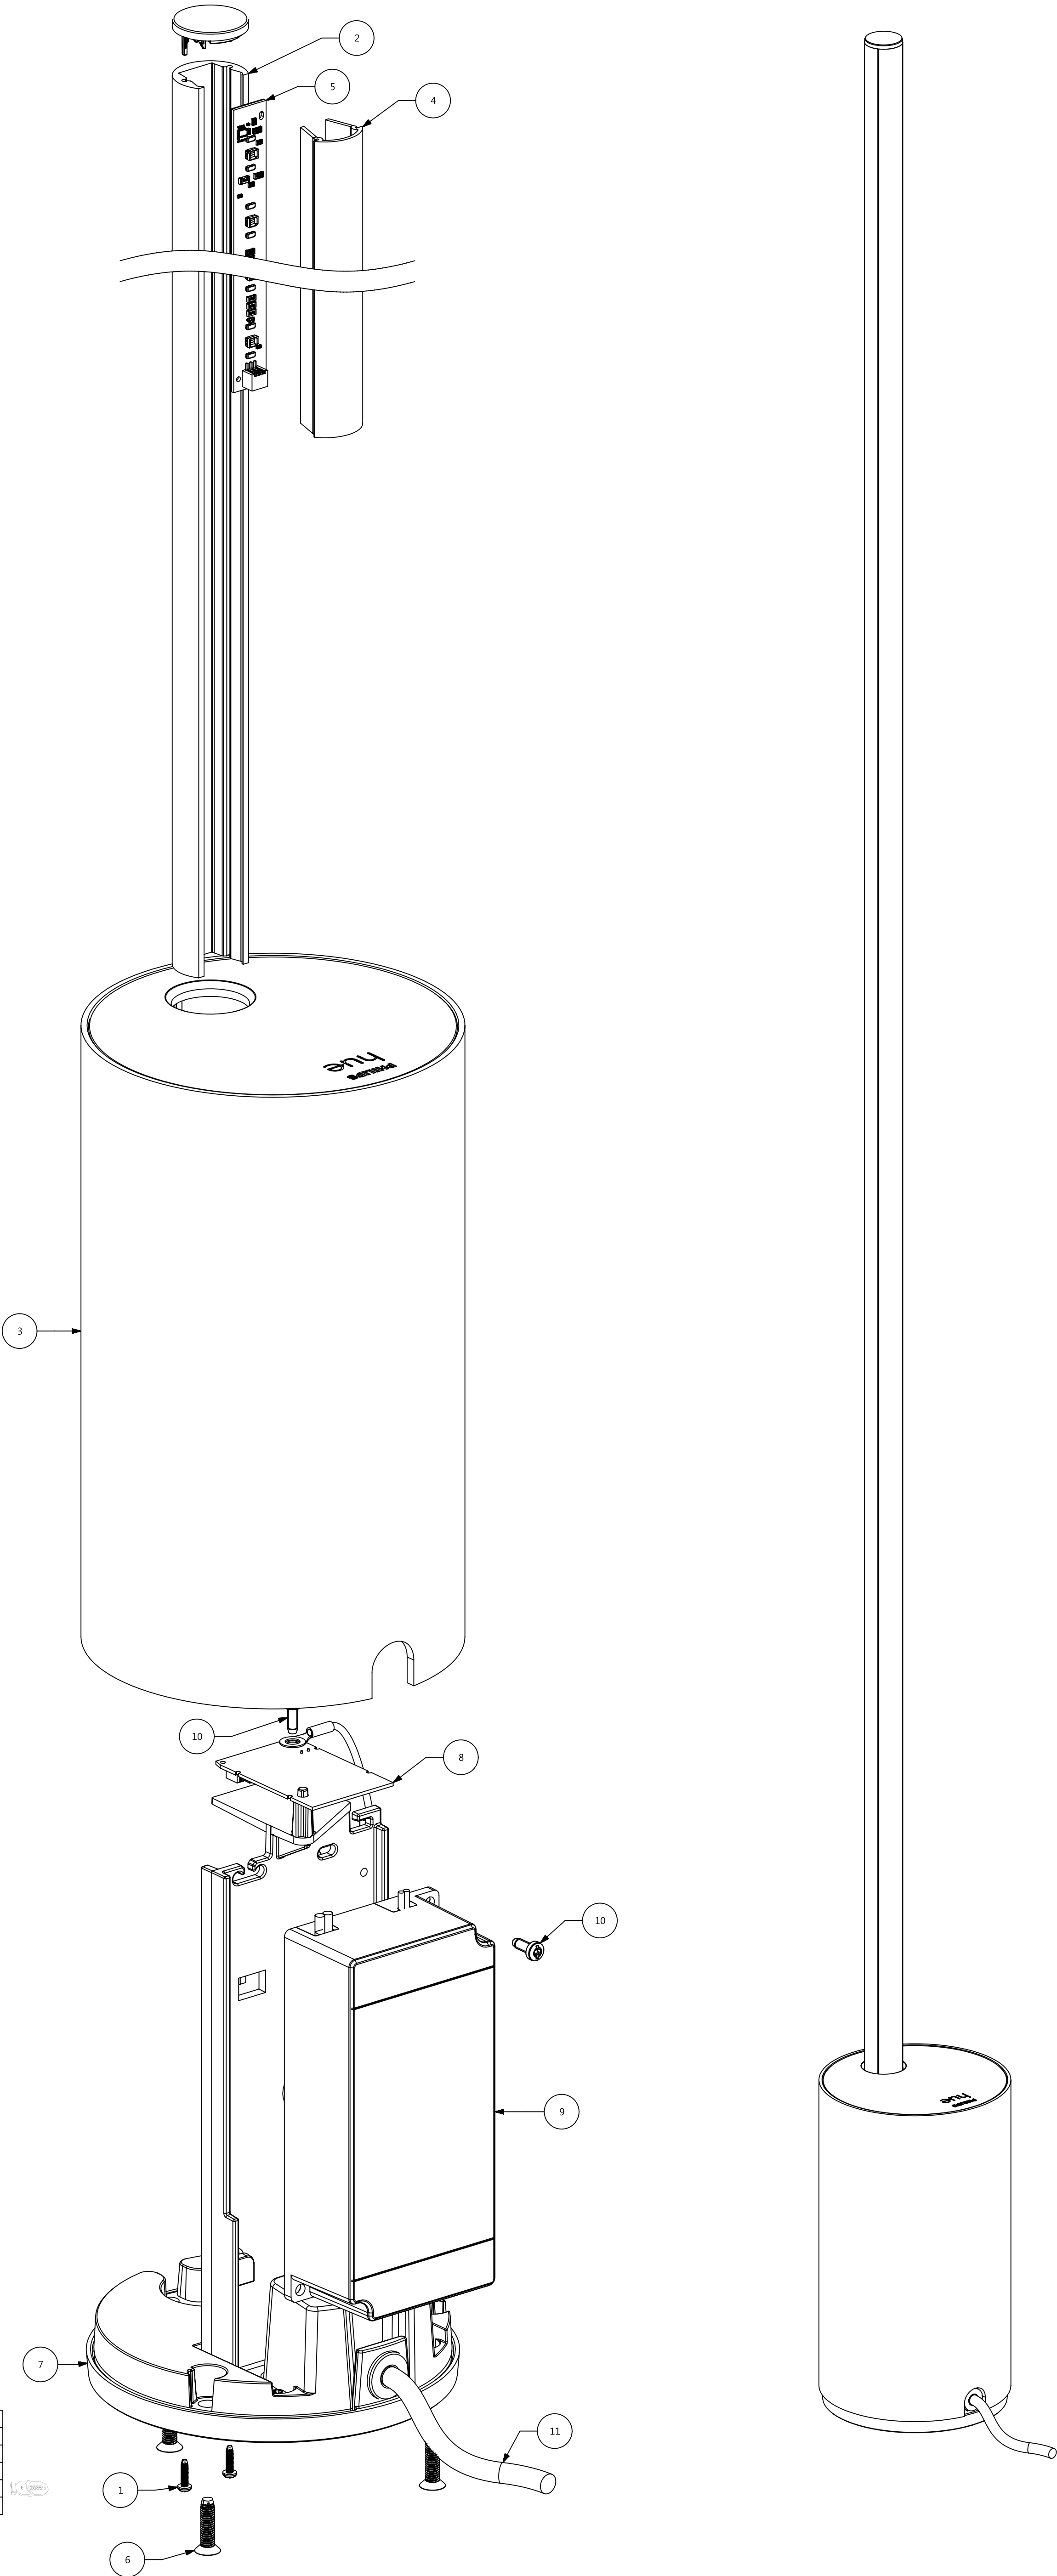

		ISO1302 ISO12083	TOLERANCES UNLESS OTHERWISE STATED		 ISO 1101/5459		DIMENSIONS CRITICAL TO PART QUALITY ARE INDICATED BY AN OBLONG AROUND A DIMENSION AND A PREFIX THAT IS INDICATING THE DEGREE OF CRITICALITY SC (C) OR CC (C)	
Ra in µm			DIMENSION ± mm	ANGLE ± °	TOLERANCE ACCORDING TO NORM			
GENERAL ROUGHNESS	UNIT	MATERIAL						
	MM							
SCALE	TREATMENT			ORDER NO.		QUANT		
1:1								
STATUS	DESCRIPTION				DESIGN ID		02 2022-04-19	
Gradient Floor				DOC 12NC 442295217682				
NAME	Ma W	LOCAL PART ID	442295215218	SH	1	SH 511	A1-P	
CHECKED	DATE		2020-03-19	PROPERTY OF: © 2020 Signify Holding				