




COMMAND SERIES MC3

QUICK START GUIDE

**IMPORTANT
READ BEFORE USING**


CERTIFICATION MODEL:
MOUSE: MAAB0019

PACKAGE CONTENTS

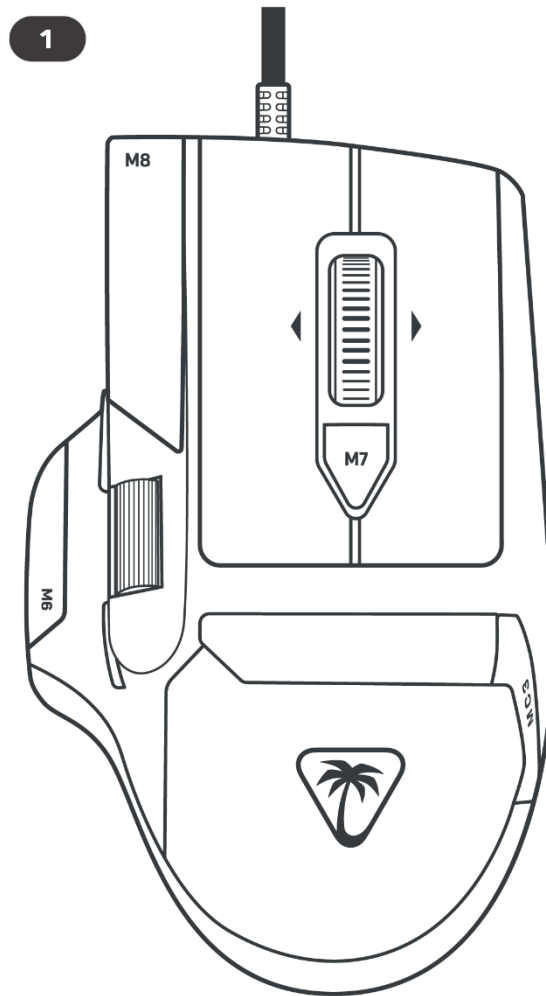

1 – COMMAND SERIES MC3

DEFAULT BUTTON ASSIGNMENT

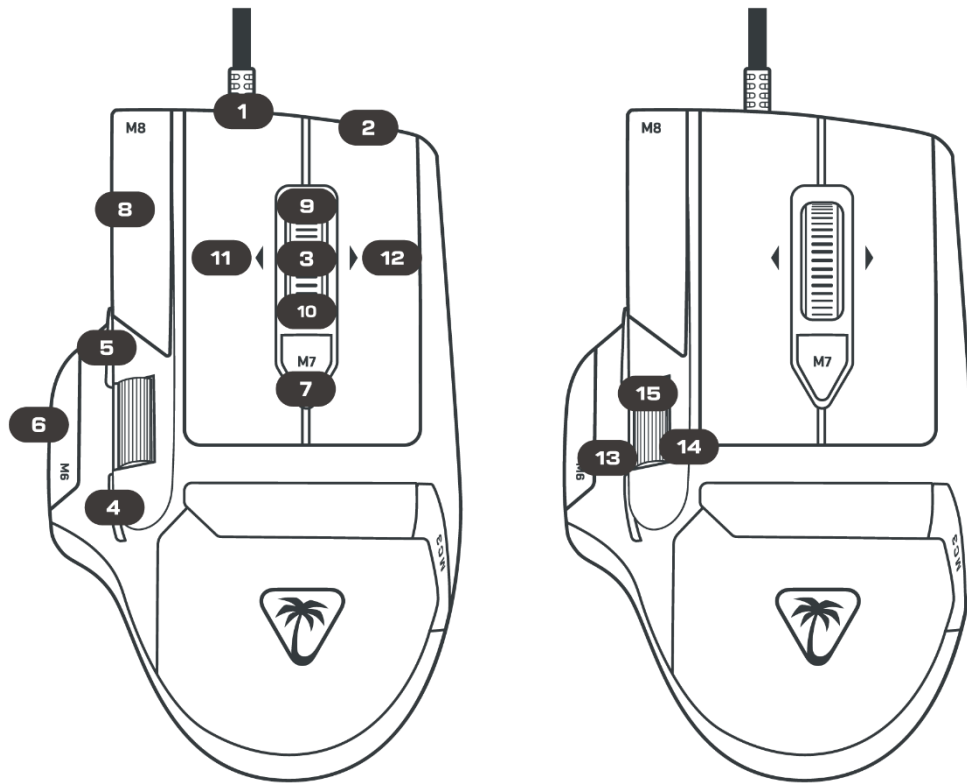


- 1 = Left click
- 2 = Right click
- 3 = Middle mouse button
- 4 = Browser backward
- 5 = Browser forward
- 6 = Easy-shift
- 7 = DPI cycle
- 8 = Profile cycle
- 9 = Scroll up
- 10 = Scroll down
- 11 = Scroll left
- 12 = Scroll right
- 13 = Previous track
- 14 = Next track
- 15 = Play/pause


Note: Button functions can be customized via Swarm II software.

SETUP

1

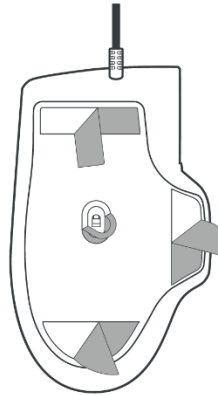


2

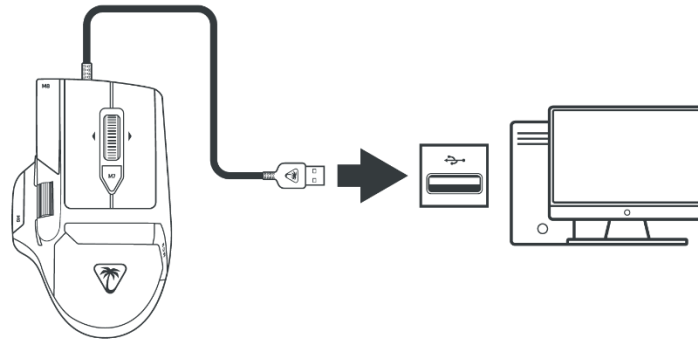


3

4

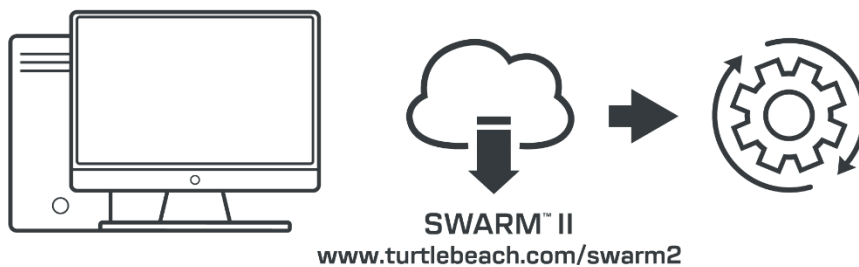

1. Remove the protective plastic film from the mouse feet.
2. Plug the USB-A into any free USB port.
3. Navigate to www.turtlebeach.com/swarm2 and download the latest driver software.
4. Complete the installation to get access to all software features and setup.

LED INDICATION

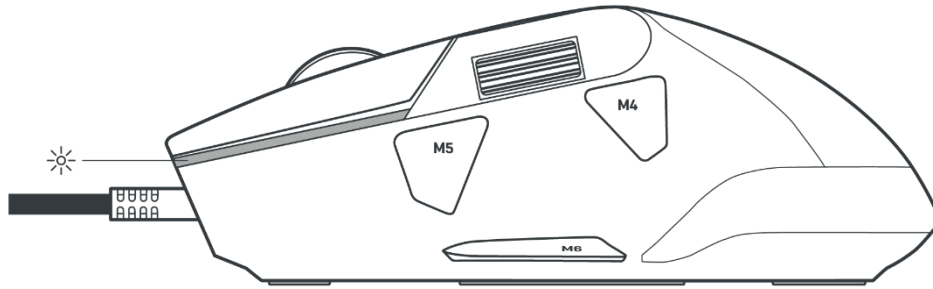

- Once the mouse is plugged in, pressing the DPI button will change the DPI and show a corresponding color on the indicator LED for 2 seconds. The color is shown as below:
 - 1st stage Red (default DPI value: 400)
 - 2nd stage Green (default DPI value: 800)
 - 3rd stage Cyan (default DPI value: 1200)
 - 4th stage Blue (default DPI value: 1600)
 - 5th stage Pink (default DPI value: 3200)
- The number of active DPI stages on your mouse can be changed in the driver software, along with the DPI value for each stage.

TECHNICAL SPECIFICATION

- Connectivity: USB-A
- Sensor: Owl-Eye™ 30k Optical, glass surface compatible
- Min/Max DPI: 50 / 30,000
- IPS Tracking Speed: 750
- USB Report Rate: 1,000 Hz
- Acceleration: 70 G
- On-Board Memory: Yes
- Software: Swarm II
- Weight: 85g

SYSTEM REQUIREMENTS

- Windows® 10 and up
- USB 2.0 and higher
- Internet connection (for drive software)