

# LIVE STREAMER NEXUS

## User Manual

Technical Specifications	2
System Requirements	3
Hardware I/O	3
Connections	4
Next-Gen console	4
Nintendo Switch	4
Dual PC	5
Dual PC (With in-game Chat)	5
Download NEXUS app	6
Windows	6
macOS	7
NEXUS Setup	8
AVerMedia Account Setup	8
NEXUS Log in	9
Windows 10 Audio Routing Settings	9
macOS Audio Routing Settings	12
Hardware settings	15
Audio Mixer settings	17
Microphone Settings	17
Single Mix Settings	20
Dual Mix Settings	23
Control Panel Setup (Hotkeys & Widgets)	27
OBS Setup	30
OBS Websocket Plugin	31
For Windows	31
For macOS	31
SLOBS Setup	33
SLOBS Token Plugin	34
Hotkey & Widget Profiles	35
Audio Profiles	36

## Technical Specifications

Interface	USB 2.0, type B (Driver Required)
Mic In	XLR (Balanced) / 6.3 mm (Single-end) x1
Console In	Optical In (Toslink) x1
Computer Inputs	Digital Tracks x3
Headphone Out and Line Out	3.5mm TRS, Stereo
Output Mix	Creator Mix / Audience Mix
Sampling Rate	Up to 96kHz, 24 bits
Microphone Effect	Noise Gate, Reverb, Compressor, Equalizer
Frequency Response	10Hz to 20kHz
Dynamic Response	114dB
Screen Panel	5" IPS Touch Panel
Widgets	Interactive & Customizable Grid
Rotational Encoders	6 (Physical inputs x3 / Digital inputs x3)
Lighting	RGB
Power Switch	Yes
Power Inputs	Standard 12V DC, Center Negative, 1.5A
Power Consumption	< 7W
Dimensions	Without Stand: 21.7 x 14.5 x 6.1 cm (5.7 x 8.5 x 2.4 in) With Stand: 21.7 x 14.5 x 9.4 cm (5.7 x 8.5 x 3.7 in)
Weight	Without Stand: 0.699 kg (24.66 oz) With Stand: 0.843 kg (29.74 oz)

### Note:


- Phantom Power +48V, switchable via NEXUS APP

## System Requirements

Windows: Windows 10 20H2 (64bit) and above


Mac: macOS 10.15 and above

## Hardware I/O

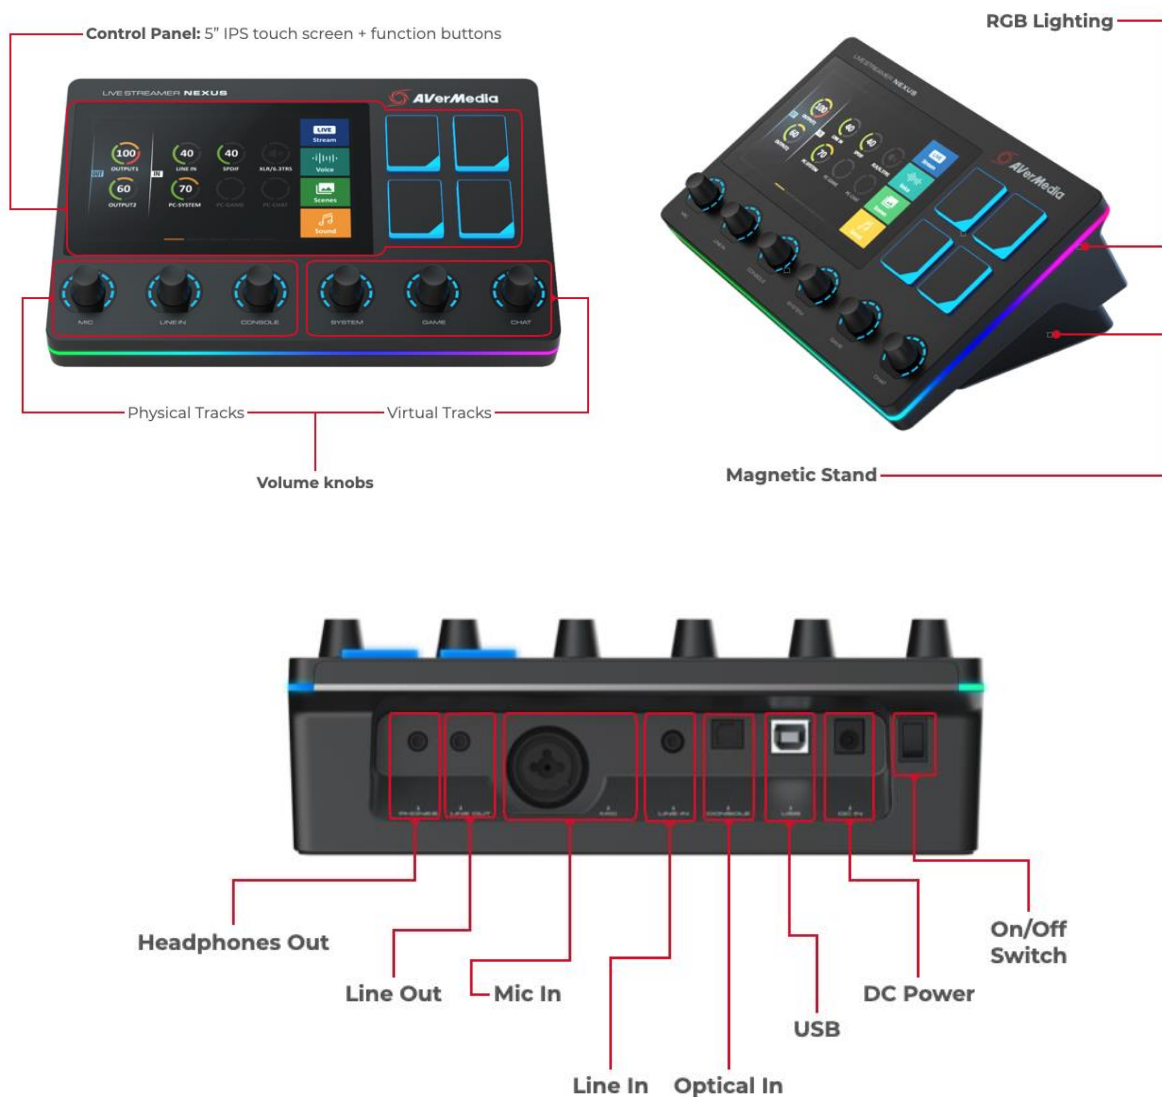

## Connections

### Next-Gen console<sup>1</sup>

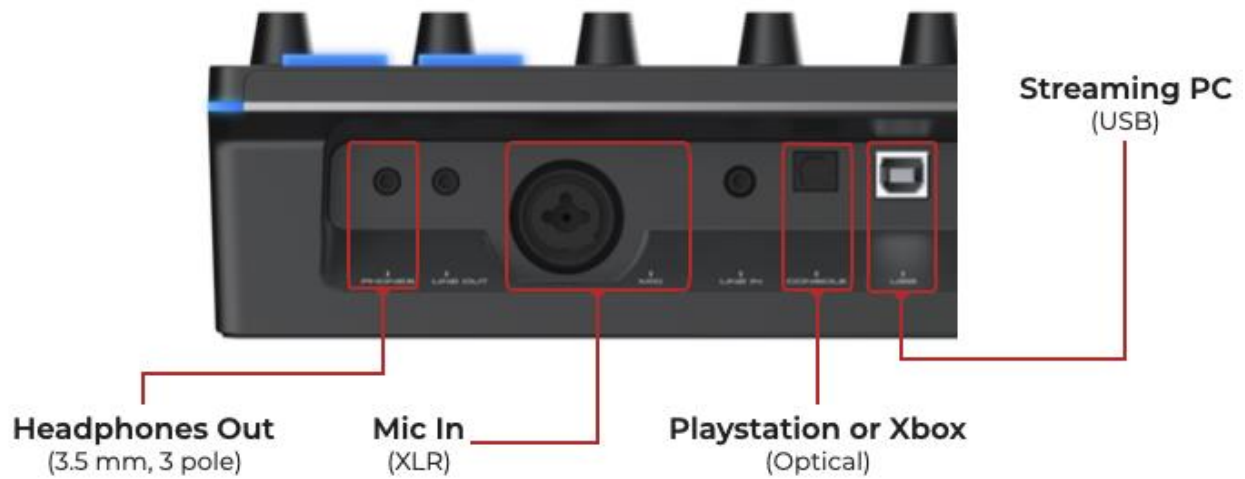

### Nintendo Switch




<sup>1</sup> - PS5, Xbox X/S Series requires an HDMI to Optical adapter, sold separately.  
- Optical output settings must be set to Linear PCM or uncompressed stereo. Optical in doesn't support compressed audio signals, 5.1 ch or 7.1 ch.

## Dual PC



## Dual PC (With in-game Chat)<sup>2</sup>

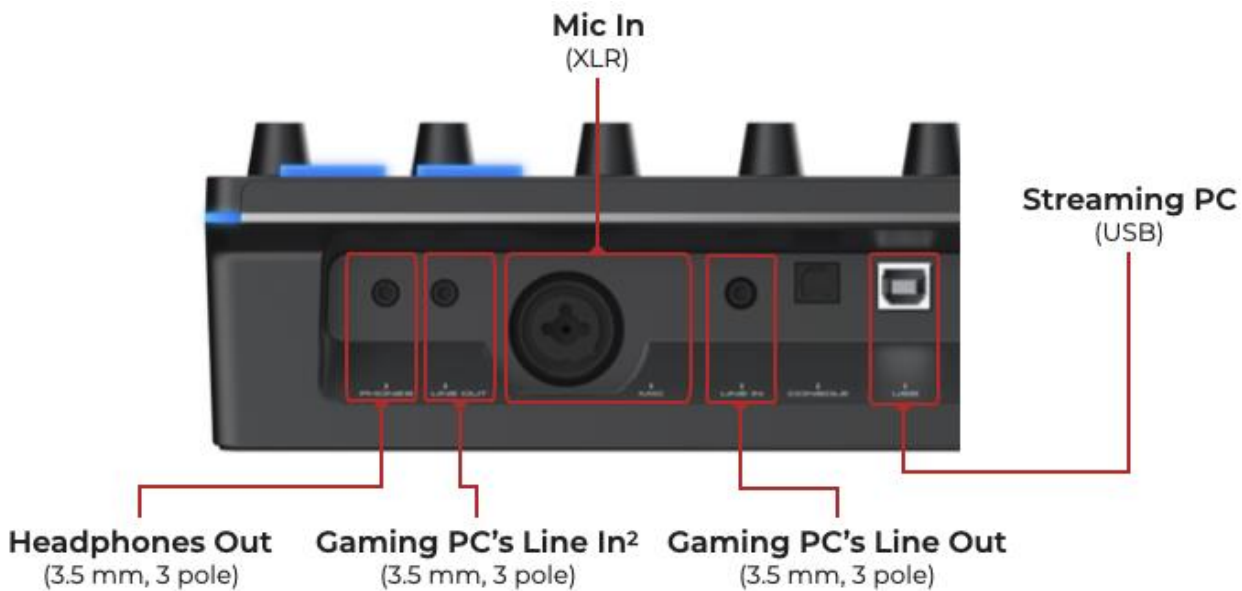


<sup>2</sup> NEXUS "LINE OUT" must be set to "Chat Mic", refer to Page 17.

# Download NEXUS app

## Windows


[Assist Central Download Link](#)

Download and run Assist Central. It will detect your NEXUS and allow you to

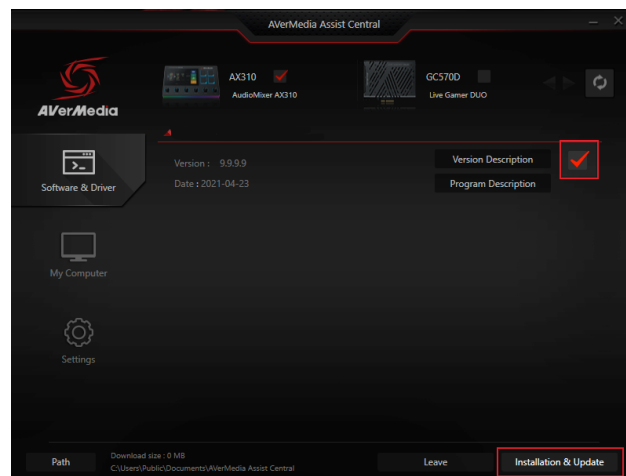

download everything you need to install the NEXUS app.


After downloading the file Select the button “Execute” and it will start installing the software > update the firmware > Install driver. Once its done you will need to restart your system.

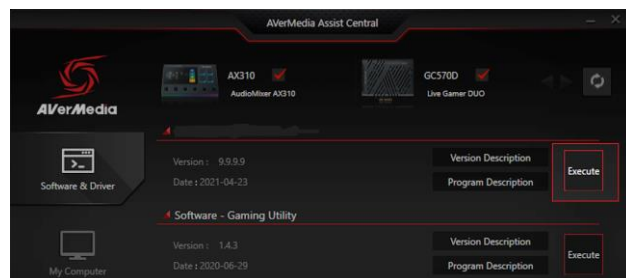

## macOS


[Download link for macOS](#)

Unzip the .zip file and open the .pkg file, it will install NEXUS app, update firmware and install drivers.

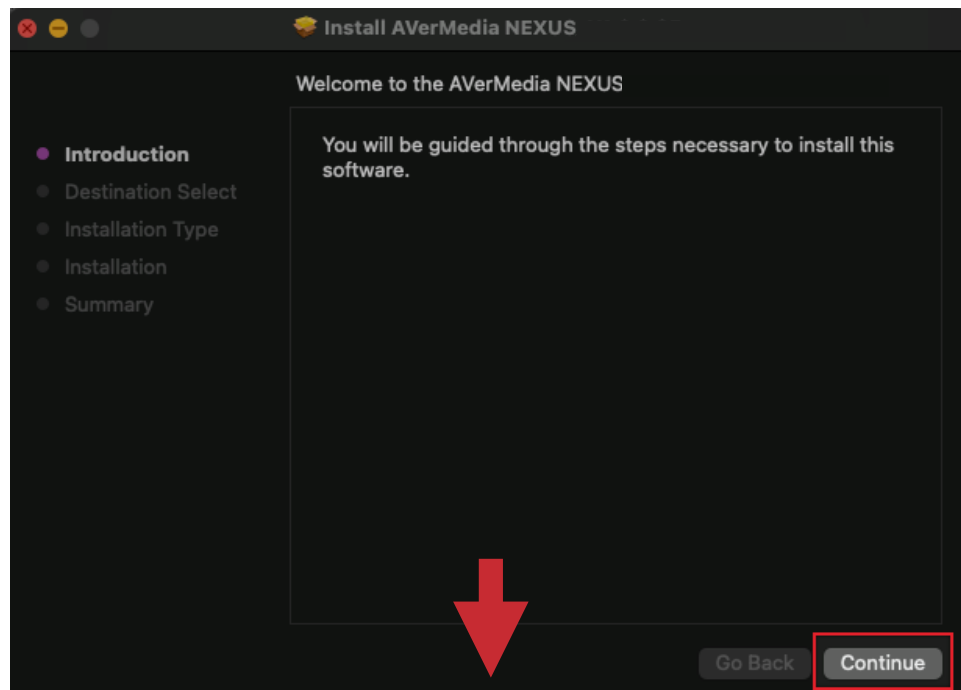

## NEXUS Setup

### AVerMedia Account Setup

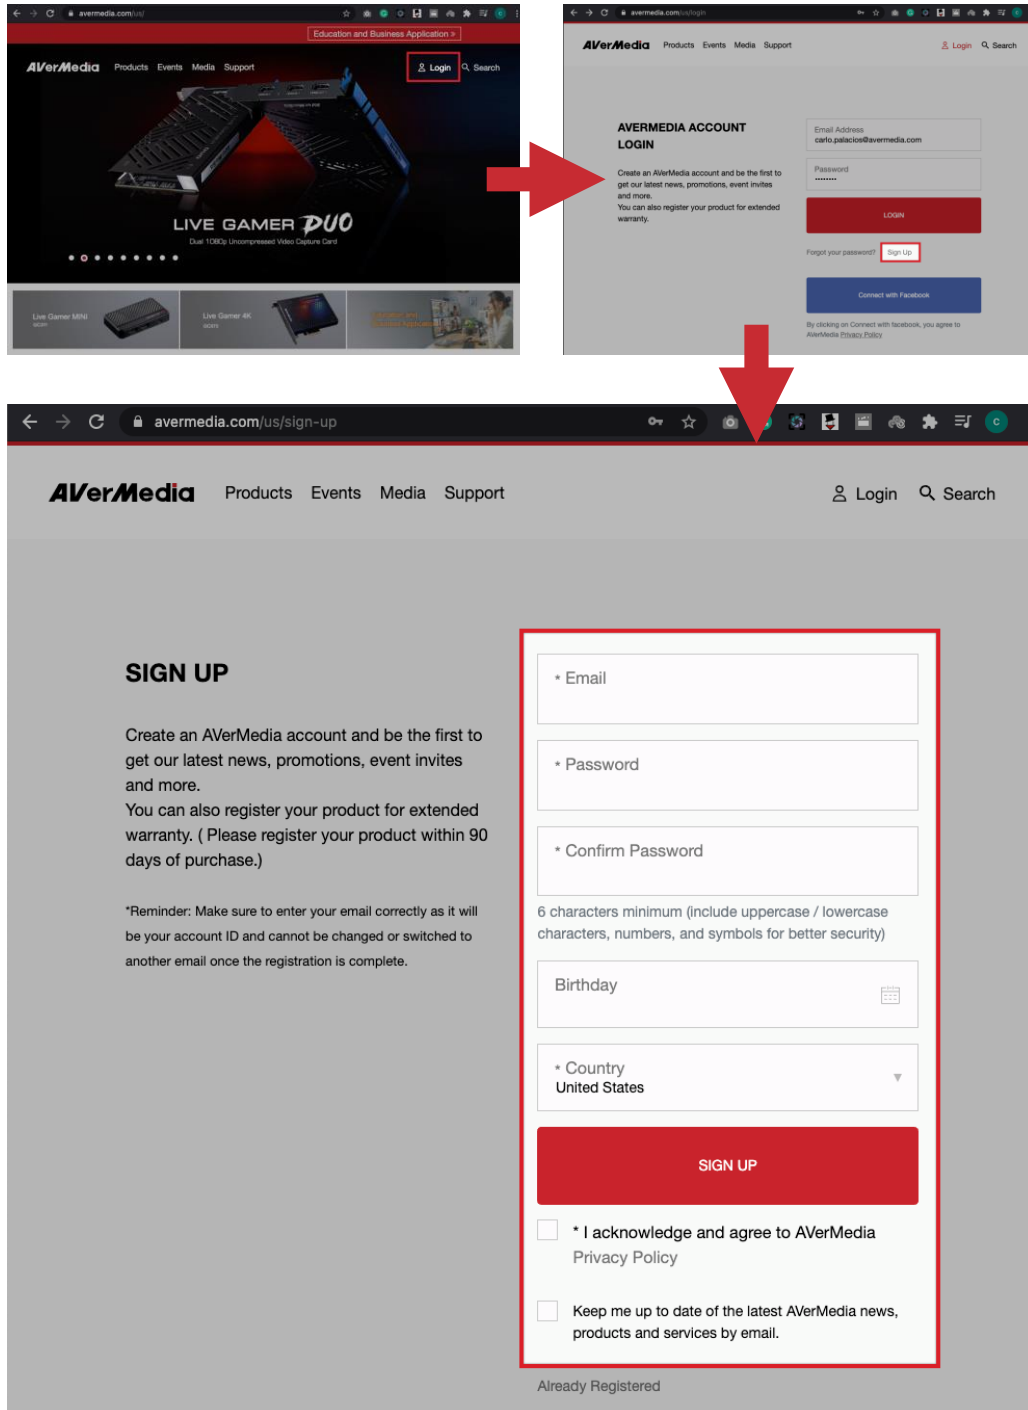

**Education and Business Application**

**AVerMedia** Products Events Media Support [Login](#) [Search](#)

**LIVE GAMER DUO**  
Dual 1080i Uncompressed Video Capture Card

Live Gamer MINI  
Live Gamer 4K

**AVERMEDIA ACCOUNT LOGIN**

Create an AVerMedia account and be the first to get our latest news, promotions, event invites and more. You can also register your product for extended warranty.

Email Address  
carlo.palacios@avermidia.com

Password  
\*\*\*\*\*

[Login](#)

[Sign Up](#)

Forgot your password? [Sign Up](#)

[Connect with Facebook](#)

By clicking on Connect with facebook, you agree to AVerMedia Privacy Policy

**SIGN UP**

Create an AVerMedia account and be the first to get our latest news, promotions, event invites and more. You can also register your product for extended warranty. ( Please register your product within 90 days of purchase.)

\*Reminder: Make sure to enter your email correctly as it will be your account ID and cannot be changed or switched to another email once the registration is complete.

\* Email

\* Password

\* Confirm Password

6 characters minimum (include uppercase / lowercase characters, numbers, and symbols for better security)

Birthday

\* Country  
United States

[SIGN UP](#)

☐ \* I acknowledge and agree to AVerMedia Privacy Policy


☐ Keep me up to date of the latest AVerMedia news, products and services by email.

Already Registered



## NEXUS Log in


Once you have created your account you can go ahead and sign-in on the NEXUS. As we keep developing the NEXUS app we will be adding features that will be linked to this account. After logging in, let's go make sure the audio settings on your PC or Mac are ready to go.

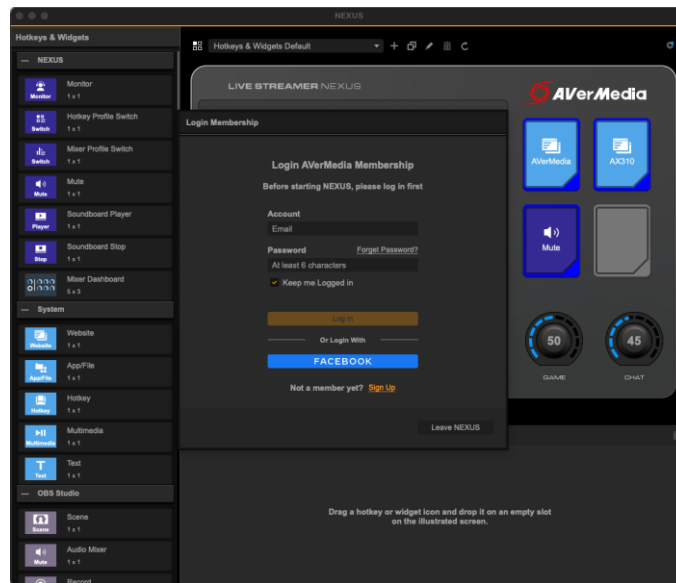

## Windows 10 Audio Routing Settings


Make sure you have updated to Windows 10 20H2 version, to avoid any hotkey mapping issues.




Once you install the drivers your audio settings should look like this. On the "Playback" tab, you'll need to make the "Chat" track your "Default Communication Device". Right click over the chat track and select "Set as Default Communication Device".

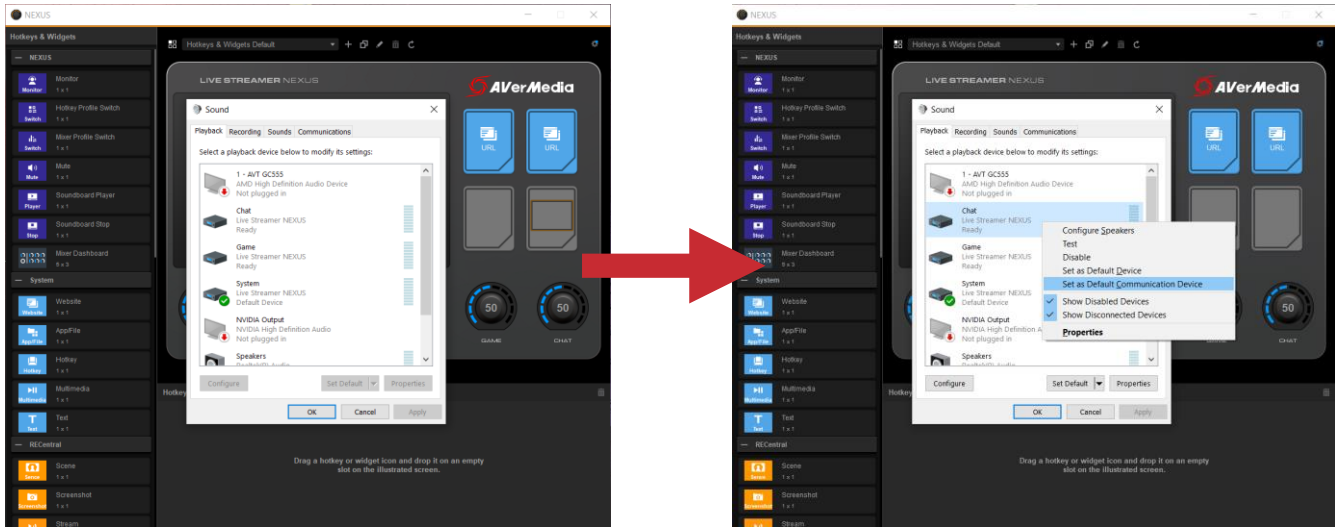

On the “Recording” tab make sure that “Chat Mic” is selected as default.


If you want to route different virtual source to the “SYSTEM”, “GAME”, or “CHAT” channel, for example Spotify, right click on the audio icon on your windows task bar, select “Open Sound Settings”, look for advances audio settings there you can select where to route each virtual source.

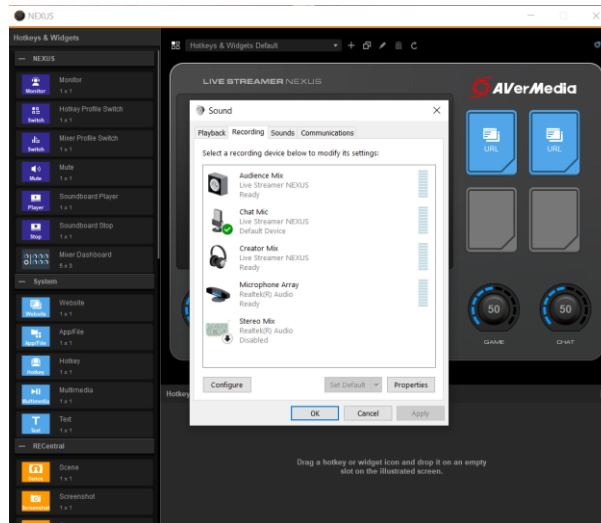

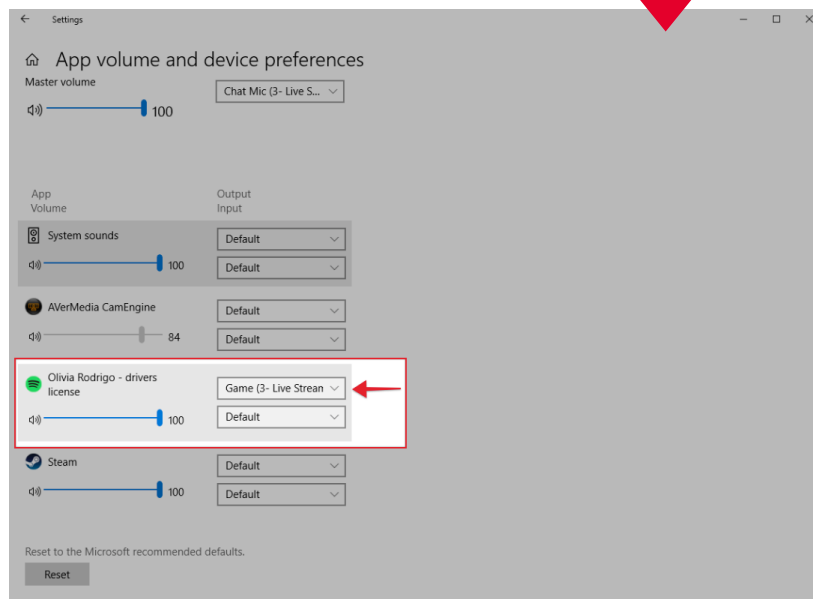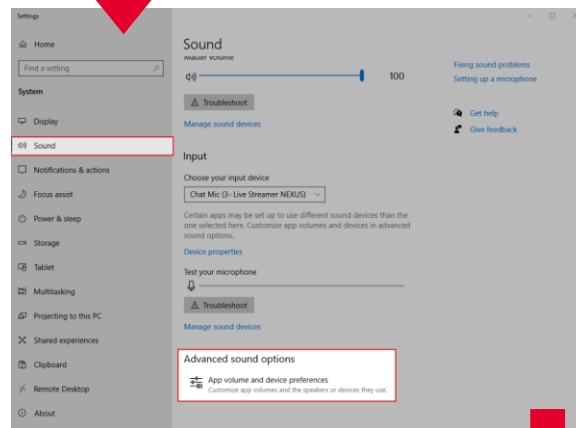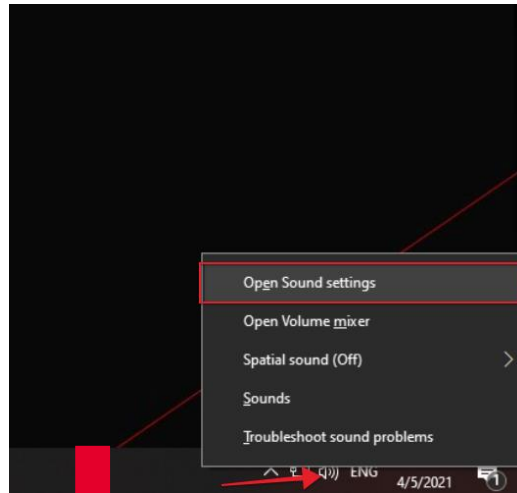


## macOS Audio Routing Settings


Go to system preferences > Sound > Output tab, make sure that “System (Live Streamer NEXUS)” is selected. This will route all system audio to the “System” digital track on your NEXUS.

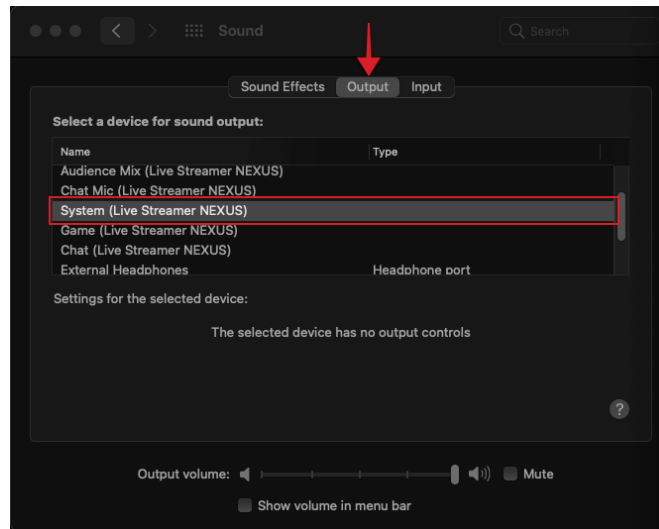

Now, go to the Input tab and make sure that “Chat Mic (Live Streamer NEXUS)” is selected.

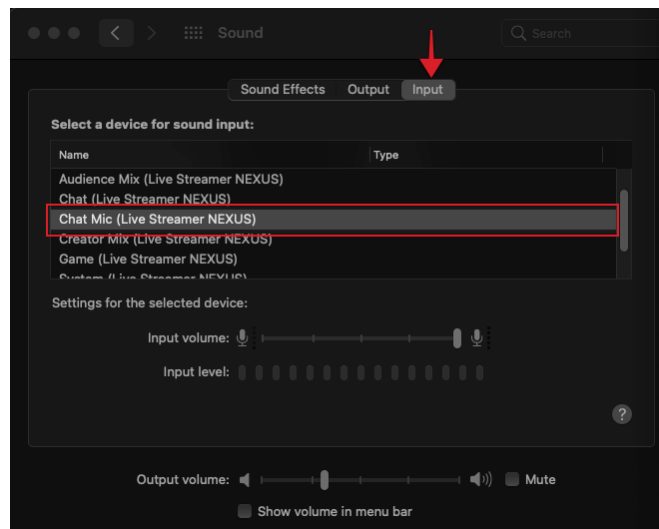

Since MacOS doesn't have a "Default communication devices" remember to make the changes on your voice chat software audio settings.

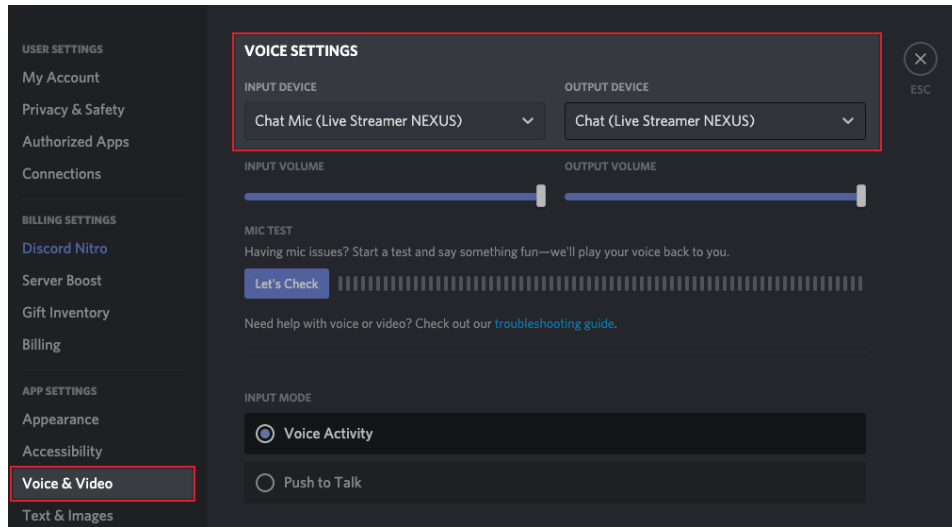

From your Mac/PC perspective these tracks are considered outputs:


- System (Live Streamer NEXUS); Controlled by the “System” Knob
- Game (Live Streamer NEXUS); Controlled by the “Game” Knob
- Chat (Live Streamer NEXUS); Controlled by the “Chat” Knob, should be used as audio output from your voice chat software (Discord, Skype, etc.)

And these are considered inputs:

- Chat Mic (Live Streamer NEXUS); The audio track that should be used for your voice chat software.
- Audience Mix (Live Steamer NEXUS); The sum of all 6 audio tracks on the NEXUS and should be selected as the *main input for your Streaming software*.
  - When Audio Mixer is set to “Single Mix”, this mix will be the same as the “Creator Mix”.
  - When Audio Mixer is set to “Dual Mix”, this mix will be an independent one and will have different volumes levels of all 6 tracks (Won’t be the same as “Creators Mix”).
- Creator Mix (Live Streamer NEXUS); The audio mix that goes to your headsets.

## Hardware settings


You will find more settings by clicking on the gear icon on the top right corner of the NEXUS app. Here you will find settings manage your streaming accounts, the touch panels settings and RGB lighting controls, as well as

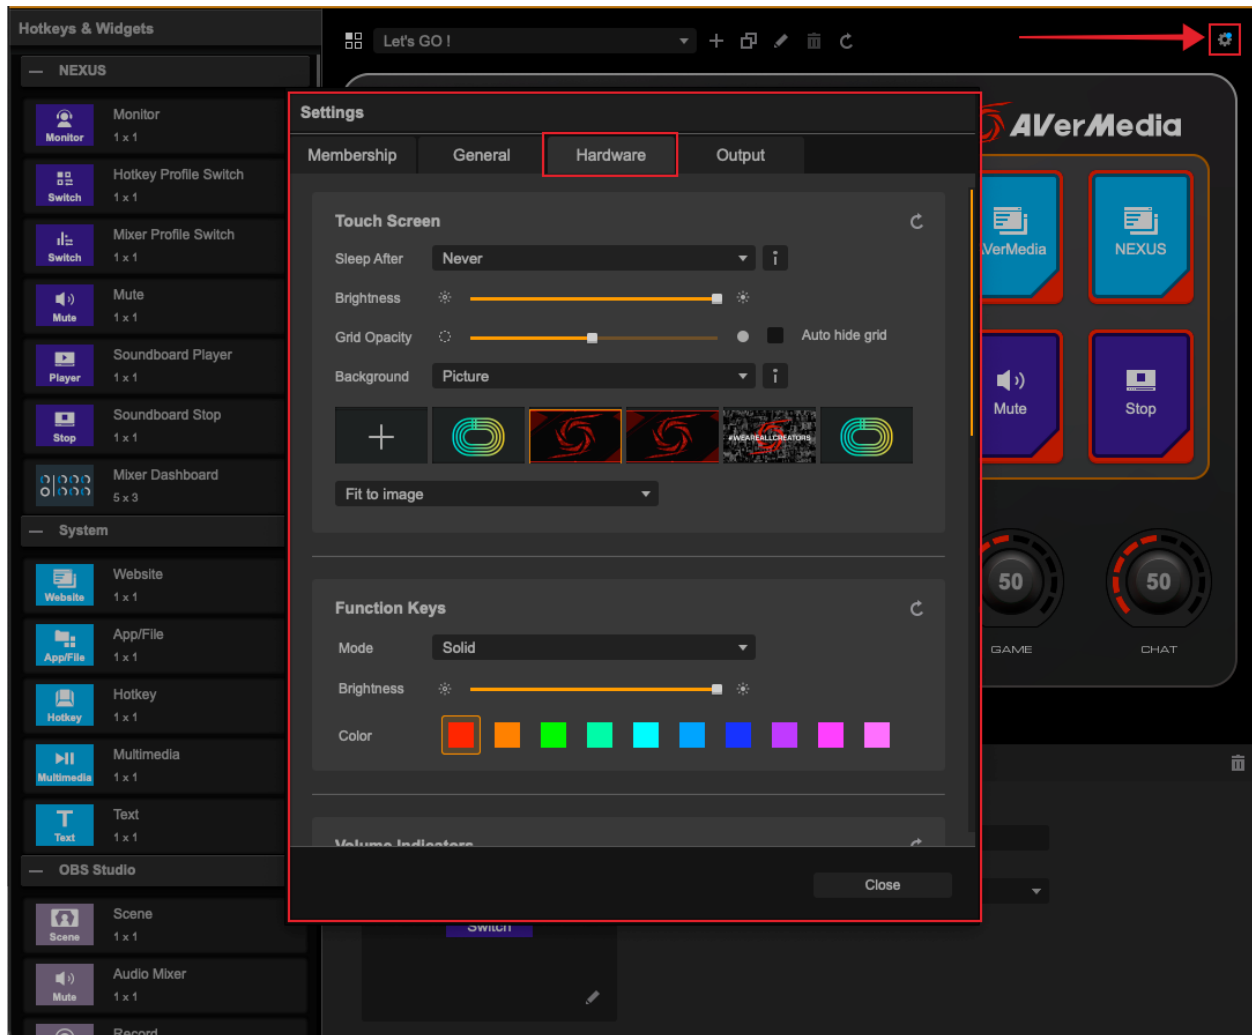

audio output settings.

You can select which audio output is routed to the “LINE OUT” port in the output settings.

This setting can be used if you want to separately record different mix outputs, share to your streaming partners headsets or to route your mic to a

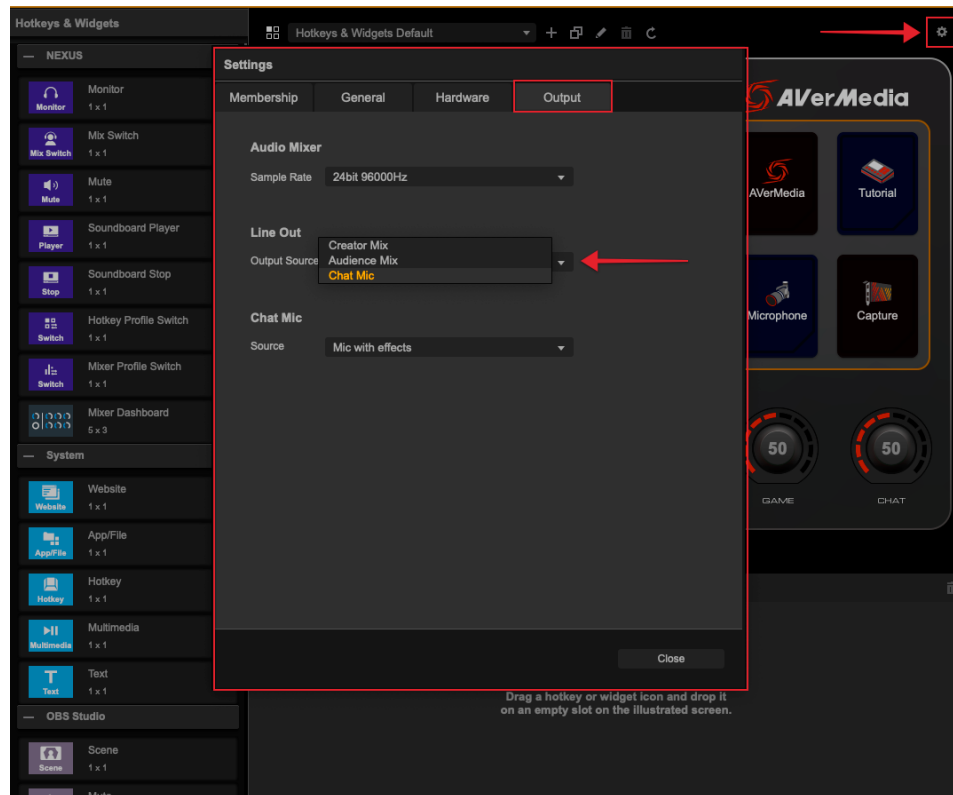

gaming PC if you wish to use in-game chat instead of discord.




## Audio Mixer settings

### Microphone Settings


Select the MIC knob and you will be able to make adjustments to you mic, gain, noise gate, Equalizer, etc. or if you have connected a XLR condenser microphone that requires phantom power (+48V) you will can enable that there as well.



By clicking on the different processing option you will open more settings for each section.

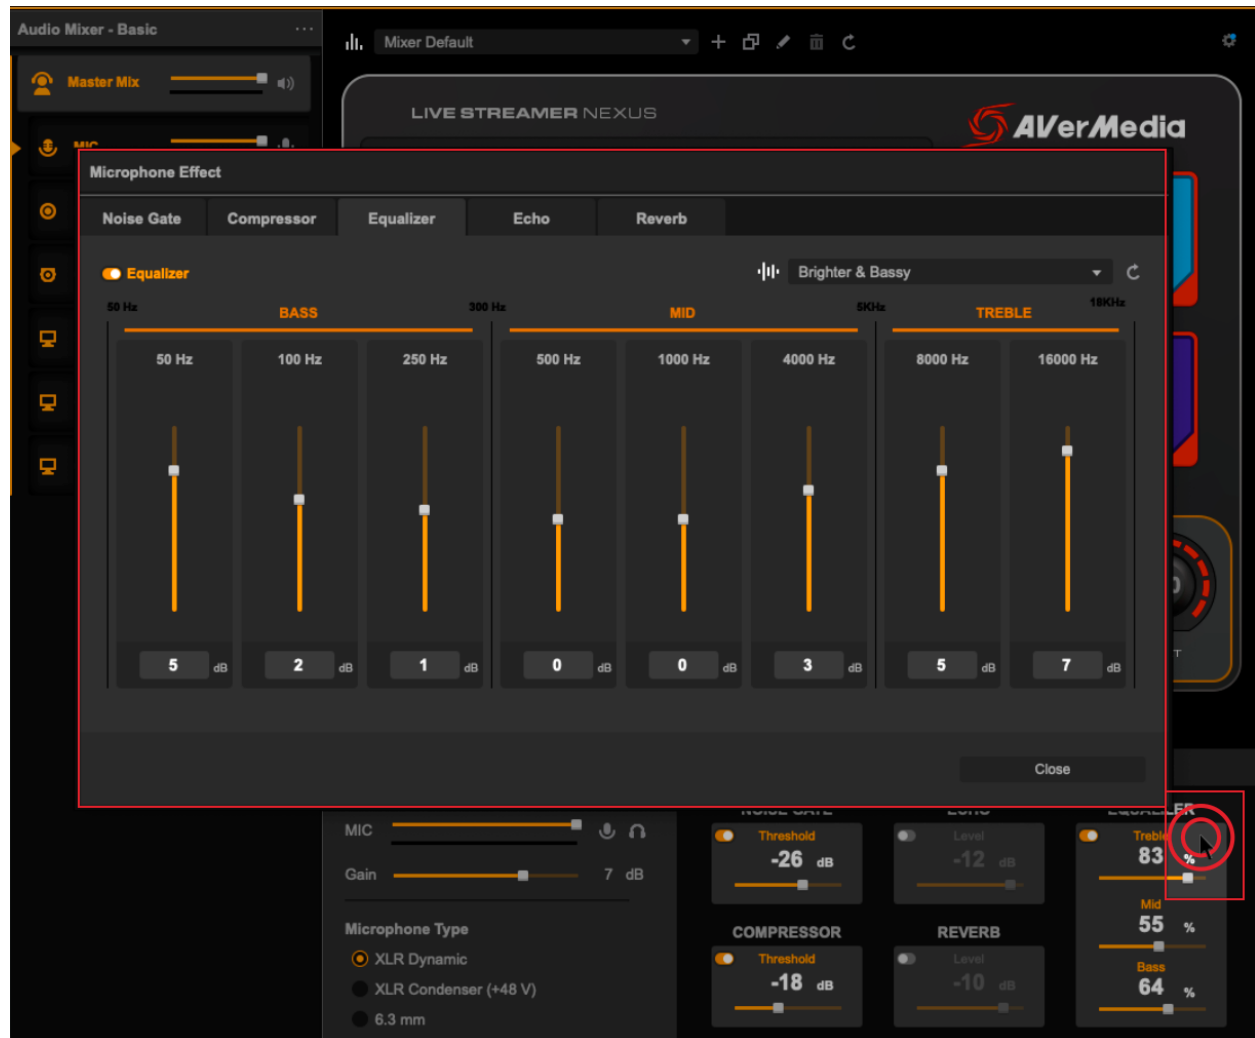



If you want the process mic audio to also be routed to “Chat mic” (the audio going to your voice calling software) you can set it from the “Output” settings.

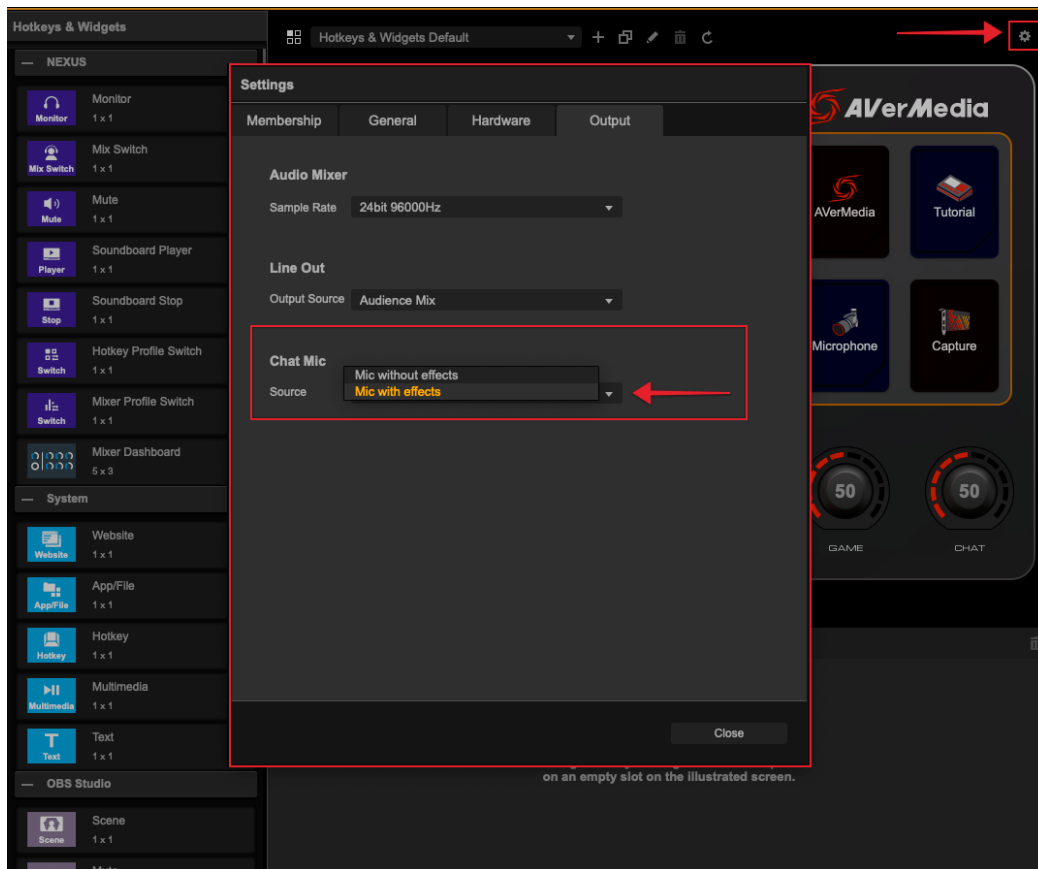

## Single Mix Settings


The NEXUS audio mixer's default is "Single Mix". This means you will have one audio mix going out to the "Headphones output port", "Line out port" and to your stream ( the "Audience Mix" virtual audio input for your streaming Software).

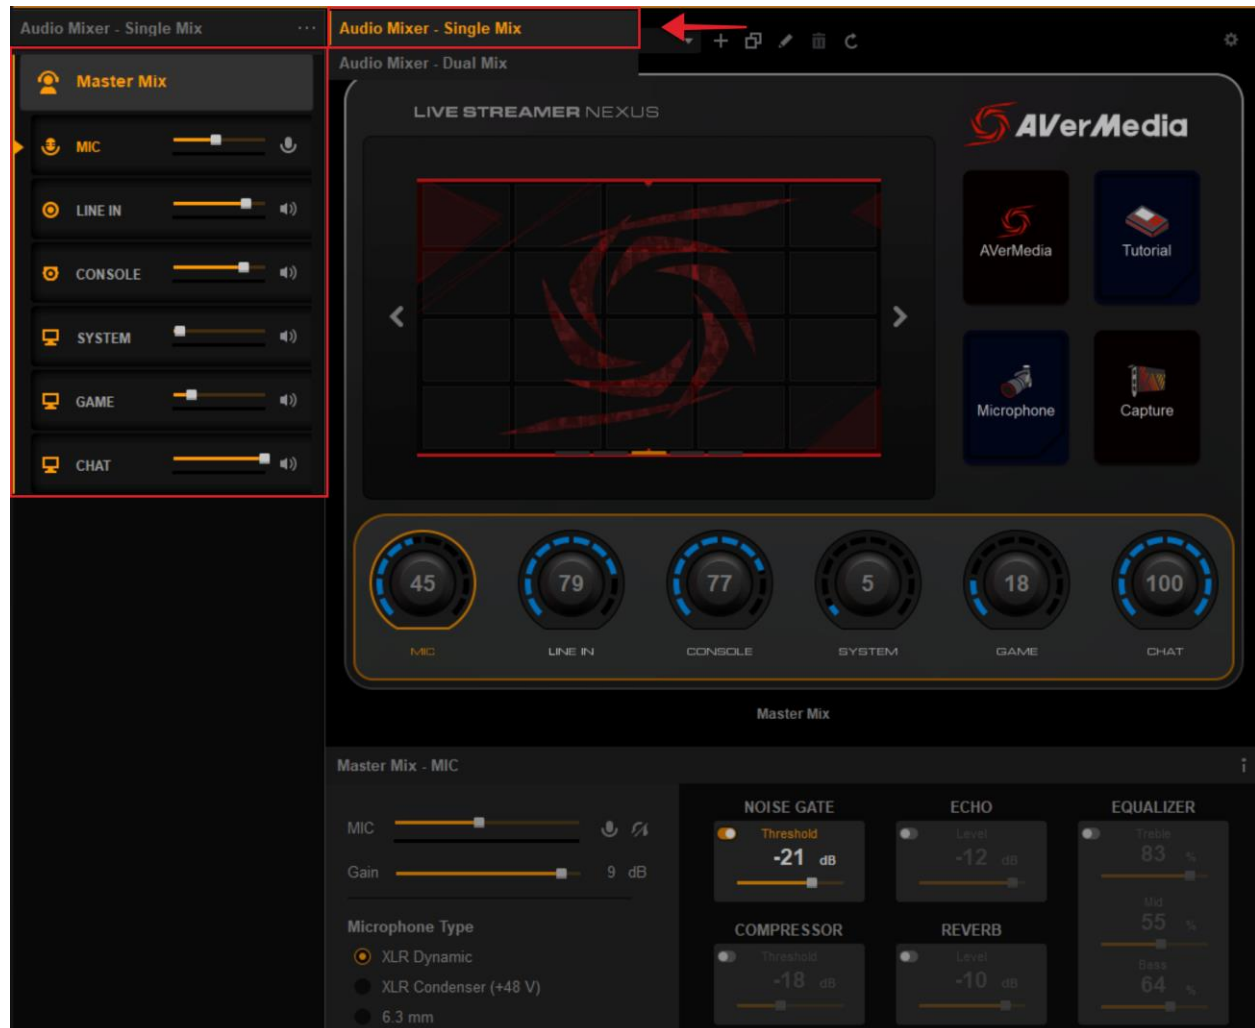

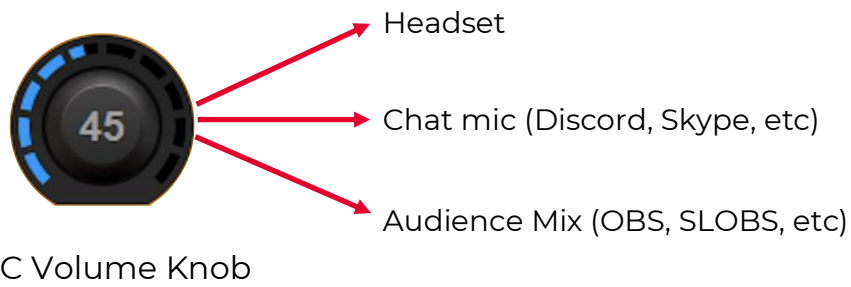

The “MIC” knob will control mic audio going to the Master Mix and chat mic.

You are able to control the mic monitoring (Mic playback) with the *Monitor* widget. In “Single Mix” the monitor widget will enable and disable microphone monitor (playback) in your headsets.

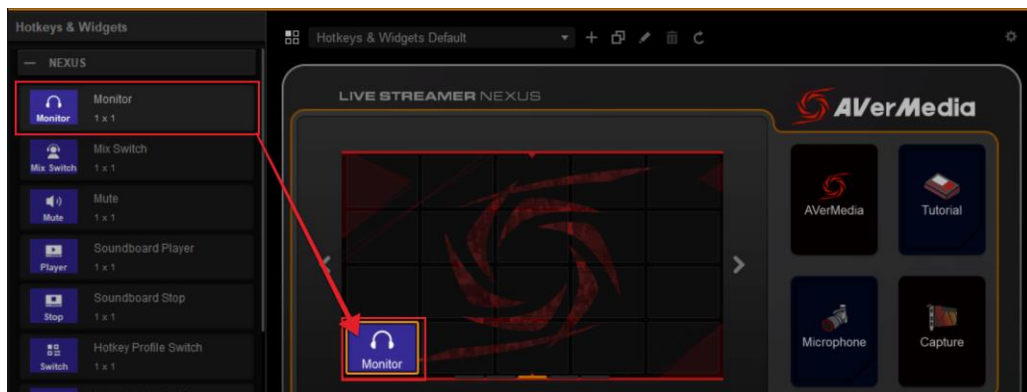


Microphone sound will always be going out to the “Audience Mix” input on

Mic Playback Off




Mic Playback ON

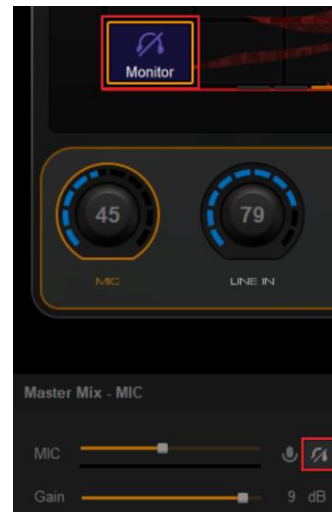

your streaming software, even if you can't hear it on your headphones.

## Dual Mix<sup>3</sup> Settings

To switch to “Dual Mix”, click the menu button next to the audio mixer’s title and select “Dual Mix”.

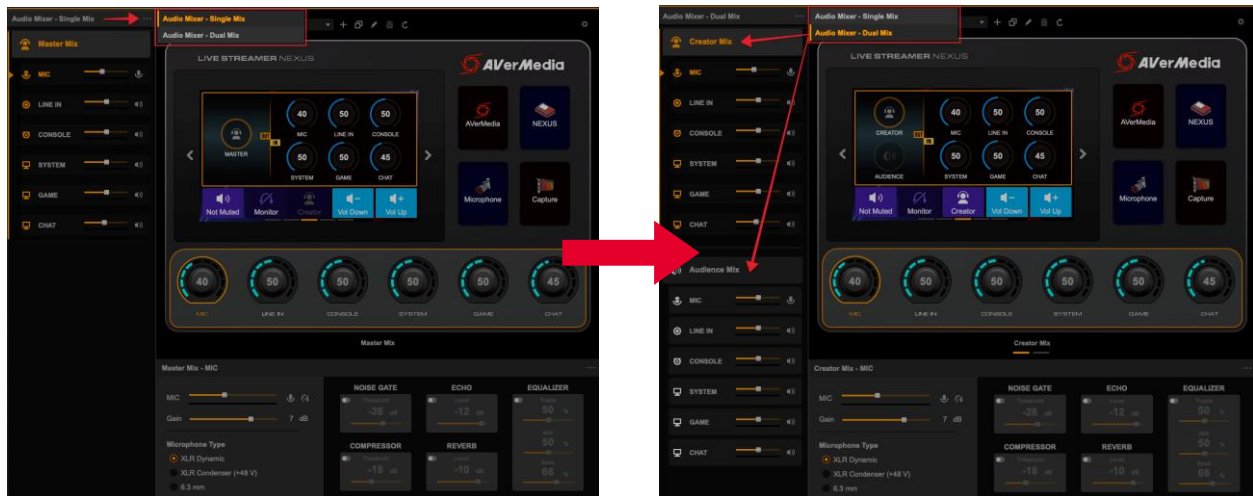


You will have two independent mixes, Creator Mix and Audience Mix, both with different audio levels of the 6 tracks.

Creator Mix: Mix of the 6 tracks heard in the headsets.


Audience Mix: Mix of the 6 tracks heard by the audience (live stream)

<sup>3</sup> In this mode the “Line out” port will default to output the “Audience Mix” audio.

in “Dual Mix” The “MIC” knob will control mic audio going to the “Creator Mix” and chat mic.

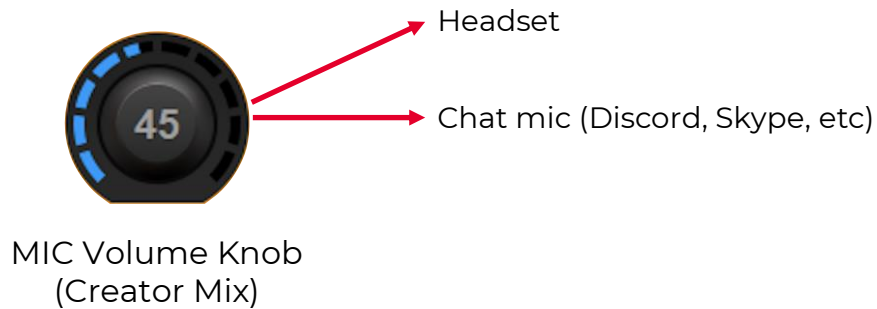


When you select “Audience Mix” the “MIC” knob will control the mic audio

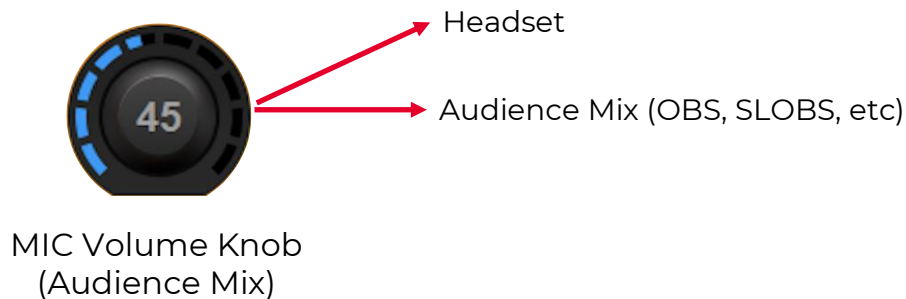

going to your streaming software (Audience Mix - Live Streamer NEXUS).




While in “Creator Mix” you are able to control the mic monitoring (Mic playback) with the *Monitor* widget. The monitor widget will enable and disable microphone monitoring (playback) in your headsets. While in Dual Mix, mic monitoring will only work with creator mix, Audience Mix won’t be affected.

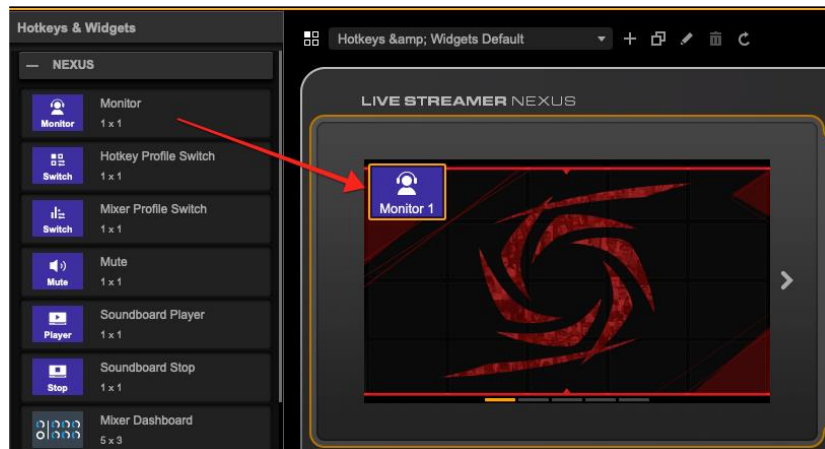


Microphone sound will always be going out to the “Chat mic” and “Audience Mix”, even if playback is disabled.


Mic Playback Off

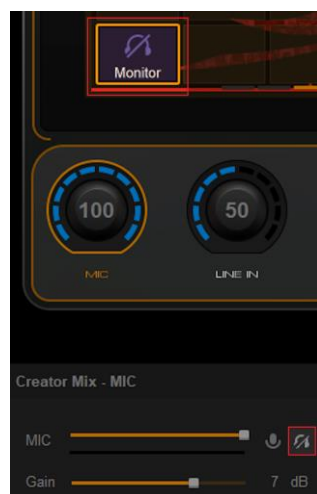

Mic Playback ON


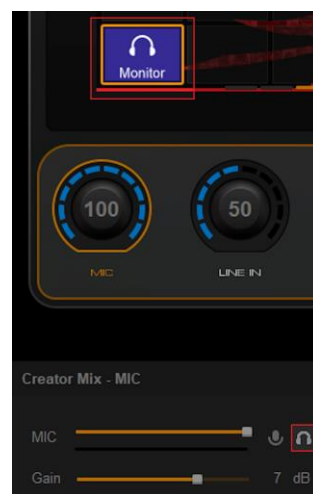


You can switch between both mixes using the “Switch Mix” widget. This will allow you to playback the desired mix on your headsets and control the volume levels in the selected mix.

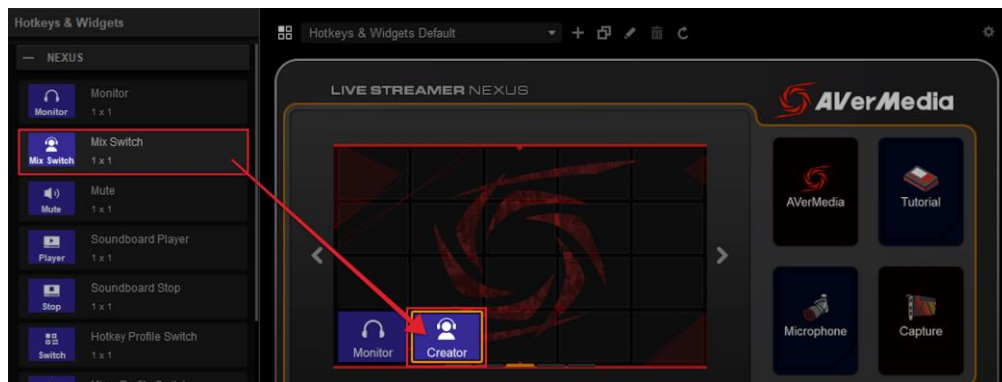

Creator Mix Playback


Audience Mix Playback

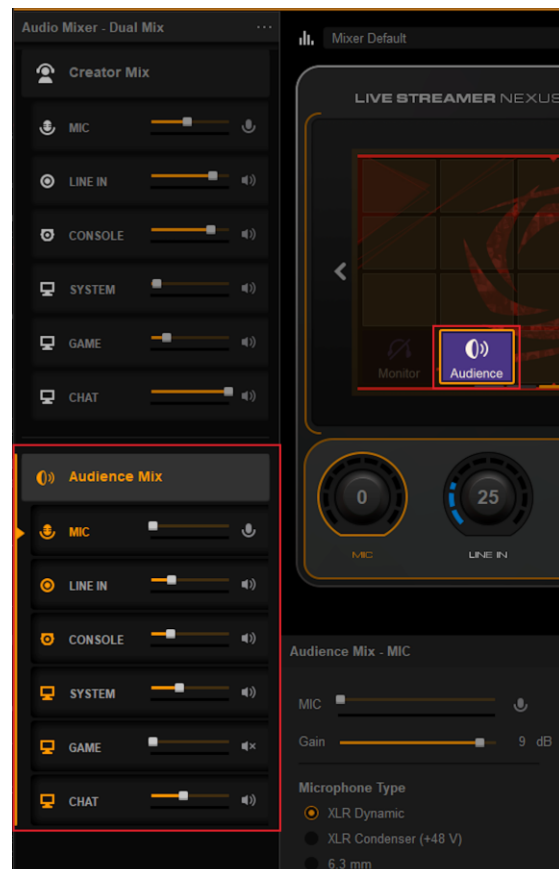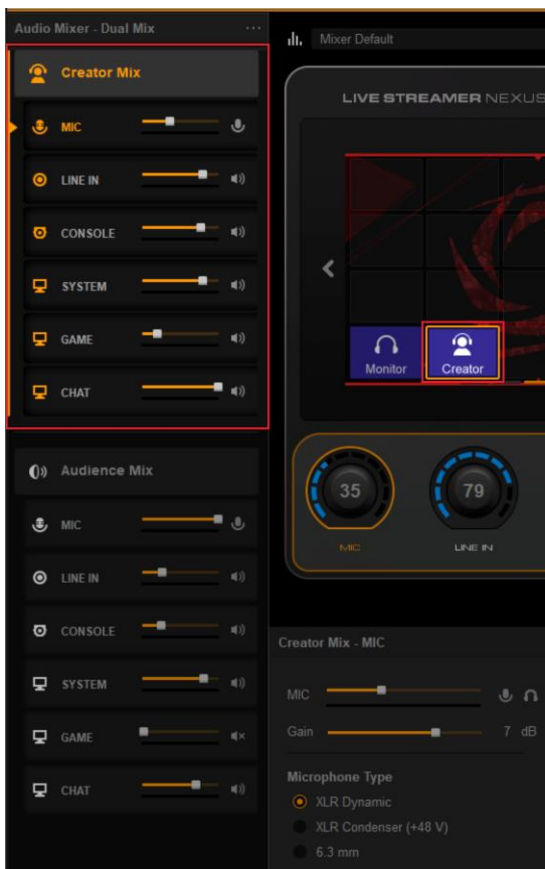


## Control Panel Setup (Hotkeys & Widgets)

Overall you have 5 pages for your hotkeys and widgets (4x5 canvas for each page) You can swipe left and right to move through the pages. If you want to return to your home screen, simply swipe up.


Widgets and hotkeys can be added by dragging them over to the control panel

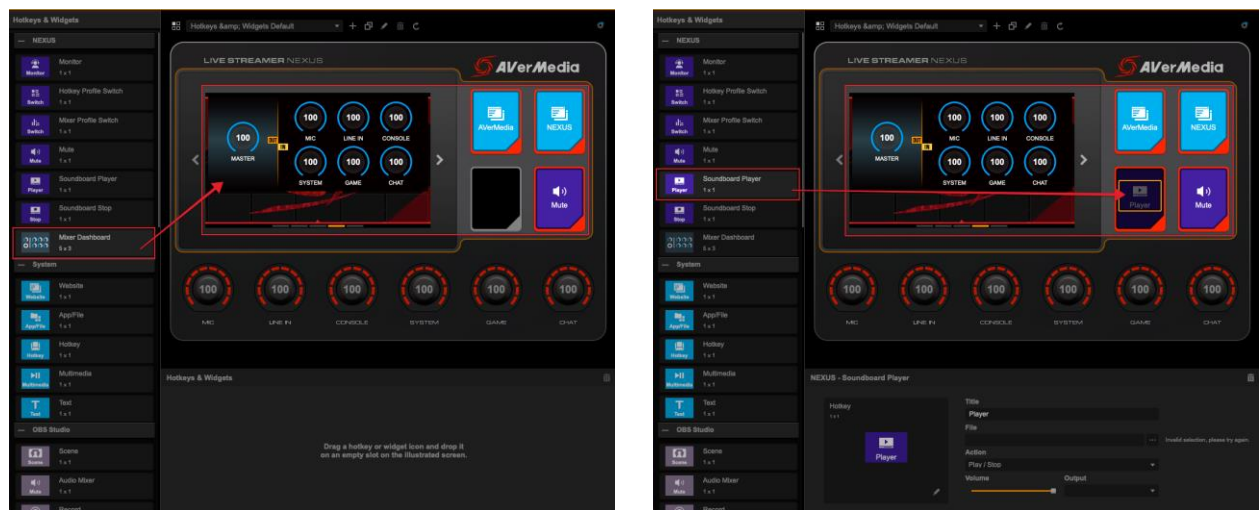

Hotkeys and widget can be modified in the setting section below

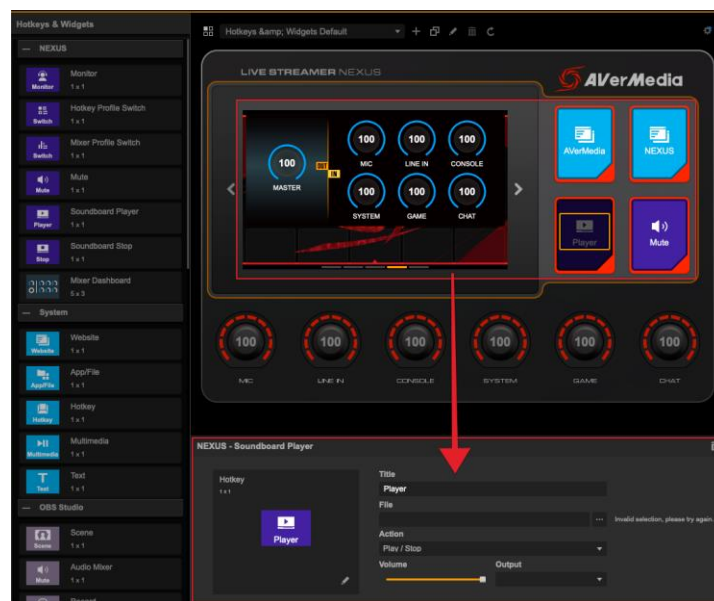


You can customize the text or the image displayed on the settings section of the widget to hotkey. Click the text field to change the name or click on the pencil icon and select the image<sup>4</sup> you want.

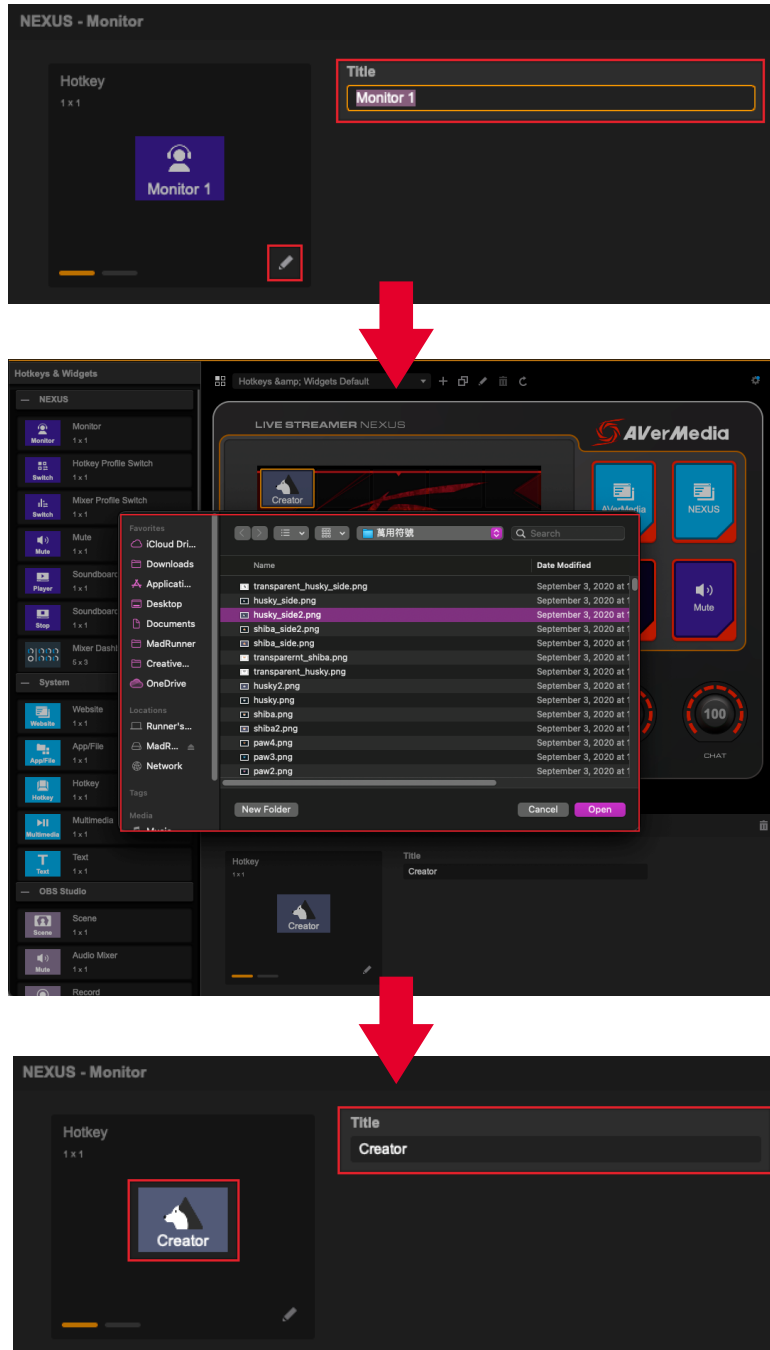



<sup>4</sup> Image resolution should be 150x108 px, supported formats are PNG, JPG, and GIF

If the widget or hot key has two “status” you can customize the 2nd status by selecting the 2nd status tab of the widget/hotkey and make the changes you want.

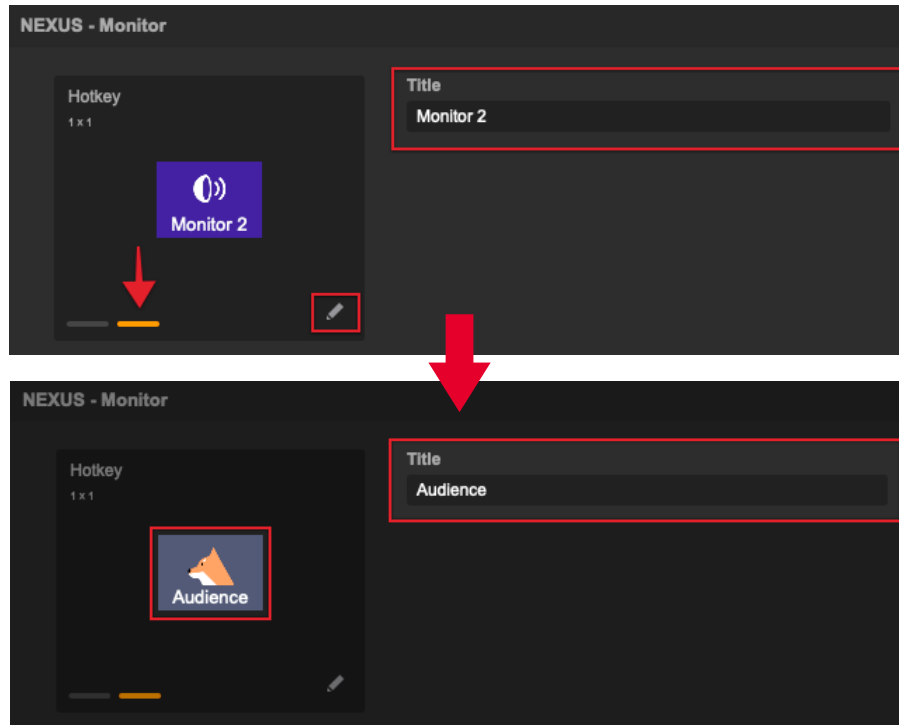

Status 1


Status 2

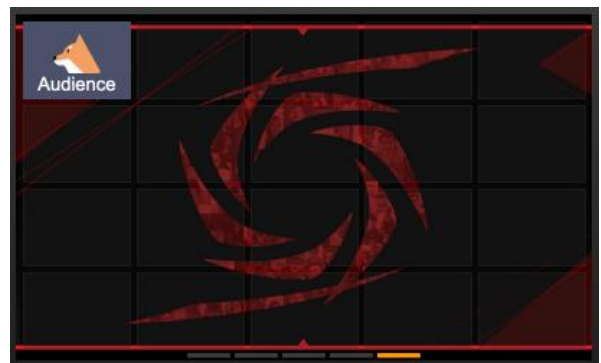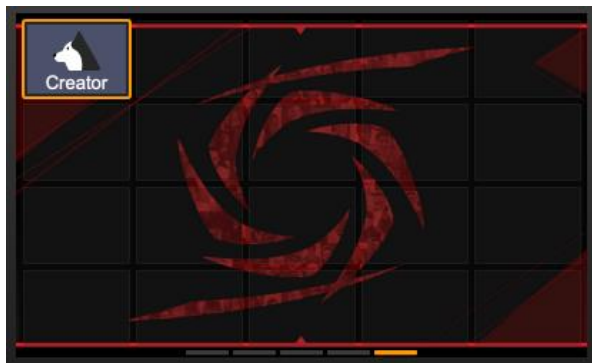

## OBS Setup


First step is to delete or mute all audio sources, disable desktop audio and others. All your audio sources should be routed through the NEXUS.

Go to OBS Settings > Audio > “Mic/Auxiliary Audio” and select “Audience Mix (Live Streamer NEXUS)”

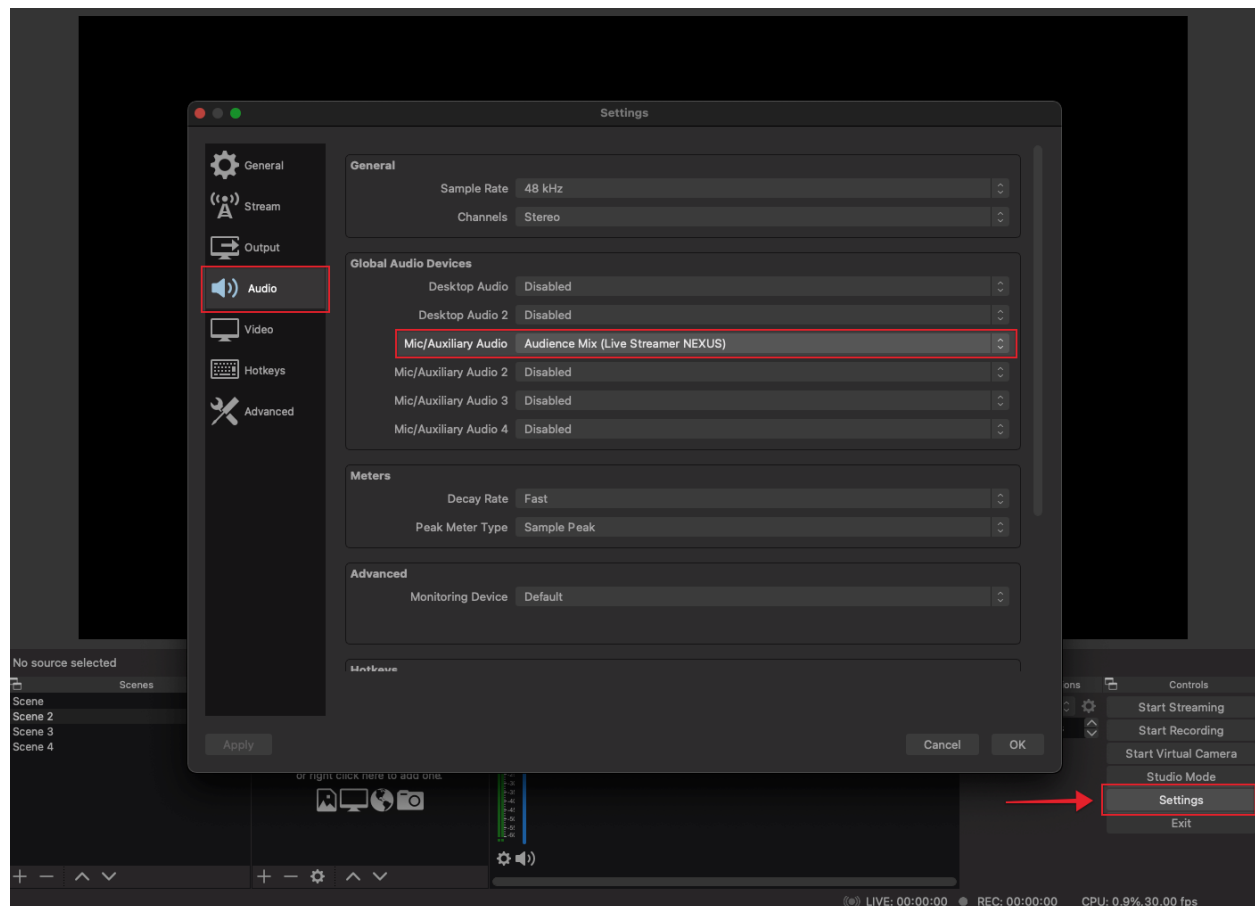

## OBS Websocket Plugin

In order to use OBS widgets, you will need to download and install OBS

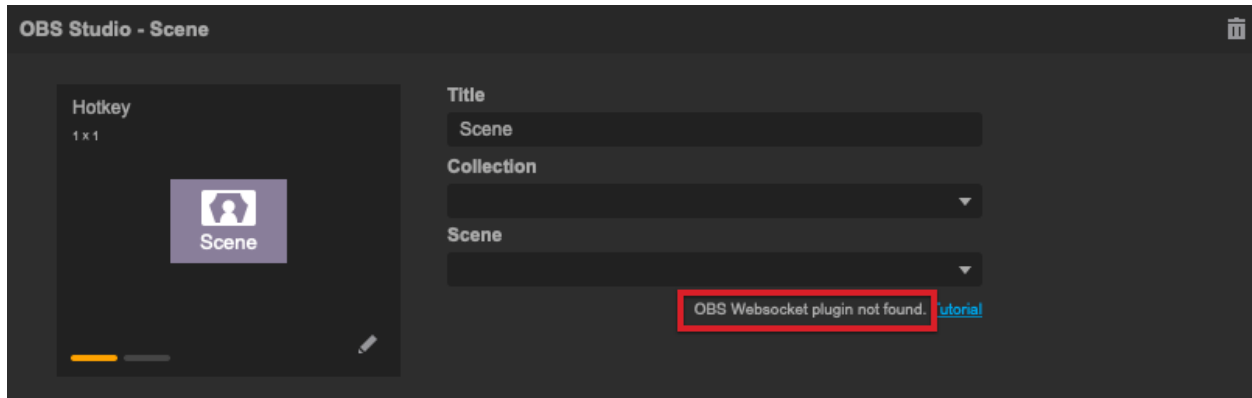

Websocket plugin, here is the reference link [Websocket download link](#).

### For Windows

We recommend you can use the installer "*obs-websocket-4.X.X-Windows-Installer.exe*" (works only with combined 32/64-bit installations) : download it, launch it and follow the instructions.


If that doesn't work then download and unzip the *obs-websocket-4.X.X-Windows.zip*. Copy the contents of the archive to the root of your OBS Studio installation folder (either *C:\Program Files\obs-studio* or *C:\Program Files (x86)\obs-studio*).

### For macOS


Download and run *obs-websocket-4.X.X-macOS.pkg*.

Note:

If you are not able to use OBS widgets right away make sure the “Enable authentication” is unselected.

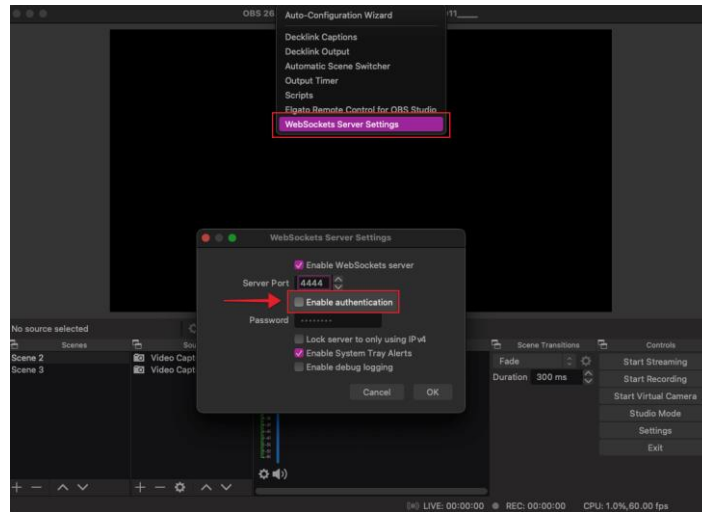

If you choose to use a password with your OBS websockets, remember to add the account in the NEXUS app settings and type in the password.

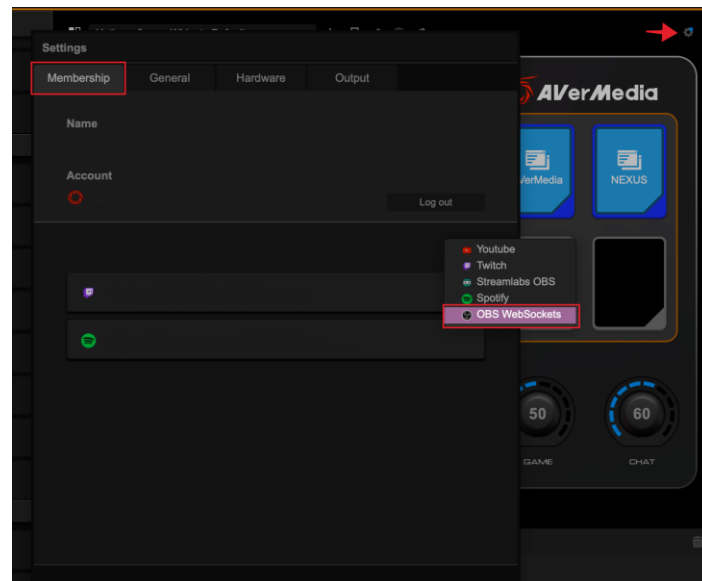




## SLOBS Setup


First step is to delete or mute all audio sources, disable desktop audio and others. All you audio sources should be routed through the NEXUS.

Go to SLOBS Settings > Audio > “Mic/Auxiliary Audio” and select “*Audience Mix (Live Streamer NEXUS)*”

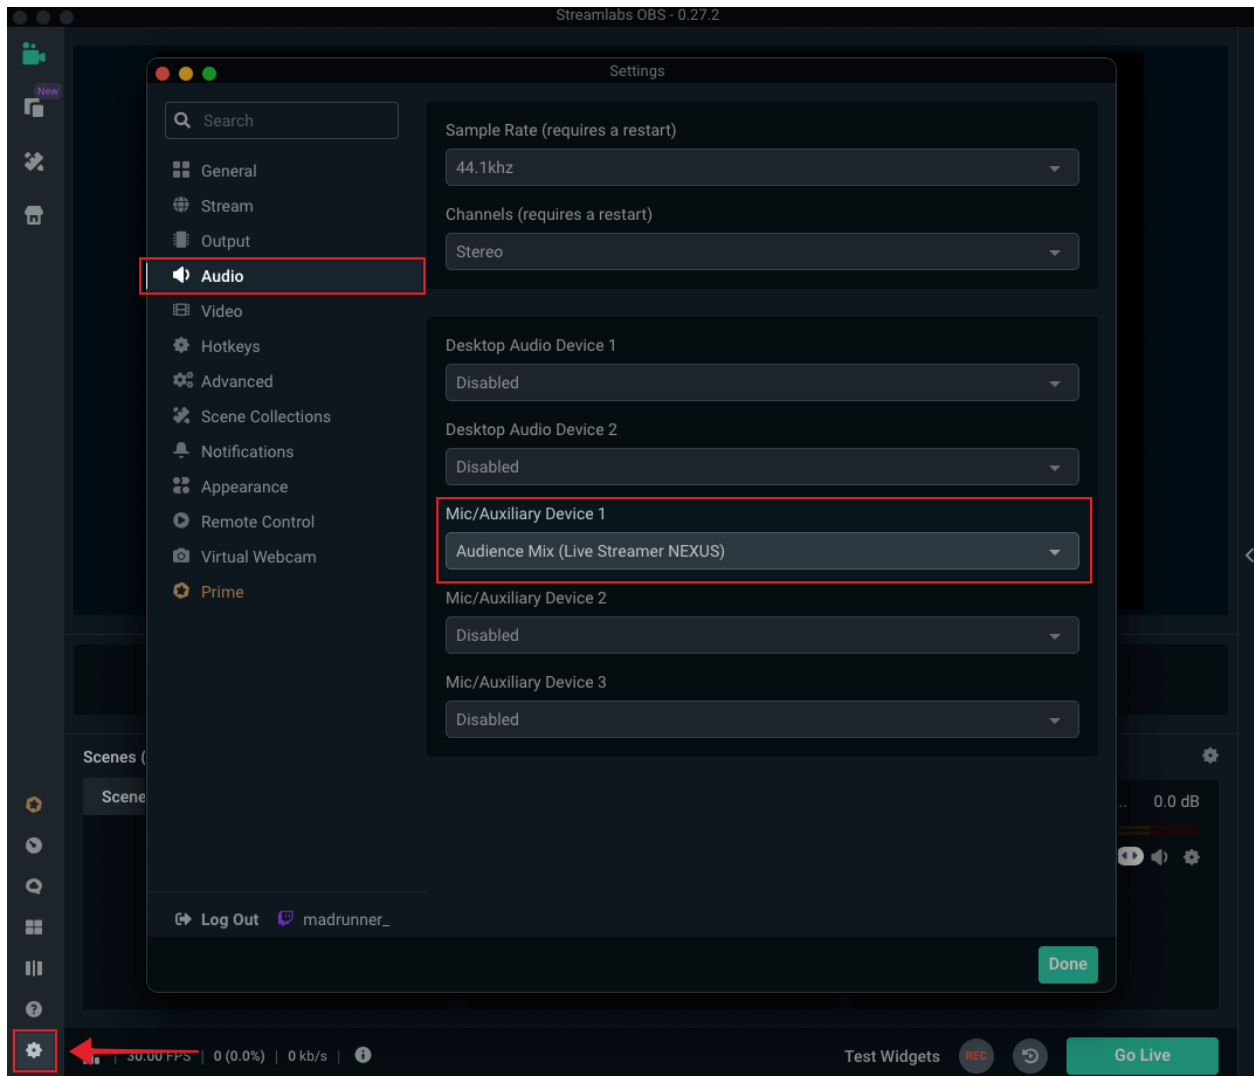


## SLOBS Token Plugin

In order to use SLOBS widgets, you will need to get your SLOBS token. Get this token by going into SLOBS settings page > Remote Control > “Click to

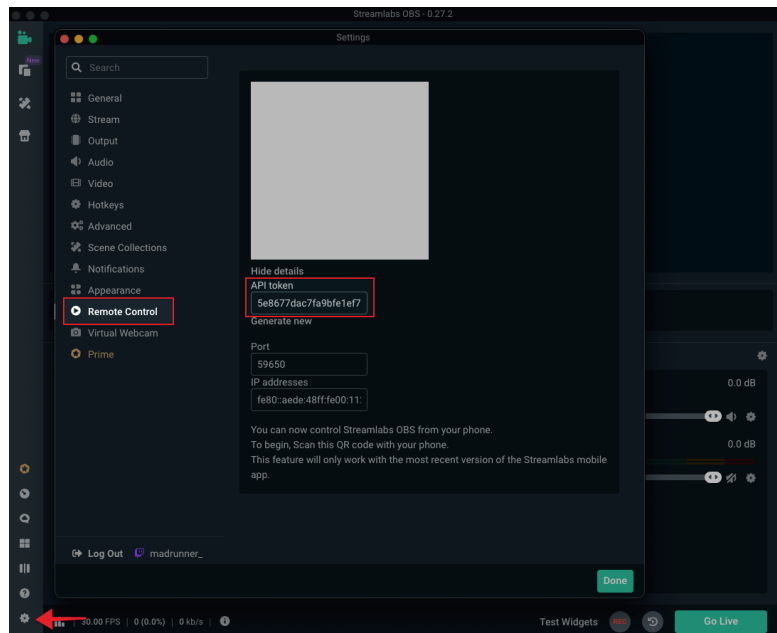

reveal” > Show details ; now copy the API token number.


For the next step go to NEXUS app setting, add streamlabs OBS and past the token number.

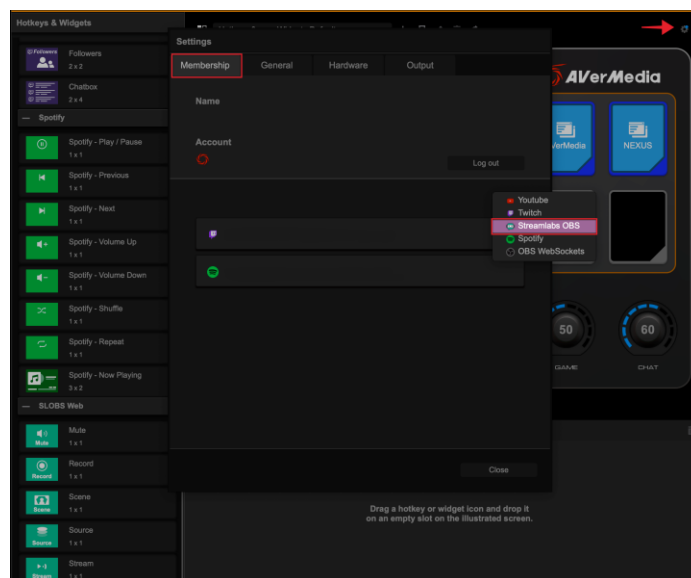


## Hotkey & Widget Profiles

You can add various control center profiles for different situations. These profiles will store your touch panel and functions buttons hotkey and widgets settings.

To create a new profile, click the “+” icon, type the name of this new profile and select “OK”.

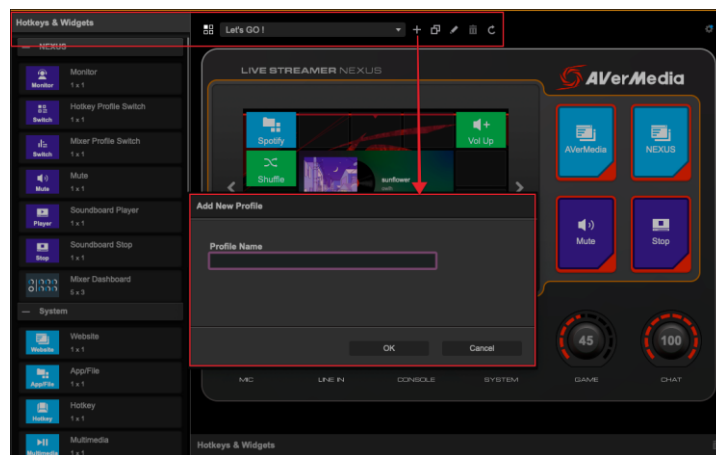


To quickly switch between profiles add “Hotkey Profile Switch”. And at the bottom you will have a dropdown menu where you can choose which profile you want to switch to.

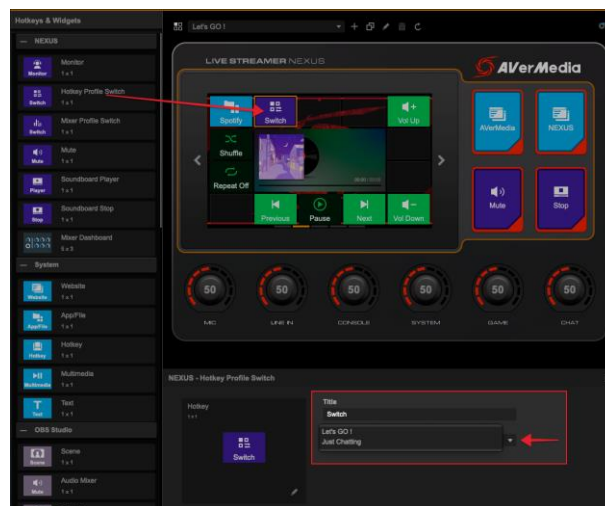

## Audio Profiles

You can add various audio profiles for different situations. These profiles will store all your audio settings.

To create a new profile, click the “+” icon, type the name of this new profile and select “OK”.

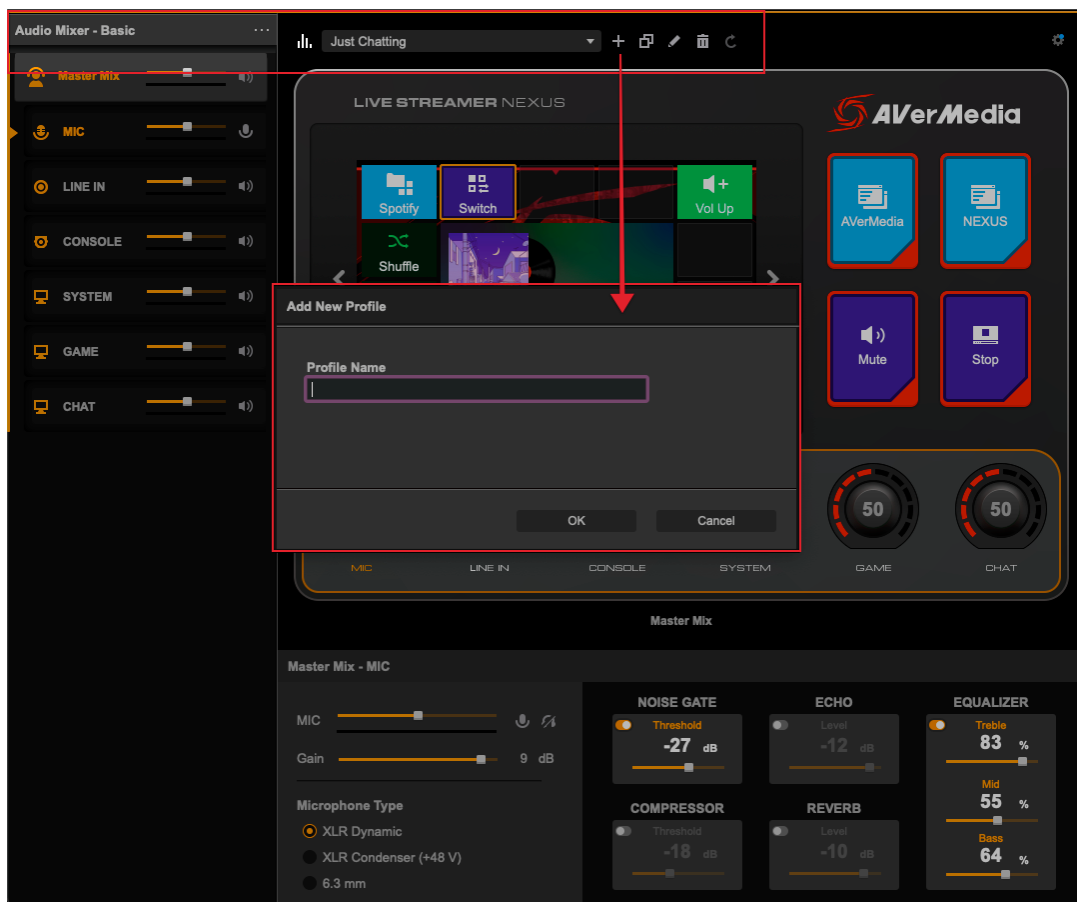

To quickly switch between profiles add “Mixer Profile Switch”. And at the bottom you will have a dropdown menu where you can choose which profile you want to switch to.

