

Pebble Keys 2 K380s at a glance



1 - Connection status LEDs

2 - Easy-switch / Connection button

3 - Customizable 10 keys: Hot Keys & Media Keys

4 - Split keys (modifier based on type of device connected to keyboard)



5 - Battery compartment


6 - On/Off button

7 - Battery status light

Connect your keyboard to your device

You can pair your keyboard to your device using the Bluetooth Low Energy connection.

To pair through Bluetooth:

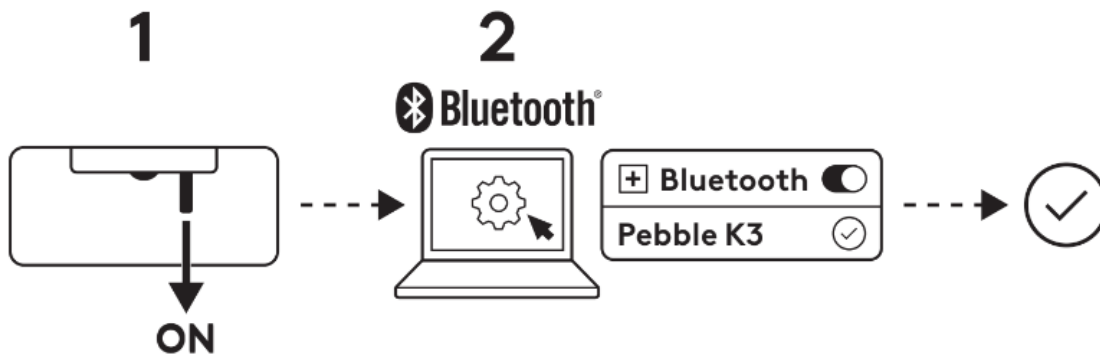


1. Remove the pull tab from the keyboard. It will automatically turn on. Channel 1 will be ready to pair.
 2. Open the Bluetooth preferences on your device. (Click [here](#) for more details on how to do this on your computer). Add a new peripheral by selecting the keyboard from your list of devices (make sure you select the same model number that is engraved under your keyboard) and your keyboard will be ready to use.
- If you experience issues with Bluetooth, click [here](#) for Bluetooth troubleshooting.

Pair a second device

Your keyboard can be paired with up to three different devices and you can use the Easy-Switch button to toggle between them.

If you want to pair additional devices to your keyboard:

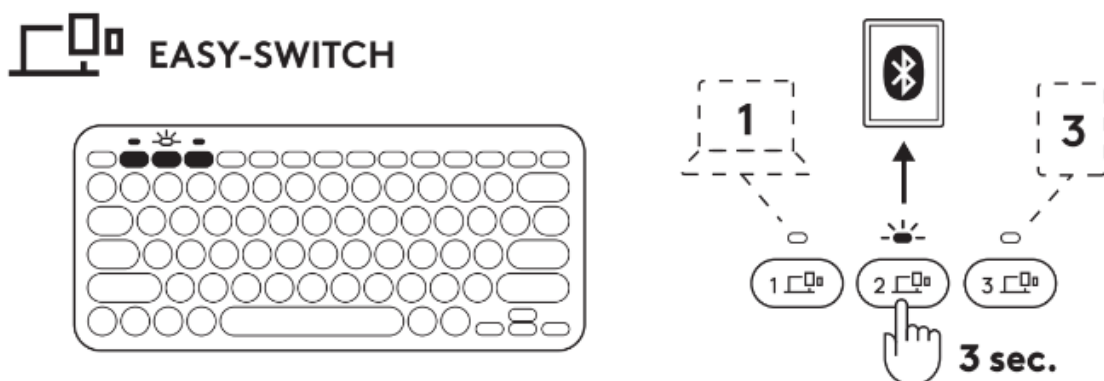

1. Select the channel you want using the Easy-Switch button — press and then hold the same button for three seconds. This will put the keyboard in discovery mode so it can be seen by your computer. The LED will start blinking rapidly.
2. Open the Bluetooth settings on your computer to complete the pairing. You can find more details [here](#).
3. Once paired, a short press on the Easy-Switch button lets you toggle between your devices.

Logi Bolt receiver optional connection method

Pebble Keys 2 M380s is compatible with Logi Bolt receiver so you can also connect the Keys 2 M380s via Logi Bolt receiver (but the receiver needs to be [purchased](#) separately):

1. Download and install Logi Options+ app [here](#) or you can also use [Logi Web Connect](#).
2. Plug the Logi Bolt receiver into a USB-A port on your computer.
3. Follow instructions from the software to pair the device with dongle
4. Use Logi Options+ app to explore all possibilities this keyboard has to offer. To download and learn more, go [here](#).

Pairing a device again

If a device becomes disconnected from the keyboard, you can easily re-pair the device with the keyboard. Here's how:

On the keyboard

- Press and then hold down the Easy-Switch button until the status light starts blinking rapidly.
The keyboard is now in pairing mode for the next three minutes.

On the device

1. Go to Bluetooth settings on your device and select **Pebble K380s/Pebble K3** when it appears in the list of available Bluetooth devices.
2. Follow the onscreen instructions to complete the pairing.
3. Upon pairing, the status LED on the keyboard stops blinking and remains steady for 10 seconds.


INSTALL LOGI OPTIONS+

Download Logi Options+ to use all the possibilities this mouse has to offer. In addition to optimising the Pebble Keys 2 K380s for your operating system, Logi Options+ lets you customise the keyboard to fit your needs and personal style — create shortcuts, reassign key functions, display battery warnings, and much more. To download and learn more, go [here](#).


Click [here](#) for the list of supported OS versions for Logi Options+.

Download and run Logi Options+ app. Click [here](#) to download the software.


An installer window will pop up on your screen — click Install Options+.

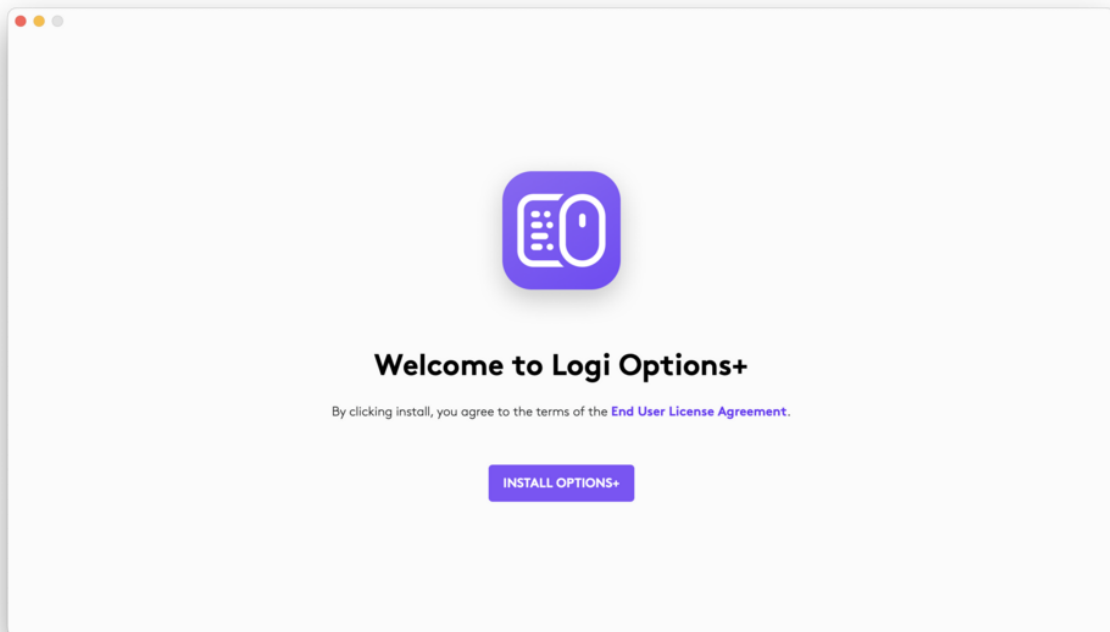

- Once Logi Options+ is installed, a window will open and you'll be able to see an image of your keyboard. Click on it.

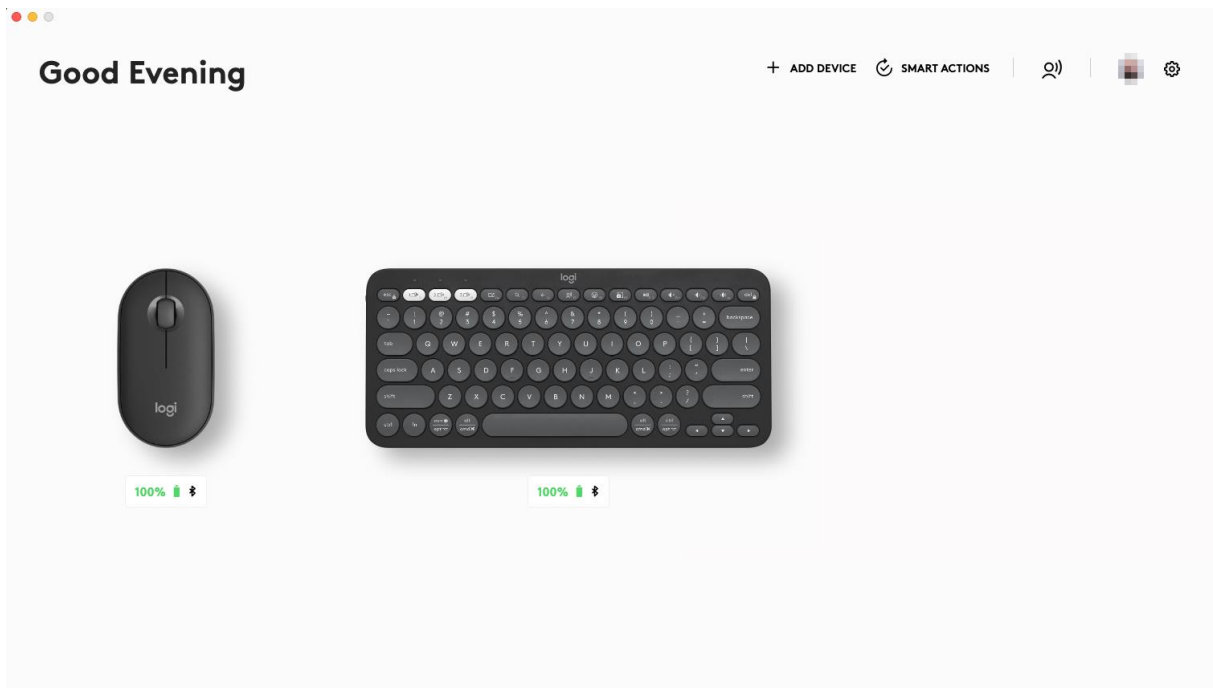

- You will be taken into a quick onboarding process that shows you how to customise your keyboard. We highly recommend not to skip it.

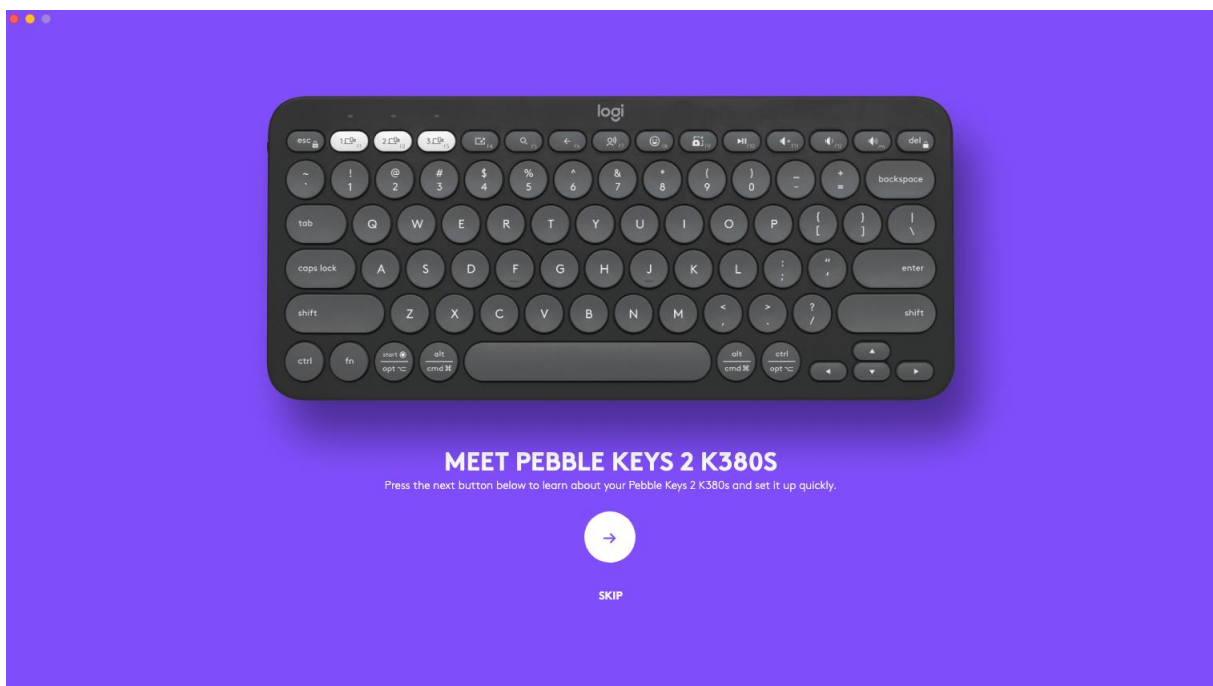










FEATURES



Explore the advanced features your new keyboard offers:

- Customizable 10 keys: Hot Keys & Media Keys

- Customise the 10 keys
- App-Specific Settings
- Shortcuts
- Function keys instead of shortcut keys
- OS-adaptive keyboard
- Flow between two computers

Customizable 10 keys: Hot Keys & Media Keys


Keys	Windows 10 Windows 11	macOS Big Sur macOS Monterey macOS Ventura	iPadOS 14+ iOS 14+	Android	Chrome OS
	Show Desktop	Show Desktop	Home Screen	Does nothing	Does nothing or print 'd' (or Dictation if Dictation enabled)
	Search	Search	Search	Search	Search
	Back	Back	Back	Back	Back
	Dictation	Dictation or does nothing (Mac with Dictation key)	Dictation	Does nothing	Does nothing or print 'h'
	Emoji	Emoji	Emoji for iPadOS; does nothing for iOS	Does nothing	Does nothing or print '.'
	Snip & Sketch	Screenshot (selected portion)	Screenshot (full screen)	Does nothing	Does nothing or print 'S'
	Play / Pause	Play / Pause	Play / Pause	Play / Pause	Play / Pause
	Mute	Mute	Mute	Mute	Mute
	Volume Down	Volume Down	Volume Down	Volume Down	Volume Down


	Volume Up	Volume Up	Volume Up	Volume Up	Volume Up
 (with FN)	Screen Lock	Screen Lock	Screen Lock	Calendar app	Screen Lock

*Requires installation of Logi Options+

Customise the 10 keys

- In Logi Options+, select the Pebble Keys 2 K380s and go to the keyboard settings menu.
- Click on “KEYS”, then on the “shortcut keys” select the shortcut you want to customise (i.e. search)
- Scroll through the recommendation, smart actions and other actions and select your favourite.

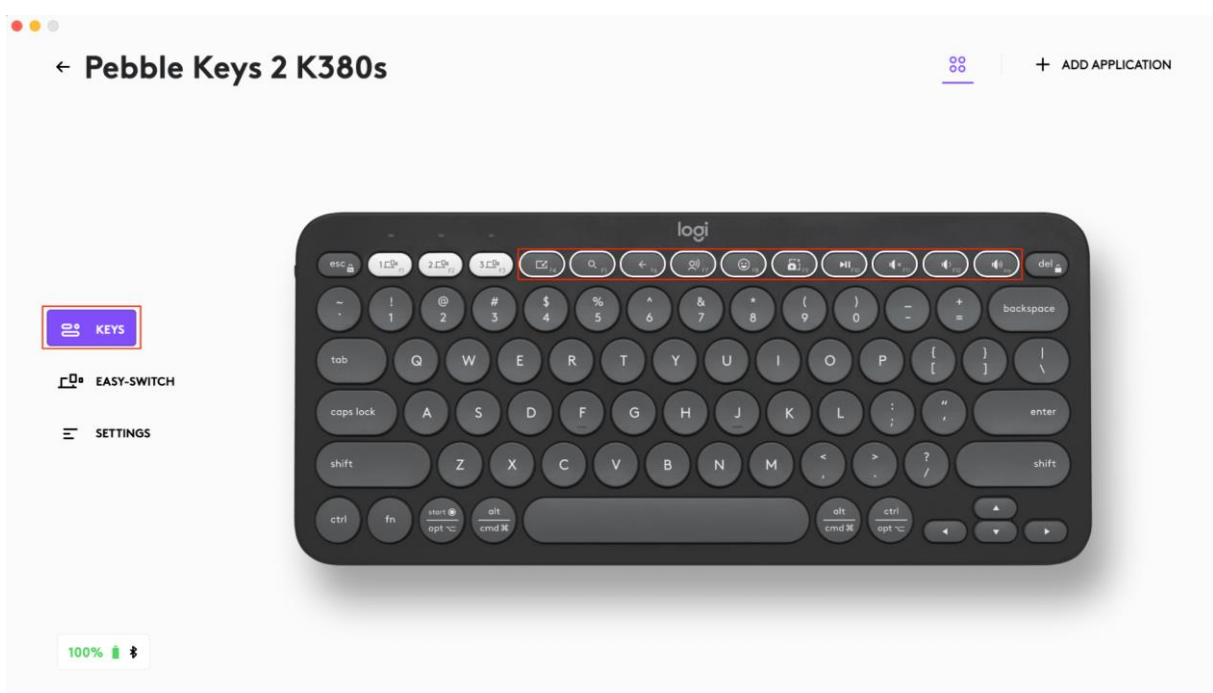

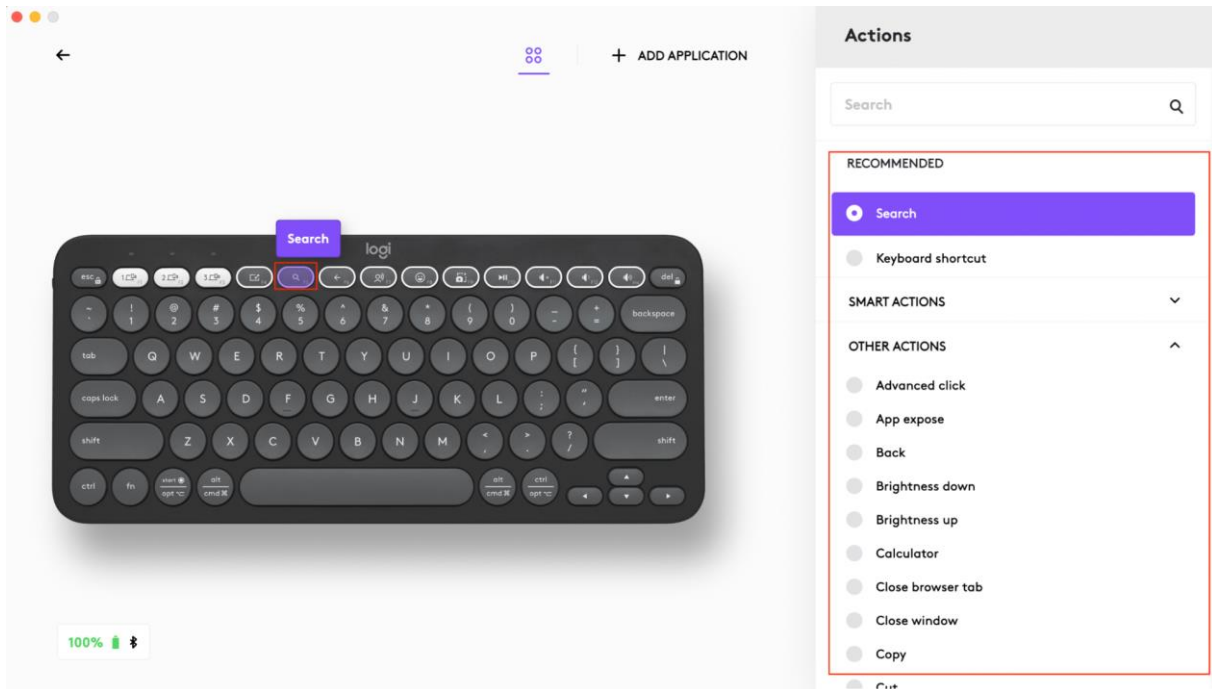


App-Specific Settings

After installing Logi Options+ app, you can have predefined app-specific settings that will adapt the keys behaviour to the selected applications.



The 10 shortcut keys can be customised to perform different functions for different applications.

You can assign any functions to apps such as Chrome, Spotify, Wechat, WhatsApp, Zoom, etc.

- In Logi Options+, select the Pebble Keys 2 K380s and go to the keyboard settings menu.
- Click on “KEYS”, then on the “ADD APPLICATION” and add your favourite apps (i.e. Chrome, Spotify, Wechat, WhatsApp, Zoom, etc.)

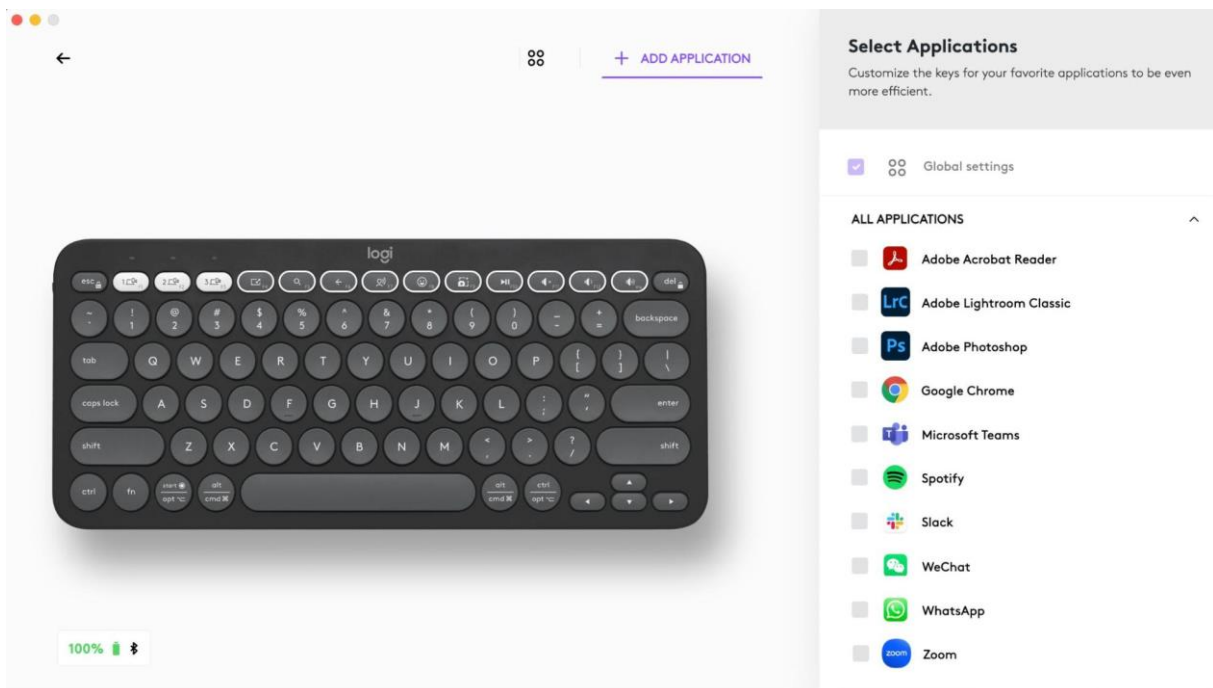

- Select the application (ex: Spotify), select the shortcut keys (ex: previous) you want to be specifically customised and assign the preferred shortcut.

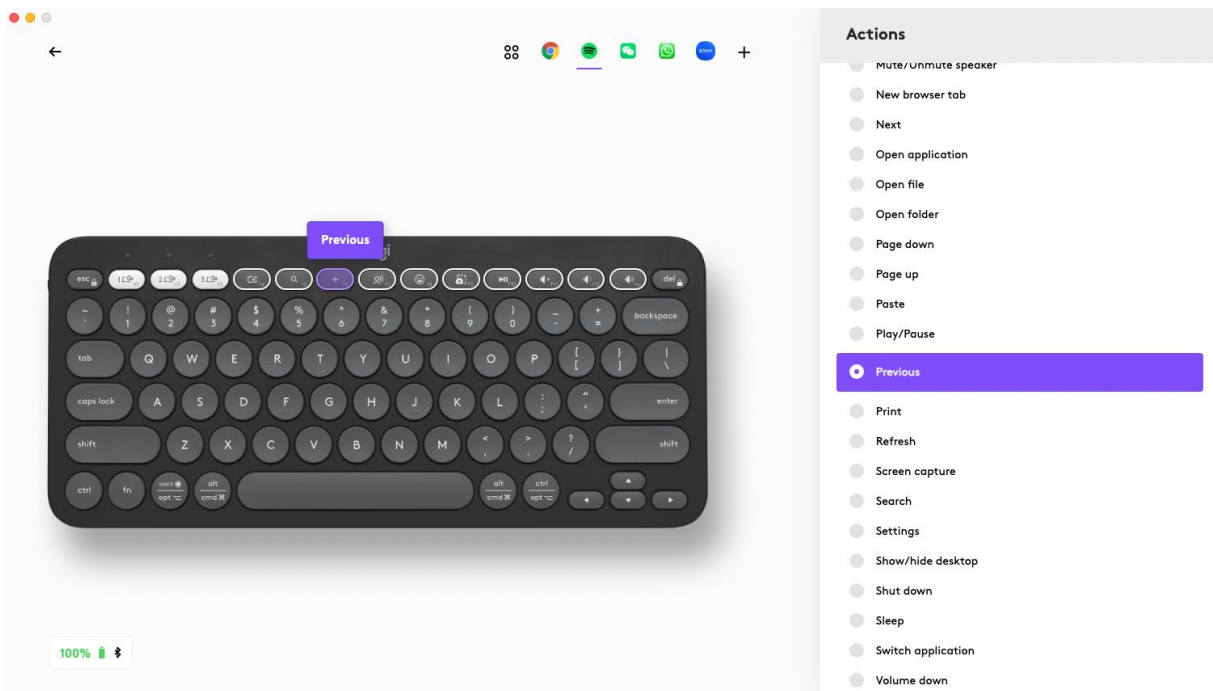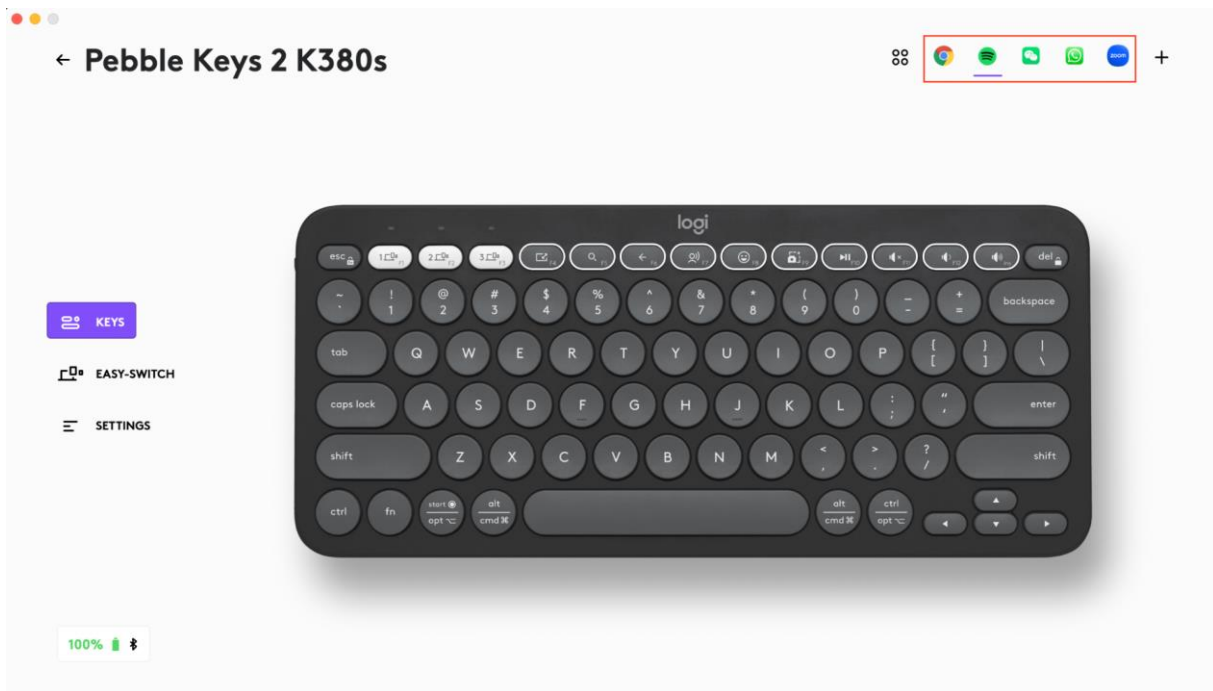

Shortcuts

To perform a shortcut, hold down the fn (function) key while pressing the key associated with an action.

Keys	Windows 10 Windows 11	macOS Big Sur macOS Monterey macOS Ventura	iPadOS 14+ iOS 14+	Android	Chrome OS
Fn + Left Arrow	Home (in text editing)	Home (Scroll to the beginning of a document)	Does nothing	Home (in text editing)	Home (in text editing)
Fn + Right Arrow	End (in text editing)	End (in text editing)	Does nothing	End (in text editing)	End (in text editing)
Fn + Up Arrow	Page Up	Page Up	Page Up	Page Up	Page Up
Fn + Down Arrow	Page Down	Page Down	Page Down	Page Down	Page Down

Use F-row keys as Function keys instead of media/shortcut keys

To use F-row keys as Function keys instead of Shortcut keys

Option 1. Use Fn Lock

You can directly swap between Media keys and F-Keys by pressing **FN + Esc**.

Option 2. Use Logi Options+

In Logi Options+ software you can choose whether to use F-keys as standard function keys in "SETTINGS" without having to hold down the Fn key.

NOTE: By default, the keyboard has direct access to Media Keys.

OS-adaptive keyboard

The Logitech Pebble Keys 2 K380s includes OS-adaptive keys that have different functions, depending on the operating system of the device you're typing on.

When connected by bluetooth, the keyboard automatically detects the operating system on the currently selected device and remaps keys to provide functions and shortcuts where you expect them to be.

Manual selection

If the keyboard is connected by Logi Bolt dongle or fails to correctly detect the operating system of a device, you can manually select the operating system by performing a long press (3 seconds) of a function key combination.

To select an OS	Hold down key combination for 3 seconds
Mac OS	FN+O
iOS	FN+I
Windows / Android	FN+P
Chrome	FN+C


Flow between two computers

You can work on multiple computers with Logi Flow.

With Logitech Flow, you can use the Logitech mouse cursor to move from one computer to the next and the Logitech keyboard will follow the mouse and switch computers at the same time.

You can even copy and paste between computers.

- In Logi Options+, select the Logitech mouse (such as Pebble Mouse 2 M350s) and go to the mouse Flow menu.

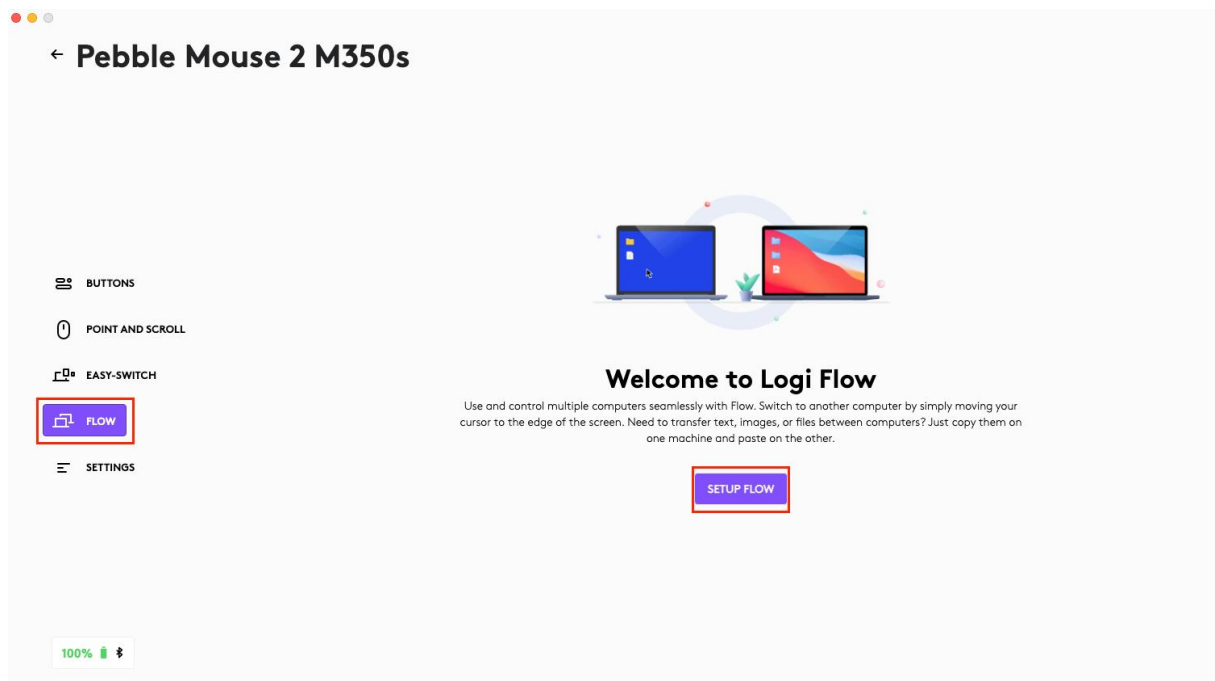

You will need to install [Logi Options+](#) app on both computers, and follow [these instructions](#).

To download Logi Options+ app and learn more, go [here](#).

POWER MANAGEMENT

- Check battery status
- Battery life and replacement
- Installing a new battery

Check battery status

You can install Logi Options+ app to receive battery status notifications, including low-charge warnings. To download Logi Options+ app and learn more, go [here](#).

Or the status LED on the side of the keyboard turns red to indicate battery power is low and it's time to change batteries.

Battery life and replacement

Battery information:

- Requires 2 AAA alkaline battery
- Expected battery life is up to 36 months

Installing a new battery

Detach the battery compartment lid from the base. Take out the old batteries and insert 2 new AAA alkaline batteries, making sure that it faces the correct direction, and then put back the battery compartment lid.



Compatibility

BLUETOOTH WIRELESS TECHNOLOGY ENABLED DEVICES:

- Windows 10, 11 or later
- macOS 11 or later
- iPadOS 14 or later
- iOS 14 or later
- Android 9.0 or later
- Chrome OS
- Linux

Compatible with Logi Bolt USB receiver (included only with Pebble 2 Combo).