

User Manual

Rokid Glasses

Quick Start

1 Register an account

Please download and install the app by scanning the QR code, then register and log in to your account within the app.



2 Power On

Press and hold the button on the right arm for 3 seconds to power on the device.

3 Bluetooth Pairing

When powered on for the first time, the device will automatically enter pairing mode. Please follow the instructions in the app to pairing.

What's in the Box

① Rokid Glasses

⑤ Cleaning Cloth

② Magnetic Charging Cable

⑥ Nose Pads


③ User Manual

⑦ Arm supporting foam pad

④ Glasses Case



1



2



3



4



5




6




7

How to use arm supporting foam pad

1. Peel off the sticker

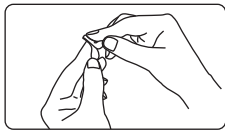


2. Press firmly onto the arm area for 30 seconds as illustrated.

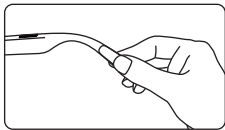


How to replace nose pads

1. Use a screwdriver to unscrew the old nose pads

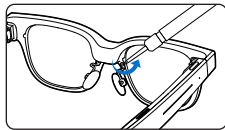


2. Hold the lens inserts firmly with your hand and tighten the screw

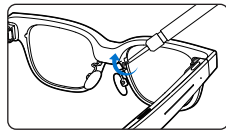

Product Introduction

- ① Camera
- ② Status Indicator
- ③ Function Button
- ④ Touchpad
- ⑤ Speakers
- ⑥ Display Area
- ⑦ Magnetic Charging Port

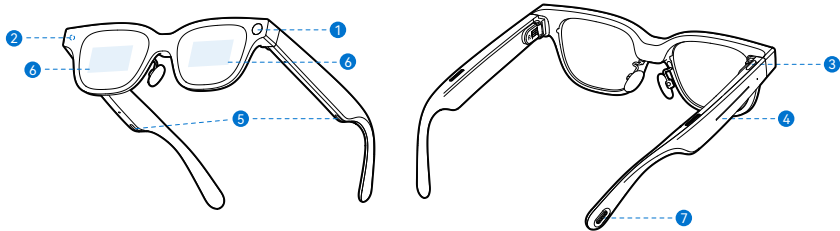

Function Button

When powered on with temple arms unfolded

Click: Take a photo

Press and hold for 1 second: Record video/audio
(customizable via app)

Press and hold for 12 seconds: Restart glasses


When powered on with temple arms folded

Quickly press 3 times in succession: Enter Bluetooth
pairing mode

Long press for 3 seconds: Power off

Press and hold for 12 seconds: Restart glasses

When powered off: Press and hold for 3 seconds:
Power on

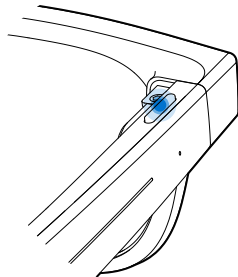

Touchpad

Single click:


1. When the screen is off: Turn on the screen;
2. When the main screen is on: Play/Pause music;
3. When an element is selected: Confirm;
4. In the Lyrics app: Play/Pause music

Double-click:

1. All scenarios: Exit

Swipe:

1. In the Lyrics app: Previous/Next song;
2. In Teleprompter Mode: Previous/Next page;
3. Page selection: Swipe to select elements

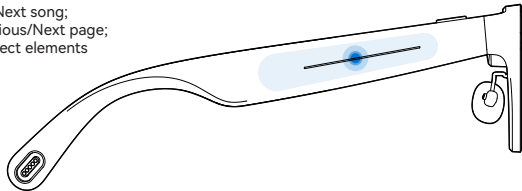


Status Indicator

When using the camera function, the status indicator will stay solid white

*Note: Please do not block or damage the status indicator, as it may cause the camera function to become unavailable.


When charging, the indicator light flashes green; When fully charged, the indicator light stays solid green.

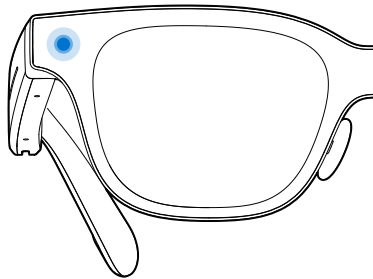

Charging Method


Connect one end of the magnetic charging cable to the charging contact on the glasses.

The USB-C end of the cable should be connected to a safe USB charging device, such as a charger or power bank.

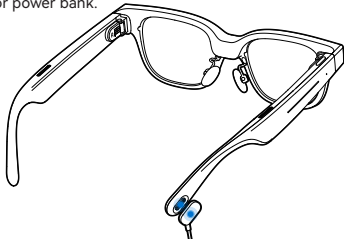

AI Voice Assistant Introduction

After connecting the app, you can wake up the AI Voice Assistant by saying, "Hi, Rokid." You can try saying commands like "Take a photo," "Record video," "Record audio," "What's in front of me?" or "What brand is this car?"

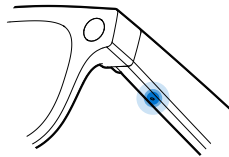



YouTube
@RokidGlobal



Instagram
@rokid_global



Twitter
@RokidGlobal